



Product Manual 35143
(Revision A, 1/2024)
Original Instructions



F-Series Actuator and Integrated Throttle Body (RoHS Compliant)

F-Series ITB 33/48/60/68/75
23-Pin Version

Installation and Operation Manual



General Precautions

Read this entire manual and all other publications pertaining to the work to be performed before installing, operating, or servicing this equipment.

Practice all plant and safety instructions and precautions.

Failure to follow instructions can cause personal injury and/or property damage.



Revisions

This publication may have been revised or updated since this copy was produced. The latest version of most publications is available on the Woodward website.

<http://www.woodward.com>

If your publication is not there, please contact your customer service representative to get the latest copy.



Proper Use

Any unauthorized modifications to or use of this equipment outside its specified mechanical, electrical, or other operating limits may cause personal injury and/or property damage, including damage to the equipment. Any such unauthorized modifications: (i) constitute "misuse" and/or "negligence" within the meaning of the product warranty thereby excluding warranty coverage for any resulting damage, and (ii) invalidate product certifications or listings.



Translated Publications

If the cover of this publication states "Translation of the Original Instructions" please note:

The original source of this publication may have been updated since this translation was made. The latest version of most publications is available on the Woodward website.

www.woodward.com/publications

Always compare with the original for technical specifications and for proper and safe installation and operation procedures.

If your publication is not on the Woodward website, please contact your customer service representative to get the latest copy.

Revisions— A bold, black line alongside the text identifies changes in this publication since the last revision.

Woodward reserves the right to update any portion of this publication at any time. Information provided by Woodward is believed to be correct and reliable. However, no responsibility is assumed by Woodward unless otherwise expressly undertaken.

Contents

WARNINGS AND NOTICES	8
ELECTROSTATIC DISCHARGE AWARENESS.....	10
REGULATORY COMPLIANCE.....	11
CHAPTER 1. GENERAL INFORMATION	13
Purpose and Scope.....	13
How to Use This Manual.....	13
Intended Applications.....	13
Introduction	13
Programmable Features	17
Service Tool Software	18
Outline Drawings.....	19
CHAPTER 2. MECHANICAL INSTALLATION.....	33
Introduction	33
General Installation, Operation Notes, and Requirements	33
Unpacking	34
Mechanical Installation.....	34
CHAPTER 3. ELECTRICAL INSTALLATION	36
Introduction	36
Shielded Wiring.....	36
Electrical Connections.....	36
Description of Electrical I/O.....	38
CHAPTER 4. DESCRIPTION OF OPERATION	53
General.....	53
Position Control.....	53
Serial Communications	57
Temperature Sensing.....	57
Current Limiting Based on Temperature.....	57
Position Control Near the Mechanical Stops	58
CAN Communications.....	58
CANopen Communications.....	58
Network Management (NMT) States	59
Summary of Supported Objects.....	60
Received Messages.....	61
Transmitted Messages.....	62
Additional Non-Mapped Objects	63
CANopen Objects	63
Return Spring Check.....	84
Position Error Handling	84
Fault Detection and Annunciation	86
Faults.....	86
Position Dynamics and Stops Settings	89
CHAPTER 5. SERVICE TOOL	90
Introduction	90
Description	90
Getting Started	94
Troubleshooting the Driver.....	96
CHAPTER 6. CONFIGURATION	112
Overview	112
Configuring the Unit Using Edit/View Configuration Button	113

Creating a Configuration Settings File	113
Opening Configuration Settings Files	114
Configuration Parameters	114
Save the Configuration Settings File.....	137
Load the Configuration Settings to the Control	137
Configuration Checks (Errors and Warnings)	138
Exporting the Settings File Configuration.....	140
CHAPTER 7. TROUBLESHOOTING	144
Introduction	144
General System Troubleshooting Guide.....	145
CHAPTER 8. PRODUCT SUPPORT AND SERVICE OPTIONS	152
Product Support Options.....	152
Product Service Options	152
Returning Equipment for Repair	153
Replacement Parts.....	154
Engineering Services	154
Contacting Woodward's Support Organization	154
Technical Assistance	155
APPENDIX A. ACRONYMS/ABBREVIATIONS	156
APPENDIX B. SAE J1939 PROFILES	157
J1939 Configuration Example	157
Turbocharger Compressor Bypass	159
Turbocharger Wastegate	160
Throttle	161
Gaseous Fuel Valve	162
Fuel Rack Actuator.....	163
Exhaust Backpressure Actuator.....	164
EGR Actuator	164
APPENDIX C. TECHNICAL SPECIFICATIONS	166
F-Series Control General Specifications.....	166
I/O Specifications	168
REVISION HISTORY	173
DECLARATIONS	174

Illustrations and Tables

Figure 1-1. F-Series ITB Flow Coefficient (Cv) Curves	15
Figure 1-2a. F-Series Modular Actuator Outline Drawing (Standard Mount).....	19
Figure 1-2b. F-Series Modular Actuator Outline Drawing (Standard Mount).....	20
Figure 1-3a. ProACT Mount Actuator Outline Drawing.....	21
Figure 1-3b. ProACT Mount Actuator Outline Drawing.....	22
Figure 1-4a. F-Series Die Cast ITB Outline Drawing.....	23
Figure 1-4b. F-Series Die Cast ITB Throttle Options.....	24
Figure 1-5. 23-Pin Electrical Connector	25
Figure 1-6a. F-Series PM Cast ITB Outline Drawing.....	26
Figure 1-6b. F-Series PM Cast ITB Throttle Options.....	27
Figure 1-7a. F-Series Offset Coupler ITB Outline Drawing	28
Figure 1-7b. F-Series Offset Coupler ITB Throttle Options	29
Figure 1-8a. F-Series 75mm ITB Outline Drawing.....	30
Figure 1-8b. F-Series 75mm ITB Outline Drawing.....	31
Figure 1-9. Electrical Connector Orientation Options	32
Figure 3-1a. Typical F-Series Actuator Control Wiring, 23-Pin Version	39
Figure 3-1b. 23-Pin Connector Pin Assignments.....	40
Figure 3-2a. Correct Wiring to Power Supply	41
Figure 3-2b. Incorrect Power Supply Wiring	41
Figure 3-3. Service Port Interface	42
Figure 3-4. PWM Input.....	42
Figure 3-5a. Acceptable PWM Input Types	43
Figure 3-5b. Acceptable PWM Input Types TPS Output	44
Figure 3-6. Analog (TPS) Output	45
Figure 3-7. Analog Input.....	46
Figure 3-8. Discrete Inputs.....	48
Figure 3-9. CAN Communication	50
Figure 3-10. CAN Shielded Wiring.....	51
Figure 3-11. Status Discrete Output	52
Figure 4-1. Position Tolerances	54
Figure 4-2. Position Demand Logic.....	56
Figure 4-3. CANopen State Chart.....	59
Figure 4-4. Address Claimed State Chart.....	81
Figure 4-5. Position and Error Example with Stuck Actuator.....	85
Figure 5-1. Example Service Tool Screen	91
Figure 5-2. Communication- Harness Connections	92
Figure 5-3. Programming Harness Wiring	93
Figure 5-4. Connect to Device	94
Figure 5-5. Connected Status Indication.....	94
Figure 5-6. Application Type Indication.....	95
Figure 5-7. Communications Window	95
Figure 5-8. Improper SID Window	96
Figure 5-9. Overview Screen	97
Figure 5-10. Shutdowns Screen	100
Figure 5-11. Alarms Screen	101
Figure 5-12. Position Trend Screen	102
Figure 5-13. Position Trend Screen – Manual Control	104
Figure 5-14. Trending Properties Window	105
Figure 5-15a. Trend Data Points (in Web Browser).....	105
Figure 5-15b. Trend Data Points (in Excel).....	106
Figure 5-16. Custom Trend.....	106
Figure 5-17. Custom Trend Example.....	107
Figure 5-18. Position Setup Screen (Mod Act Only).....	108
Figure 5-19a. Stops Setup for CW Operation	110

Figure 5-19b. Stops Setup for CCW Operation	110
Figure 6-1. Ok, Cancel, and Apply Buttons.....	113
Figure 6-2. Settings Menu Options	114
Figure 6-3. Screen Navigation Options.....	115
Figure 6-4. Error Message Example	115
Figure 6-5. Configure General Setup (Modular Actuator Only)	116
Figure 6-6a. Configure Position Demand (Redundant Versions)	118
Figure 6-6b. Configure Position Demand (Non-Redundant Versions)	118
Figure 6-7. Configure PWM Input	120
Figure 6-8. Configure Analog Input.....	121
Figure 6-9. Configure CAN Input (CANopen Settings)	123
Figure 6-10. Configure CAN Input (J1939 Settings)	124
Figure 6-11. Configure CAN J1939.....	126
Figure 6-12. Configure Position Demand Curve.....	129
Figure 6-13. Position Demand Curve Example.....	130
Figure 6-14. Configure Analog Output	130
Figure 6-15. Configure Discrete Inputs	131
Figure 6-16. Configure Discrete Output	133
Figure 6-17. Configure Alarms & Shutdowns.....	134
Figure 6-18. Configure Input Voltage.....	135
Figure 6-19. Configure Return Spring Check.....	136
Figure 6-20. Select Save As	137
Figure 6-21. Settings - Load Settings File to Device	137
Figure 6-22. Load Settings Window	138
Figure 6-23. Load Settings Finished – No Errors	138
Figure 6-24. Load Settings Error Dialog	138
Figure 6-25. Edit Settings File.....	140
Figure 6-26. Save - Export.....	141
Figure 6-27. Export Format Selection	141
Figure 6-28. Configuration Document Hierarchical Example.....	142
Figure 6-29. Configuration Document Tabular Example	143
Figure B-1. Position Command Mapping	158
Figure B-2. Actual Position Mapping.....	159
Table 1-1. F-Series ITB Flow Coefficient (Cv)	16
Table 3-1. F-Series Mating Connector.....	38
Table 3-2. F-Series Control CAN Address.....	49
Table 3-3. Discrete In Configuration Logic.....	49
Table 4-1. Summary of Supported Objects.....	60
Table 4-2. Transmit PDO	60
Table 4-3. Receive PDO	60
Table 4-4. PDO1 (Rx)	61
Table 4-5. PDO1 (Rx) Byte Specifications.....	61
Table 4-6. PDO1 (Tx).....	62
Table 4-7. PDO1 (Tx) Byte Specifications	62
Table 4-8. Supported Application-Specific SDO Requests.....	63
Table 4-9. Clear Diagnostics Command Bits Function Descriptions	67
Table 4-10. Command Hex Value, Bits, and Run/Stop Functions.....	68
Table 4-11. Status Data Hex Value, Bits, and Indication.....	68
Table 4-12. Status Data Value, Bits, and Demand State.....	69
Table 4-13. SAE J1939 Diagnostic Reporting State and Description.....	70
Table 4-14. Diagnostic Bit Field	70
Table 4-15. Preliminary FMI.....	71
Table 4-16. Temperature Status	71
Table 4-17. Received Data Engine Actuator/Valve Control Command SPN.....	73
Table 4-18. Received Data-Commands State and Description.....	73
Table 4-19. Transmitted Data Engine Actuator/Valve Control Command SPN.....	73

Table 4-20. Transmitted Data Engine Desired Valve/Actuator Position SPN.....	74
Table 4-21. Operation Status.....	74
Table 4-22. Control Mode Status.....	74
Table 4-23. Control Mode Status Field.....	75
Table 4-24. Engine Valve/Actuator Temperature SPN.....	75
Table 4-25. J1939 NAME.....	79
Table 4-26. J1939 Diagnostic Reporting.....	82
Table 4-27. Position Error Internal Settings.....	84
Table 5-1. Position Trend Parameters.....	102
Table 6-1. Configuration Check Summary.....	138
Table 7-1. Engine/Generator Troubleshooting Chart.....	145
Table 7-2. Troubleshooting Diagnostic Fault Flags.....	147
Table B-1. Source Address.....	157
Table B-2. Function Field.....	157
Table B-3. Turbocharger Compressor Bypass Instance 1.....	159
Table B-4. Turbocharger Compressor Bypass Instance 2.....	160
Table B-5. Turbocharger Compressor Bypass Instance 1 and Instance 2 NAME Components.....	160
Table B-6. Turbocharger Wastegate Instance 1.....	160
Table B-7. Turbocharger Wastegate Instance 2.....	161
Table B-8. Turbocharger Wastegate Instance 1 and Instance 2 NAME Components.....	161
Table B-9. Throttle Instance1.....	161
Table B-10. Throttle Instance 2.....	162
Table B-11. Throttle Instance 1 and Instance 2 NAME Components.....	162
Table B-12. Gas Fuel Valve Instance 1.....	162
Table B-13. Gas Fuel Valve Instance 2.....	163
Table B-14. Gas Fuel Valve Instance 1 and Instance 2 NAME Components.....	163
Table B-15. Fuel Rack Actuator Single Instance.....	163
Table B-16. Fuel Rack Actuator Single Instance NAME Components.....	163
Table B-17. Exhaust Backpressure Actuator Single Instance.....	164
Table B-18. Exhaust Backpressure Single Instance NAME Components.....	164
Table B-19. EGR Actuator Instance 1.....	164
Table B-21. EGR Actuator Instance 2.....	165
Table B-22. EGR Actuator Instance 3.....	165
Table B-23. EGR Actuator Instance 4.....	165
Table B-24. EGR Actuator Instance 1, 2, 3 and 4 NAME Components.....	165
Table C-1. General Specifications.....	166
Table C-2. Performance Specifications.....	166
Table C-3. Environmental Specifications.....	167
Table C-4. Reliability Specifications.....	168
Table C-5. Power Supply Input.....	168
Table C-6. PWM Demand Input.....	168
Table C-7. Analog (TPS) Output.....	169
Table C-8. Serial Communication Service Port.....	169
Table C-9. CAN Communication Port.....	169
Table C-10. Discrete Output.....	170
Table C-11. Discrete Inputs.....	170
Table C-12. Analog Input.....	171
Table C-13. Internal Electronics Temperature Sensor.....	171
Table C-14. 5 V Sensor Supply Output.....	171
Table C-15. Aux Power Out.....	172

Warnings and Notices

Important Definitions



This is the safety alert symbol used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

- **DANGER** - Indicates a hazardous situation, which if not avoided, will result in death or serious injury.
- **WARNING** - Indicates a hazardous situation, which if not avoided, could result in death or serious injury.
- **CAUTION** - Indicates a hazardous situation, which if not avoided, could result in minor or moderate injury.
- **NOTICE** - Indicates a hazard that could result in property damage only (including damage to the control).
- **IMPORTANT** - Designates an operating tip or maintenance suggestion.

WARNING

Lockout/Tagout LOTO

Ensure that personnel are fully trained on LOTO procedures prior to attempting to replace or service equipment on a “live” running engine. All safety protective systems (overspeed, over temperature, overpressure, etc.) must be in proper operational condition prior to the start or operation of a running engine. Personnel should be equipped with appropriate personal protective equipment to minimize the potential for injury due to release of hot hydraulic fluids, exposure to hot surfaces and/or moving parts, or any moving parts that may be activated and are located in the area of control of the unit.

WARNING

Overspeed / Overtemperature / Overpressure

The engine should be equipped with an independent fuel shut-off device to protect against fuel leakage or damage to the engine with possible personal injury, loss of life, or property damage. The fuel shut off device must be totally independent of the engine control system. An overtemperature or overpressure shutdown device may also be needed for safety, as appropriate.

WARNING

Personal Protective Equipment

The products described in this publication may present risks that could lead to personal injury, loss of life, or property damage. Always wear the appropriate personal protective equipment (PPE) for the job at hand. Equipment that should be considered includes but is not limited to:

- Eye Protection
- Hearing Protection
- Hard Hat
- Gloves
- Safety Boots
- Respirator

Always read the proper Material Safety Data Sheet (MSDS) for any working fluid(s) and comply with recommended safety equipment.

! WARNING**Start -up**

Be prepared to make an emergency shutdown when starting the engine, to protect against runaway or overspeed with possible personal injury, loss of life, or property damage.

! WARNING**Automotive Applications**

On- and Off-highway Mobile Applications: Unless Woodward's control functions as the supervisory control, customer should install a system totally independent of the prime mover control system that monitors for supervisory control of engine (and takes appropriate action if supervisory control is lost) to protect against loss of engine control with possible personal injury, loss of life, or property damage.

! WARNING**IOLOCK**

IOLOCK: driving I/O into a known state condition. When a control fails to have all the conditions for normal operation, watchdog logic drives it into an IOLOCK condition where all output circuits and signals will default to their de-energized state as described below. *The system MUST be applied such that IOLOCK and power OFF states will result in a SAFE condition of the controlled device.*

- Microprocessor failures will send the module into an IOLOCK state.
- Discrete outputs / relay drivers will be non-active and de-energized.
- Analog and actuator outputs will be non-active and de-energized with zero voltage or zero current.

Network connections like CAN stay active during IOLOCK. This is up to the application to drive actuators controlled over network into a safe state.

The IOLOCK state is asserted under various conditions, including:

- Watchdog detected failures
- Microprocessor failure
- PowerUp and PowerDown conditions
- System reset and hardware/software initialization
- PC tool initiated

NOTE—Additional watchdog details and any exceptions to these failure states are specified in the related section of the product manual.

NOTICE**Battery Charging Device**

To prevent damage to a control system that uses an alternator or battery-charging device, make sure the charging device is turned off before disconnecting the battery from the system.

Electrostatic Discharge Awareness

NOTICE

Electrostatic Precautions

Electronic controls contain static-sensitive parts. Observe the following precautions to prevent damage to these parts:

- Discharge body static before handling the control (with power to the control turned off, contact a grounded surface and maintain contact while handling the control).
- Avoid all plastic, vinyl, and Styrofoam (except antistatic versions) around printed circuit boards.
- Do not touch the components or conductors on a printed circuit board with your hands or with conductive devices.

To prevent damage to electronic components caused by improper handling, read and observe the precautions in Woodward manual **82715**, *Guide for Handling and Protection of Electronic Controls, Printed Circuit Boards, and Modules*.

Follow these precautions when working with or near the control.

1. Avoid the build-up of static electricity on your body by not wearing clothing made of synthetic materials. Wear cotton or cotton-blend materials as much as possible because these do not store static electric charges as much as synthetics.
2. Touch your finger to a grounded surface to discharge any potential before touching the control, smart valve, or valve driver, or installing cabling connectors. Alternatively, ESD mitigation may be used as well: ESD smocks, ankle or wrist straps and discharging to a reference grounds surface like chassis or earth are examples of ESD mitigation.
 - ESD build up can be substantial in some environments: the unit has been designed for immunity deemed to be satisfactory for most environments. ESD levels are extremely variable and, in some situations, may exceed the level of robustness designed into the control. Follow all ESD precautions when handling the unit or any electronics.
 - I/O pins within connectors have had ESD testing to a significant level of immunity to ESD, however do not touch these pins if it can be avoided.
 - Discharge yourself after picking up the cable harness before installing it as a precaution.
 - The unit is capable of not being damaged or improper operation when installed to a level of ESD immunity for most installation as described in the EMC specifications. Mitigation is needed beyond these specification levels.

J1939 CAN Demand Crosstalk

NOTICE

When two F-Series valves (V1 and V2) are on the same CAN bus, crosstalk will occur resulting in indeterminate positioning in V2 when programmed as follows:

- V1 and V2 are programmed to J1939 CAN demand and Legacy messages is set to "No", and
- V1 is configured to use PGN 64931 (0xFDA3) as Inputs Position Command, and
- V1 is configured to use PGN 64931 (0xFDA3) as Outputs of Actual Position, and
- V2 is configured to use PGN 64931 (0xFDA3) for Inputs Position Command.

Regulatory Compliance

European Compliance for CE Marking:

These listings apply to stationary industrial markets only and are limited only to those units bearing the CE Marking.

EMC Directive: Directive 2014/30/EU of the European Parliament and of the Council of 26 February 2014 on the harmonization of the laws of the Member States relating to electromagnetic compatibility (EMC).

RoHS Directive: Declared to 2011/65/EC COUNCIL DIRECTIVE of the European Parliament and of the Council of 8 June 2011 on the restriction of the use of certain hazardous substances in electrical and electronic equipment.
Exemptions in use: 7(c)-I

Other European and International Compliance:

Compliance with the following European Directives or standards does not qualify this product for application of the CE Marking. These listings only apply to stationary industrial markets.

Machinery Directive: Compliant as partly completed machinery with Directive 2006/42/EC of the European Parliament and the Council of 17 May 2006 on machinery.

Pressure Equipment Directive: Exempt per Article 1.2(j) of 2014/68/EU where pressure is not a significant design factor.

North American Compliance:

These listings are limited only to those units bearing the CSA identification.

CSA: CSA Certified for Class I, Division 2, Groups A, B, C, & D, T3 at 105 °C
Ambient for use in Canada and the United States.
Certificate 1975931
Type 4 Enclosure Watertight

! WARNING**Special Conditions
for Safe Use**

This product is certified as a component for on-engine use. The final assembly is subject to acceptance by authority having jurisdiction.

Field Wiring must be suitable for at least 105 °C.

Wiring must be in accordance with North American Class I, Division 2 wiring methods as applicable, and in accordance with the authority having jurisdiction.

Connect the ground lug of the F-Series to earth ground.

The Type 4 enclosure rating on the F-Series Actuator is **ONLY APPLICABLE** on units marked “Type 4 Enclosure – Watertight”

The Ingress Protection rating of the control depends on the use of proper mating connectors. Refer to Table 3-1 in the Installation section of this manual for information on the proper mating connectors for use with this control.

Compliance with the Machinery Directive 2006/42/EC noise measurement and mitigation requirements is the responsibility of the manufacturer of the machinery into which this product is incorporated.

! WARNING

EXPLOSION HAZARD—Do not remove covers or connect/disconnect electrical connectors unless power has been switched off or the area is known to be non-hazardous.

Substitution of components may impair suitability for Class I, Division 2.

Do not clean equipment unless power has been switched off or the area is known to be non-hazardous.

! AVERTISSEMENT

RISQUE D'EXPLOSION—Ne pas enlever les couvercles, ni raccorder / débrancher les prises électriques, sans vous en assurez auparavant que le système a bien été mis hors tension; ou que vous vous situez bien dans une zone non explosive.

La substitution de composants peut rendre ce matériel inacceptable pour les emplacements de Classe I, Division 2.

Ne pas nettoyer l'équipement sans vous en assurez auparavant que le système a bien été mis hors tension; ou que vous vous situez bien dans une zone non explosive.

NOTICE

Do not connect any cable grounds to “instrument ground”, “control ground”, or any non-earth ground system. Make all required electrical connections based on the wiring diagram (Figures 3-1).

Chapter 1.

General Information

Purpose and Scope

The purpose of this manual is to provide the necessary background information for applying the F-Series actuator to reciprocating engines. Topics covered include mechanical installation, electrical wiring, software programming, and troubleshooting. While this manual is primarily targeted at original equipment manufacturer (OEM) customers, OEMs themselves may find it useful to copy some of the information from this manual into their application user manuals.

This manual does not contain instructions for operation of the complete engine system. For engine or plant operating instruction, contact the plant-equipment manufacturer.

This manual applies to 23-pin versions of the F-Series position control models with software 5418-2724 (FSTP), 5418-2725 (Actr), 5418-3834 (FSTP), 5418-3055 (FSTP), 5418-3056 (Actr), 5418-7289 (FSTP), 5418-7290 (Actr), and 5418-9520 or newer. Available functionality varies between software versions. The software version can be identified on the Service Tool by selecting Communications under the Device menu (Application ID).

Note: 5418-3834, 5418-7289 (FSTP), and 5418-7290 (Actr) are proprietary part numbers and some features perform differently than documented here.

How to Use This Manual

The following summarizes how to install an F-Series actuator into a new or existing system:

- Unpack and inspect the hardware.
- Mount and wire the hardware following the procedures and recommendations in Chapters 2 and 3.
- Description of operation is provided in Chapter 4.
- Use the Service Tool to configure and setup the control following the procedures and recommendations in Chapters 5 and 6.
- Troubleshooting guidelines are provided in Chapter 7.
- Specifications are provided in Appendix C.

Intended Applications

The F-Series actuator is intended to be mounted on-engine for use in various industrial applications, including, but not limited to, stationary generator sets, gas compressors, and on-highway industrial gas, gasoline or diesel reciprocating engines. The device is effectively a positioner that accepts a desired position signal from another device in the system, such as a speed control, and drives to that position. Key environmental characteristics of these applications include extended industrial operating temperatures (–40 °C to +105 °C/–40 °F to +221 °F), Industrial EMC Requirements, electrical transient response and stability, and lower operating voltages (12/24 V).

Introduction

The F-Series actuator is a modular electric actuator or an actuator with an integrated throttle body (ITB). There are currently three types available:

- F-Series Throttle (FST)—*not covered in this manual*
- F-Series Throttle Plus (FSTP)
- F-Series Modular Actuator

The F-Series Throttle (FST) has a 14-pin connector and only accepts a PWM (pulse-width modulated) position demand. For additional information on the FST version, see Woodward manual 26355.

The F-Series Throttle Plus (FSTP) and Modular Actuators have 23-pin connectors and accept PWM, CAN, 0 V to 5 V, or 4 mA to 20 mA position demands. CAN communication is available in the FSTP and Modular Actuator versions.

The position demand signals are issued by the appropriate supervisory engine management system. The F-Series actuator must be set up properly in hardware and software to expect the correct signal for the application.

The F-Series drives the 0–70-degree output shaft to the demanded position based on an internal shaft position sensor. The high-efficiency torque motor delivers a net 1.36 N·m (1.0 lb-ft) steady-state torque output and a net 2.71 N·m (2 lb-ft) transient torque output over the 70° travel range. See the specifications in Appendix C for further details.

NOTICE

The F-Series ITB is designed to operate on air and gases ranging from pipeline quality natural gas to specialty gas. The quality of specialty gas can vary significantly and have a direct impact on product life. Products applied in landfill, digester, or other biogases should be reviewed with Woodward for applicability.

The F-Series integrated throttle body (ITB) types are available in 33, 48, 60, 68, and 75 mm bore sizes for a variety of air and fuel throttling applications. The 33 and 48 mm ITBs are rated at 80 psia maximum working pressure (MWP). The 60, 68, and 75 mm ITBs are rated at 50 psia MWP. See the specifications in Appendix C for further details.

The flow output of the ITB is a function of throttle position. The actuator and throttle position respond proportionally to the position demand input. An optional non-linear position demand curve can be configured for a non-linear position demand versus position demand response. When the optional non-linear position demand curve is configured, the throttle position signal (TPS) is corrected to account for the effect of the curve, so that the TPS should still normally match the position demand input.

A sight cover can be provided over the slotted throttle shaft end to view the actual throttle position. The slot in the end of the shaft is in line with the throttle plate and indicates the plate's angular position. Note that the throttle plate is about 15 degrees off of horizontal (flange plane) when fully closed. Therefore, the slot in the shaft will also be at about 15 degrees off of horizontal when the valve is fully closed.



WARNING

When included with an ITB, the actuator depends solely upon the return spring inside the throttle body assembly to drive toward minimum position when not powered. Therefore, other positive shutdown devices, like fuel shut-off solenoids, are recommended to ensure shut down upon loss of signal to the control system. Also, separate overspeed trip devices are always mandatory.

The F-Series actuator requires a power supply of 10 V to 32 VDC. The supply must be capable of providing a sustained 24 W during steady-state (4 A at coil) operation and 98 W instantaneous during transients (8 A at coil) for at least 200 ms.

For monitoring or feed-forward control, the F-Series actuator provides a configurable 0 V to 5 VDC position feedback output signal proportional to a 0% to 100% shaft position. The position output signal will be equal to measured position within 1% of full stroke after all effects and over the entire operating temperature range. When a demand curve is configured, the position output signal will be proportional to the demanded position rather than actual position.

For status purposes, a relay driver output is provided, which changes state whenever the F-Series control detects a configured fault or error condition.

ITB Flow Coefficient (Cv) and Sizing Equation

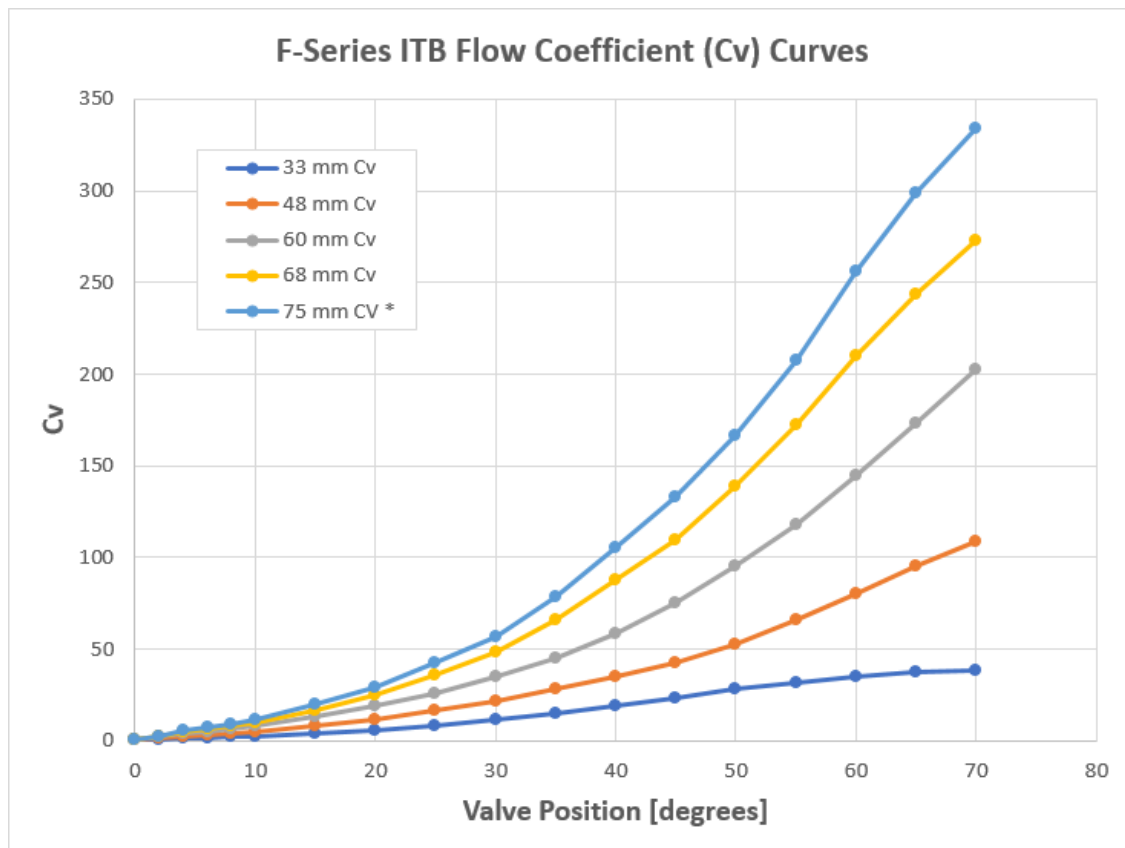


Figure 1-1. F-Series ITB Flow Coefficient (Cv) Curves

Table 1-1. F-Series ITB Flow Coefficient (Cv)

Position (Deg)	33 mm Cv	48 mm Cv	60 mm Cv	68 mm Cv	75 mm CV *
0	0.6	0.7	1.1	1.1	1.1
2	1.0	1.5	2.4	2.5	2.6
4	1.4	2.4	3.8	4.8	5.7
6	1.9	3.4	5.1	6.4	7.5
8	2.3	4.2	6.5	8.2	9.4
10	2.8	5.2	8.2	10.2	11.8
15	4.2	8.2	13.0	16.9	19.9
20	6.2	12.0	18.8	25.1	29.6
25	8.6	16.6	25.9	35.8	42.5
30	11.4	22.0	34.7	48.3	57.1
35	14.9	28.0	45.2	65.7	78.6
40	19.0	34.8	58.6	87.7	105.4
45	23.5	42.9	75.3	109.2	132.9
50	28.2	52.8	95.2	138.9	166.4
55	32.1	65.8	118.1	172.4	207.7
60	35.0	80.1	144.4	210.2	256.3
65	37.9	95.0	173.2	243.9	299.1
70	38.7	108.5	202.2	272.6	334.1

* **Note:** 75 mm Cv data generated through simulation

F-Series ITB valve size can be determined by using the following equation:

Where:

Cv = Flow Coefficient

Q = Mass Flow (PPH [pounds/hour]) [1 pound = 0.45 kg]

Sg = Specific Gravity of Gas (use 1.0 for air)

T1 = Upstream Gas Temperature (°F) [°F = 1.8 * °C + 32]

P1 = Inlet Pressure (psia) [1 psi = 6.895 kPa = 0.06895 bar]

P2 = Downstream Pressure (psia)

$$C_v := \frac{Q \cdot 0.00976}{P_1 \cdot S_g} \cdot \sqrt{\frac{(T + 460) \cdot P_1 \cdot S_g}{P_1 - P_2}}$$

IMPORTANT

P2 must be greater than 0.528 * P1 or flow becomes choked. If P2 is less than 0.528 * P1, then use P2= 0.528 * P1.

To properly size the ITB, the Cv (flow coefficient) should be calculated for the minimum and maximum flows expected (at 50°F) on the application.

Programmable Features

Control setup is accomplished using a PC (personal computer), Woodward Service Tool software, and a programming harness. All F-Series actuators are provided pre-configured with default settings and may not require additional setup. The features identified below are described in Chapters 5 and 6. Some features are not included with certain models. Briefly, the programmable features include:

- **Configure General Setup** (*modular actuator only*)
 - Shaft Direction of Rotation (CW or CCW)
 - Shutdown Direction (Min% or Max%)
 - Dynamics Setting (Inertia)
 - Holding Current (Min Amps & Max Amps)
- **Configure Position Demand**
 - Position Demand Input Source (PWM, CAN, or Analog)
 - Use Position Demand Filter
 - Position Demand Filter Cutoff Frequency (Hz)
- **Configure PWM Input**
 - PWM Duty Cycle Max & Min Input (%)
 - PWM Output at Max & Min Input (%)
 - PWM Fault Settings (Duty Cycle Low & High Thresholds) (%)
- **Configure Analog Input**
 - Analog Input Type (0 V to 5 VDC or 4 mA to 20 mA)
 - Analog Current Min & Max Input (mA)
 - AI Signal at Min & Max Current Input (%)
 - Analog Current Fault Settings (Current Low & High Thresholds)
 - Analog Voltage Min & Max Input (VDC)
 - AI Signal at Min & Max Voltage Input (%)
 - Analog Voltage Fault Settings (Voltage Low & High Thresholds)

■ Analog Demand is not available in firmware 5418-9520.
- **Configure CAN Input**
 - CAN Protocol used (CANopen, J1939)
 - CAN Demand Timeout
 - CANopen Settings (Baud, Heartbeat, Node Id)
- **Configure J1939**
 - Messaging (Legacy vs configurable)
 - Source Address and identity information
 - Diagnostics Support selection
 - PGN and SPN settings
 - Message configuration (start bit, priority, rate)
- **Configure Position Demand Curve**
 - Use Position Demand Curve
 - Position Demand In (% at 5 Breakpoints)
 - Position Demand Output (% at 5 Breakpoints)
- **Configure Analog Output**
 - Analog Output Min & Max Input (%)
 - Analog Output at Min & Max Input (VDC)
- **Configure Discrete Inputs**
 - Run Enable Input selection (Not Used, Discrete Input, CAN)
 - Run Enable Input settings (Active Low/Open)
 - CAN ID High and Low input selection
 - CAN ID High and Low settings (Active Low/Open)
- **Configure Discrete Output**
 - Status Discrete Output (Always off, Normally On, Normally Off)
 - Status Output (up to 23 Fault Selections)
- **Configure Alarms & Shutdowns**
 - Latching or Non-Latching Fault Indication
 - Up to 17 Fault Selections as Used or Not Used

- o Up to 17 Fault Selections as Alarm or Shutdown
- **Configure Input Voltage**
 - o Supply Voltage Fault Settings (Voltage Low & High Thresholds)
- **Configure Return Spring Check Settings**
 - o Use Spring Check Function
 - o Start Position (%)
 - o Finish Position (%)
 - o Max Start-to-Finish Position Time (sec)
 - o Active Demand Threshold (%)
- **Position Setup** (*modular actuator only*)
 - o Position Control
 - Disable Auto Control
 - Enable Manual Control
 - Manual Setpoint
 - o Auto Inertia Test
 - o Inertia Setting
 - o Auto Find Mechanical Stops
 - o Electrical Stop Settings
 - Span
 - Min Position Offset
 - o Save Position Settings


Service Tool Software

The F-Series Service Tool software is a Microsoft Windows based GUI (graphic user interface) used to configure and troubleshoot the F-Series actuator. The Service Tool Software is compatible with Microsoft Windows® 7, Vista, XP (32- and 64-bit) and gives the OEM the ability to:

- Configure control settings based on application requirements
- Dynamic tuning
- Create configuration files for downloading into multiple controls
- Download configuration files
- Upload control configuration settings to a file
- Extract and view fault codes for field diagnosis
- View and trend control operating parameters
- Trend values and save the data points to a file

Detailed descriptions of software installation are available in Chapter 5.

19

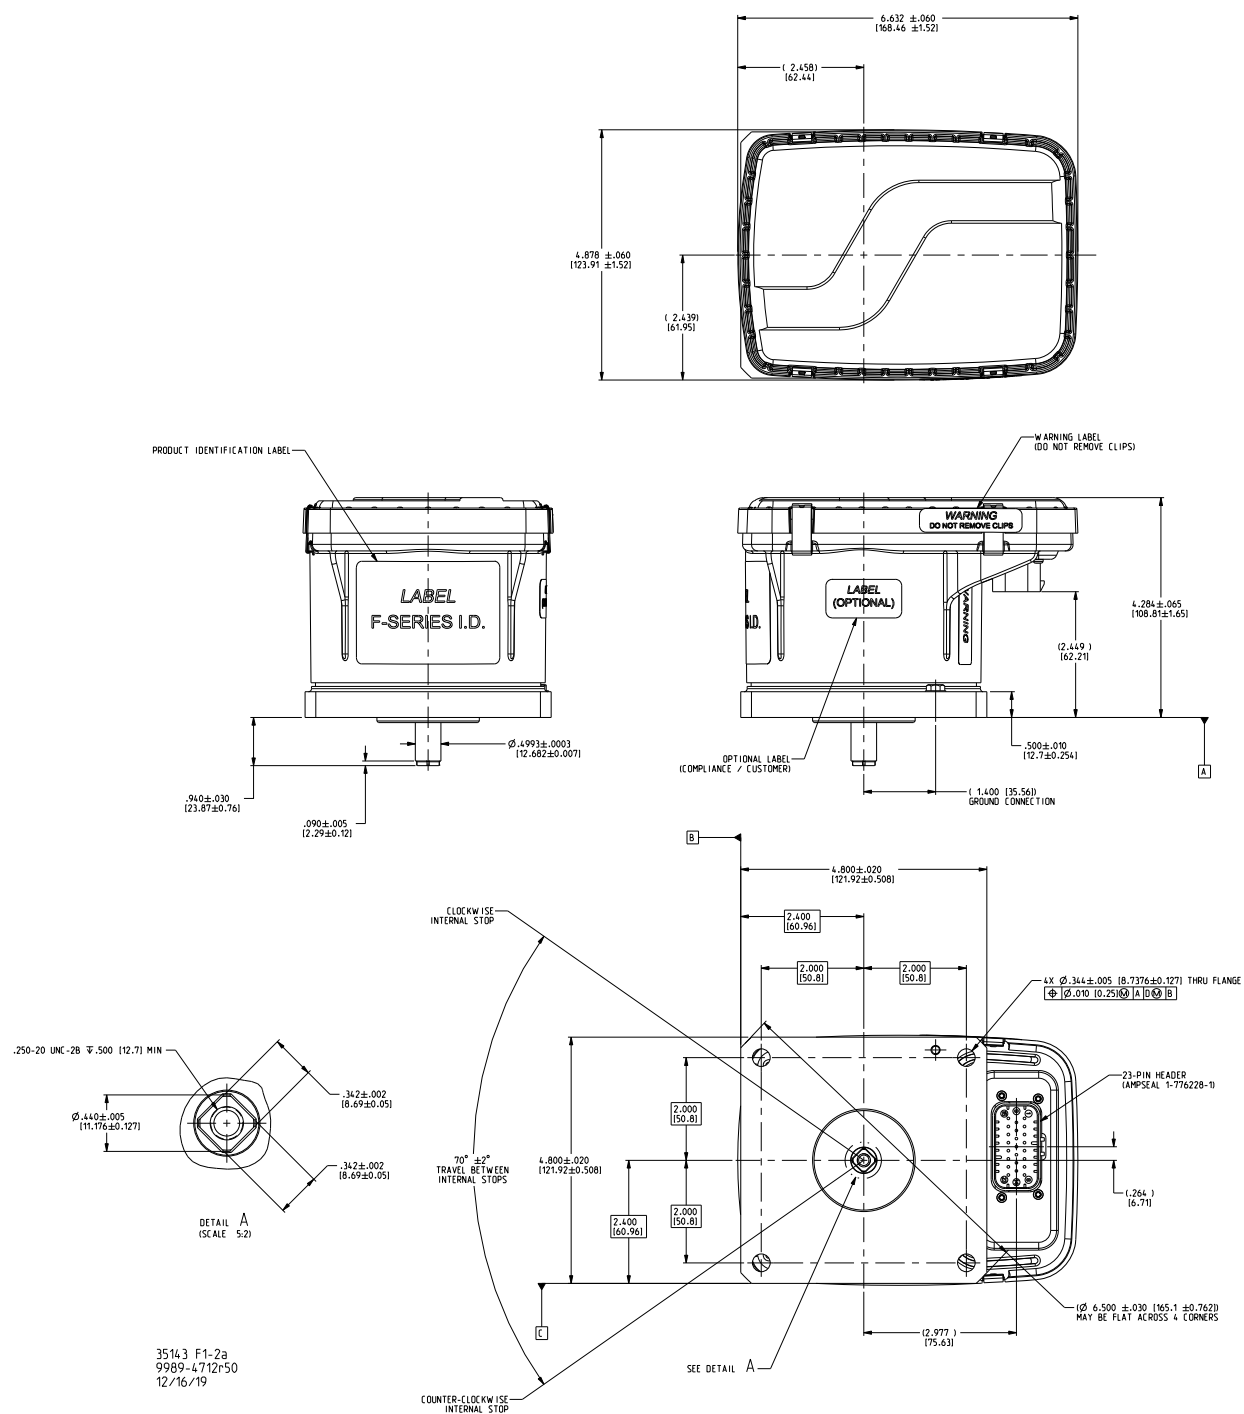



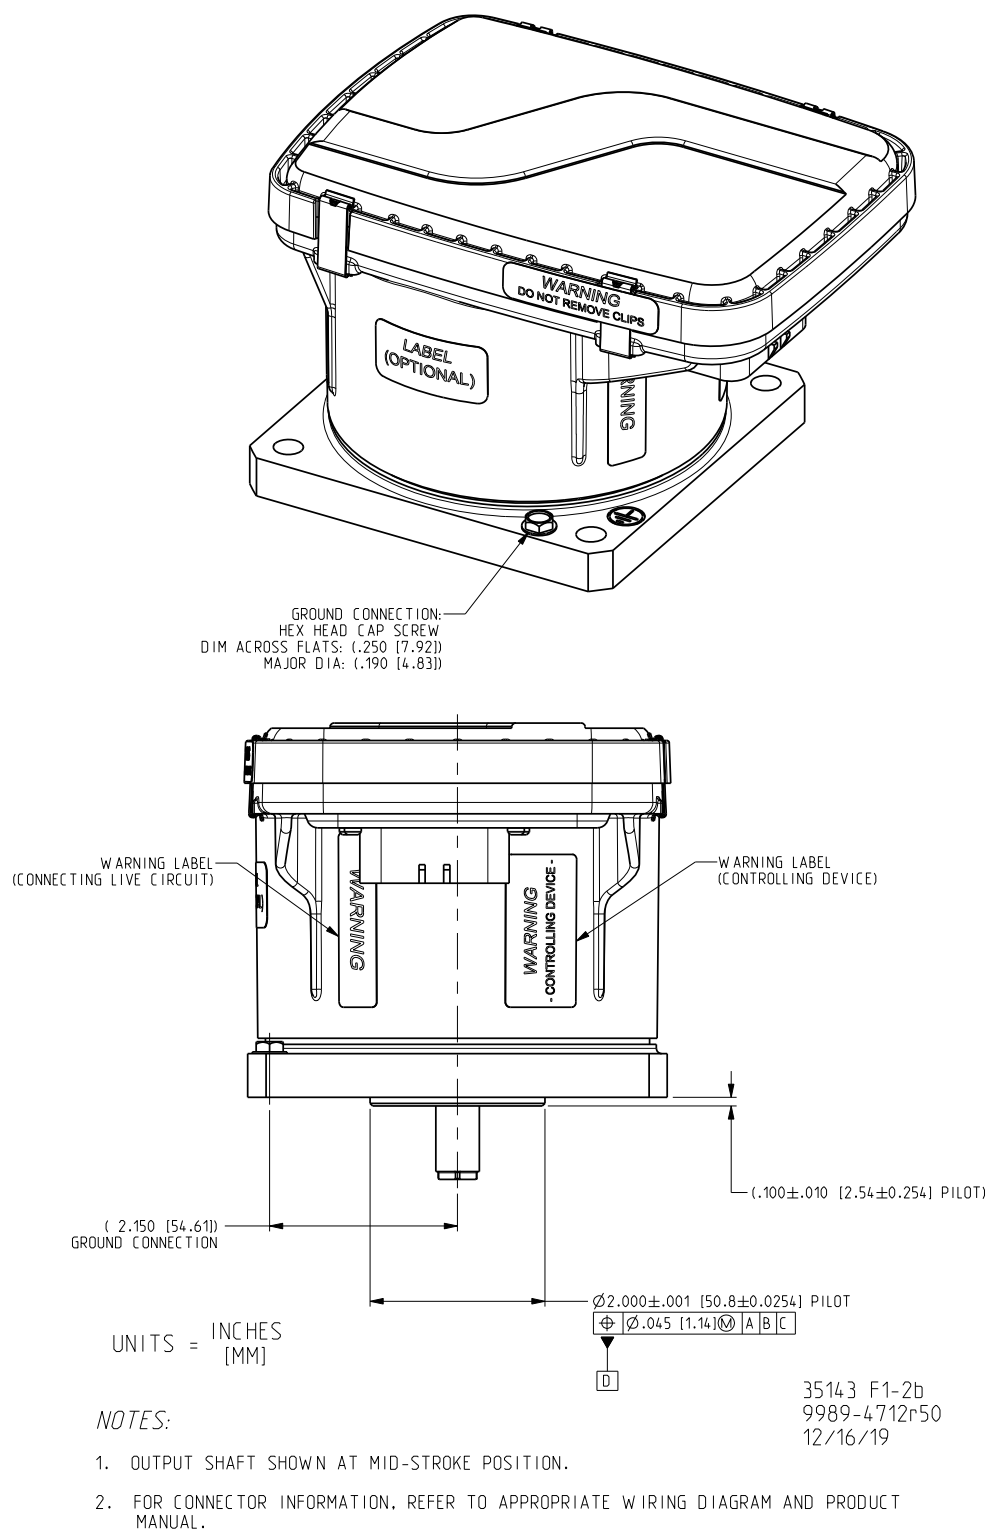


Figure 1-2b. F-Series Modular Actuator Outline Drawing (Standard Mount)

 

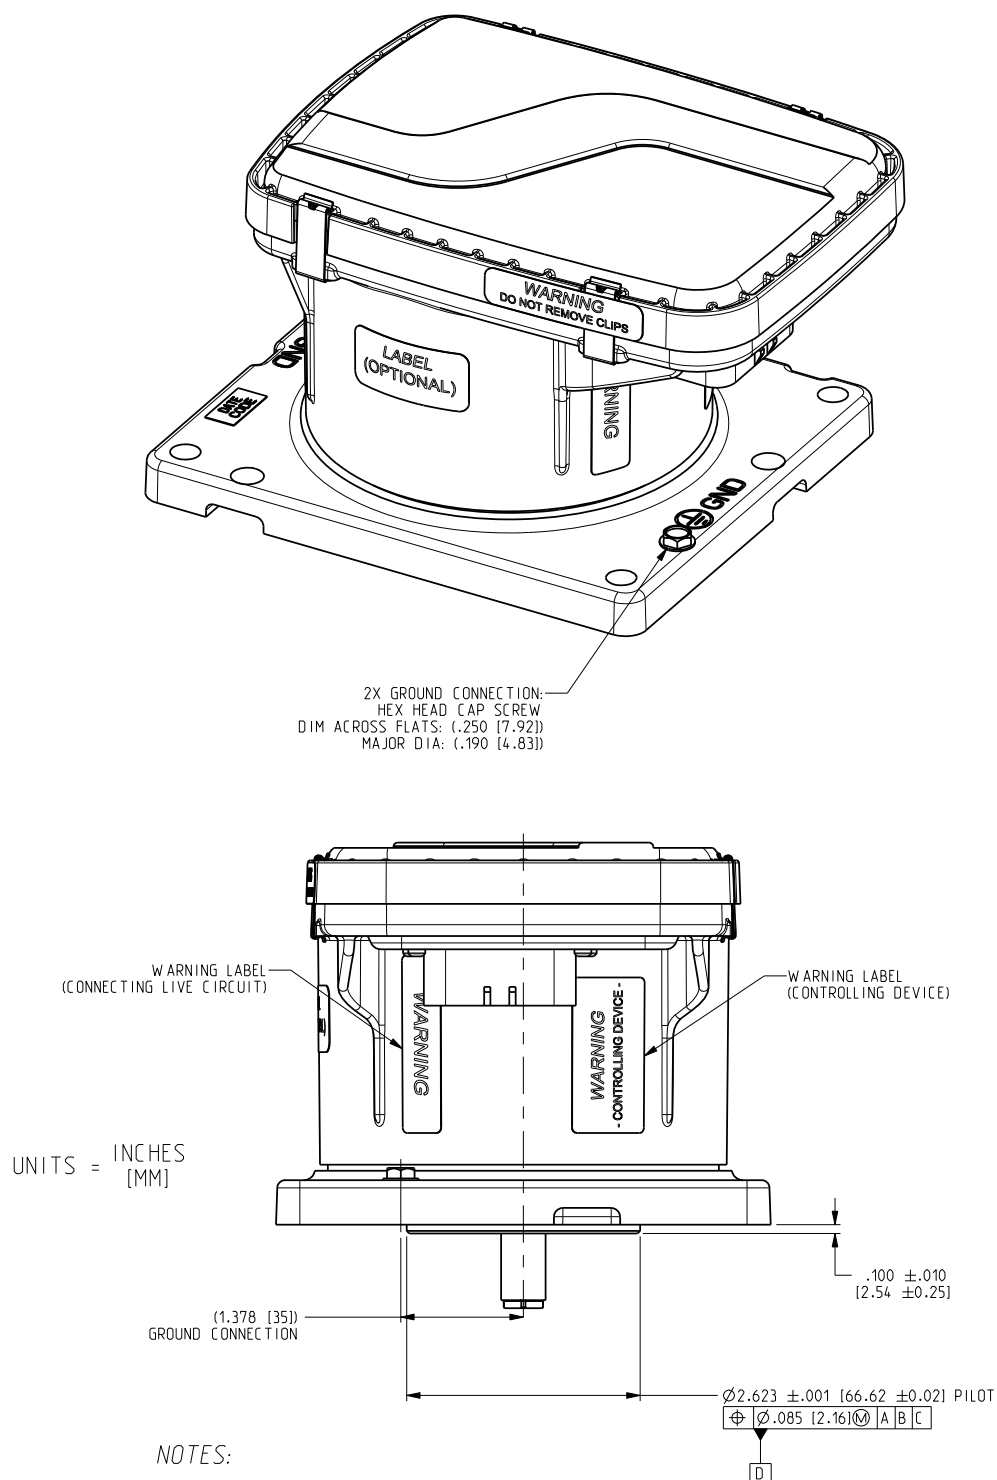

NOTES:

1. OUTPUT SHAFT SHOWN AT MID-STROKE POSITION.
2. FOR CONNECTOR INFORMATION, REFER TO APPROPRIATE WIRING DIAGRAM AND PRODUCT MANUAL.
3. DIMENSIONS SHOWN APPLY WITH NO EXTERNAL CABLE HARNESS INSTALLED.

35143 F1-3b
9999-1864
11/5/20

Figure 1-3b. ProACT Mount Actuator Outline Drawing


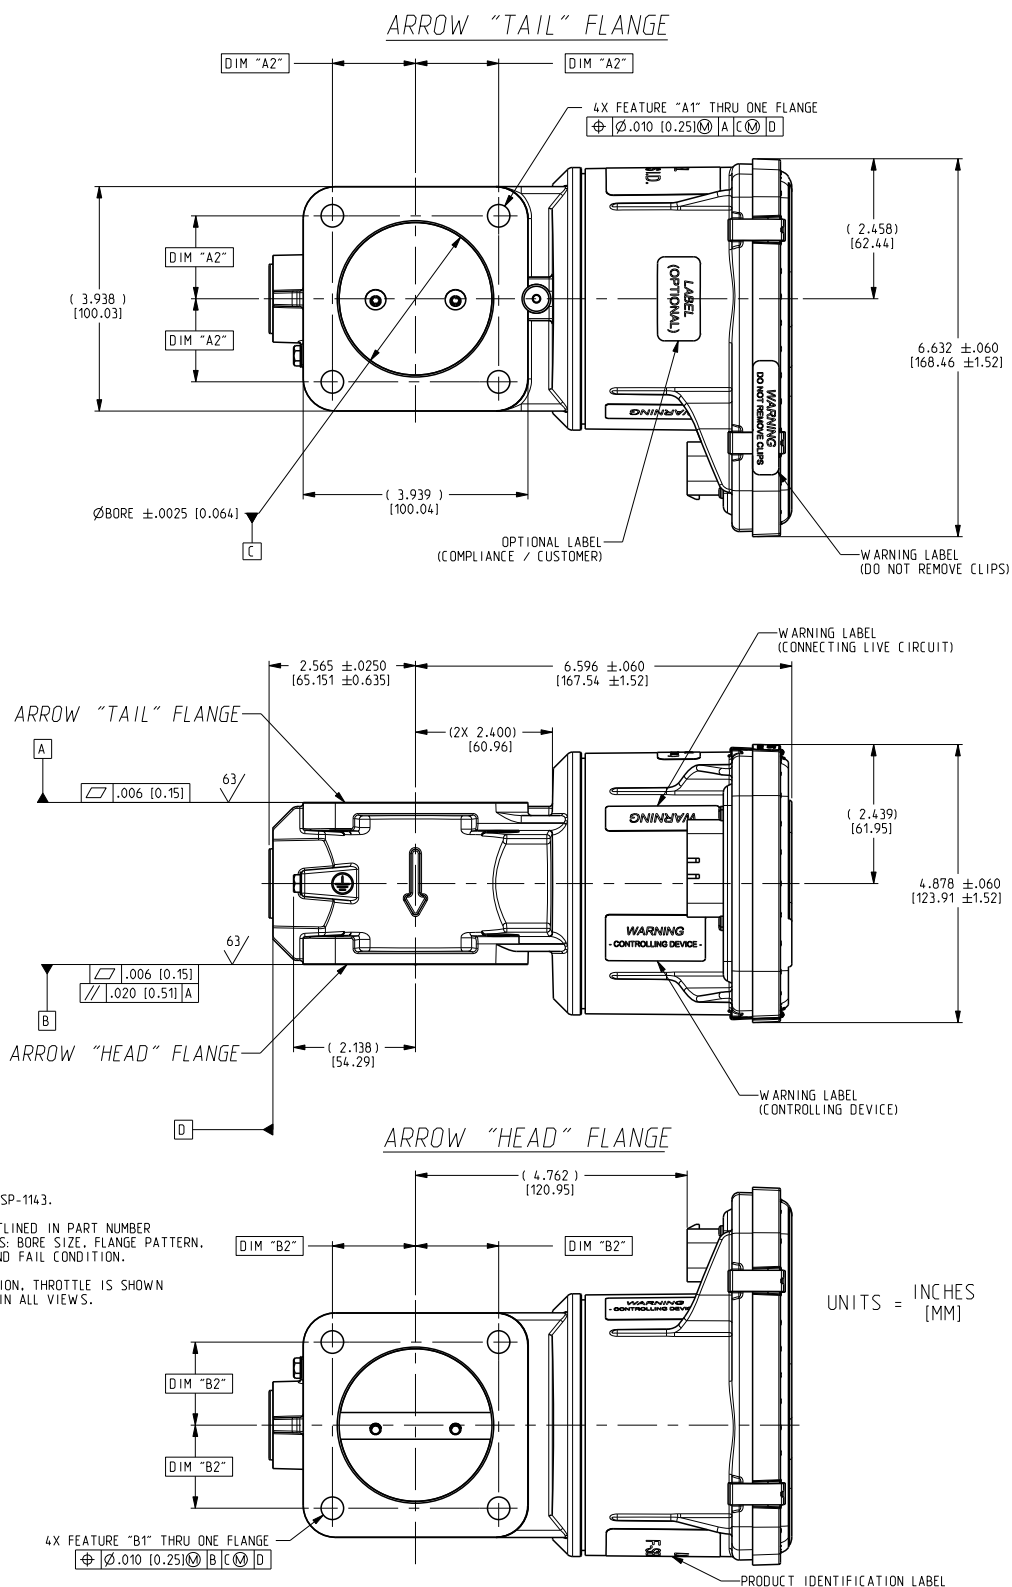


Figure 1-4a. F-Series Die Cast ITB Outline Drawing

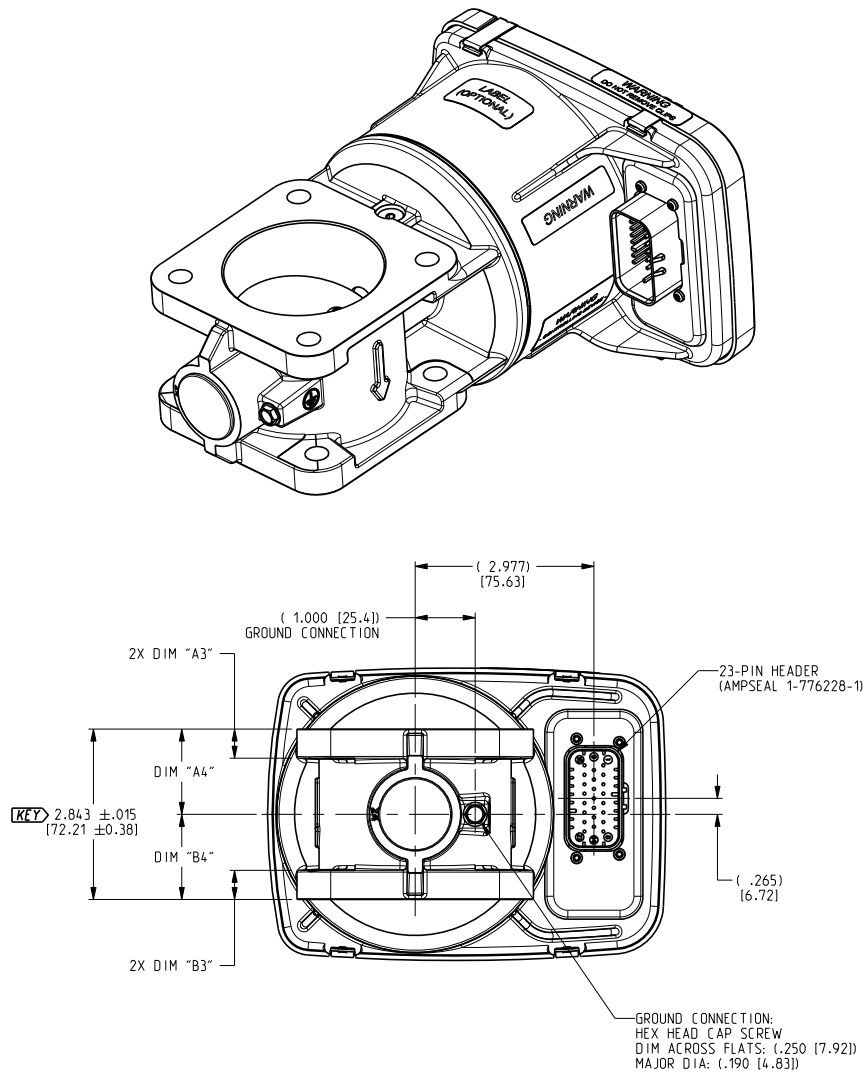

THROTTLE OPTION DETAILS										
THROTTLE OPTION	BORE	DETAILS -- ARROW TAIL FLANGE				DETAILS -- ARROW HEAD FLANGE				THROTTLE DESCRIPTION (REFERENCE)
		A1	A2	A3	A4	B1	B2	B3	B4	
48/STD	1.8900 (48.006)	Ø.394±.010 [10.01±0.25]	1.457 [37.01]	.480±.060 [12.19±1.52]	(1.4215 [36.106])	Ø.394±.010 [10.01±0.25]	1.457 [37.01]	.480±.060 [12.19±1.52]	(1.4215 [36.106])	48 MM BORE, THRU ØS FOR .375 SCREWS
60/STD	2.3625 (60.008)	Ø.394±.010 [10.01±0.25]	1.457 [37.01]	.480±.060 [12.19±1.52]	(1.4215 [36.106])	Ø.394±.010 [10.01±0.25]	1.457 [37.01]	.480±.060 [12.19±1.52]	(1.4215 [36.106])	60 MM BORE, THRU ØS FOR .375 SCREWS
68/STD	2.6800 (68.072)	Ø.394±.010 [10.01±0.25]	1.457 [37.01]	.480±.060 [12.19±1.52]	(1.4215 [36.106])	Ø.394±.010 [10.01±0.25]	1.457 [37.01]	.480±.060 [12.19±1.52]	(1.4215 [36.106])	68 MM BORE, THRU ØS FOR .375 SCREWS
68/M10	2.6800 (68.072)	Ø.453±.010 [11.51±0.25]	1.457 [37.01]	.480±.060 [12.19±1.52]	(1.4215 [36.106])	Ø.453±.010 [11.51±0.25]	1.457 [37.01]	.480±.060 [12.19±1.52]	(1.4215 [36.106])	68 MM BORE, THRU ØS FOR M10 SCREWS

35143 F1-4b
9999-1853
11/5/20

Figure 1-4b. F-Series Die Cast ITB Throttle Options

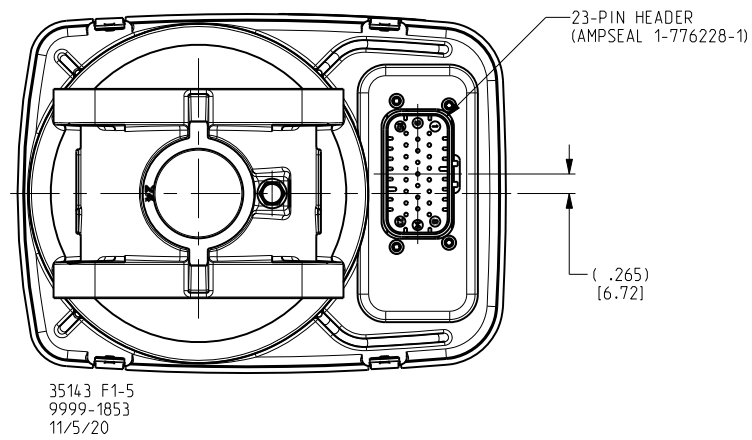


Figure 1-5. 23-Pin Electrical Connector


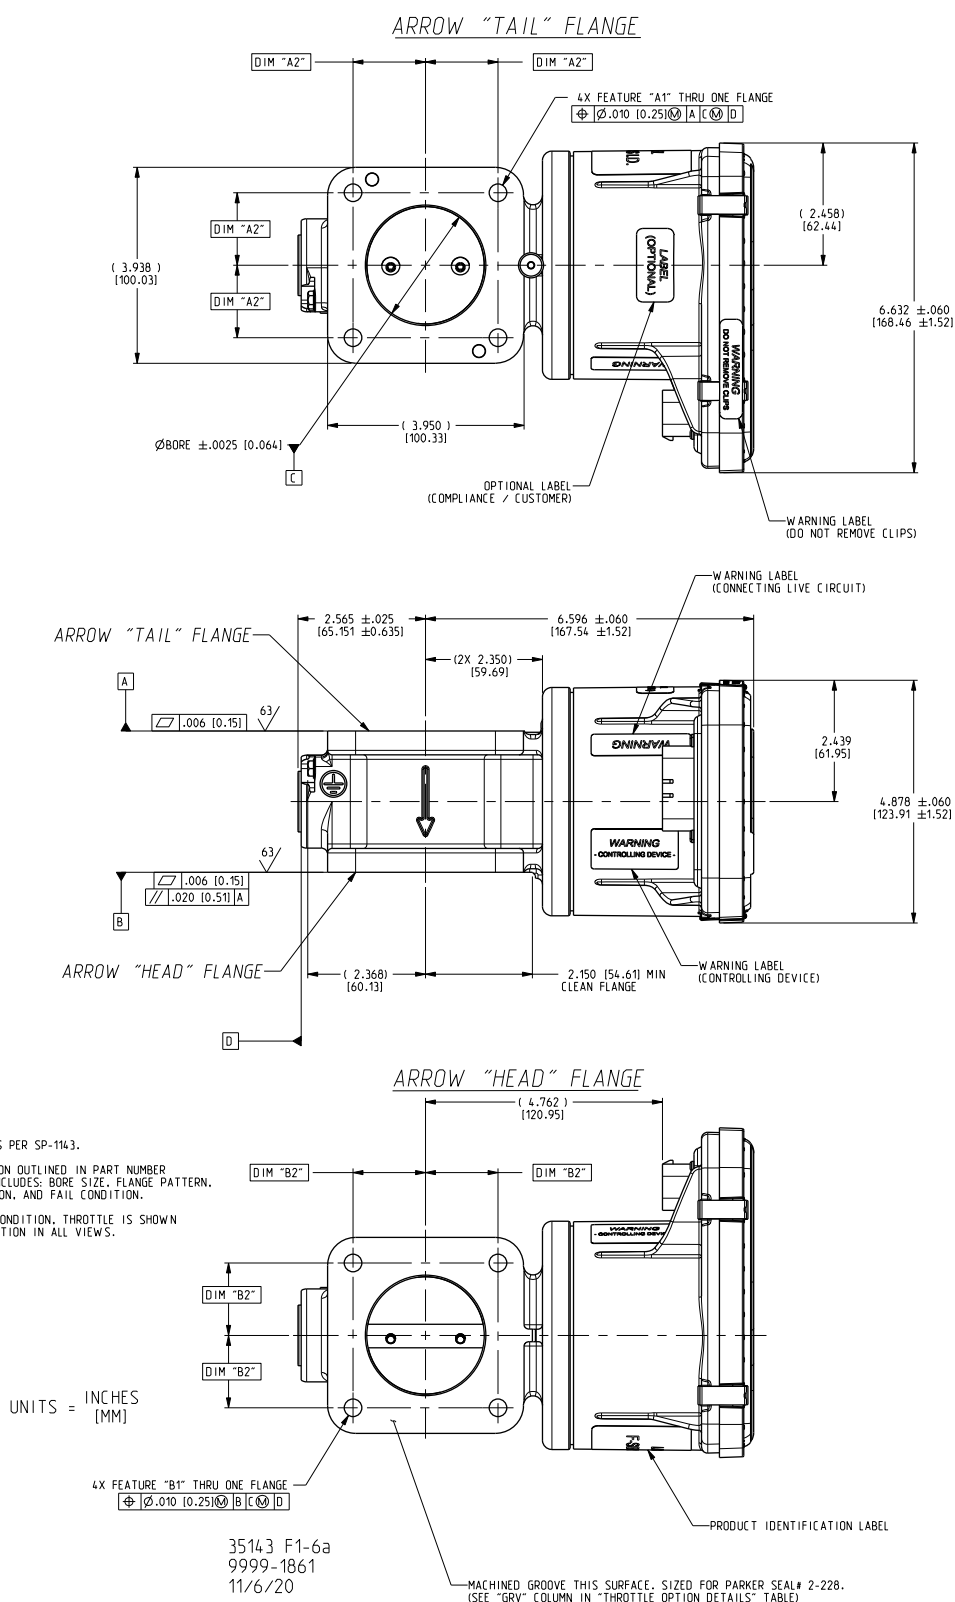


Figure 1-6a. F-Series PM Cast ITB Outline Drawing

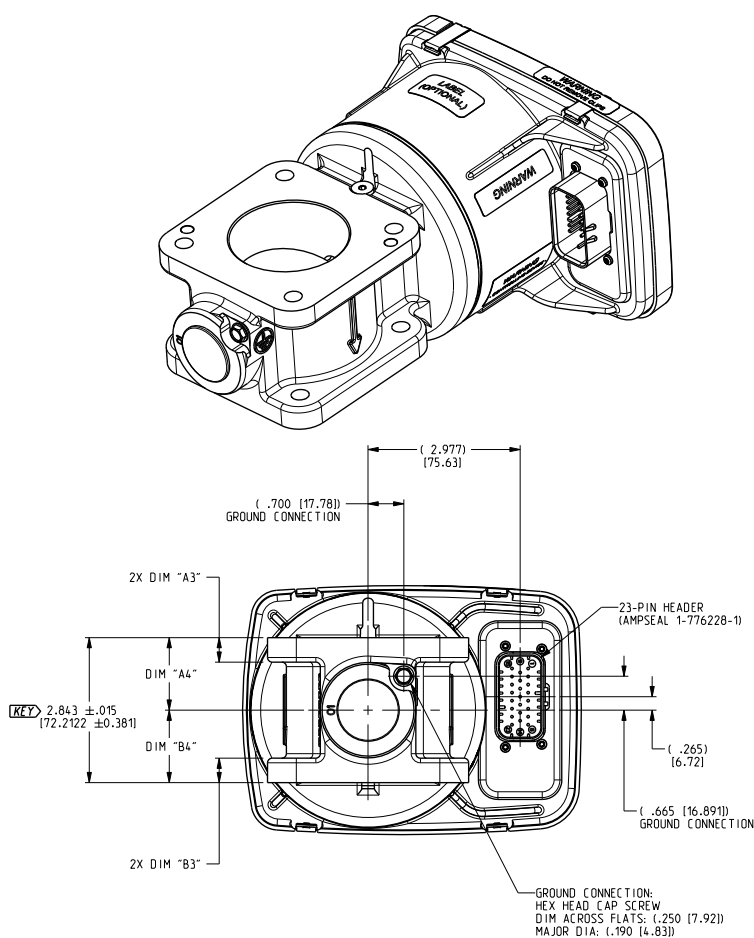

THROTTLE OPTION DETAILS											
THROTTLE OPTION	BORE	DETAILS -- ARROW TAIL FLANGE				DETAILS -- ARROW HEAD FLANGE				GRV	THROTTLE DESCRIPTION (REFERENCE)
		A1	A2	A3	A4	B1	B2	B3	B4		
33/STD	1.3045 [33.134]	Ø.394±.010 [10.01±0.25]	1.457 [37.01]	.480±.060 [12.19±1.52]	(1.4215 [36.106])	Ø.394±.010 [10.01±0.25]	1.457 [37.01]	.480±.060 [12.19±1.52]	(1.4215 [36.106])	NO	33 MM BORE, THRU ØS FOR .375 SCREWS
48/MB	1.8900 [48.006]	Ø.354±.010 [8.99±0.25]	1.339 [34.01]	.480±.060 [12.19±1.52]	(1.4215 [36.106])	Ø.354±.010 [8.99±0.25]	1.339 [34.01]	.480±.060 [12.19±1.52]	(1.4215 [36.106])	YES	48 MM BORE, THRU ØS FOR MB SCREWS, GROOVE USES PARKER 2-228
48/MB WIDE		Ø.354±.010 [8.99±0.25]	1.457 [37.01]	.480±.060 [12.19±1.52]	(1.4215 [36.106])	Ø.354±.010 [8.99±0.25]	1.457 [37.01]	.480±.060 [12.19±1.52]	(1.4215 [36.106])	NO	48 MM BORE, THRU ØS FOR MB SCREWS, WIDE PATTERN
60/STD	2.3625 [60.008]	Ø.394±.010 [10.01±0.25]	1.457 [37.01]	.480±.060 [12.19±1.52]	(1.4215 [36.106])	Ø.394±.010 [10.01±0.25]	1.457 [37.01]	.480±.060 [12.19±1.52]	(1.4215 [36.106])	NO	60 MM BORE, THRU ØS FOR .375 SCREWS
60/MB WIDE		Ø.354±.010 [8.99±0.25]	1.457 [37.01]	.480±.060 [12.19±1.52]	(1.4215 [36.106])	Ø.354±.010 [8.99±0.25]	1.457 [37.01]	.480±.060 [12.19±1.52]	(1.4215 [36.106])	NO	60 MM BORE, THRU ØS FOR MB SCREWS, WIDE PATTERN
60/M10		Ø.453±.010 [11.51±0.25]	1.457 [37.01]	.480±.060 [12.19±1.52]	(1.4215 [36.106])	Ø.453±.010 [11.51±0.25]	1.457 [37.01]	.480±.060 [12.19±1.52]	(1.4215 [36.106])	NO	60 MM BORE, THRU ØS FOR M10 SCREWS
60/JADE		Ø.354±.010 [8.99±0.25]	1.535 [38.99]	.425±.060 [10.8±1.52]	(1.3665 [34.709])	M8X1.25 THD (METRIC)	1.457 [37.01]	.535±.060 [13.59±1.52]	(1.4765 [37.503])	NO	60 MM BORE, THRU/THD ØS FOR MB SCREWS
68/STD	2.6800 [68.072]	Ø.394±.010 [10.01±0.25]	1.457 [37.01]	.480±.060 [12.19±1.52]	(1.4215 [36.106])	Ø.394±.010 [10.01±0.25]	1.457 [37.01]	.480±.060 [12.19±1.52]	(1.4215 [36.106])	NO	68 MM BORE, THRU ØS FOR .375 SCREWS
68/MB WIDE		Ø.354±.010 [8.99±0.25]	1.457 [37.01]	.480±.060 [12.19±1.52]	(1.4215 [36.106])	Ø.354±.010 [8.99±0.25]	1.457 [37.01]	.480±.060 [12.19±1.52]	(1.4215 [36.106])	NO	68 MM BORE, THRU ØS FOR MB SCREWS, WIDE PATTERN
68/M10		Ø.453±.010 [11.51±0.25]	1.457 [37.01]	.480±.060 [12.19±1.52]	(1.4215 [36.106])	Ø.453±.010 [11.51±0.25]	1.457 [37.01]	.480±.060 [12.19±1.52]	(1.4215 [36.106])	NO	68 MM BORE, THRU ØS FOR M10 SCREWS

35143 F1-6b
9999-1861
11/6/20

Figure 1-6b. F-Series PM Cast ITB Throttle Options

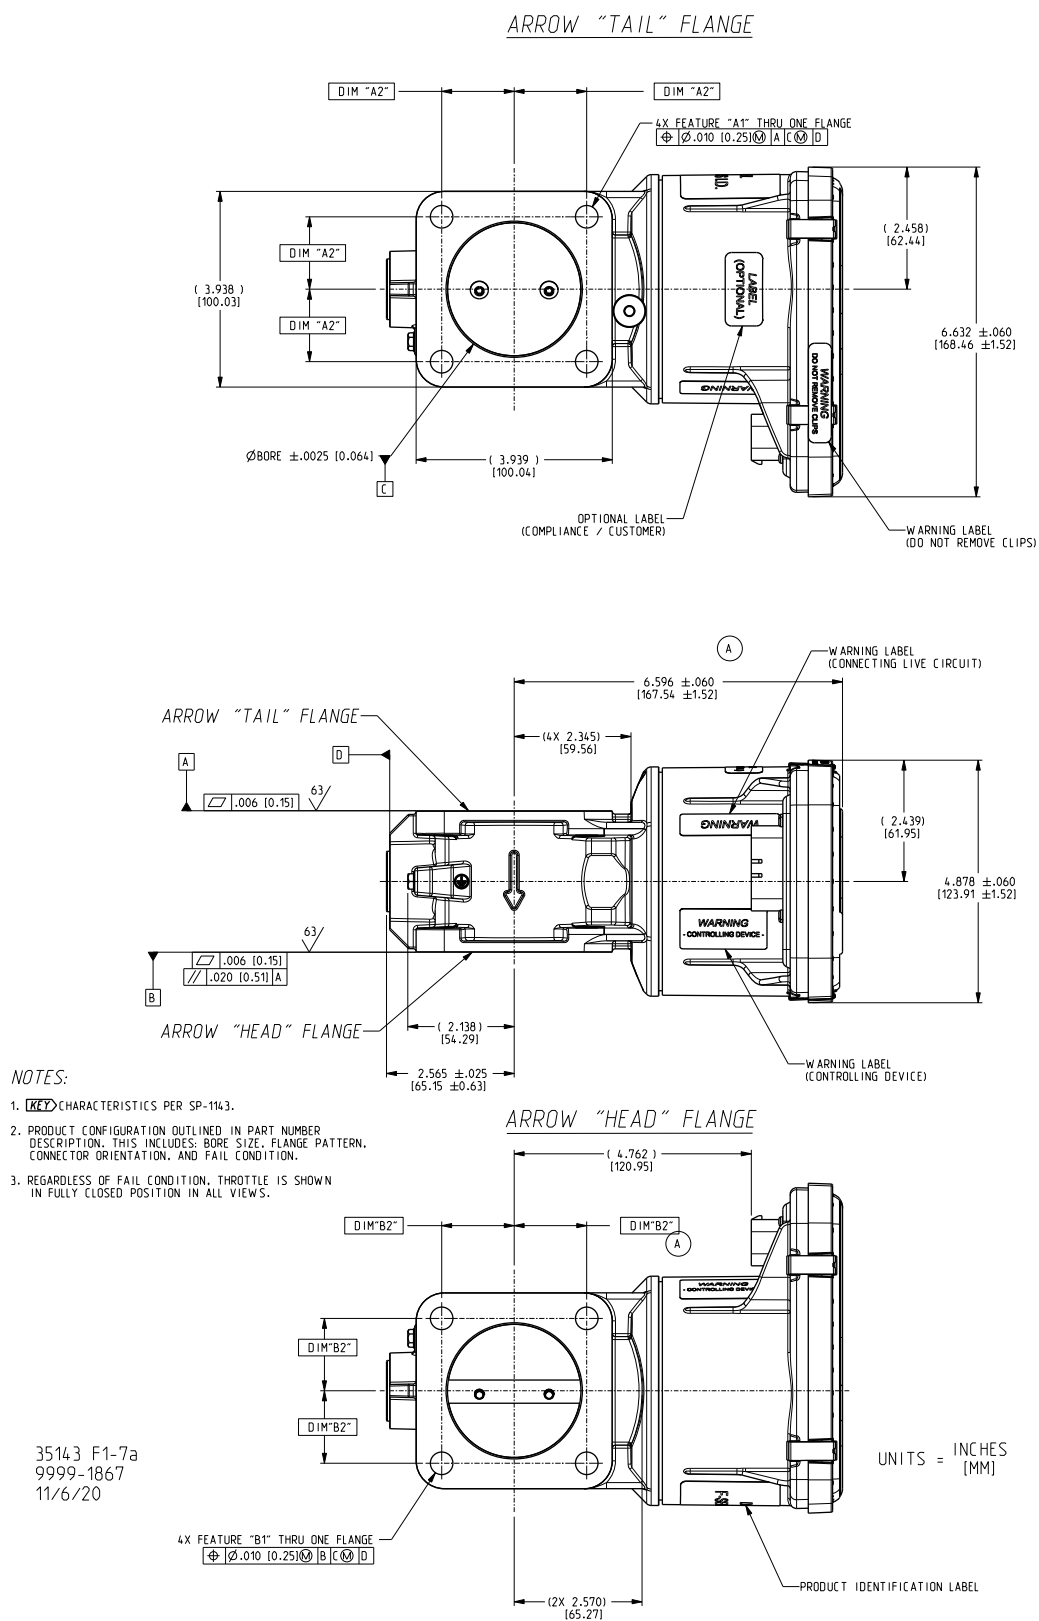


Figure 1-7a. F-Series Offset Coupler ITB Outline Drawing



THROTTLE OPTION DETAILS										
THROTTLE OPTION	BORE	DETAILS -- ARROW TAIL FLANGE				DETAILS -- ARROW HEAD FLANGE				THROTTLE DESCRIPTION (REFERENCE)
		A1	A2	A3	A4	B1	B2	B3	B4	
48/STD	1.8900 (.48.006)	Ø.394±.010 [.10.01±.0.25]	1.457 [37.01]	.480±.060 [12.19±1.52]	(1.4215 [36.106])	Ø.394±.010 [.10.01±.0.25]	1.457 [37.01]	.480±.060 [12.19±1.52]	(1.4215 [36.106])	48 MM BORE, THRU ØS FOR .375 SCREWS
60/STD	2.3625 (.60.008)	Ø.394±.010 [.10.01±.0.25]	1.457 [37.01]	.480±.060 [12.19±1.52]	(1.4215 [36.106])	Ø.394±.010 [.10.01±.0.25]	1.457 [37.01]	.480±.060 [12.19±1.52]	(1.4215 [36.106])	60 MM BORE, THRU ØS FOR .375 SCREWS
60/M10	2.3625 (.60.008)	Ø.453±.010 [.11.51±.0.25]	1.457 [37.01]	.480±.060 [12.19±1.52]	(1.4215 [36.106])	Ø.453±.010 [.11.51±.0.25]	1.457 [37.01]	.480±.060 [12.19±1.52]	(1.4215 [36.106])	60 MM BORE, THRU ØS FOR M10 SCREWS
68/STD	2.6800 (.68.072)	Ø.394±.010 [.10.01±.0.25]	1.457 [37.01]	.480±.060 [12.19±1.52]	(1.4215 [36.106])	Ø.394±.010 [.10.01±.0.25]	1.457 [37.01]	.480±.060 [12.19±1.52]	(1.4215 [36.106])	68 MM BORE, THRU ØS FOR .375 SCREWS
68/M10	2.6800 (.68.072)	Ø.453±.010 [.11.51±.0.25]	1.457 [37.01]	.480±.060 [12.19±1.52]	(1.4215 [36.106])	Ø.453±.010 [.11.51±.0.25]	1.457 [37.01]	.480±.060 [12.19±1.52]	(1.4215 [36.106])	68 MM BORE, THRU ØS FOR M10 SCREWS

Figure 1-7b. F-Series Offset Coupler ITB Throttle Options


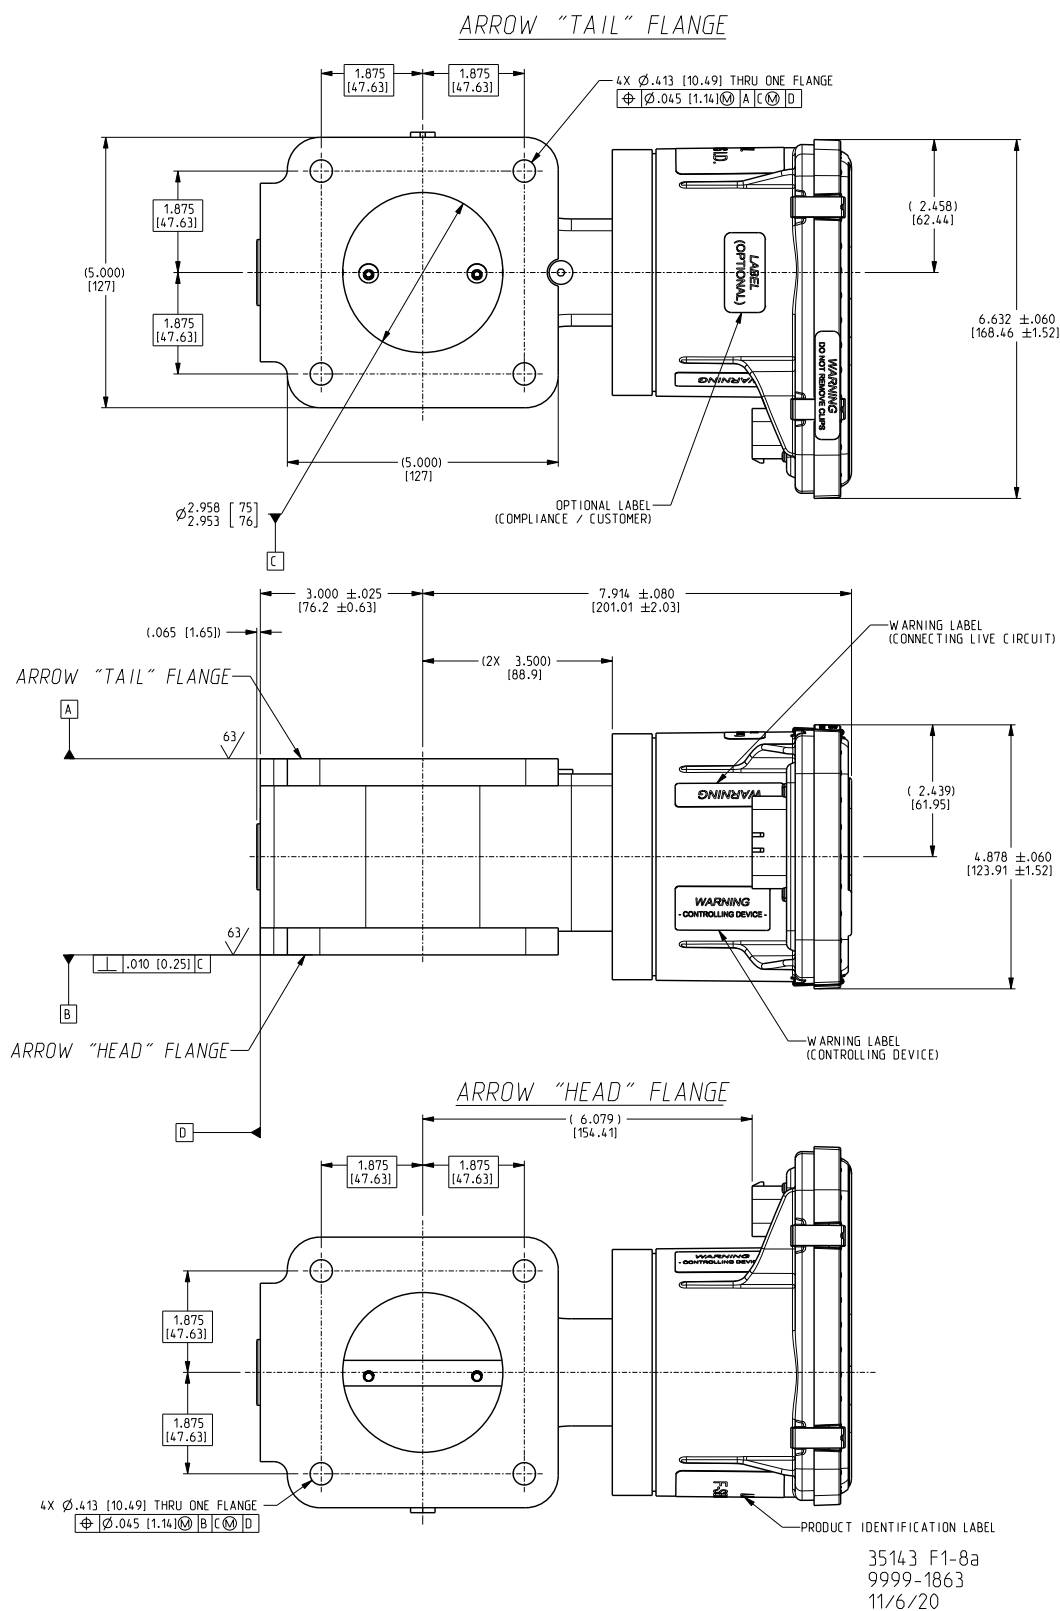


Figure 1-8a. F-Series 75mm ITB Outline Drawing

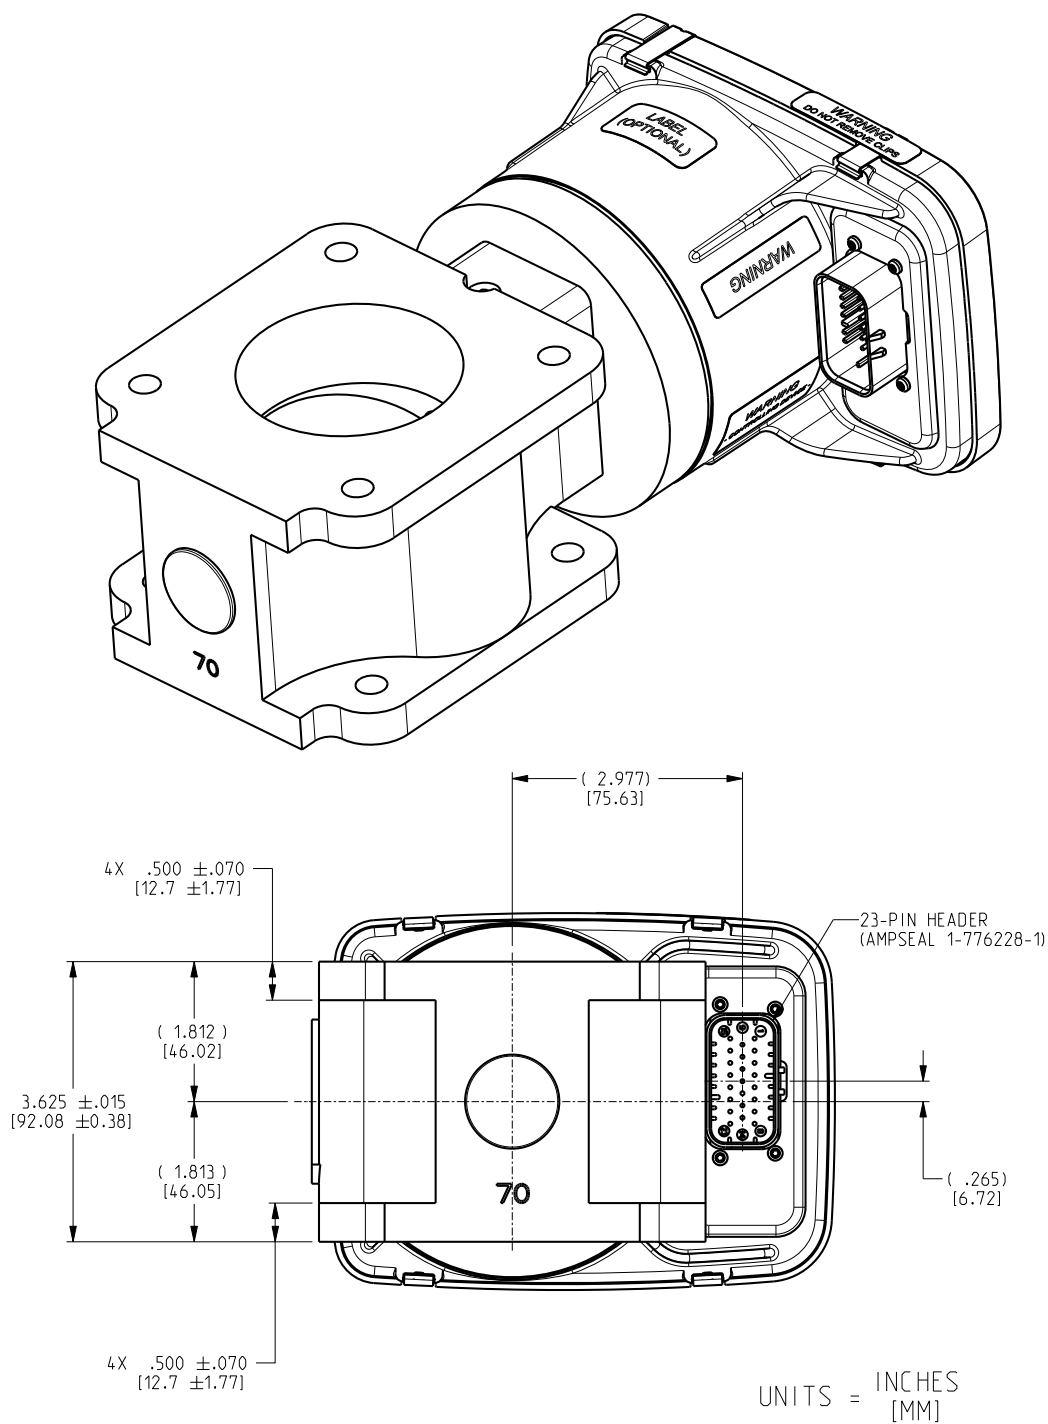

NOTES:

1. PRODUCT CONFIGURATION OUTLINED IN PART NUMBER DESCRIPTION. THIS INCLUDES: BORE SIZE, FLANGE PATTERN, CONNECTOR ORIENTATION, AND FAIL CONDITION.
2. REGARDLESS OF FAIL CONDITION, THROTTLE IS SHOWN IN FULLY CLOSED POSITION IN ALL VIEWS.

35143 F1-8b
9999-1863
11/6/20

Figure 1-8b. F-Series 75mm ITB Outline Drawing

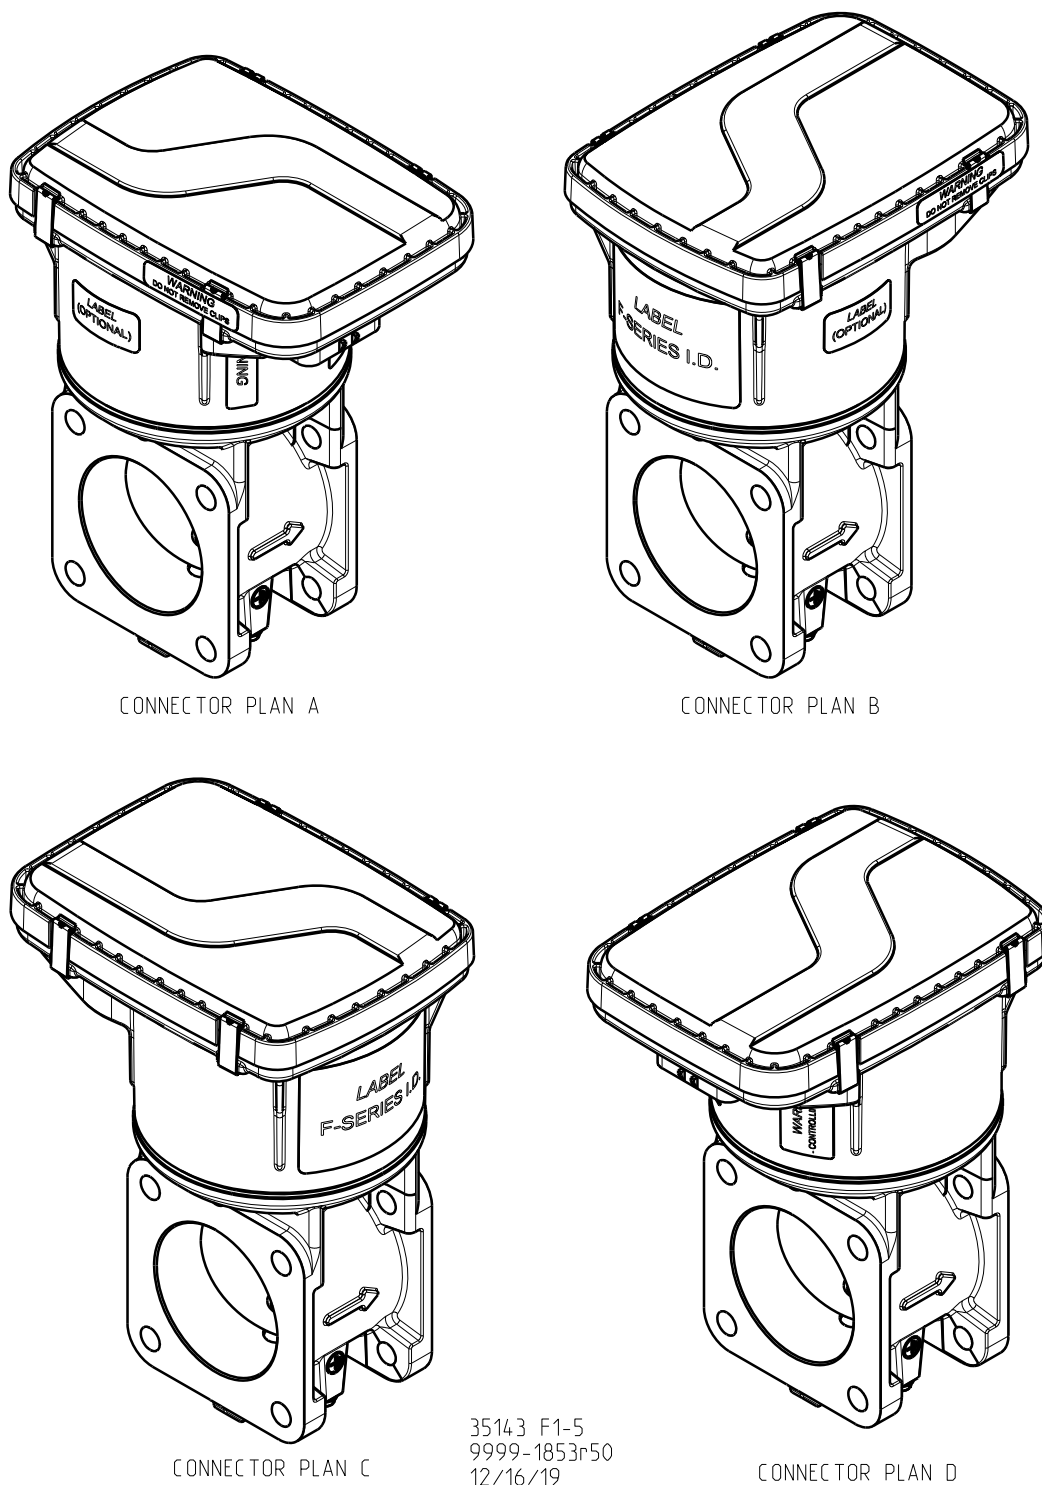


Figure 1-9. Electrical Connector Orientation Options

Chapter 2.

Mechanical Installation

Introduction

This chapter provides instructions on how to mount and connect the F-Series modular actuator and ITB into a system. Hardware dimensions are provided to mount the device for specific applications.



WARNING

External fire protection is not provided in the scope of this product. It is the responsibility of the user to satisfy any applicable requirements for their system.



CAUTION

Due to typical noise levels in turbine or engine environments, hearing protection should be worn when working on or around the F-Series actuator.



CAUTION

The surface of this product can become hot enough or cold enough to be a hazard. Use protective gear for product handling in these circumstances. Temperature ratings are included in the specification section of this manual.



WARNING

**Overspeed /
Overtemperature /
Overpressure**

The engine should be equipped with an independent fuel shut-off device to protect against fuel leakage or damage to the engine with possible personal injury, loss of life, or property damage. The fuel shut off device must be totally independent of the engine control system. An overtemperature or overpressure shutdown device may also be needed for safety, as appropriate.

General Installation, Operation Notes, and Requirements

Always make sure the application includes a primary overspeed protection device. Any overspeed detection that might be included, as part of the F-Series actuator design, must be considered a secondary backup only.



WARNING

The actuator does not contain an internal return spring; therefore, an external positive shutdown is necessary in the event of a loss of power to the actuator. A separate overspeed trip device is always mandatory.

Use of a predicted min fuel shutdown procedure is highly recommended. Failure to comply with this recommendation can cause personal injury and/or property damage.

Do not remove clips on cover. The unit contains no user-serviceable parts. Warranty void if clips are removed.

Unpacking

Be careful when unpacking the actuator. Check the unit for signs of damage, such as bent or dented panels, scratches, and loose or broken parts. Notify the shipper and Woodward if damage is found.

Mechanical Installation

Mounting Location

Locate the F-Series actuator away from sources of extreme radiant heat, such as exhaust manifolds or turbochargers. The operating temperature range of the control is $-40\text{ }^{\circ}\text{C}$ to $+105\text{ }^{\circ}\text{C}$ ($-40\text{ }^{\circ}\text{F}$ to $+221\text{ }^{\circ}\text{F}$). In spark-ignition applications, locate the F-Series actuator away from the ignition coils and leads, and do not route the actuator harness wires next to the spark plug wires.

As shown in the specifications, Appendix C, the F-Series actuator has been designed for and verified to a given accelerated life vibration test level at the mounting surface of the actuator. The user should be aware that in any application, bracket design can significantly change the vibration levels at the actuator. Therefore, every effort should be made to make the bracket as stiff as possible so that engine vibrations are not amplified, creating an even more severe environment at the actuator. Moreover, orienting the actuator shaft parallel to the crankshaft of the engine, when possible, often reduces the vibration load on the actuator's rotor system.

Mounting Orientation

The F-Series actuator may be mounted on-engine in any position. While it is not a requirement, it is good practice to orient the connector feature on the control in a horizontal or downward orientation to minimize fluid accumulation between the enclosure and the mating connector's gasket.

Mounting the F-Series Actuator with an ITB

Typical mounting of actuators with Integrated Throttle Bodies (ITB) is accomplished by fastening the throttle to the inlet and outlet pipes. Ensure that the pipes can support the weight of the F-Series actuator and throttle body. A support bracket must be provided if the pipes do not provide adequate support.

The 33, 48, 60, 68, and 75 mm ITB sizes have two mounting flanges with four through holes each in a square pattern. Refer to the table in Figures 1-4b, 1-6b, and 1-7b for the flange and bolt pattern dimensions and bolt diameters for the various ITB sizes.

Flange gaskets are not included with the Integrated Throttle Bodies (ITB) and these are not available from Woodward.



WARNING

Leak-check all gaseous fuel connections. Leaking gaseous fuel can cause explosion hazards, property damage, or loss of life.



WARNING

The F-Series ITB valve is NOT equipped with an overboard drain in the event of gas leakage through its various seals. The valve should therefore be used in a well-ventilated area. A methane detector should be used if the valve will be used in an enclosed installation.



CAUTION

The F-Series ITB valve shaft represents a pinch hazard even with the power disconnected. The internal return spring keeps the valve loaded closed. To prevent bodily harm or injury, keep all hands, fingers, etc. away from the valve element at all times.

F-Series Grounding

The F-Series must be grounded to the engine structure through a low impedance connection in order to ensure proper EMC performance. This may be accomplished through the mechanical mounting of the actuator/throttle itself (preferred), or through a wired connection to a designated ground screw on the unit. If a wired connection is used as the primary EMC ground, it must be through a low impedance wire or strap < 30 cm (12 inches) in length, 3 mm² (12 AWG) minimum. See Figures 1-3a, 1-4a, 1-6a, 1-7a, and 1-8a for ground screw location on the actuator with ITB.

Output Shaft

The F-Series actuator output shaft has 68° to 72° (nominal 70°) of available travel. In addition, the ITB versions incorporate the use of an internal return spring. Unless otherwise specified, the spring load drives the throttle plate to the closed position.

NOTICE

The actuator's maximum slew rate can place stress on the fuel system stops and on the linkage between the actuator and the fuel system. The maximum actuator speed is 1800 degrees per second in both increase and decrease fuel directions under normal operating conditions. Exceeding the control input voltage requirements may cause a unit shutdown in which the actuator speed may exceed 1800 degrees per second.

NOTICE

The F-Series ITB valve shaft is integral to the valve accuracy and performance. Take special care to prevent damage to the valve shaft or bore and do not use a sharp or metallic object to open the valve.

Chapter 3.

Electrical Installation

Introduction

This chapter provides instructions on how to connect the F-Series control into a system. Figure 3-1a shows typical control connections to external devices. Wiring pinouts, as viewed by looking into the F-Series control connector feature, are shown in Figure 3-1b.

The F-Series control has an operating voltage range of 10 V to 32 VDC with nominal voltages of 12 V or 24 VDC. The power supply input is reverse polarity protected and consumes 24 W (0.75 A at 32 VDC) at maximum steady-state torque.

Typical max average current is 1 A at 24 V, and a max 2 A at 12 V. The application should be configured to turn on power to the actuator when the engine is first cranked.

NOTICE

Do not remove or replace the actuator cover.

Shielded Wiring

Shielded wiring is generally not required. The use of cable with individually shielded-twisted pairs is only required where indicated by the control wiring diagram (Figure 3-1). However, some users may elect to run shielded wires for some I/O signals. Cable shields must be terminated as indicated in the control wiring diagram using the installation notes described below. DO NOT attempt to directly ground the shield at both ends since an undesired ground loop condition may occur.

Installation Notes

- Wires exposed beyond the shield should be as short as possible, not exceeding 50 mm (2 inches).
- The shield termination wire (or drain wire) should be kept as short as possible, not exceeding 50 mm (2 inches), and where possible the diameter should be maximized.
- Installations with severe electromagnetic interference (EMI) may require additional shielding precautions. Contact Woodward for more information.

Failure to provide shielding can produce future conditions which are difficult to diagnose. Proper shielding, when provided, at the time of installation is required to assure satisfactory operation of the product.

Electrical Connections

WARNING

EXPLOSION HAZARD—Do not remove covers or connect/disconnect electrical connectors unless power has been switched off or the area is known to be non-hazardous.

Substitution of components may impair suitability for Class I, Division 2 or Zone 2.

Do not clean equipment unless power has been switched off or the area is known to be non-hazardous.

**AVERTISSEMENT**

RISQUE D'EXPLOSION—Ne pas enlever les couvercles, ni raccorder / débrancher les prises électriques, sans vous en assurer auparavant que le système a bien été mis hors tension; ou que vous vous situez bien dans une zone non-explosive.

La substitution de composants peut rendre ce matériel inacceptable pour les emplacements de Classe I, Division 2.

Ne pas nettoyer l'équipement sans vous en assurer auparavant que le système a bien été mis hors tension; ou que vous vous situez bien dans une zone non-explosive.

**WARNING**

The F-Series will only meet NEMA ingress protection specifications while the mating connector is installed in the unit. As such, the unit should not be exposed to operating environments unless the mating connector is installed.

In addition, if a wire is not used for each of the 23 pins on the control, a sealing plug must be used in place of each missing wire. Failure to adhere to these guidelines may result in product failure or decreased life.

Refer to Table 3-1 for a list of proper mating connectors.

**WARNING**

Wiring must be in accordance with North American Class I, Division 2, wiring methods as applicable, and in accordance with the authority having jurisdiction.

NOTICE

Do not connect any cable grounds to “instrument ground”, “control ground”, or any non-earth ground system. Make all required electrical connections based on the wiring diagram (Figure 3-1).

NOTICE

In order to ensure that the F-Series performance is not inhibited by ignition system noise, Woodward recommends that the F-Series housing and harness be kept at least 2 cm away from coil primary wires and 3 cm from high-voltage secondary leads/wires.

This recommendation assumes that the ignition system utilizes a resistive secondary (5 k Ω minimum) and a worst-case secondary voltage of 20 kV. In cases where the ignition does not utilize a resistive secondary or generates higher voltages, the distances may need to be increased in order to maintain compatibility.

General

Prior to installation, refer to the wiring diagrams and the representative I/O interface schematics in this chapter.

Use 1 to 1.5 mm² (16 to 18 AWG) stranded copper wire with insulation meeting temperature requirements in the harness design. A wiring harness stress relief within 150 mm (6") of the control's connector is recommended.

For specified performance of the actuator, limit all power input, I/O, and signal lines to less than 30m (98ft).

For the TPS output wiring, the (AGND) TPS– connection pin is internally connected to Input Power –. Therefore, (AGND) TPS– should only be used when the user's controller contains a differential input or isolated input. Otherwise, a ground loop will exist, assuming the user's controller power ground is common to the F-Series power ground (Input power –). If the TPS output is used with a Differential or Isolated input, the TPS– must be used or the system will not function. If TPS output is not used with an isolated or differential input on the user's end (i.e., single ended), the return path is through the common system/power ground back to F-Series Input Power.

IMPORTANT

External wiring connections for reverse-acting controls are identical to those for direct-acting controls.

Dress the wiring harness with wire loom (or equal) to contain it in a single bundle. Use grommets when passing the harness through metal panels.

In spark-ignition engine applications, route the F-Series actuator harness wires away from the spark plug wires.

Connector

The following AMP mating connector components (or equal) are needed for harness designs:

Table 3-1. F-Series Mating Connector

Description	AMP P/N	Woodward P/N
Mating Connector, 23-Pin	770680-1	1751-805
Gold Sockets for all Connectors	770854-3	1608-1044

Description of Electrical I/O

Representative circuitry is shown for the F-Series actuator inputs/outputs in the figures in this chapter.

Power Supply Input

Pin 1 = Input Power (+)


Pin 16 = Input Power (–)

The F-Series actuator requires a voltage source of 10 V to 32 VDC, with a current capacity of at least 10 A. The actuator is functional in the range of 7 V to 32 VDC, but for supply voltages < 10 VDC, full steady state torque may not be available over the entire operating range. To withstand an engine start when control power is from the starting batteries, a control reset will not occur down to 6 VDC. Input power failure diagnostics are provided based on software configuration.

Run the power leads directly from the power source to the control. Do not power other devices with leads common to the control (see Figures 3-2a and 3-2b). If the power source is a battery, be sure the system includes an alternator or other battery-charging device.

NOTICE

The input power must be fused. Failure to fuse the F-Series actuator could, under exceptional circumstances, lead to personal injury, damage to the control, and/or explosion.

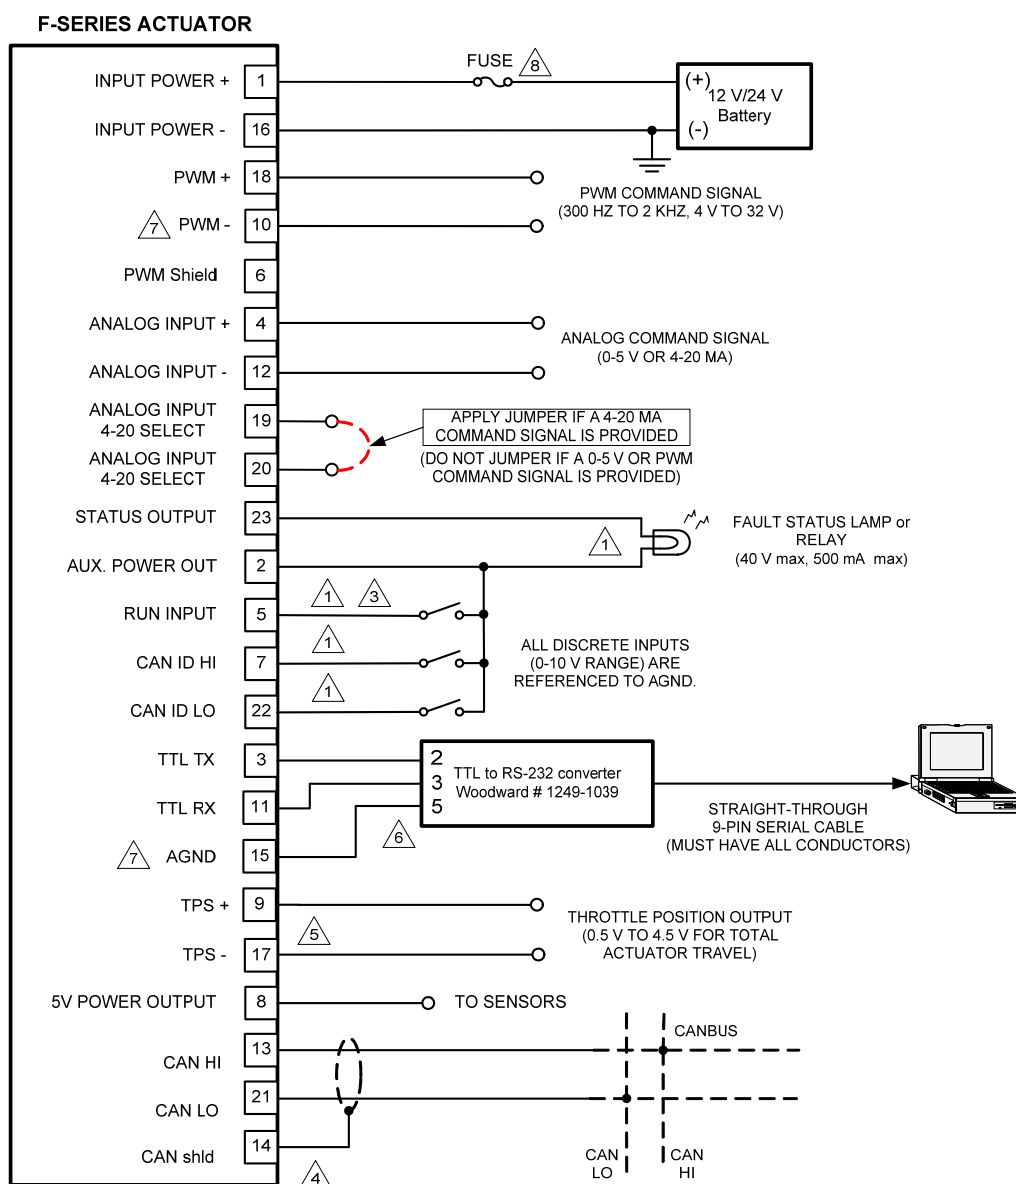**NOTES:**

- 1 FOR THE BEST EMI PERFORMANCE, USE THE AUXILIARY POWER OUTPUT (PIN 2) TO PROVIDE POWER TO THE DISCRETE INPUTS AND TO PULL UP THE STATUS OUTPUT DEVICE, WHETHER IT IS A LAMP OR RELAY COIL. MAKE THESE CONNECTIONS WITHIN 1 METER OF THE F-SERIES ACTUATOR.
- 2 POPULATING ALL CONNECTOR PINS, INCLUDING THOSE "NOT USED", IS RECOMMENDED FOR IMPROVED VIBRATION ROBUSTNESS.
- 3 WHEN IT IS DESIRED TO USE A DISCRETE AS A KEYSWITCH INPUT, PLEASE SEE NOTE 1 ABOVE. AS ANOTHER OPTION TO A MANUAL SWITCH, A DRY CONTACT RELAY MAY BE USED TO TIE AUXILIARY POWER OUTPUT TO THE DISCRETE INPUT. THIS RELAY WOULD BE ACTIVATED BY THE REMOTE KEYSWITCH.
- 4 CAN shld, PIN 14, IS NOT GROUNDED. PIN 14 IS TERMINATED THROUGH A HIGH FREQUENCY CAPACITOR. SHIELD MUST BE GROUNDED IN THE WIRING HARNESS.
- 5 TPS -, PIN 17, IS ONLY USED WHEN THE USER'S CONTROLLER CONTAINS A DIFFERENTIAL INPUT OR ISOLATED INPUT. IF TPS OUTPUT IS NOT USED WITH AN ISOLATED OR DIFFERENTIAL INPUT ON THE USER'S END (I.E. SINGLE ENDED), THE RETURN PATH IS THROUGH THE COMMON SYSTEM/ POWER GROUND BACK TO THE F-SERIES INPUT POWER - AND TPS -, PIN 17, IS NOT CONNECTED.
- 6 LOCATE THE TTL TO RS-232 CONVERTER A MAXIMUM OF 1 M (3.3 FT) FROM THE F-SERIES ACTUATOR
- 7 WHEN THE USER'S PWM LOW SIDE SOURCE IS ISOLATED FROM POWER -, THEN PWM -, PIN 10, MUST BE TIED TO AGND, PIN 15. DO NOT TIE PWM -, PIN 10, TO AGND, PIN 15, IF THE USER'S PWM LOW SIDE SOURCE IS NOT ISOLATED FROM POWER -, OR IF THE PWM SOURCE IS A PUSH-PULL TYPE.
- 8 RECOMMENDED FUSE SIZING: 9A SLOW BLOW FOR 12V APPLICATIONS AND 6A SLOW BLOW FOR 24V APPLICATIONS.

Figure 3-1a. Typical F-Series Actuator Control Wiring, 23-Pin Version

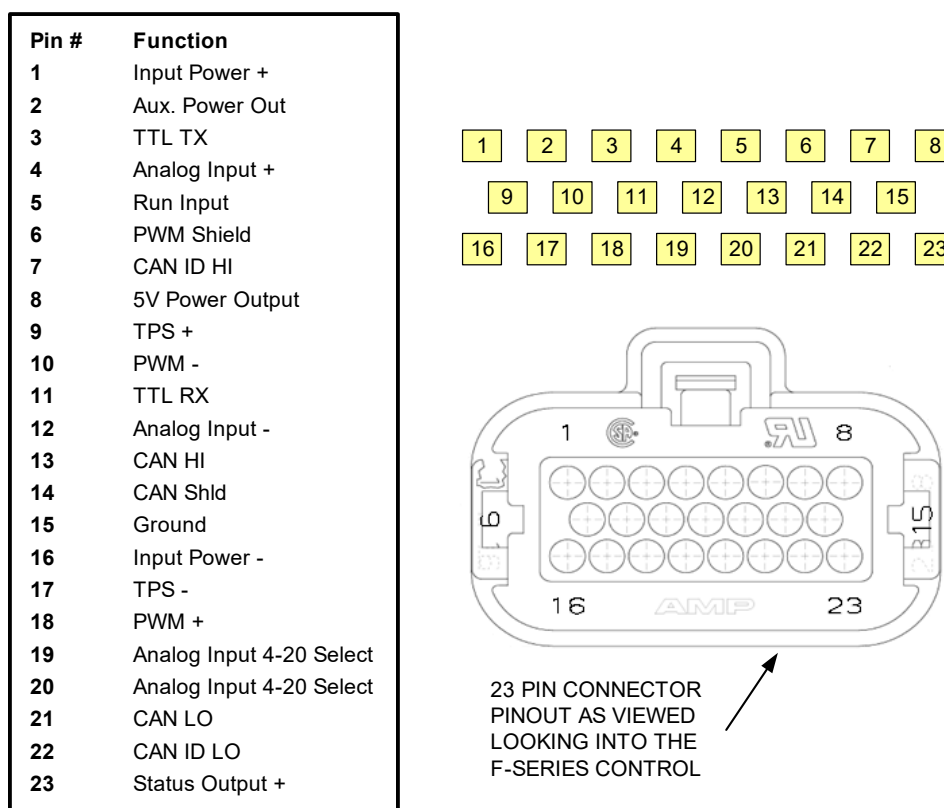


Figure 3-1b. 23-Pin Connector Pin Assignments

IMPORTANT

When wiring pins 15 & 17, be careful to ensure that the external circuit interface is isolated from battery ground, either by means of galvanic isolation or differential input/output.

If it is not, a ground loop could be formed that can cause excess noise on the lines and/or damage to circuits.


The power supply terminals are reverse polarity protected, and in the case that a reverse polarity condition exists, the F-Series actuator will not power-up and, if attached to a throttle body (ITB) with an internal return spring, will remain at the position dictated by the return spring.

Woodward recommends using a 9 A slow-blow fuse for 12 V applications and a 6 A slow-blow fuse for 24 V applications.

IMPORTANT

All connector pins are short-circuit protected to ground and power except pins 15 & 17, which are not protected against shorts to battery positive.

Installation of a fuse on the battery negative (B-) wire (pin 16) would provide protection to these pins but does not mean one is not needed in the power connection. Pin 1 (B+) still needs protection against a short to ground.

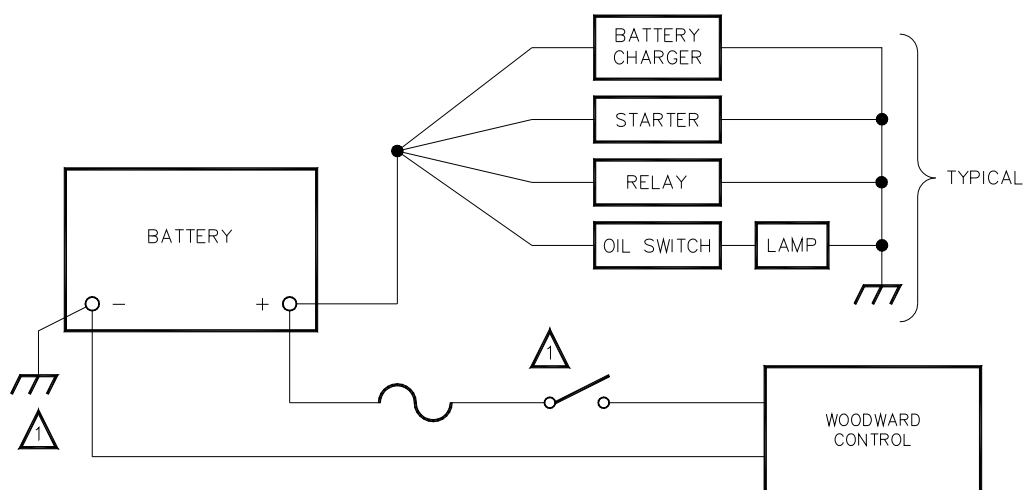

NOTE:

RIGHT

⚠ A NEGATIVE GROUND SYSTEM IS SHOWN. IF A POSITIVE GROUND SYSTEM IS USED, THE SWITCH AND FUSE MUST BE LOCATED IN SERIES WITH BATTERY (-) AND INPUT POWER (-) ON THE WOODWARD CONTROL. THE POSITIVE TERMINAL OF THE BATTERY BECOMES CHASSIS GROUND AND IS CONNECTED TO INPUT POWER (+) ON THE WOODWARD CONTROL.

Figure 3-2a. Correct Wiring to Power Supply

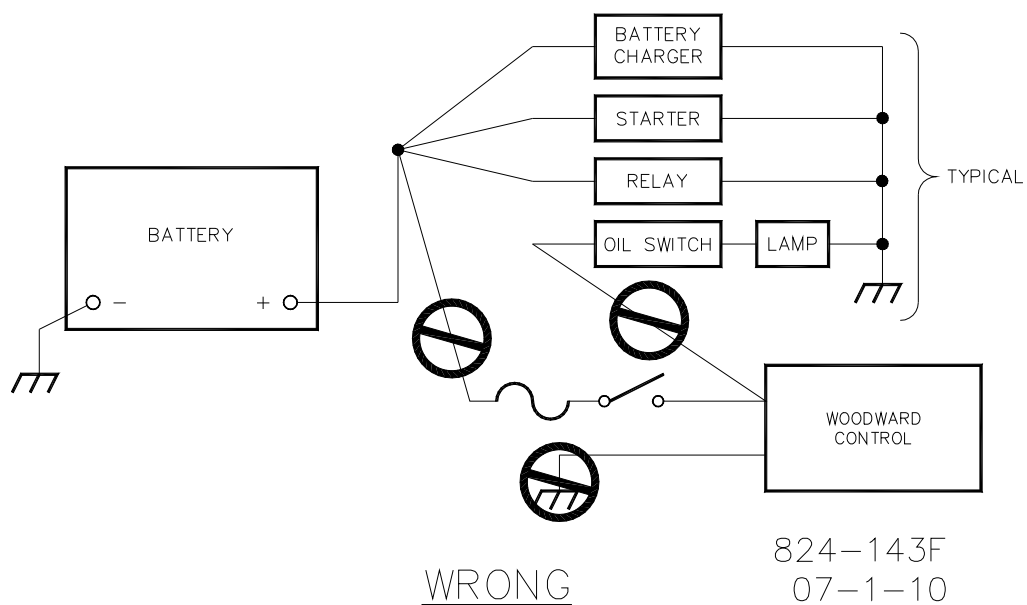


Figure 3-2b. Incorrect Power Supply Wiring

Service Port

Pin 3 = TTL TX

Pin 8 = TTL RX

Pin 11 = TTL Ground (–)

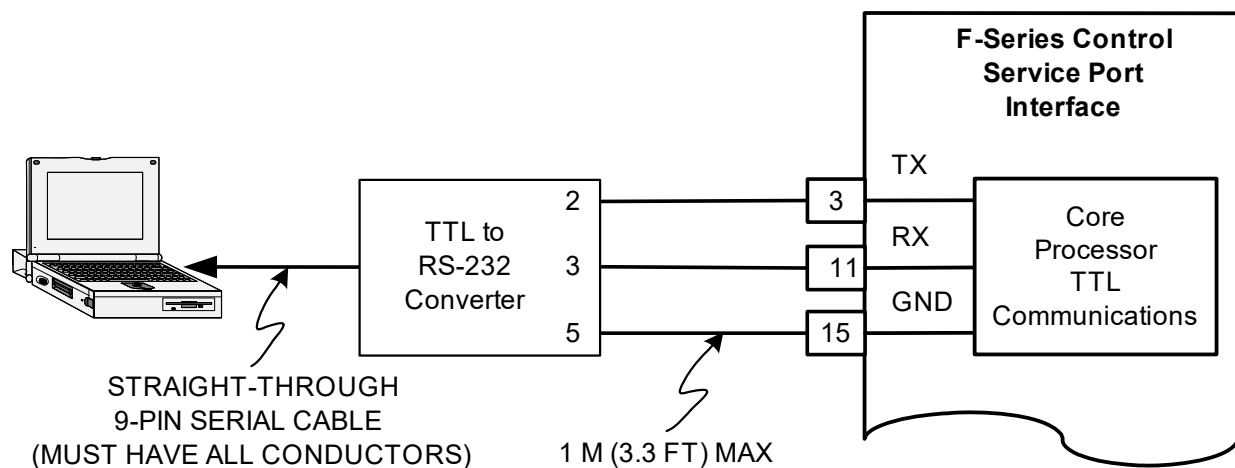


Figure 3-3. Service Port Interface

The RS-232 service port is used to configure, calibrate and trouble shoot the F-Series control. The F-Series Service Tool can be downloaded from the Internet at www.woodward.com/software. The RS-232 wiring must meet the requirements in the EIA RS-232 standard document.

An external TTL to RS-232 converter is necessary to make communications possible with the Woodward F-Series Service Tool. The converter must be located a maximum of 1 meter from the F-Series actuator. A connectivity kit can be purchased from Woodward to accomplish this. Further instructions for using this connectivity kit are provided in Chapter 5.



WARNING

Additional voltage (approximate 0.3 V) can be observed on TPS Output when an un-powered device is connected to the PC via RS 232 interface. This situation can appear during cranking. Using an isolated RS-232 interface helps to avoid the error.

PWM Demand Input

Pin 18 = PWM (+)

Pin 10 = PWM (–)

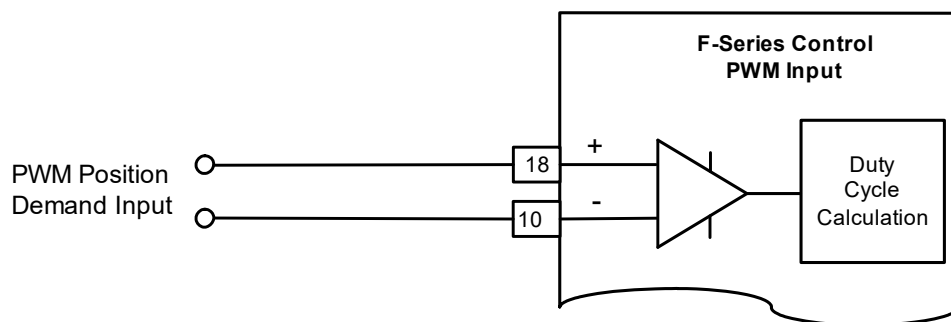


Figure 3-4. PWM Input


The PWM demand input is a differential type capable of handling low-side and push-pull style PWM sources. Pull-up level is 5 V through 4.99 k Ω . See Figure 3-6 for acceptable PWM input types.

This input will handle a PWM frequency range from 300 to 2000 Hz at amplitudes ranging from 4 to 32 V. Normal operating range is from 10% to 90% duty cycle, however these settings are configurable using the Service Tool.

IMPORTANT

The PWM demand input can be configured to handle a high-side PWM source when an additional Flo-Tech-to-F-Series adapter cable is used. The adapter cable part number can be found in application note 51305.

Low-Side Open-Collector (open-drain) PWM Source

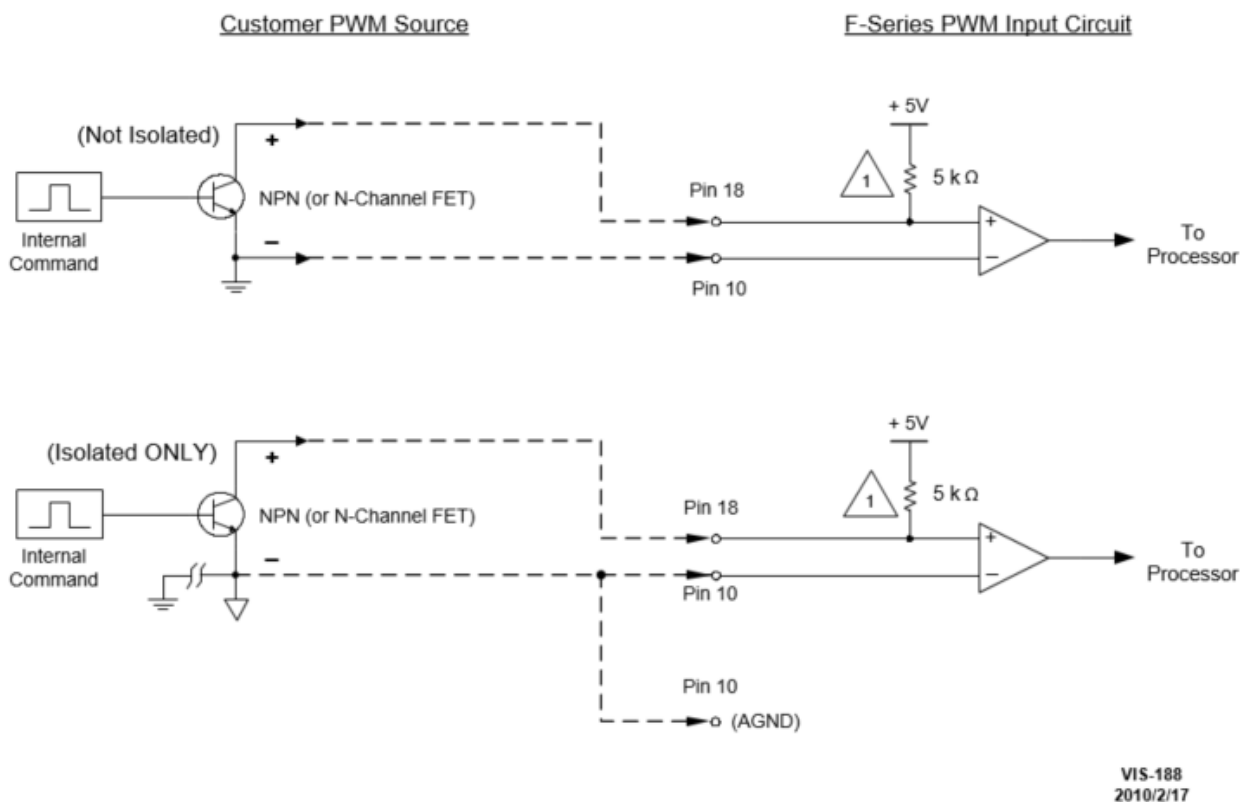


NOTES:



This resistor is present in all F-Series versions. It must be taken into consideration when selecting an external pull-up or pull-down resistor to ensure that the PWM signal passes through the detection threshold.

Figure 3-5a. Acceptable PWM Input Types


High-Side PWM Source

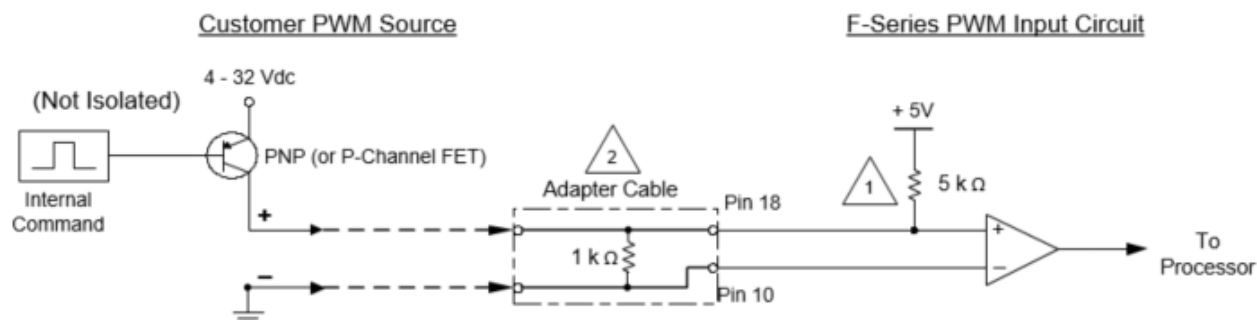

NOTES:

- 1 This resistor is present in all F-Series versions. It must be taken into consideration when selecting an external pull-up or pull-down resistor to ensure that the PWM signal passes through the detection threshold.
- 2 High side input capability is only available when Flotech to F-Series adapter cable (as called out in APP NOTE 51305) is used.

Push-Pull PWM Source (three variations)

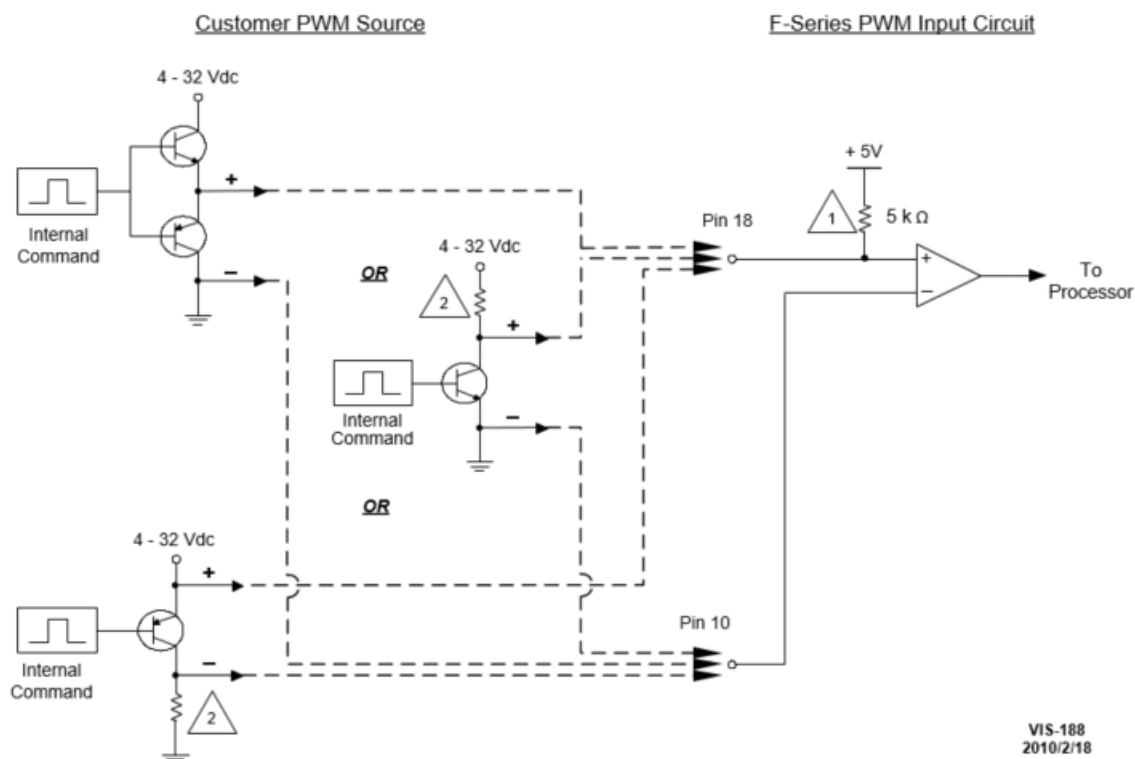

NOTES:

- 1 This resistor is present in all F-Series versions. It must be taken into consideration when selecting an external pull-up or pull-down resistor to ensure that the PWM signal passes through the detection threshold.
- 2 This resistor is supplied by the customer to complete the push-pull source externally. It is NOT internal to the F-Series actuator.

Figure 3-5b. Acceptable PWM Input Types

TPS Output

Pin 9 = TPS (+)

Pin 17 = TPS (-)

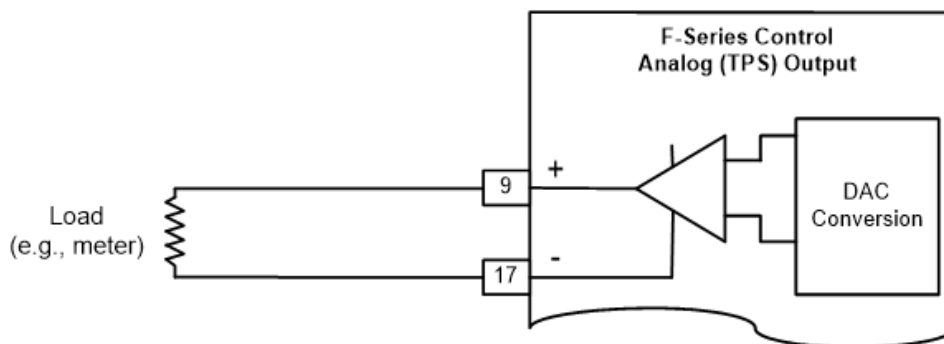


Figure 3-6. Analog (TPS) Output

The F-Series actuator provides a 0 V to 5 VDC output signal representing the actual shaft rotational position (Throttle Position Signal). The position output scaling is configurable. Default scaling is for a 0.5 V to 4.5 VDC output with a 0% to 100% shaft rotation. The position output will be equal to the measured position within 1% and is updated at least every 10 ms. However, when the optional non-linear position demand curve is configured, the TPS is corrected to account for the effect of the curve, so that the TPS should still normally match the position demand input. In this case, the TPS signal will be proportional to the position demand rather than the actual shaft rotational position.

! WARNING

Do not try to inject signals into the TPS output, as it will negatively impact the performance of the F-Series actuator. This output is intended to be used with a high impedance device, such as a voltmeter. Do not tie TPS (+) directly to battery or ground. If the application does not use this output, leave it open.

! WARNING

It is recommended that the TPS output be used to externally verify that the position command and subsequent actual position matches the command signal sent. In addition to a positioning error validation, the TPS signal should be monitored to detect out-of-range errors on the TPS output. Failure to comply with this recommendation can result in undetected system faults, and in extreme cases, can cause personal injury and/or property damage.

5 V Power Output

Pin 8 = +5 V Power Output

Pin 16 = Return (-)

A +5 VDC output is provided on the F-Series actuator to power external sensors, if necessary. The 5 V output is limited to 30 mA, which is sufficient for most light-duty sensors. The tolerance of the 5 V output is $\pm 0.5\%$ of full scale.

Analog Input

Pin 4 = Analog Input (+)

Pin 12 = Analog Input (-)

Pins 19 & 20 = Analog Input 4 mA to 20 mA Select

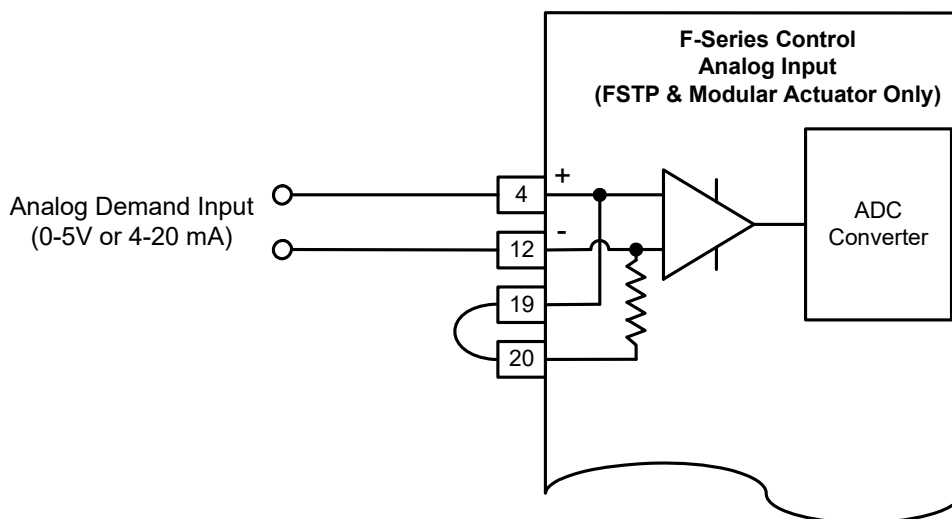


Figure 3-7. Analog Input

The analog input can be configured for use as a 4 mA to 20 mA or 0 V to 5 VDC position demand input. The hardware must be configured for either a 4 mA to 20 mA or 0 V to 5 VDC analog input type.

Note: Analog Demand is not available in firmware 5418-9520.

IMPORTANT

The FSTP F-Series can be configured to accept a 0 mA to 200 mA analog input signal. The 0 mA to 200 mA input capability is only available when a Flo-Tech-to-F-Series adapter cable (as called out in application note 51305) is used. The resistors in the adapter cable will convert the 0 mA to 200 mA signal to a 0 V to 5 V input that the F-Series will respond to. The F-Series should be set up in the 0 V to 5 V mode as described below.

Mode: 0 to 5 V

If the input is used with a 0 V to 5 V position demand, connect a voltage source between pins 4 and 12. Make sure that there is no connection between pins 19 and 20. The signal at pin 4 must be more positive than the signal at pin 12 for proper operation.

Mode: 4 to 20 mA

If the input is used with a 4 mA to 20 mA position demand, connect a current source between pins 4 and 12. Make sure that pins 19 and 20 are connected as close as possible to the connector. The signal at pin 4 must be more positive than the signal at pin 12.

Analog Input failure diagnostics are provided based on software configuration.

Aux Power Out

Pin 2 = Aux Power Output (+) Internal Return

An auxiliary power output is provided for powering the discrete input High Side Switch contacts and the discrete output load. This output is basically a surge-suppressed version of the Input Power (+).

Woodward highly recommends using this output to power all discrete input contacts and the discrete output load since this output is clamped. The discrete inputs are not rated for battery surge.

Discrete Inputs

Pin 5 = Discrete Input 1 (Run Enable Input or Not Used)
 Pin 7 = Discrete input 2 (CAN ID HI or LO)
 Pin 22 = Discrete input 3 (CAN ID HI or LO)
 Pin 2 = Aux Power (clamped positive supply for High Side Switch)
 Pin 15 = Ground (for Low Side Switch)

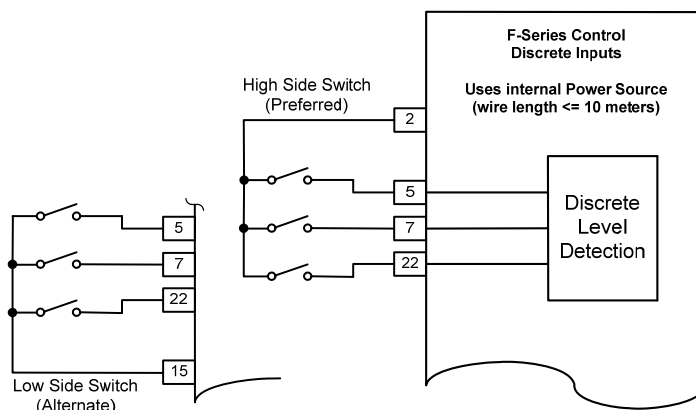


Figure 3-8. Discrete Inputs

High Side Switch, (default)

If used as a high side switch, the switch contact must be connected to the discrete input pin and to the Aux Power pin (supply plus) of the F-Series actuator. The high side switch configuration is preferred.

Low Side Switch

If used as a low side switch, the switch contact must be connected to the discrete input pin and to the Ground pin of the F-Series actuator.

Active Closed, (default)

Active closed can be used for situations where it is safer to make the function inactive if the wire is broken, or disconnected.

Active Open

Active open can be used for situations where it is safer to make the function active if the wire is broken, or disconnected.

Run Input

Pin 5 = Discrete input 1 (Run Enable Input)
 Pin 2 = High Side Switch Source
 Pin 15 = Low Side Switch

The Run Input is a configurable discrete input that causes the actuator to run normally when active and will force the actuator current to zero (actuator goes limp) when not active. This mode provides for minimal power consumption of the device.

The Run Input can also be configured as 'Not Used' or CAN Input. With either of these configurations, the Run Input wiring is not needed. If configured for use as a discrete input, the Run Input must be active to run the actuator.

CAN ID Inputs

Pin 7 = Discrete input 2 (configurable as CAN ID High or Low)
 Pin 22 = Discrete input 3 (configurable as CAN ID High or Low)
 Pin 2 = High Side Switch Source
 Pin 15 = Low Side Switch

The CAN ID inputs are used to select which CAN identifiers will be used on the CANbus. With no programming tools, the customer can select from the four pre-programmed CAN IDs through a hard-wired code in the engine harness. This is especially important where more than one F-Series is used on an engine. If one F-Series valve is replaced with another, the new valve will read the correct ID number from the engine harness connector.

Up to four F-Series controls can be on the same CANbus; however, each must have a different device address. The CAN device address is based on the selected F-Series Unit Number (1-4) which is determined on power-up by the states of the CAN ID discrete inputs (see Table 3-2). The TRUE/FALSE state is based on the control's configuration settings (see Table 3-3).

Configuration of CAN ID HI, CAN ID LO, and Harness ID

1. Determine the settings of CAN ID HI and CAN ID LO Inputs of the F-Series. Connect to the F-Series using the Service Tool. Open the device configuration and navigate to the Discrete Inputs tab. CAN ID HI and CAN ID LO Inputs are programmable and can be programmed as Discrete Input 2 or Discrete Input 3. Additionally, the states of Discrete Input 2 and Discrete Input 3 can also be set to any combination of the following settings: "Active Low", "Active with Switch Open", "Not Active Low" and "Not Active with Switch Open".

2. From Table 3-3. Discrete In Configuration Logic, determine the state (True, False) of CAN ID HI and CAN ID LO Inputs settings. For example, if CAN ID HI is programmed to "Discrete Input 2", and Discrete Input 2 is configured as: "Active Low", "Active with Switch Open". If the harness is configured to meet both conditions, a "True" will result and any other harness configuration for Discrete Input 2 will resolve to a "False". Configuration of CAN ID LO follows similar logic. If CAN ID LO is programmed to "Discrete Input 3", and Discrete Input 3 is configured as "Active Low", then it is "Active with Switch Open". If the harness is configured to meet both conditions, a "TRUE" will result and any other harness configuration for Discrete Input 3 will resolve to a "False". See Table 3-2. A "TRUE" state for CAN ID HI, and a "TRUE" state for CAN ID LO resolves to unit number 4. Lastly in this example, on the CAN tab of the F-Series Service Tool, the Source Address (CAN ID) for unit number 4 can be programmed.

Table 3-2. F-Series Control CAN Address

F-Series Unit Number	1	2	3	4
CAN ID HI	FALSE state	FALSE state	TRUE state	TRUE state
CAN ID LO	FALSE state	TRUE state	FALSE state	TRUE state

Table 3-3. Discrete In Configuration Logic

F-Series Control Configuration	High Side Switch, Active Closed	High Side Switch, Active Open	Low Side Switch, Active Closed	Low Side Switch, Active Open
TRUE state	Closed / High (+V)	Open / Low (Gnd)	Closed / Low (Gnd)	Open / High (+V)
FALSE state	Open / Low (Gnd)	Closed / High (+V)	Open / High (+V)	Closed / Low (Gnd)

IMPORTANT

The CAN address high and low discrete inputs must be wired prior to power-up to be registered.

CAN Communication

Pin 13 = CAN HI
Pin 21 = CAN LO
Pin 14 = CAN Shield

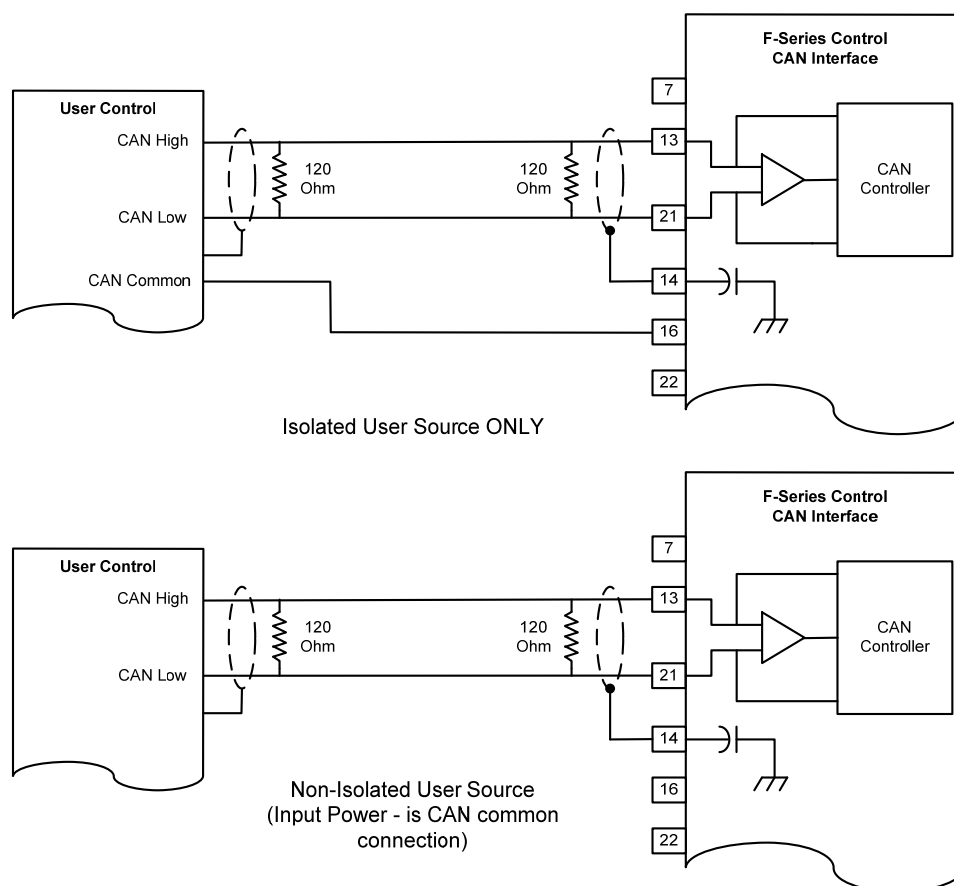


Figure 3-9. CAN Communication

The CAN (Control Area Network) communication link is used for supervisory control and monitoring of the actuator position and for possible I/O expansion.

The use of CANbus cable that meets SAE J1939 specifications for impedance and shielding properties is required for the CAN communication. The battery minus signal and the shield signal are not connected and therefore the shield cannot be used as a common signal between the controls.

To prevent ground loops, the shield connection is not hard wired to the chassis. The shield is terminated in the F-Series control through a high-frequency capacitor. The shield must be connected to the earth ground in the wiring harness to improve EMC performance (see Figure 3-10).

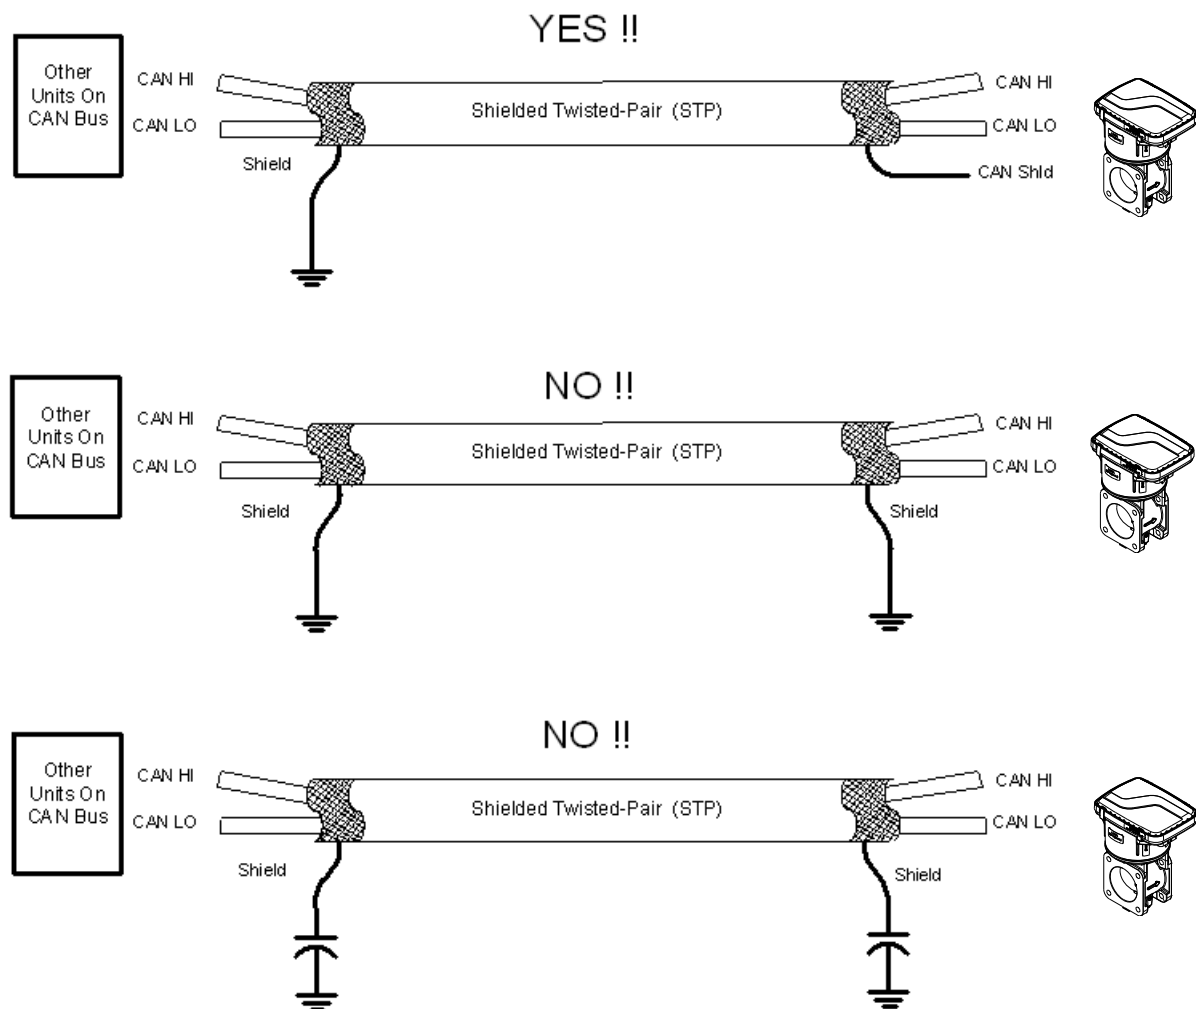


Figure 3-10. CAN Shielded Wiring

CAN Port Specification Summary:

Name	Value
Wiring Specification	ISO 11898, SAE J1939-11
Max Wire Length	30 m
CAN Port Isolated	No
Baud Rate	125 kbps, 250 kbps, 500 kbps, and 1 Mbps

Status Output

Pin 23 = Status Output +
 Pin 2 = Aux Power Output (+)
 Pin 16 = Negative Power Input

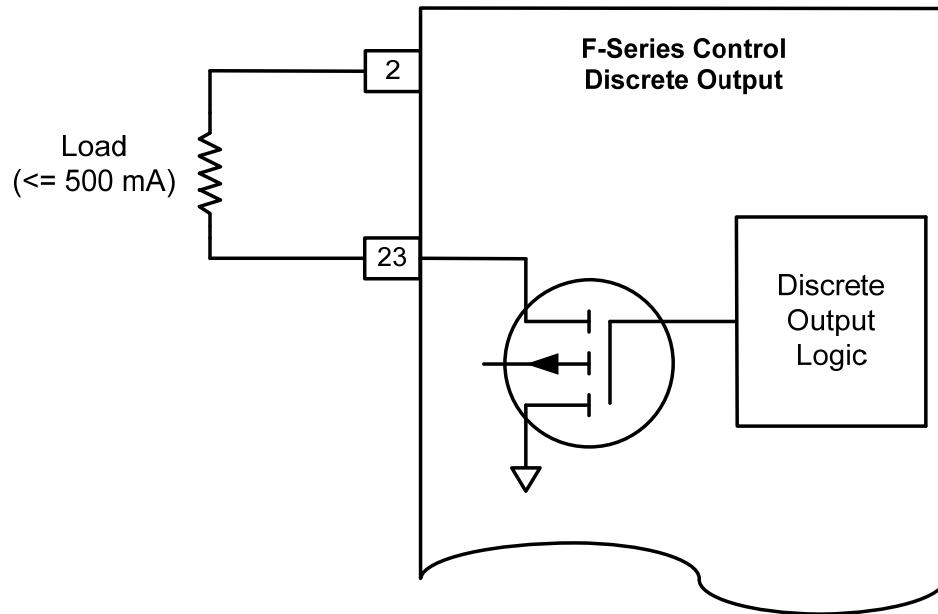


Figure 3-11. Status Discrete Output

The Status Output is a discrete output that changes state when a configured fault occurs and can provide a status indication to a control system or an operator panel. The output action can be set to be Always Off, Normally On, or Normally Off. The user can turn the output on or off by configuring the use of several alarm and shutdown flags. See Discrete I/O configuration in Chapter 6 for details.

The electrical circuit is a low-side switch with the return current going to input power minus. The output load must be connected to the discrete output pin and to the Aux Power pin (supply plus) of the F-Series actuator. If the load is below 500 mA, the load can be driven directly from the output. It is possible to drive a relay if more current is needed for the load.

If it is necessary to use an independent power supply instead of the F-Series actuator Aux Power, then a protective fuse must be provided, and the negative connection of the independent power supply must be tied to the F-Series actuator negative power input pin. The maximum voltage when the switch is in the "Off" state is 40 VDC.

The output is current protected and turns off if driven above 500 mA. If the short is removed, the output automatically returns to normal operation.

Chapter 4.

Description of Operation

General

The F-Series actuator is ready for operation immediately (within one second) when the power supply is connected. Power may be connected to the control at the same time the engine starter is engaged. The actuator will power up in a stable and predictable manner whether a demand signal is present or not. Upon power-up, the actuator will immediately go to the demanded position. The demanded position will be the initial spring check start setting, if the spring check is configured for use, and the permissives are present. Once the spring check function is finished, the actuator then drives to maintain the position demanded by the supervisory control.

Optionally, a Run Enable input can be set to activate or de-activate the F-Series actuator position output. It can also be used to reset shutdown fault conditions.

Upon an engine shutdown command, the independent engine shutdown solenoid or solenoid valve in the fuel supply should be de-activated to stop the flow of engine fuel. This engine shutdown signal should be sent directly from the engine control panel and should be independent and separate from the F-Series control.

The supply voltage fault low and high thresholds are configurable. Default values are below 9 VDC and above 33 VDC respectively. The unit can be configured to either alarm or shut down upon detection of a supply voltage fault.

Position Control

The F-Series actuator provides closed-loop position control based on an internal position sensor and the desired position demand signal. Software model-based position and current controllers are utilized to position the output. Position control is provided using a customer's position demand, an internal position feedback sensor and an internal driver output. The driver provides a 0 V to 5 VDC analog output (TPS) for indication of actual throttle or actuator output shaft position. If an optional non-linear position demand curve is configured, the TPS is corrected to account for the effect of the curve, so that the TPS should still normally match the position demand input.

Driver Input Power

The F-Series actuator operates at full-specified torque over a voltage range of 10 V to 32 VDC. The actuator is functional in the range of 7 V to 32 VDC, but accuracy and/or torque can be diminished at the extreme ends of this range. The actuator tolerates input voltages as low as 6 VDC without resetting the internal processor.

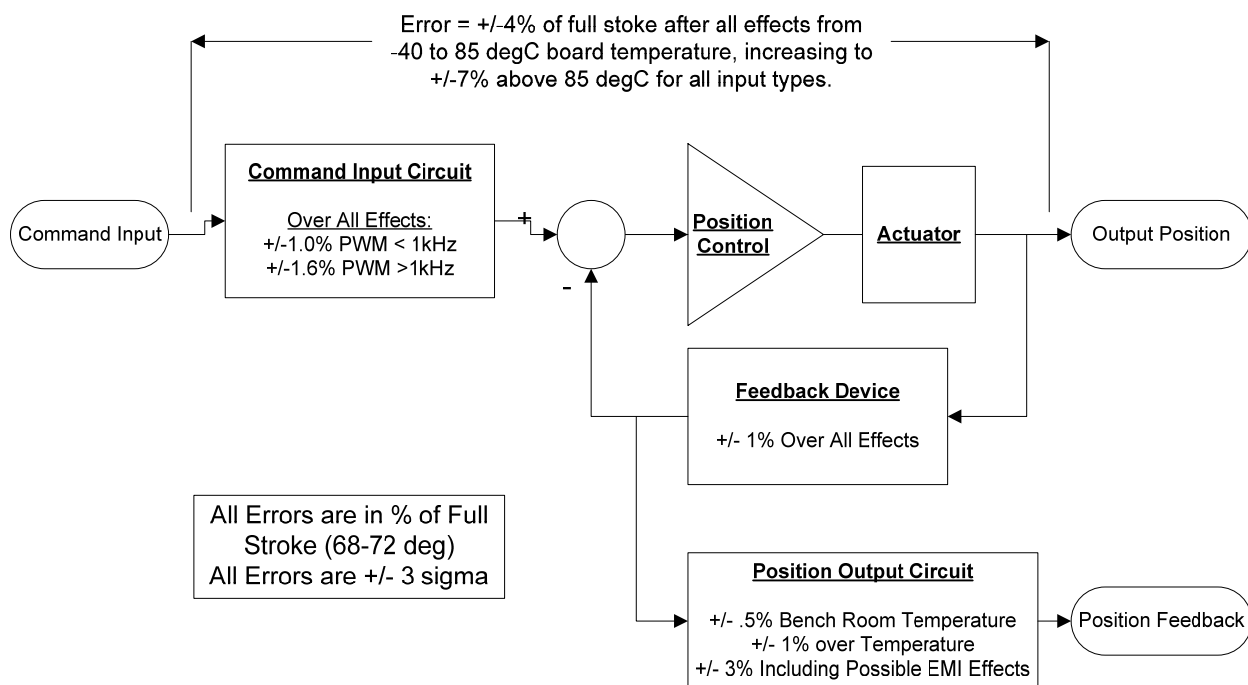


Figure 4-1. Position Tolerances

Position Demand Signal

The F-Series can accept either a single position command or a redundant position command. A redundant command uses two position commands, one as the primary command and one as a backup. If the primary should fail, the unit could continue to run using the backup command. The command source can be sent over CAN, as a PWM command signal input, or an analog (4 mA to 20 mA or 0 V to 5 VDC) command signal input, depending on how the software application is configured.

A low-pass Position Demand Filter can be configured in the software. The filter cut-off frequency has an adjustable range of 1 Hz to 20 Hz.

The position demand input can be optionally set to use a non-linear mode which provides a 5-point curve relationship between position signal and desired position. The same curve relationship will be used for any demand input type.

The unit can be configured to either alarm or shut down on detection of a position command failure (loss of all position command inputs). Failure of one command source, when redundant commands are used, will result in an alarm and the unit will continue to operate using the remaining healthy command signal.

PWM Input

The PWM input will function with low-side open collector and push-pull source types. It will handle a PWM frequency range from 300 Hz to 2000 Hz at amplitudes ranging from 4 V to 32 V. Default range is from 10% to 90% duty cycle, representing the hard stops in the actuator.

The input failure levels are below 2% and above 98% duty cycle by default but are user-configurable.

A user-configurable offset is available to adjust the input duty-cycle reading, as needed. This feature is used to compensate duty cycle measurement error resulting from slow signal edge transitions.

IMPORTANT

When the optional non-linear position demand curve is configured, the TPS is corrected to account for the effect of the curve, so that the TPS should still normally match the position demand input. Be sure the TPS output (if used) is applied correctly for this configuration.

CAN Demand

The CAN position demand is configured in the software and hardware. For software configuration instructions see Chapter 5. The CAN protocols available are CANopen and SAE J1939. For hardware configuration instructions see Chapter 3, CAN ID discrete inputs and CAN Communications.

When used as a position command, a minimum update rate is expected, or a CAN fault will be issued. This update rate is user configurable.

Analog Input

The analog input type (4 mA to 20 mA or 0 V to 5 VDC) is configured in the software and hardware. For software configuration instructions see Chapter 6. For hardware configuration instructions see Chapter 3, Figure 3-3.

The analog current position demand input has a configurable range of 0 mA to 24 mA, with a default setting of 4 mA to 20 mA, to demand the throttle from minimum to maximum position.

The analog voltage position demand input has a configurable range of 0 V to 5 VDC, with a default setting of 0.5 V to 4.5 VDC, to demand the throttle from minimum to maximum position.

The input is monitored for out of range condition and the failure levels are user configurable. The unit can also be configured to alarm, shutdown or ignore the fault upon detection of an analog input failure.

Note: Analog Demand is not available in firmware 5418-9520.

Position Command Redundancy

The position command redundancy determines a commanded position based on the two possible configured inputs - the primary or backup command selection of CAN, PWM, or Analog. It provides failover (primary-to-backup) and fallback (backup-to-primary) logic. Indications are provided for monitoring of the operating status. These two inputs are expected to track each other such that failure of one signal will not disrupt overall system operation.

The command redundancy utilizes two command inputs; a primary command and a backup command (see Figure 4-2). When both inputs are within normal ranges, as determined by user-configurable failure settings, the primary command shall be selected and used. If the input position commanded varies by more than the configured maximum difference, then one will be flagged as failed and the other command will be used. The selected (primary or backup) command is user configurable. In addition, a tracking error can be utilized to ensure the inputs are tracking each other.

The following operating status indication is provided on the Service Tool and over CAN.

Primary Demand Used—Indicates the primary demand is selected and the backup demand is either not used or not failed.

Primary Demand Used, Backup Failed—Indicates the primary demand is selected and the backup demand is failed, indicating the backup signal is out of range or exceeds the demand difference from the primary.

Backup Demand Used, Primary Failed—Indicates the backup demand is selected and the primary demand is failed. The failed may indicate the signal is out of range or exceeds demand difference from the backup. Note that the chosen input when the difference is exceeded is configurable.

Primary Enabled but not active—Indicates the backup demand is selected but the primary demand will become active after a 10 second signal healthy delay.

All Demands Failed—Indicates both the primary and backup (if used) demands are failed (out of range).

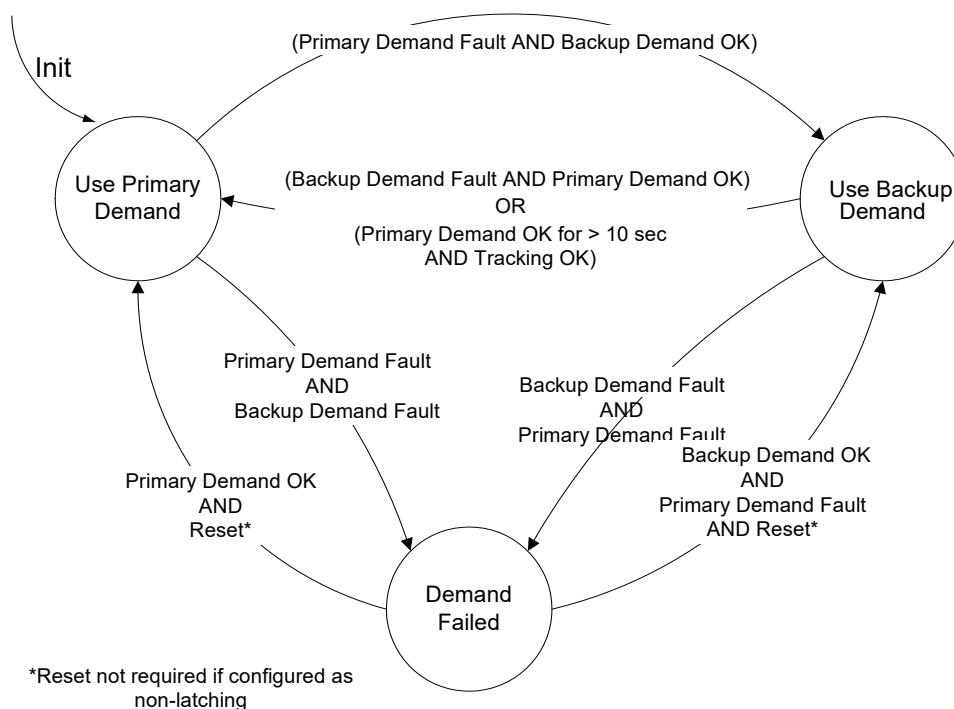


Figure 4-2. Position Demand Logic

Actuator Output

The F-Series Modular Actuator is configurable for clockwise or counterclockwise rotation. Direction of rotation is determined by looking at the output shaft end. See Configuration, Chapter 6, for setup instructions.



Analog Output (TPS)

The F-Series actuator provides a configurable 0 V to 5 V signal representing actual shaft rotational position. Default setting is for a 0.5 V and 4.5 V to correspond to full counterclockwise to clockwise rotation. The actual position output will be equal to measured position within 1% of full stroke after all effects and over the entire operating temperature range. When an optional non-linear position demand curve is configured, the TPS is corrected to account for the effect of the curve, so that the TPS should still normally match the position demand input. A condition that causes the actuator to be off position will cause a mismatch between the position demand and the TPS signal.

Discrete Output

The discrete output is a low-side driver that changes state upon a diagnostic or detected driver fault. The F-Series actuator discrete output can be configured to monitor specific fault conditions. It can also be configured as normally on (preferred failsafe setting), normally off or always off. This output can provide a useful diagnostic signal for monitoring the engine. It can also be used to shutdown the engine by external means apart from commanding the actuator to the minimum position or to a zero-current condition.

There are two conditions that will prevent the discrete output from operating correctly. The first is if battery positive is accidentally connected to it, and the second is if it is shorted to ground. The circuit will protect itself in the event of a wiring error, but it will hold the output open (floating) until the fault is removed.

Run/Stop Input

An optional Run/Stop function is available to enable/disable the control operation. This input can be configured as a CAN command, as a discrete input, or disabled completely. When configured for use, a stop command forces the coil current to zero (actuator goes limp). On ITB applications, under normal conditions, the internal spring will move the ITB valve to the spring return position. Changing the Run discrete input from active to inactive also issues a shutdown/alarm reset command and can be used to clear a latched shutdown condition (only when discrete input is used).

When a discrete input is selected, the input is configurable as either active high (default) or as active low (active is a Run selection and inactive is Stop). The input switch action can be configured as active when the switch is closed (default) or when the switch is opened.

Serial Communications

RS-232 communications are available on the F-Series actuator when used with an external transceiver. Serial communications provide for use of the F-Series Service Tool. The Service Tool communicates at 38,400 bps. The simplest way to establish communication is to use Woodward communication harness kit part number 8923-1255 (23-pin). Functions available through this port include troubleshooting, setup, tuning and configuration of the F-Series control. Detailed driver status information is also displayed.

Any RS-232 wiring must meet the requirements in the EIA RS-232 Standard document. The RS-232 standard states that the length of the RS-232 cable between the driver and the PC must be less than 50 ft (15 m) with a total capacitance less than 2500 pF. The communication port is non-isolated and susceptible to both EMI noise and ground loops related to PC connections and typical industrial environments.

IMPORTANT

The service port is not isolated and is not intended to function continuously during normal prime mover operation. The service port is provided for configuration, setup and troubleshooting only.

Temperature Sensing

The F-Series actuator monitors board temperature with on-board temperature sensors to protect the unit from over temperature. If configured, a fault is annunciated when temperature greater than 140 °C or less than -45 °C is detected. Internal monitoring also provides temperature level indications for temperatures exceeding 118 °C and 125 °C (see current limiting).

Current Limiting Based on Temperature

The controller provides actuator current limiting based on the electronics temperature. Dependent on board and actuator thermal models, the software reduces current as necessary to avoid conditions that would damage the unit due to extreme temperatures. A status LED on the Service Tool is illuminated when high temperature derating is active.

Current limiting based on temperature begins when the combined current and temperature environment causes board temperatures greater than 118 °C. The limit curve is a linear de-rate from full current at 118 °C down to zero current at 125 °C. Depending on the current (actuator torque) and ambient operating temperatures, the unit may never reach the current limiting state.

Position Control Near the Mechanical Stops

When operating very near the mechanical actuator stops, the F-Series controller will switch from position control to current control. If the measured position, as seen by the controller, is seen to move away from the stop, the unit will return to active position control in order to move back to the stop, where current control is resumed. The amount of current used for holding against each mechanical stop is user configurable in the modular actuator version only.

CAN Communications

The F-Series supports both CANopen and J1939 CAN communications, the CAN protocol is configurable. If desired, CAN communications can be turned off completely. A diagnostic fault is provided to annunciate a Bus Off condition.

The use of a CAN position command is optional, allowing the user to just use CAN for monitoring purposes. The CAN demand input is monitored, and diagnostic faults are provided when the input is out of range or sent too slowly.

Harness coding is provided to facilitate multiple F-Series units on a common bus. The CAN Id Low and High discrete inputs select the F-Series Unit number (1-4) in power up. For details, see CAN ID inputs in Chapter 3.

CANopen Communications

The F-Series supports CAN communications in the CIA CANopen Protocol format complying with DS301 version 4.02. Further detailed information regarding CANopen can be obtained at www.can-cia.org. Information about CAN is available in ISO 11898. Specific information regarding F-Series behavior is detailed below.

The CANopen Electronic Data Sheet (EDS) can be downloaded from www.woodward.com/software.

All F-Series CANopen messages use the CAN 2.0 11-bit Standard Data Frame Format. All data in CANopen is formatted as “Little Endian” also known as “Intel Format”.

Baud Rate

The baud rate is tunable for 125, 250, 500, 1000 kbps. The default is 250 kbps.

Node ID

The Node ID for each unit, number 1 through 4, is tunable between 1 and 31. The defaults are 14, 13, 12, and 11 for unit 1, 2, 3, and 4 respectively.

Heartbeat Production Rate

The heartbeat rate is tunable between 0 s and 10 s but defaulted to 1 second. When set to ‘0.0’, the heartbeat is turned off. Note that actual transmission time is a multiplier of 9.6 ms (that is, 100 ms setting is actually 96 ms).

CANopen State

The F-Series starts in boot-up mode, sends the required boot message, and then goes to the pre-operational state. If configured for PWM demand, for example, it will operate based on the PWM signal regardless of the CANopen State (the valve is fully operational) – similarly for Analog demand. Once it receives the operational command on the CANbus, the PDOs will be available on the CANbus.

If CAN demand is configured, it needs to receive a command to go to the operational state followed by receiving a valid position demand on the CANbus before the valve will be operational.

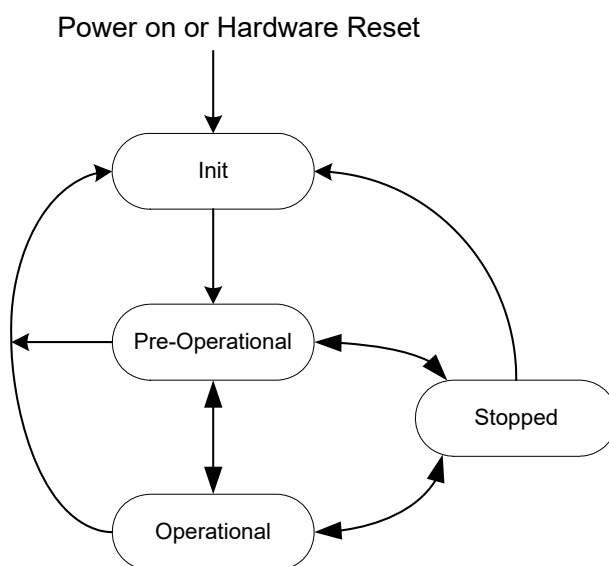


Figure 4-3. CANopen State Chart

Network Management (NMT) States

The NMT state machine is implemented per the DS301 standard. When the F-Series powers up, it will transfer through the Initialization state to the Pre-Operational state where it will remain until commanded into the Operational state.

The following are not supported:

- Synchronization (SYNC) object
- Node Guarding
- Service Data Objects (SDOs) write access
- Time Stamp Object
- Emergency Object

In the Pre-Operational State:

- Module Control Services (NMT commands) are handled
- Heartbeat is functional
- SDOs (those supported) are functional

In the Operational State:

- All communication objects are handled including PDOs (Process Data Objects)

In the Stopped State:

- Module Control Services (NMT commands) are handled
- Heartbeat is functional

The following Module Control (NMT) Protocols/Services are supported:

- Start Remote Node - command specifier: 1 (0x01)
- Stop Remote Node - command specifier: 2 (0x02)
- Enter Pre-Operational mode - command specifier: 128 (0x80)
- Reset Node - command specifier: 129 (0x81)
- Reset Communication - command specifier: 130 (0x82)

NMT Services commands utilize COB-ID = 0x0 and date in the following format: 1st byte is the Command Specifier (0x01 is Start) and 2nd byte is the Node ID. The Node ID is specific to the commanded unit OR 0x0 for ALL units.

Summary of Supported Objects

A summary of the supported objects is listed below with details provided in the CANopen Objects section.

Table 4-1. Summary of Supported Objects

Mandatory Objects		Manufacturer Objects	
1=0x1000 Device Type		1=0x2210	9=0x221A
2=0x1001 Error Register		2=0x2211	10=0x221B
3=0x1018 Identity Object		3=0x2212	11=0x221C
		4=0x2213	12=0x221D
		5=0x2214	13=0x221F
Optional Objects			
1=0x1017 Producer heartbeat time		6=0x2215	14=0x2220
2=0x1200 Server SDO parameter		7=0x2216	15=0x2221
3=0x1400 Receive PDO parameter		8=0x2219	
4=0x1600 Receive PDO mapping			
5=0x1800 Transmit PDO parameter			
6=0x1A00 Transmit PDO mapping			

F-Series PDO Support

The F-Series utilizes 1 PDO transmit (valve data message) and 1 PDO receive (valve position demand), using the standard connection set to assign PDO numbers. The Node ID determines the COB ID for the PDOs.

Table 4-2. Transmit PDO

Name	TxPDO	COB_ID	Type	Rate
Valve Data	1	384+NodeID	ASYNCR	96 ms

Table 4-3. Receive PDO

Name	RxPDO	COB_ID	Timeout
Valve Position Command	1	512+NodeID	Adjustable

Received Messages

The F-Series utilizes one CAN Rx PDO programmable to receive a position command and basic operational commands, summarized in the following table. Details on each manufacturer-specific object are provided in the CANopen Objects section.

Table 4-4. PDO1 (Rx)

Maximum Reception Rate:	5 ms (Engine Control to F-Series)
Message Type:	“ASYNCR” (does not require SYNC message)
Timeout:	Configurable from 10 to 10,000 ms
COB Id:	512+NodeId (0x200+NodeId)
Data Length:	4 bytes (bytes 5-8 are ignored, if received)
SubIndex0:	Number Of Entries = 17
SubIndex1:	Valve Position Command
SubIndex2-9:	Clear Diagnostics bits (<i>not available in 5418-2724, 5418-2725, or 5418-3834</i>)
SubIndex10-17:	Command Bits (<i>not available in 5418-2724, 5418-2725, or 5418-3834</i>)

Node ID: 14 is the default ID when the CAN ID discrete inputs are selecting F-Series Unit #1. The Node ID for Units 1-4 are configurable, see Chapter 6 for details.

Table 4-5. PDO1 (Rx) Byte Specifications

Byte	Parameter	Object	Representation
1 -2	Valve Position Command (Low byte first)	2216	0-160.6375% is (0-0xFAFF)
3	Clear Diagnostics Bit1-2 – Clear Active Diagnostics Bit3-4 – Clear Historical Diagnostics	221F	Bit field
4	Command Bits Bit1-2 – Run/Stop (Power-Down Mode Select)	2220	Bit field

Transmitted Messages

The F-Series utilizes one CAN Tx PDO summarized in the following table. Details on each manufacturer-specific object are provided in the CANopen Objects section.

PDO1 (Tx) - Message size is 8 bytes. Unused bytes will be set to FF.

The following message is continuously transmitted by the F-Series when in the CANopen Operational mode.

Table 4-6. PDO1 (Tx)

Transmission rate:	96 ms
Message type:	"ASYNCR" (does not require SYNC message)
COB Id:	384+NodeId (0x180+NodeId)
Data length:	8 bytes
SubIndex0:	Number Of Entries = 27
SubIndex1:	Actual Position
SubIndex2:	Desired Position
SubIndex3:	Electronics Temperature
SubIndex4-11:	Status Array 1 bits
SubIndex12-18:	Status Array 2 bits
SubIndex19-27:	Status Array 3 bits

Node ID: 14 is default address when the CAN ID discrete inputs are selecting F-Series Unit #1 (configurable).

Table 4-7. PDO1 (Tx) Byte Specifications

Byte	Parameter	Object	Representation
1 -2	Actual Position (Low byte first)	2210	0-160.6375% is (0-0xFAFF)
3-4	Desired Position (Low byte first)	2211	0-160.6375% is (0-0xFAFF)
5	Electronics Temperature	2212	-40 °C to 210 °C is 0x0 to 0xFA
6	Status Array 1	2213	Bit field
7	Status Array 2	2214	Bit field
8	Status Array 3	2215	Bit field

Additional Non-Mapped Objects

The following table provides a summary of the supported application-specific SDO requests. These are only available in firmware versions 5418-3055, 5418-3056, 5418-3834, 5418-7289, 5418-7290 or newer.

Table 4-8. Supported Application-Specific SDO Requests

Parameter	Object	Representation
Input Voltage	2219	0-642.55 V is (0-FAFF)
Desired Drive Current	221A	-32.127 to 32.128 A is (0-FAFF)
Analog Position Command	221B	0-160.6375% is (0-FAFF)
PWM Position Command	221C	0-160.6375% is (0-FAFF)
CAN Position Command	221D	0-160.6375% is (0-FAFF)
Status Data		
Bits 1-4 Controller Operation Status	2221	Bit field
Bit 5 Discrete Output Active Status		
Bits 6-8 Demand State		

CANopen Objects

The following section provides additional details on the CANopen objects supported by the F-series, manufacturer specific objects. The product EDS file (Woodward part number 9927-1917) is available for download on the Woodward website (www.woodward.com).

Object 1000 – Device Type

Requests of the device type always returns a 0, indicating the F-Series does not follow a standardized device profile. Any SDO request for index 0x1000, sub-index 0 will be 0 Sub-indexes other than 0 return an abort code 0609 0011, Sub-index does not exist.

Object 1001 – Error Register

Requests of the Error Register always return a 0. Any SDO request for index 0x1000, sub-index 0 will be 0 Sub-indexes other than 0 return an abort code 0609 0011, Sub-index does not exist.

Object 1017 – Producer Heartbeat Time

Requests of the producer heartbeat time return the value set by the user-configured Producer Heartbeat Time. COB-ID: 700h + NodeId

Object 1018 – Identity Object

Provides the following subindexes:

- > SubIndex 0: Number of Entries (always = 4)
- > SubIndex 1: Vendor Id (0x0170 for Woodward)
- > SubIndex 2: Product Code (Woodward product part number, 8404-1234 is represented as 84041234)
- > SubIndex 3: Product Revision Number
 - Revision level of the Woodward product part number where 1=rev NEW, 2=rev A, 3=rev B, etc.
 - Values of 100 or greater indicate a preliminary revision.
- > SubIndex 4: Product Serial Number (Woodward product serial number)

Object 1200 – Server SDO Parameter

Provides the following subindexes:

- > SubIndex 0: Number of supported entries
- > SubIndex 1: COB-ID Client -> Server (rx) NODEID+0x600
- > SubIndex 2: COB-ID Server -> Client (tx) NODEID+0x580

Object 1400 – Receive PDO Parameter

The RxPDO 1 parameter provides the following subindexes:

- > SubIndex 0: number of elements (2)
- > SubIndex 1: Cob Id used by PDO (NODEID+0x200)
- > SubIndex 2: Transmission Type (0xFE)

Object 1600 – Receive PDO Mapping

Provides the following subindexes:

- > SubIndex 0: Number of supported entries
- > SubIndex 1: Desired Position Setpoint (0x2216)
- > SubIndex 2: Clear Diagnostics (0x221F) (*not available in 5418-2724, -2725, -3834, or -7289*)
- > SubIndex 3: Command Bits (0x2220) (*not available in 5418-2724, -2725, or -3834, or -7289*)

Object 1800 – Transmit PDO Parameter

The TxPDO 1 parameter provides the following subindexes:

- > SubIndex 0: Largest Sub-index supported (5)
- > SubIndex 1: COB-ID used by PDO (180h + NodeId)
- > SubIndex 2: Transmission Type (1h)
- > SubIndex 5: Event Timer (0h)

Object 1A00 – Transmit PDO Mapping

Provides the following subindexes:

- > SubIndex 0: Number of supported entries
- > SubIndex 1: Actual Valve Position (0x2210)
- > SubIndex 2: Desired Valve Position (0x2211)
- > SubIndex 3: Electronics Temperature (0x2212)
- > SubIndex 4-11: Status Array 1 (0x2213)
- > SubIndex 12-19: Status Array 2 (0x2214)
- > SubIndex 20-27: Status Array 3 (0x2215)

Object 2210 – Actual Valve Position

Actual valve position indication, in percentage of user-calibrated overall travel. A hex value of 9C40 corresponds to 100%.

Mapping: PDO1 (Tx), bytes 1-2

Access: Read-only

Data Type: unsigned 16-bit

Scaling: 0-160.6375% is 0-0xFAFF

Object 2211 – Desired Valve Position

Desired valve position setpoint indication, in percentage of user-calibrated overall travel. A hex value of 9C40 corresponds to 100%.

Mapping: PDO1 (Tx), bytes 3-4

Access: Read-only

Data Type: unsigned 16-bit

Scaling: 0-160.6375% is 0-0xFAFF.

Object 2212 – Electronics Temperature

Electronics temperature indication in degrees Celsius.

Mapping: PDO1 (Tx), byte 5

Access: Read-only

Data Type: unsigned 8-bit

Scaling: 1 degC/bit, -40 degC offset (-40 °C to +210 °C is 0x0 to 0xFA)

(Subtract 40 from received value to recover °C value)

Object 2213 – Status Array 1

Provides a bit indication of the overall F-Series status.

Mapping: PDO1 (Tx), byte 6

Access: Read-only

Data Type: bit field, 8 sub-indexes (8-bits)

Bit Representation (1=active, 0=inactive)

Bit 1: Shutdown

Bit 2: Alarm

Bit 3: Derating Active

Bits 4-8: RESERVED (5418-2724, -2725, or -3834 versions only)

Bit 4: Shutdown excluding Run Enable (5418-3055, -3056, -7289, -7290 or newer only)

Bit 5: Loss of All Position Demands (5418-3055, -3056, -7289, 7290 or newer only)

Bit 6: Demand Tracking Error (5418-3055, -3056, -7289, -7290 or newer only)

Bit 7: Temperature above 125 °C (5418-3055, -3056, 7289, -7290, or newer only)

Bit 8: RESERVED (5418-3055, -3056, -7289, -7290, or newer only)

Object 2214 – Status Array 2

Provides an indication of currently active faults within the F-Series.

Mapping: PDO1 (Tx), byte 7

Access: Read-only

Data Type: bit field, 8 sub-indexes (8-bits)

Bit Representation (1=active, 0=inactive)

Bit 1: PWM Input High Duty Cycle Error

Bit 2: PWM Input Low Duty Cycle Error

Bit 3: Analog Input High Error

Bit 4: Analog Input Low Error

Bit 5: Input (Supply) Voltage High Error

Bit 6: Input (Supply) Voltage Low Error

Bit 7: Electronics Temperature High Error

Bit 8: Electronics Temperature Low Error

Object 2215 – Status Array 3

Provides an indication of currently active faults within the F-Series.

Mapping: PDO1 (Tx), byte 8

Access: Read-only

Data Type: bit field, 8 sub-indexes (8-bits)

Bit Representation (1=active, 0=inactive)

Bit 1: Position Error

Bit 2: Run Enable not active

Bit 3: Spring Check Failed

Bit 4: Internal Fault

Bit 5: CAN Fault (includes CANbus Off, CAN Demand Failed, CAN demand out of range)

Bit 6: Power up indication (5418-2724, -2725, -3834 versions only)

Bits 7-8: RESERVED

Object 2216 – Valve Position Command

Desired valve position setpoint command to the F-Series, in percentage of user-calibrated overall travel. To accept this command, a Demand Source must be set to CAN. The minimum receive rate, prior to an annunciated fault, is determined by the configured CAN Fault Timeout setting. A hex value of 9C40 corresponds to 100%.

Mapping: PDO1 (Rx)

Access: Write-only

Data Type: unsigned 16-bit

Scaling: 0-160.6375% is 0-0Xfaff

Object 2219 –Input Voltage**(5418-3055, -3056, -7289, -7290 or newer only)**

Controller input voltage indication, in volts.

Mapping: not mapped

Access: read-only

Data Type: unsigned 16-bit

Scaling: 0.01 V/bit, 0-642.55 V is (0-0xFAFF)

Object 221A –Desired Drive Current**(5418-3055, -3056, -7289, -7290 or newer only)**

Indication of the internally commanded coil current, in amperes.

Mapping: not mapped

Access: read-only

Data Type: unsigned 16-bit

Scaling: 0.001 A/bit, -32.127 to 32.128 A is (0-0xFAFF)

Object 221B –Analog Position Command**(5418-3055, -3056, -7289, -7290 or newer only)**

Desired valve position setpoint command set by the Analog (voltage) input, in percentage of user-calibrated overall travel. This indication is only valid when a Demand Source is set to Analog.

Mapping: not mapped

Access: read-only

Data Type: unsigned 16-bit

Scaling: 0-160.6375% is 0-0xFAFF.

Object 221C –PWM Position Command**(5418-3055, -3056, -7289, -7290 or newer only)**

Desired valve position setpoint command set by the PWM input, in percentage of user-calibrated overall travel. This indication is only valid when a Demand Source is set to PWM.

Mapping: not mapped

Access: read-only

Data Type: unsigned 16-bit

Scaling: 0-160.6375% is 0-0xFAFF.

Object 221D –CAN Position Command**(5418-3055, -3056, -7289, -7290 or newer only)**

Desired valve position setpoint command set by CAN, in percentage of user-calibrated overall travel. This indication is only valid when a Demand Source is set to CAN.

Mapping: not mapped

Access: read-only

Data Type: unsigned 16-bit

Scaling: 0-160.6375% is 0-0xFAFF.

Note: Above 0x9C40, a CAN Demand Out of Range Error will be annunciated by the F-Series. The position demand setpoint will be limited to 100%. Above 0xFAFF, the F-Series will issue a CAN Demand Fault and force the position demand setpoint to 0 (zero).

Object 221F – Clear Diagnostics Command

(5418-3055, -3056, -7289, -7290 or newer only)

Permits commands to clear active and logged diagnostics (see Objects 2213, 2214, 2215). A command to Clear (Active) Diagnostics is only meaningful when Enable Fault Latching is configured, otherwise faults automatically clear. The ability to clear diagnostics is also provided on the Service Tool.

Mapping: PDO1 (Rx), byte 3

Access: Write-only

Data Type: bit field, 8 sub-indexes (8-bits)

[SubIndex0]	Number Of Entries = 8
[SubIndex1]	Clear Active Diagnostics on transition to '1' if allowed
[SubIndex2]	Disable Active Diagnostics Clear Functionality when '1'
[SubIndex3]	Clear Logged Diagnostics on transition to '1' if allowed
[SubIndex4]	Disable Logged Diagnostics Clear Functionality when '1'
[SubIndex5-8]	Not Used

For clear active and logged/historical diagnostic bits, action shall only be taken upon transition from '0' to '1' AND only when not disabled. Realistically, this can be thought of as a 2-bit function where:

Data Bits 1-2: Clear Diagnostics

Data Bits 3-4: Clear Historical Diagnostics

Data Bits 5-8: (Spare/not used)

Table 4-9. Clear Diagnostics Command Bits Function Descriptions

Bits	Clear Diagnostics Command Function
00	No Action
01	Clear Diagnostics
10	Reserved, no action
11	Not supported, no action

Upon timeout of receiving this message (message is late), the last received value shall be latched. However, since these commands only take place upon transition from 00 to 01, no sustained action is taken. The key however, is that upon this message returning, the value in the message must be set back to '00' before a new reset action can be taken with a subsequent '01'.

Object 2220 – Command Bits

(5418-3055, -3056, -7289, -7290 or newer only)

Provides Run/Stop (Run Enable) command functionality. To use this function, the Run Enable input must be configured as CAN.

Mapping: PDO1 (Rx), byte 4

Access: Write-only

Data Type: bit field, 8 sub-indexes (8-bits)

[SubIndex0]	Number Of Entries = 8
[SubIndex1]	STOP command on transition to '1', if allowed
[SubIndex2]	Disable Stop command functionality, when '1'
[SubIndex3-8]	Not Used

For the run/stop STOP command, action shall only be taken upon transition from '0' to '1' AND only when not disabled. Realistically, this can be thought of as a 2-bit function where:

Bits 1-2: Run/Stop Command
 Bits 3-8: (Spare)

Table 4-10. Command Hex Value, Bits, and Run/Stop Functions

Hex Value	Bits	Run/Stop Command Function
0	00	Reset Stop (Run)
1	01	Stop
2	10	Reserved, no action
3	11	Not supported, no action

Object 2221 - Status Data

(5418-3055, -3056, -7289, -7290 or newer only)

These bits provide F-Series status indications including the controller's operating status, the demand redundancy state, and the discrete output status.

Mapping: not mapped

Access: read-only

Data Type: bit field, 3 sub-indexes (8-bits)

[SubIndex0] Number Of Entries = 3
 [SubIndex1] Controller Operation Status (size 4 bits)
 [SubIndex2] Discrete Output Status (size 1 bit)
 [SubIndex3] Demand State (size 3 bits)

Controller Operation Status

These 4 bits provide an indication of the controller's operating status, defined in the table below. When multiple conditions exist, the highest active severity is indicated (0001 is lowest and 0101 is highest).

Table 4-11. Status Data Hex Value, Bits, and Indication

Hex Value	Bits	Indication
0	0000	Normal
1	0001	Alarm (fully operational but needs service)
2	0010	Alarm High Severity (functional but transient performance may be reduced)
3	0011	Derate Active (torque output reduced due to environmental conditions)
4	0100	Controlled Shutdown Active (driving to the shutdown position)
5	0101	Uncontrolled Shutdown Active (actuator current is off so it is limp)
6-D	0110-1101	Reserved for future assignment
E	1110	Error
F	1111	Not Available

Discrete Output Active Status

This status is a single bit of data providing an indication of the commanded state of the discrete output (1=ON, 0=OFF). The conditions that set this output are configurable allowing a customizable CAN indication when the discrete output is not used.

Demand State

Provides information on the state status of the demand redundancy controller. Applicable primarily when redundant demand inputs are configured. The data is represented using 3 bits and defined by the table below.

Table 4-12. Status Data Value, Bits, and Demand State

Value	Bits	Demand Operating State
0	000	Primary Demand In Control
1	001	Primary Demand In Control (Backup Fault)
2	010	Backup Demand In Control (Primary Fault)
3	011	All Demand Signals Failed
4	100	Primary Demand enabled but not active (delay from Backup Control)
5	101	Reserved for future assignment
6	110	Error
7	111	Not Available

SAE J1939 Communications

The F-Series actuator supports CAN communications in the SAE J1939 Higher Layer Protocol format. Further detailed information regarding the J1939 Standards Collection can be purchased at www.sae.org. Information about CAN may be found in ISO 11898. This version of the F-Series supports the SAE J1939 standard messages defined in J1939-21, J1939-71, J1939-73, and J1939-81 with further details indicated here.

All F-Series J1939 messages use the CAN 2.0B 29-bit Extended Data Frame Format.

Note that in accordance with SAE J1939 definitions, the first instance shall be used when only 1 actuator is used, or for the primary fuel of a dual fuel engine, or for the left bank if a valve/actuator is used on each bank of a Vee engine. The left bank is as seen while facing the engine from the flywheel housing.

The F-Series provides a flexible method to customize how information is sent and received via J1939. Each data parameter (SPN – Suspect Parameter Number) may be assigned to a PGN (Parameter Group Number) and its location within the PGN may be defined using the Service Tool. There is a possibility to define initial Source Address and Dynamic Addressing. The J1939 NAME used to acquire a Source Address may also be defined. A Legacy mode is provided as well so that backward compatibility to earlier F-Series models is fully provided if needed. All this customization may be done uniquely for each of the four harness ID selections.

Flexible Messaging Definition

The F-Series flexible messaging allows the user to customize the content of messages to be sent or received by the F-Series on the J1939 network. This feature allows the user to implement most of the standard actuator and valve types already defined in J1939-71 or to create custom proprietary messages. This feature is not available in firmware versions 5418-2724, 5418-2725, or 5418-3834. The firmware versions function strictly in a limited legacy mode (see Legacy Mode).

Diagnostic Reporting

Diagnostic Bit Field

The F-Series supports multiple methods of reporting diagnostic information. A proprietary bit-field may be reported (typically in a proprietary PGN) by assigning the Diagnostic Bit Field to a PGN location using the Service Tool. To use the Bit Field:

1. Select Enable from the drop-down box in the Service Tool.
2. Provide a PGN number (normally between 65280 and 65535 using the Proprietary B range) in which the F-Series will populate the measured position data.
3. Select the byte within the PGN in which the data is to start. The Bit Field will consume 4 bytes.
4. Provide a PGN Priority and select a transmit Rate. The priority is used in the 29-bit CAN ID as identified by J1939-21. If the same PGN is used elsewhere in the F-Series configuration, the same Priority and Rate must be used each time.

Diagnostic Bit Field*	Disabled ▼	61185	5.1 ▼	32	3	20ms ▼
-----------------------	------------	-------	-------	----	---	--------

The Bit Field uses the J1939 format of 2 bits / 4 states per parameter:

Table 4-13. SAE J1939 Diagnostic Reporting State and Description

State	Description
0	The diagnostic condition is not active
1	The diagnostic condition is active
2	Reserved (not used)
3	Not Available (this diagnostic is not supported)

The diagnostics are mapped as follows:

Table 4-14. Diagnostic Bit Field

Position	Description
1.1	Internal Fault
1.3	Supply Voltage Fault (either Low or High)
1.5	Spring Check Failed
1.7	Position Error
2.1	Configuration Error
2.3	Temperature Sensor Failed
2.5	Derating Active (>118 °C)
2.7	Zero Drive Current (>125 °C)
3.1	Run Enable Input Caused Shutdown
3.3	Demand Tracking Fault
3.5	Loss of (all) Position Demand(s)
3.7	Analog Demand Failed (either Low or High)
4.1	PWM Failed (Duty Cycle is either Low or High)
4.3	CAN Demand Failed
4.5	Unused (set to 3)
4.7	Unused (set to 3)

Preliminary FMI and Temperature Status

Likewise, the Preliminary FMI method may be used to report diagnostics. This is a method that is loosely defined in J1939 for many of the actuator/valve types such as Throttle and Compressor Bypass.

Preliminary FMI reporting consumes 5 bits and is always paired with the Temperature Status which consumes the other 3 bits of a byte.

Prelim FMI & Temp Status	Disabled ▼	44287	3.1 ▼	8	1	100ms ▼
--------------------------	------------	-------	-------	---	---	---------

A preliminary FMI is a Failure Mode Indicator which reports a diagnostic condition within the F-Series. The following table indicates which diagnostics are reported using this method. If more than 1 diagnostic is active simultaneously, the one higher in the table will be reported.

Table 4-15. Preliminary FMI

FMI Value	Description
12	Internal Fault
5	Run Enable Input Caused Shutdown
0	Zero Drive Current (>125 °C)
14	Loss of (all) Position Demand(s)
15	Analog Demand Failed (High)
17	Analog Demand Failed (Low)
8	PWM Failed (Duty Cycle is either Low or High)
9	CAN Demand Failed (No Signal)
7	Position Error
4	Supply Voltage Fault (Low)
15	Derating Active (>118 °C)
3	Supply Voltage Fault (High)
2	Demand Tracking Fault
12	Temperature Sensor Failed
7	Spring Check Failed
16	CAN Demand Failed (Signal Out of Range)
13	Configuration Error

The temperature status reports if there is a problem related to the internal temperature of the F-Series. The 3-bit status is defined in the standard as follows:

Table 4-16. Temperature Status

Value	Definition	F-Series Usage
0	High Most Severe	Zero Drive Current (Limp)
1	High Least Severe	Reduced torque due to temperature > 118 °C
2	In Range	Temperature is in normal range
3	Low Least Severe	Not used in F-Series
4	Low Most Severe	Not used in F-Series
5	Not Defined	Not used
6	Error	Onboard temperature sensor is failed high or low
7	Not Available	Not used

SAE 1939-73 DM1, DM2, DM3, DM11 and DM13 Messages

The well-defined DM1 (active diagnostics) and DM2 (previously active diagnostics) may also be used. Any of these methods may be used simultaneously as well.

Diagnostics Support	
<input type="checkbox"/> Enable DM1 (Active Trouble Codes) Msg 65226	<input type="checkbox"/> Enable DM11 (Reset Active Trouble Codes) Msg 65235
<input checked="" type="checkbox"/> Enable DM2 (Logged Trouble Codes) Msg 65227	<input type="checkbox"/> Enable DM13 (Stop Start Broadcast) Msg 57088
<input checked="" type="checkbox"/> Enable DM3 (Reset Logged Trouble Codes) Msg 65228	Device SPN <input type="text" value="1"/>

Both Active and Logged Diagnostics are tracked by the F-Series. When a diagnostic condition is detected, it is added to both the Active and the History Log. As long as the diagnostic is still active, it may be reported using the Diagnostic Bit Field, Preliminary FMI, and/or DM1. If the condition causing the diagnostic is corrected, the Active status will be removed leaving only the History Log of the diagnostic condition. The History Log may be viewed using DM2 (or the Service Tool). As a note, according to J1939, if an event is active for the first time it will not be reported in DM2 until it is no longer active.

Active diagnostics may be reset (if possible) using DM11 if the message reception is enabled using the Service Tool. Similarly, logged diagnostics may be reset using DM3 if the message reception is enabled

using the Service Tool. Use the request message (PGN 59904) to request the DM11 PGN (65235) or DM3 PGN (65228). The act of requesting either PGN is the trigger that causes the specified reset action to occur. If the action is successful, a positive acknowledgement will be sent by the F-Series. If it is not allowed, a negative acknowledgement will be sent.

The DM13 Start / Stop Broadcast messaging capability is provided as an option. Enable this by selecting the appropriate checkbox in the J1939 setup. The F-Series will respond to Start and Stop Broadcast commands for the “Current Data Link” (SPN 1230) and supports the Hold Signal (SPN 1236) to maintain the Stop state for another 6 seconds. DM13 should only be used when the engine is stopped.

PGN 65242 Software Identification (SOFT) Message

Transmission repetition rate: On Request (F-Series → Engine Control)

Data length: Variable
 Data Page: 0
 PDU format: 254
 PDU specific: 218
 Default priority: 6
 Parameter Group Number: 65242 (0xFEDA)

Data:

Byte 1: Number of Software Identification Fields, SPN 965

Data length: 1 byte
 Resolution: 1 /bit, 0 offset
 Range: 0 to 250 (0x00 to 0xFA)
 Actual value: 1 (F-Series will always report 1)

Bytes 2 - (N+1): Software Identification, SPN 234

Data length: N, up to 200 characters
 (For 5418-3055 rev NEW, N = 11)
 Resolution: ASCII, 0 offset
 Range: 0 to 255 per byte
 Actual value: Depending on current software version:
 54183055NEW for software 5418-3055 rev NEW
 Character: 53, 52, 49, 56, 51, 48, 53, 53, 78, 69, 87
 (hex: 35, 34, 31, 38, 33, 30, 35, 35, 4E, 45, 57)

Byte (N+2): Delimiter, SPN 234

Data length: 1 byte
 Resolution: ASCII, 0 offset
 Range: 0 to 255 (0x00 to 0xFA)
 Actual value: 42 (0x2A)
 Character: *

Received Data – Commands

Position Demand

When a Position Demand is configured to come via CAN, configuration of the data location becomes visible in the Service Tool. The position demand data format is fixed but the data location is configurable.

To accept this data, the SPN of the Position Command must be provided. This is necessary for DM1 and DM2 reporting and is required to be unique compared to all other configurable SPN values (even if not using DM1 or DM2).

From the J1939-71 standard or from the Proprietary PGN range, select a PGN number in which the F-Series will find the Position Command SPN data. Configure the byte within the PGN in which the data starts. The data is 2 bytes long (16 bits).

Table 4-17. Received Data Engine Actuator/Valve Control Command SPN

Data Length:	2 bytes, unsigned
Resolution:	0.0025%/bit, 0 offset
Range:	0 to 160.6375%
Operational Range:	0 to 100% (0=closed, 100=max position)

Note: The F-Series will cap values between 100% (0x9C40) and 160.6375% (0xFAFF) at 100% and continue to use the flow demand as 100%. However, above 0x9C40, a CAN Demand Out-of-Range Error will be annunciated by the F-Series. If the value exceeds the Valid Signal range (> 0xFAFF or 64255) the CAN Demand Fault will be set and the CAN position demand setpoint will be forced to 0.

Run/Stop Command

It is possible to control the Run status via CAN. However, there is no public standard J1939 message for this feature so it must be manually mapped into a PGN. When a Run/Stop Command is configured to come via CAN, configuration of the data location becomes visible in the Service Tool.

Configure the PGN in which the F-Series will find the Run/Stop Command data. Configure the byte and bit position within the PGN in which the data starts. The data is 2 bits long.

The Run/Stop Command uses the J1939 format of 2 bits / 4 states per parameter:

Table 4-18. Received Data-Commands State and Description

State	Description
0	Run
1	Shutdown
2	Reserved (no change in operating state)
3	Not Supported (no change in operating state)

Transmitted Data – Status Reporting

Engine Valve/Actuator Position

The Engine Valve/Actuator Position reports the actual measured position. To send this data, the SPN of the Position Data must be provided. This is necessary for DM1 and DM2 reporting and is required to be unique compared to all other configurable SPN values (even if not using DM1 or DM2).

From the J1939-71 standard or from the Proprietary PGN range, select a PGN number in which the F-Series will populate the measured position data. Configure the byte within the PGN in which the data is to reside. The data is 1 byte long (8 bits).

Table 4-19. Transmitted Data Engine Actuator/Valve Control Command SPN

Data Length:	1 byte, unsigned
Resolution:	0.4%/bit, 0 offset
Range:	0 to 100%
Operational Range:	0 to 100% (0=closed, 100=fully open)
Error State:	254 (0xFE) Sent if the position sensor is failed or position error occurs

Engine Desired Valve/Actuator Position

The Engine Desired Valve/Actuator Position reports the target position. If redundant position demands are used, this SPN will report the position demand based on the currently selected and active demand.

From the J1939-71 standard or from the Proprietary PGN range, select a PGN number in which the F-Series will populate the desired position data. Configure the byte within the PGN in which the data is to reside. The data is 1 byte long (8 bits).

Table 4-20. Transmitted Data Engine Desired Valve/Actuator Position SPN

Data Length:	1 byte, unsigned
Resolution:	0.4%/bit, 0 offset
Range:	0 to 100%
Operational Range:	0 to 100% (0=closed, 100=fully open)
Error State:	254 (0xFE) Sent if all position command inputs are failed

Engine Valve/Actuator Operation Status

The operation status reports alarm (warning) and shutdown (error) conditions by severity. It provides a simple method for an engine control to understand if the F-Series is operating normally or shutdown.

From the J1939-71 standard or from the Proprietary PGN range, select a PGN number in which the F-Series will populate the operation status data. Configure the byte and bit position within the PGN in which the data is to reside. The data is 4 bits long.

The operation status uses the J1939 format of 4 bits / 16 states per parameter as defined below:

Table 4-21. Operation Status

Value	Definition	F-Series Usage
0	Normal	No diagnostic conditions are active
1	Alarm	Operational but needs service
2	Alarm High Severity	Functional but accuracy may be reduced
3	Derate Active	Torque output reduced due to Temperature Status
4	Controlled Shutdown Active	Driving to the default position – usually this means closed
5	Uncontrolled Shutdown Active	Actuator current is off so it is limp
6–13	Reserved for future assignment	Not used in F-Series
14	Error	Not used in F-Series
15	Not Available	Not used in F-Series

Engine Valve/Actuator Control Mode Status

The control mode status reports what demand source is being used. It is a simple way for the engine control to get feedback on which of a pair of redundant command inputs is actually being used. It also provides the current state of the discrete output.

From the J1939-71 standard or from the Proprietary PGN range, select a PGN number in which the F-Series will populate the control mode status data. Configure the byte and bit position within the PGN in which the data is to reside. The data is 4 bits long.

The Control Mode Status uses the J1939 format of 3 bits / 8 states per parameter as defined below:

Table 4-22. Control Mode Status

Value	F-Series Usage
0	Primary demand is in control and no Backup is configured or the Backup signal is OK
1	Primary demand is in control and the Backup signal is failed
2	Backup demand is in control and the Primary signal is failed
3	All demand signals are failed
4	Primary Demand enabled but not active / delay from Backup control
5	Not used in F-Series
6	Error (Not used in F-Series)
7	Not Available (Not used in F-Series)

The discrete output status is a single bit that occupies the first bit position of the 4. A '1' indicates the output is "on" and a '0' indicates the output is "off".

Table 4-23. Control Mode Status Field

Bit 4	Bit 3	Bit 2	Bit 1
Control Mode Status			Discrete Status

Engine Valve/Actuator Temperature

The Engine Valve/Actuator Temperature reports the internal electronics temperature of the F-Series.

From the J1939-71 standard or from the Proprietary PGN range, select a PGN number in which the F-Series will populate the desired position data. Configure the byte within the PGN in which the data is to reside. The data is 1 byte long (8 bits).

Table 4-24. Engine Valve/Actuator Temperature SPN

Data length:	1 byte, unsigned
Resolution:	1 °C/bit, -40 offset
Range:	-40 °C to 210 °C
Operational Range:	-40 °C to 210 °C
Error State:	254 (0xFE) Sent if the temperature sensor is failed

Legacy Mode Definition

The messages below apply when the Legacy Mode is selected.

RECEIVED MESSAGE

PGN 61184 Engine Valve/Actuator Control Command

Transmission repetition rate: 10 ms or as required (Engine Control ➔ F-Series)

Data length: 8 bytes

Data page: 0

PDU format: 239

PDU specific: F-Series Source Address

PGN: 61184 (0xEF00)

Data:

Byte 1-2: Valve Position Command

Data length: 2 bytes

Resolution: 0.0025%/bit, 0 offset

Range: 0 to 160.6375% (0x00 to 0xFAFF)

Note: The F-Series will cap values between 100% (0x9C40) and 160.6375% (0xFAFF) at 100% and continue to use the flow demand as 100%. However, above 0x9C40, a CAN Demand Out-of-Range Error will be annunciated by the F-Series. If the value exceeds the Valid Signal range (> 0xFAFF or 64255) the CAN Demand Fault will be set and the CAN position demand setpoint will be forced to 0.

For 5418-7289 and 5418-7290 If CAN demand is used and the received command message PGN is directed globally, the message shall be ignored. Example we would act on PGN EF22 but not on PGN EFFF.

Byte 3: Reset Diagnostic Faults Command Bits (*not available in 5418-2724, 5418-2725, or 5418-3834*)

- Bit 0: Reset Active Diagnostic (2 bits)
 - 00 – No action
 - 01 – Clear active faults
 - 10 – Reserved
 - 11 – Reserved
- Bit 2: Reset Logged Diagnostic (2 bits)
 - 00 – No action
 - 01 – Clear logged faults
 - 10 – Reserved
 - 11 – Reserved
- Bit 4-7: RESERVED

Note: Faults are reset only once after transition 00 → 01.

Byte 4: Run/Stop Command Bits (*not available in 5418-2724, 5418-2725, or 5418-3834*)

- Bit 0: Run/Stop Command Bits (2 bits)
 - 00 – Run
 - 01 – Shutdown
 - 10 – Reserved (no change in operating state)
 - 11 – Not Supported (no change in operating state)
- Bit 2-7: RESERVED

Bytes 5-8: RESERVED

The F-Series will accept any message length of 2 bytes up to 8 bytes. These 6 bytes (Bytes 3 – 8) will be ignored regardless of their value.

TRANSMITTED MESSAGES**PGN 65530 F-Series Data Message**

Transmission repetition rate: 100 ms (F-Series → Engine Control)

Data Length: 8 bytes
 Data Page: 0
 PDU Format: 255
 PDU Specific: 250
 Default Priority: 6
 PGN: 65530 (0xFFFA)

Data:**Byte 1-2:** Engine Valve/Actuator Position (Actual)

Data Length: 2 bytes
 Resolution: 0.0025%/bit, 0 offset
 (Multiply received value by 0.0025 to recover the position as 0% to 100%)
 Range: 0 to 160.6375% (0x00 to 0xFAFF)
 Error: 65279 (0xFEFF) Sent if position sensor is failed

Byte 3-4: Engine Desired Valve/Actuator Position

Data Length: 2 bytes
 Resolution: 0.0025%/bit, 0 offset
 (Multiply received value by 0.0025 to recover the position as 0% to 100%)
 Range: 0 to 160.6375% (0x00 to 0xFAFF)
 Error: 65279 (0xFEFF) Sent if all position demand sources are failed

Byte 5: Engine Valve/Actuator Temperature (Electronics)

Data Length: 1 byte
 Resolution: 1 °C/bit gain, -40 °C offset
 (Subtract 40 from received value to recover °C value)
 Range: -40 to +210 °C (0x00 to 0xFA)
 Error: 254 (0xFE) Sent if temperature sensor is failed

Byte 6: Specific Diagnostic Indications (1)

Data Length: 1 byte
 Bit 0: Shutdown
 Bit 1: Alarm
 Bit 2: Derating Active (Temperature > 118 °C)
 Bit 3: Shutdown excluding Run Enable (*not available in 5418-2724, -2725, or -3834*)
 Bit 4: Loss of Position Demand (*not available in 5418-2724, -2725, or -3834*)
 Bit 5: Demand Tracking Error (*not available in 5418-2724, -2725, or -3834*)
 Bit 6: Temperature > 125 °C (*not available in 5418-2724, -2725, or -3834*)
 Bit 7: RESERVED

Byte 7: Specific Diagnostic Indications (2)

Data Length: 1 byte
 Bit 0: PWM Input High Duty Cycle Error
 Bit 1: PWM Input Low Duty Cycle Error
 Bit 2: Analog Input High Error
 Bit 3: Analog Input Low Error
 Bit 4: Input (Supply) Voltage High Error
 Bit 5: Input (Supply) Voltage Low Error
 Bit 6: Electronics Temperature High Error
 Bit 7: Electronics Temperature Low Error

Byte 8: Specific Diagnostic Indications (3)

Data Length: 1 byte
 Bit 0: Position Error
 Bit 1: Run Enable not active
 Bit 2: Spring Check Failed
 Bit 3: Internal Fault
 Bit 4: CAN Fault (includes CAN Bus Off, CAN Demand Failed, CAN demand out of range, CAN Address Claim Error)
 Bit 5: Power up indication (*only provided in 5418-2724, 5418-2725, and 5418-3834*)
 Bit 5-7: RESERVED

Note: All Units report using the same PGN when set to Legacy Mode. If more than one unit is present on the same CAN network, the receiving ECU must use source address filtering to identify which actuator the received message is from.

PGN 65242 Software Identification (SOFT)

Transmission repetition rate: On Request (F-Series ➔ Engine Control)
 Data Length: 8 bytes
 Data Page: 0
 PDU Format: 254
 PDU Specific: 218
 Default Priority: 6
 Parameter Group Number: 65242 (0xFEDA)

Data:

Byte 1: Number of Software Identification Fields, SPN 965

Data Length: 1 byte
 Resolution: 1 /bit, 0 offset
 Range: 0 to 250 (0x00 to 0xFA)
 Actual Value: 1 (F-Series will always report 1)

Bytes 2-7: Software Identification, SPN 234

Data Length: 6 bytes
 Resolution: ASCII, 0 offset
 Range: 0 to 255 per byte
 Actual Value: 002.00
 Character: 48, 48, 50, 46, 48, 48 (hex: 30, 30, 32, 2E, 30, 30)

Byte 8: Delimiter, SPN 234

Data Length: 1 byte
 Resolution: ASCII, 0 offset
 Range: 0 to 255 (0x00 to 0xFA)
 Actual Value: 42 (0x2A)
 Character: *

Common Messages

The messages are used in both Legacy Mode and Custom Mode.

PGN 60928 Address Claimed (ACL)

Address Claimed / Cannot Claim Message

Transmission Rate: on start-up, on request, response to Address Claimed

Data Length: 8 bytes

Data Page: 0

PDU Format: 238

PDU Specific: 255

Default Priority: 6

Parameter Group Number: 60928 (0xEE00)

Bytes 1.1 - 3.5: (21 bits) Identity Number, SPN 2837

Bytes 3.6 - 4.8 : (11 bits) Manufacturer Code, SPN 2838

Byte 5.1: (3 bits) ECU Instance, SPN 2840

Byte 5.4: (5 bits) Function Instance, SPN 2839

Byte 6.1: (8 bits) Function, SPN 2841

Byte 7.1: (1 bit) Reserved

Byte 7.2: (7 bits) Vehicle System, SPN 2842

Byte 8.1: (4 bits) Vehicle System Instance, SPN 2843

Byte 8.5: (3 bits) Industry Group, SPN 2846

Byte 8.8: (1 bit) Arbitrary Address Capable, SPN 2844

The Address Claimed message will be sent out shortly after power has been applied to the F-Series. The Address Claimed message will also be sent out in response to a Request for Address Claimed. The Request for Address Claimed can be sent to a specific Address or to the Global Destination Address, 255. The F-Series will respond to a specific query, or one to the Global Destination Address, 255.

Note: The configured source address and NAME components will be used even in Legacy Mode. The defaults represent the values used in the past.

The Source Address for the F-Series is configured uniquely for each unit number using the Service Tool. If the Dynamic Addressing option is disabled (default), the F-Series will only try to claim the configured address. If a higher priority device claims the configured address, the F-Series will stop communicating as defined per SAE J1939. If the Dynamic Addressing option is enabled, the source address saved using the Service Tool will be the first address attempted by the F-Series. If the F-Series is unable to acquire the specified address, it will attempt to claim another address starting at 128 and increasing by 1 until an available source address can be claimed. If no address can be claimed, it will stop communicating until power cycled. Once an address has been claimed, it will be saved and used on all future boot-ups as the first address to attempt.

The Address Claimed Message will also be sent out if the F-Series receives an Address Claimed message from the same Address as the receiving node and a lower priority (higher value) NAME. The entire 8-byte value of the NAME is used for arbitration with the Arbitrary Address Capable Field as the Most Significant Bit.

The Cannot Claim Address message will be sent out if the F-Series receives an Address Claimed message with the same Source Address as the receiving node and with a higher priority (lower value) NAME. The entire 8-byte value of the NAME is used for arbitration with the Arbitrary Address Capable Field as the Most Significant Bit. The Cannot Claim Address will also be sent out in response to a Request for Address Claimed if the address was unsuccessfully claimed.

The Cannot Claim Address message is identical to the Address Claimed message in all aspects except that the Source Address of the F-Series is replaced with 254. The Cannot Claim Address message will be sent out with a 0–153 millisecond pseudo-random delay between the reception of the triggering message and the transmission of the Cannot Claim Address message.

If the F-Series cannot claim an address, a status bit will be set and any position demand value from CAN will be forced to zero (this may cause a shutdown depending on demand source settings).

Table 4-25. J1939 NAME

Component	Setting	Default Value	Configurable?
Arbitrary Address Capable Field	Disabled	0	Yes
Industry Group Field	Global	0	No
Vehicle System Instance Field	First Instance	0	No
Vehicle System Field	Non-specific System	0	No
Function Field	Unspecified	255	Yes
Function Instance Field	First	0	Yes
ECU Instance Field	Unit 1	0	Yes
	Unit 2	1	
	Unit 3	2	
	Unit 4	3	
Manufacturer Code Field	Woodward Inc.	153	No
Identity Number Field	Unique	Unique	No

See Appendix B for examples of each NAME component.

PGN 59904 Request (RQST)

PGN Request Message. Sent by Engine Control (or Tool) to the F-Series to obtain a PGN that is not sent cyclically and used with DM3 and DM11.

Transmission Rate: As needed
 Data Length: 3 bytes
 Data Page: 0
 PDU Format: 234
 PDU Specific: F-Series Source Address
 Default Priority: 6
 Parameter Group Number: 59904 (0xEA00)

Bytes 1-3: (24 bits) Parameter Group Number requested, SPN 2540

As defined in SAE J1939-21, if the PGN to be requested is a PDU1 type (PDU format field <240) then the lower byte of the PGN number (the PDU specific byte) shall be set to 0.

To request the Software ID PGN, use this request message with the data equal to 65242.

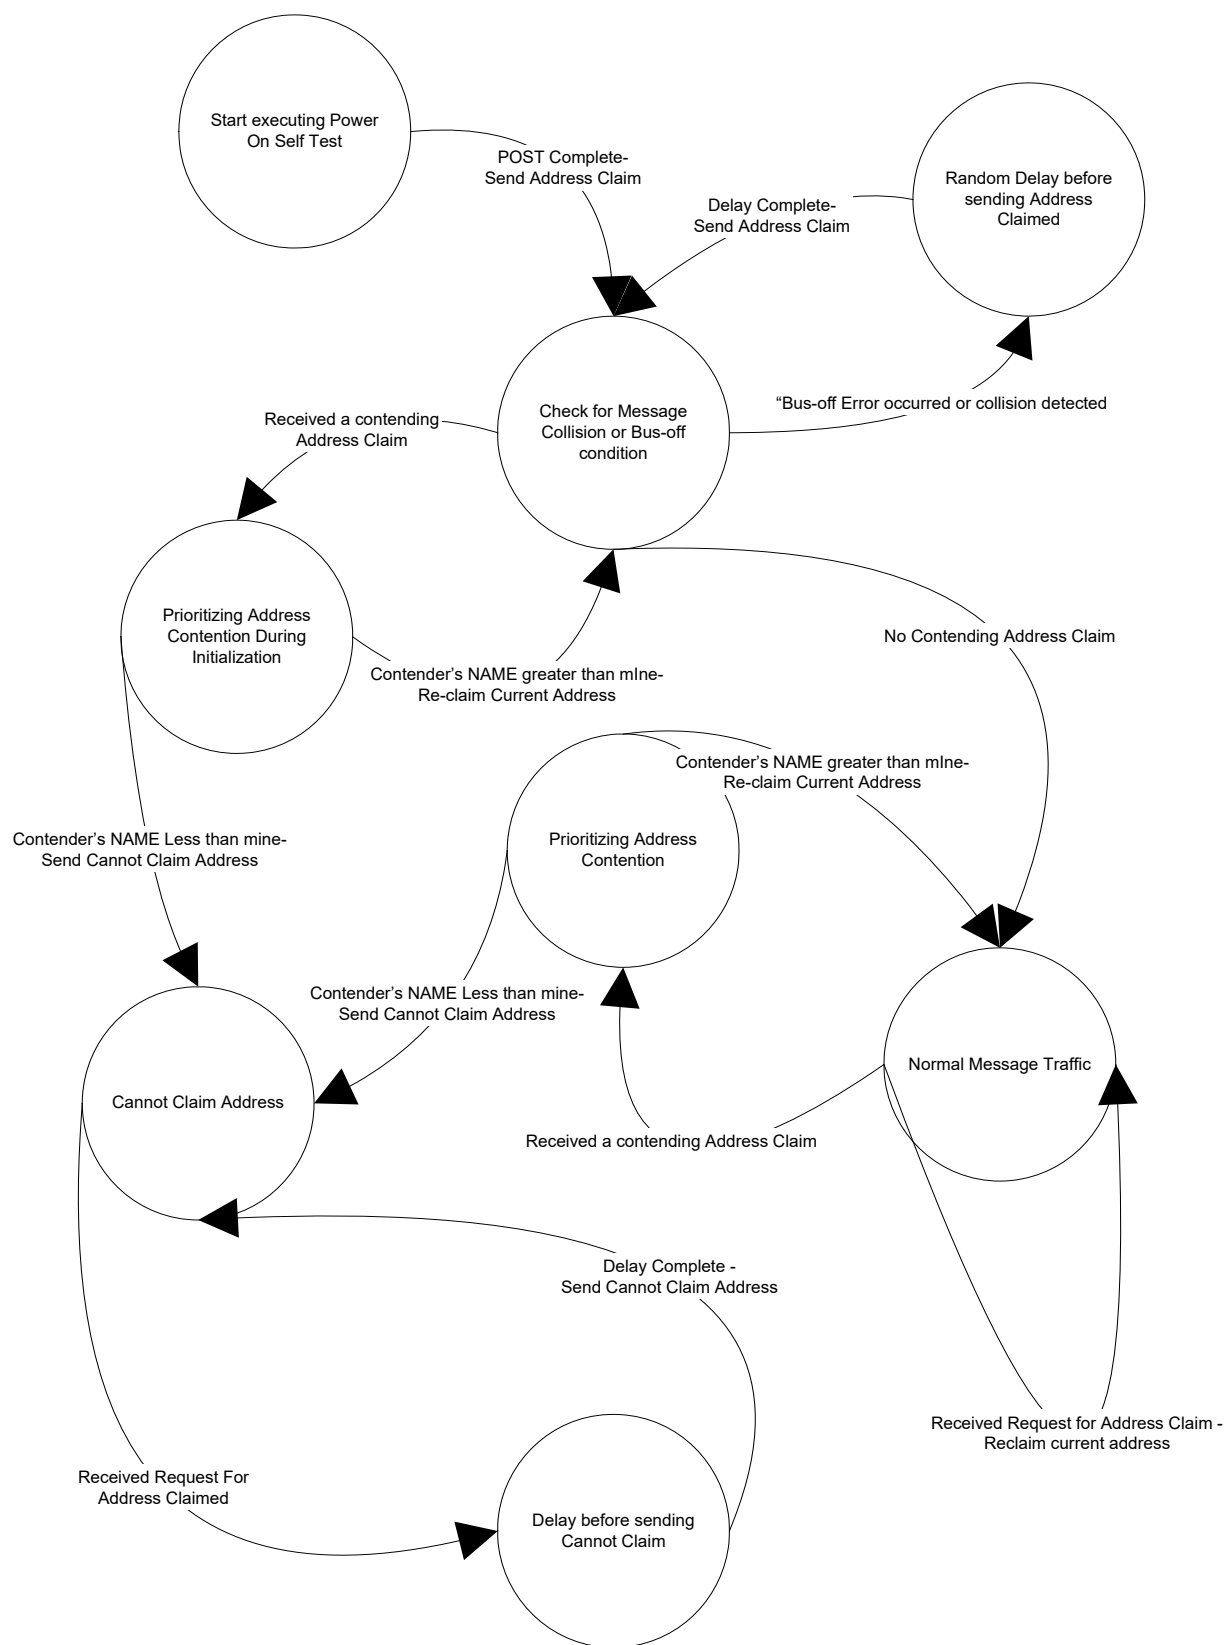


Figure 4-4. Address Claimed State Chart

PGN 59392 Acknowledgment (ACK)

This message is sent by the F-Series (as a NACK) as needed according to the protocol.

Transmission Rate: As needed
 Data Length: 8 bytes
 Data Page: 0
 PDU Format: 232
 PDU Specific: Destination Address
 Default Priority: 6
 Parameter Group Number: 59392 (0xE800)

Data:**Byte 1:** Control Byte

- 0: Positive Acknowledgement (Reset action was successful)
- 1: Negative Acknowledgement (Reset action unsuccessful or PGN not available)

Bytes 2-4: Group Function and Reserved

The F-Series does not use these bytes. Sent as 255.

Byte 5: Source Address of device being acknowledged (or NACK'd)

Bytes 6-8: PGN being acknowledged (or NACK'd)

See J1939-21 for further details on the data.

J1939 Diagnostics Summary

The following table helps correlate each warning and error condition with the multiple J1939 reporting methods.

See Tables 4-3, 4-5, and 4-6 for definitions of Prelim FMI, Operation Status, and Temperature Status. Diagnostic conditions details are provided in the Faults section.

Table 4-26. J1939 Diagnostic Reporting

Diagnostic Condition	Legacy Bit Field	New Bit Field	Data Indications	Prelim FMI	Operation Status (When Diag is config as an Alarm)	Operation Status (When Diag is config as a SD)	Temperature Status
Internal Fault	6.4	1.1	Data not reported in an SPN	12	CONTROLLED SD	CONTROLLED SD	Not affected
Run Enable Shutdown	6.2	3.1	Data not reported in an SPN	5	UNCONTROLLED SD	UNCONTROLLED SD	Not affected
Zero Drive Current (>125 °C)	5.7	2.7	Temperature value >= 125 °C	0	CONTROLLED SD	CONTROLLED SD	HIGH MOST SEVERE
Loss of Position Demand (all)	None	3.5	Desired Position set to 0xFE	14	ALARM HIGH SEVERITY	CONTROLLED SD	Not affected
Analog Demand Failed High	5.3	3.7	Desired Position shows value in use	15	ALARM	CONTROLLED SD	Not affected
Analog Demand Failed Low	5.4	3.7	Desired Position shows value in use	17	ALARM	CONTROLLED SD	Not affected

Diagnostic Condition	Legacy Bit Field	New Bit Field	Data Indications	Prelim FMI	Operation Status (When Diag is config as an Alarm)	Operation Status (When Diag is config as a SD)	Temperature Status
PWM Duty Cycle Failed High	5.1	4.1	Desired Position shows value in use	8	ALARM	CONTROLLED SD	Not affected
PWM Duty Cycle Failed Low	5.2	4.1	Desired Position shows value in use	8	ALARM	CONTROLLED SD	Not affected
CAN Demand Failed - No Signal	6.5	4.3	Desired Position shows value in use	9	ALARM	CONTROLLED SD	Not affected
Position Error	6.1	1.7	Position feedback shows position	7	ALARM HIGH SEVERITY	CONTROLLED SD	Not affected
Low Supply Voltage Fault	5.6	1.3	Data not reported in an SPN	4	DERATE	CONTROLLED SD	Not affected
High Supply Voltage Fault	5.5	1.3	Data not reported in an SPN	3	ALARM	CONTROLLED SD	Not affected
Electronics Temp High (Derating)	None	2.5	Temperature value $\geq 118\text{ }^{\circ}\text{C}$	15	DERATE	CONTROLLED SD	HIGH LEAST SEVERE
Demand Tracking Error	None	3.3	Data not reported in an SPN	2	CONTROLLED SD	ALARM state	Not affected
Temperature Sensor Failed	None	2.3	Temperature data set to 0xFE	12	DERATE	DERATE state	ERROR state
Spring Check Failed	6.3	1.5	Data not reported in an SPN	7	ALARM HIGH SEVERITY	CONTROLLED SD	Not affected
CAN Demand Out of Range	6.5	4.3	Desired Position shows one in use	16	ALARM	CONTROLLED SD	Not affected
Normal	None	None	Normal	31	NORMAL	NORMAL state	IN RANGE state
Electronics Temperature Low	5.8	None	Temperature value $< -40\text{ }^{\circ}\text{C}$	None	ALARM	CONTROLLED SD	LOW LEAST SEVERE
Power up Reset	6.6	None	None	None	ALARM	CONTROLLED SD	Not affected
Watchdog Reset	None	None	None	12	ALARM	CONTROLLED SD	Not affected
Configuration Error	None	2.1	None	13	ALARM	CONTROLLED SD	Not affected
Address Claim Error	None	None	None	None	Can't Transmit	Can't Transmit	Can't Transmit

Return Spring Check

If configured for use, a spring check function attempts to verify proper operation of a return spring.

Once the position control becomes active at power-up, the F-Series actuator moves the output shaft to the configured 'Start' position. Once the output shaft reaches the 'Start' position, an internal timer starts, and the actuator drive current drops to zero (the unit goes limp). Failure to reach the 'Start' position in 200 ms or failure to reach the 'Finish' position before the timeout period expires will trigger a Spring Check fault. If successful, the spring check Status area of the Service Tool will display 'Passed'.

The spring check function is not performed if a valid demand signal or shutdown condition is present before the spring check completes. The spring check status area of the Service Tool will display 'Not Performed'.

Position Error Handling

The F-Series actuator detects and triggers a position error between the position set point and the actual position of the actuator shaft by monitoring an internal position feedback sensor.

During dynamic changes of the set point, the allowed position of the feedback is a range instead of only one value (the set point) in the actuator. The range is defined by the area between the set point and an allowed position error rate. The rate is the max of the default programmed rate and the rate of the actual feedback position, meaning if the actuator moves faster than the default rate, the actual position rate will be used to define the position error range. See Figure 4-5.

The error is measured by the difference between the range boundary and the actual position from the feedback. The Position Error is triggered in the shutdowns and alarms when the error is over the instantaneous threshold or over the filtered threshold. A 150 ms filter is used for the filtered error threshold. The parameters are internal and can't be customized through the Toolkit Service Tool.

Table 4-27. Position Error Internal Settings

Parameter	Value	Unit
PosFaultRate	683	Rad/sec
PosFaultRads	0.1	Rad
PosFaultRadsInst	0.2	Rad

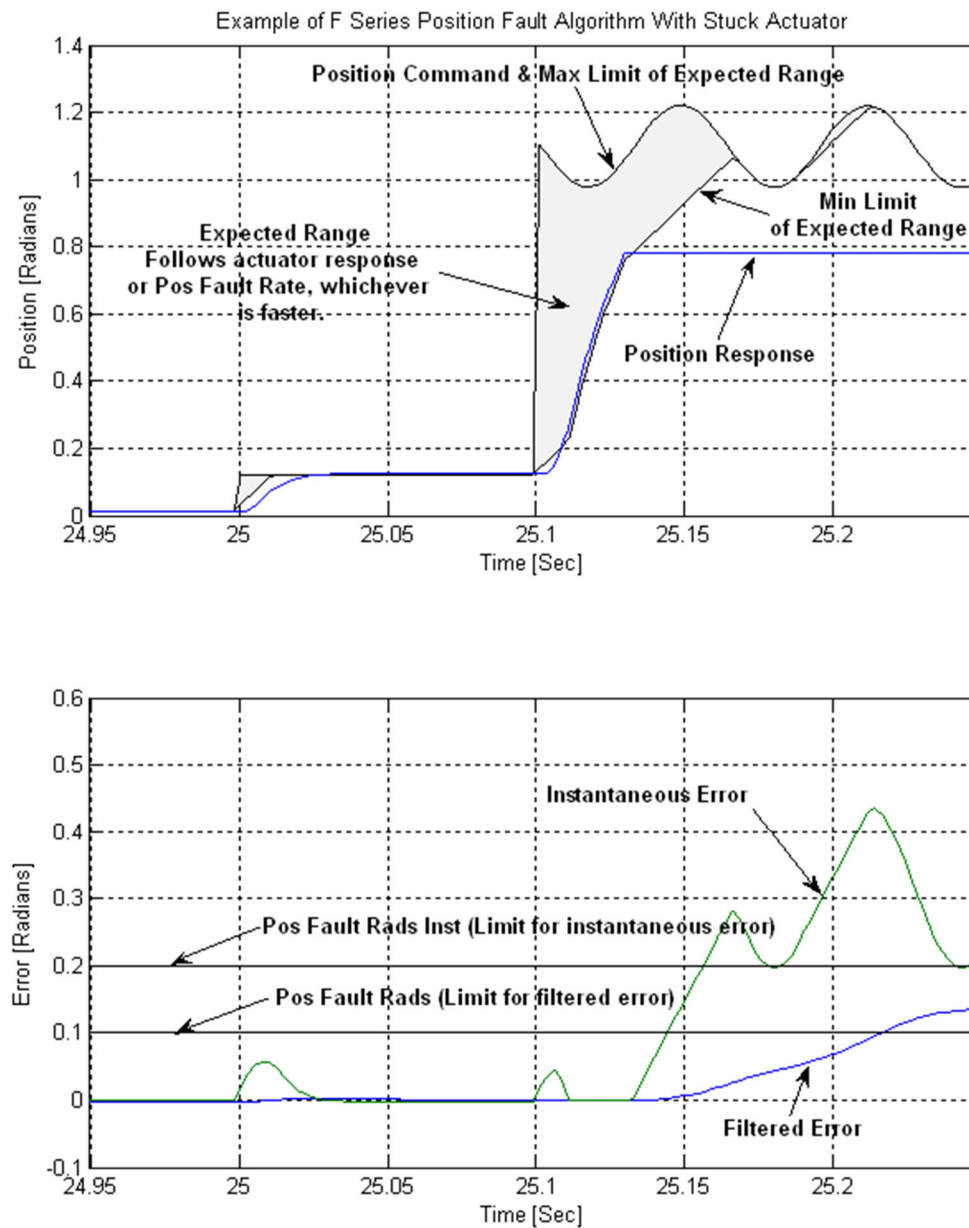


Figure 4-5. Position and Error Example with Stuck Actuator

Fault Detection and Annunciation

The Shutdowns and Alarms screens on the F-Series Service Tool display the status of both active and logged fault conditions. The logged indications provide a history of events even after the unit has been power-cycled or run again.

Faults can be configured to either alarm or shutdown on occurrence. An alarm does nothing but annunciate the fault. A shutdown forces the actuator to a predetermined position regardless of the demanded position. The 'Not Run Enabled' shutdown is an exception that simply causes the actuator to go limp. Faults can be globally set as either latching or non-latching. When set as latching, the fault action continues until the control is reset. Shutdown faults must be reset to allow the unit to restart. If non-latching, the actuator is returned to a non-shutdown state when the shutdown condition no longer exists.

NOTICE

A non-latching shutdown configuration can lead to a situation where the system is rapidly cycling between two states and should be used with caution.

Faults

Active Faults are those presently detected or previously detected but latched and not reset. The configuration as latching/non-latching faults factors into this indication. If the fault is latching, then an active fault could either be one that is still present or one that had occurred but is now normal and has not been reset.

When active faults are configured as non-latching, a reset is not needed. If latching faults are configured, a reset command or power-cycle is required to clear the fault and resume positioning. A reset command is accomplished by activating and de-activating the Run Enable discrete input (if available and configured), using the Reset Active Faults button on the Service Tool or by issuing a Reset Active Diagnostic command over CAN.

Parameters are available to configure a fault to be used or ignored and, if used, to be configured as an alarm or shutdown. Each fault can also be independently set to change the state of the discrete output. The shutdown action performed is fault dependent. Some faults are dedicated as shutdowns only and cannot be configured—they are identified as such below.

A logged fault is one that has occurred but is no longer active or latched in the control. Logged faults are non-volatile and can only be cleared by selecting the 'Reset Logged Faults' button on the Service Tool Alarm or Shutdown screens.

Shutdown List

The following diagnostic conditions always cause a shutdown:

Configuration Error—This indicates the configuration settings are not valid and operation is not allowed until corrected.

Temperature > 125 degC—This indicates the internally sensed temperature of the F-Series has exceeded 125 °C and the maximum drive current allowed has been decreased to zero (see the temperature-based current limiting in Chapter 4).

Internal Fault—Indicates an internal failure has occurred. The Internal Faults shown on the Shutdowns page of the Service Tool indicate the exact cause. If detected, the control output will drive to the Fail Direction using current control. This fault always latches and requires a reset or power cycle to clear.

- **Position Sensor Failed**—An internal diagnostic check has determined the actuator position sensor has failed. This is a hard-coded internal shutdown. If detected, the control output will drive to the Fail Direction using current control. This fault always latches and requires a reset or power cycle to clear.
- **EEPROM Read Fail**—Indicates a read problem with the EEPROM values. EEPROM is always read twice. If the values do not match a retry counter is incremented. After 5 retries the fault is set.
- **EEPROM Write Fail**—Indicates a problem with writes to the EEPROM. When writing to the EEPROM every byte is checked. If the value does not match the written value after 5 retries the fault is set.
- **Parameter Error**—Indicates the CRC stored with the parameters does not match the CRC of the parameters stored in non-volatile memory.
- **Parameter Version Error**—Indicates the versions of parameters are mixed. This fault is set if the CRC stored with the parameters does not match the CRC currently residing in non-volatile memory.
- **SPI A/D Error**—Indicates the A/D is not communicating or did not complete all its conversions for more than 5 ms.
- **+15 V Supply Error**—Indicates the internal +15 V power circuit is out of range.
- **–15 V Supply Error**—Indicates the internal –15 V power circuit is out of range.
- **5 V Reference Supply Error**—Indicates the internal 5 V reference is out of range.
- **5 V Supply Error**—Indicates the internal 5 V power circuit is out of range.
- **A/D Converter Error**—Indicates the A/D is not getting interrupts and not providing updates for more than 96 ms.

Configurable Alarm and Shutdown List

The following diagnostic conditions can be configured as an alarm, a shutdown, or ignored (not used):



WARNING

It is recommended that all faults be configured as shutdowns to ensure maximum fault protection.

Loss of Position Demand—Indicates all configured position demand signals are determined to be failed, both the primary and the backup (when used).

Demand Tracking Error—Indicates all primary and backup demand signals are not within the configured tolerances, exceeding the Tracking Error Max for longer than the Tracking Error Delay.

Analog Input High—Indicates the analog input went above the configured analog input Diagnostic Maximum threshold.

Analog Input Low—Indicates the analog input went below the configured analog input Diagnostic Minimum threshold.

PWM Duty Cycle High—Indicates the PWM input went above the configured PWM Duty Cycle High Threshold.

PWM Duty Cycle Low—Indicates the PWM input went below the configured PWM Duty Cycle Low Threshold.

Input Voltage High—Indicates the input supply voltage went above the configured Supply Voltage High Threshold.

Input Voltage Low—Indicates the input supply voltage went below the configured Supply Voltage Low Threshold.

Electronics Temperature High—Indicates the internal electronics temperature went above 140 °C.

Electronics Temperature Low—Indicates the internal electronics temperature went below -45°C .

Not Run Enabled—Indicates the Run Enabled discrete input is in the Not Enabled position. Note this selection cannot be set as an alarm, it is either not used or a shutdown.

Position Error—Indicates the position feedback is not following the position demand. Position Error detection logic is designed to account for normal actuator response times to prevent unwarranted position error indications during transient conditions.

Watchdog Reset Occurred—Indicates an internal fault caused a watchdog timer timeout that resulted in a reset of the microprocessor. A watchdog timer is set at 13.1 ms. If the timer times out, the unit will reset and this fault is set.

Spring Check Failed—This indicates the return spring failed to reach the configured 'Finish' position in the configured timeout period during power-up.

CAN Bus Off Error—Indicates the CAN bus controller detects a bus off condition. Typically caused by wiring problems on the CAN link, incorrect or missing termination resistors, or electrical problems within the controller or driver. This fault has a 400 ms diagnostic filter. If this fault goes away and non-latching faults are configured, CAN will return to normal operation.

CAN Demand Fault—This fault is set if the CAN demand is missing (no signal), or is too slow (slower than the Demand Timeout setting), or the value received is above 0xFAFF. The position demand signal is forced to zero when this fault is active. If this fault goes away and non-latching faults are configured, the unit will return to normal operation (positioning under CAN command).

CAN Demand Out of Range—Indicates the CAN demand value was received above 100% ($> 0x9C40$) for longer than 400 ms. The position demand signal is internally limited to 100% when this fault is active. If this fault goes away and non-latching faults are configured, the unit will return to normal operation (positioning under CAN command).

CAN Address Claim Error (J1939 only)—This J1939 fault is set if the control's address cannot be claimed on the CAN bus. Typically, a result of another unit on the bus with the same id with a higher priority. The control cannot automatically recover from this fault, a power cycle is required.

Alarm List

The following diagnostic conditions always cause an alarm:

Configuration Warning—This indicates the configuration settings are not valid, however the error is not severe and unit operation is allowed.

Temperature $> 118^{\circ}\text{C}$ (derated)—This indicates the internally sensed temperature of the F-Series has exceeded 118°C and the maximum drive current allowed has been decreased (see the temperature-based current limiting in Chapter 4).

Position Dynamics and Stops Settings

(Modular Actuator Only)

The F-Series Service Tool is used to set and save the dynamic (inertia) and mechanical stops settings used by the modular actuator position control. See Chapter 5 for setting instructions.

Position control dynamics are provided to compensate for the system inertia of an installed unit. An automatic inertia test feature is provided to determine and set the optimum inertia setting. The inertia setting can also be manually adjusted. The automatic inertia test method is preferred and recommended for setting the optimum inertia.

The location of mechanical stops must be saved in the F-Series control to properly scale actuator travel (0% to 100%) between these stops. An Auto Find Mechanical Stops feature is provided to simplify locating the stop positions at min and max travel. The range of travel can then be manually adjusted by modifying the span and min position offset values. The automatic method for finding the mechanical stops is preferred and recommended. However, the min position offset may need to be adjusted if sticking of the end device (e.g., butterfly valve) is experienced at the min position.

The inertia and stops settings must be saved to the control. If not saved, the control will revert to the previous settings upon loss of power.

The control settings for a specific engine system can be used for other duplicate engine builds provided adequate measures are employed to assure the system inertia, linkage and stop settings are equal to the original engine settings.



External mechanical stops must be provided in the linkage system. Do not use the internal actuator stops to limit output shaft travel. The internal actuator stops are provided for actuator setup purposes only.

Chapter 5. Service Tool

Introduction

This chapter covers the process of installing and servicing the control by using the F-Series Service Tool. It is assumed that the control has already been installed on the engine.

IMPORTANT

Many F-Series actuators are delivered pre-configured and calibrated with OEM specific settings. These units do not require the use of the Service Tool. However, the Service Tool is a valuable troubleshooting aid.

NOTICE

An unsafe condition could occur with improper use of these software tools. Only trained personnel should have access to these tools.

Description

The Service Tool software is used to configure, setup, and troubleshoot the F-Series actuator. This chapter describes the installation and use of the Service Tool. It identifies the control parameters available for viewing. Detailed instructions for configuring and setting up the F-Series control for the customer-specific application is provided in Chapter 6.

Connection and configuration for all 23-pin F-Series actuators is provided in one Service Tool. The 14-pin versions (FST) require a different Service Tool.

The F-Series Service Tool software resides on a PC (personal computer) and communicates to the F-Series control via RS-232 connection. An external RS-232 transceiver is necessary to make communications possible with the Woodward F-Series Service Tool. This works best if it is wired into the harness within 18 inches (1-meter max) of the F-Series control.

A communication harness kit (see Figure 5-2) can be purchased from Woodward, part number 8923-1255. The communication harness kit is a service port adaptor not intended to remain in the engine wiring harness during normal operation (only during engine setup). To use this adaptor, a 9-pin straight-through serial cable is needed between the harness transceiver RS-232 port and the PC. This serial cable must include ALL conductors. If it is limited to only pins 2, 3, and 5, it will not function correctly with the adaptor.

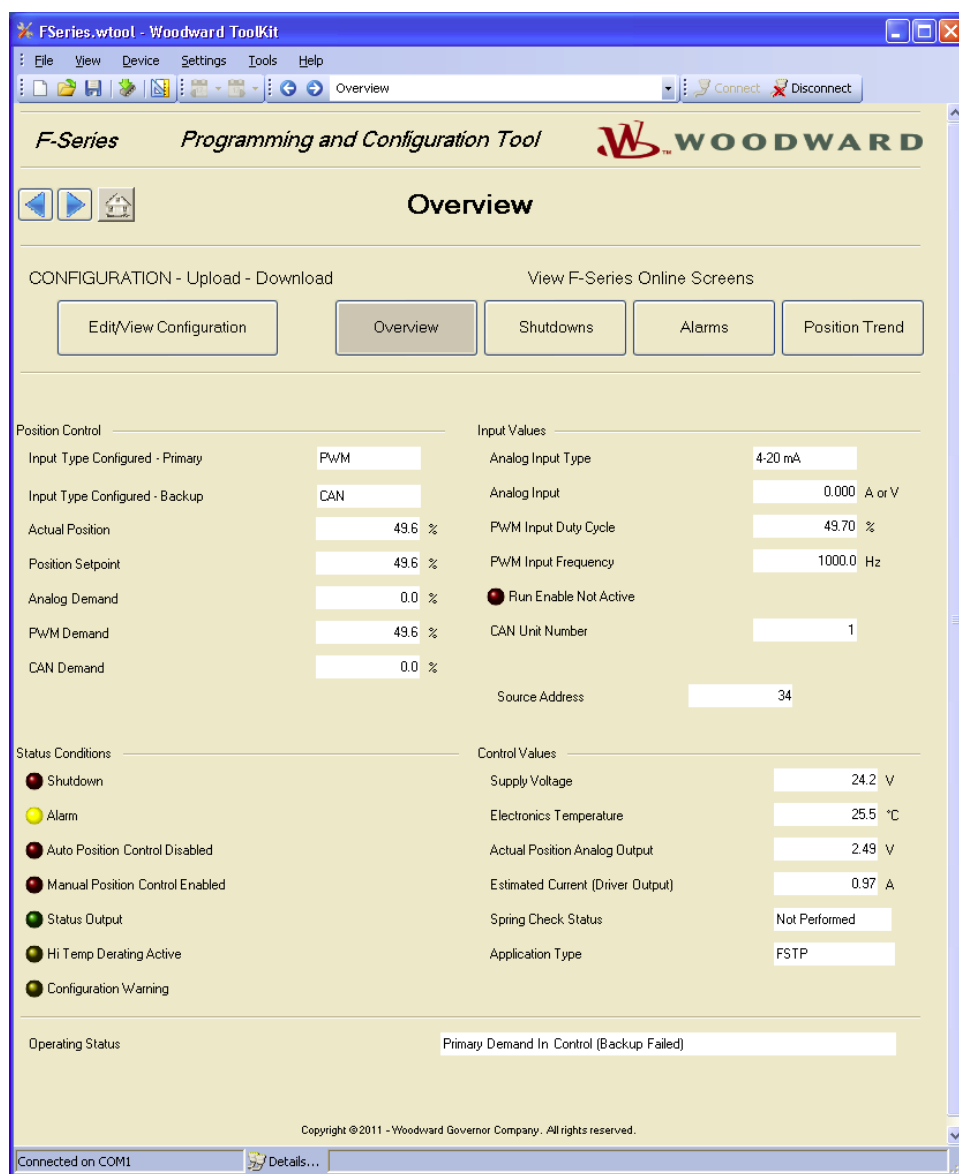


Figure 5-1. Example Service Tool Screen

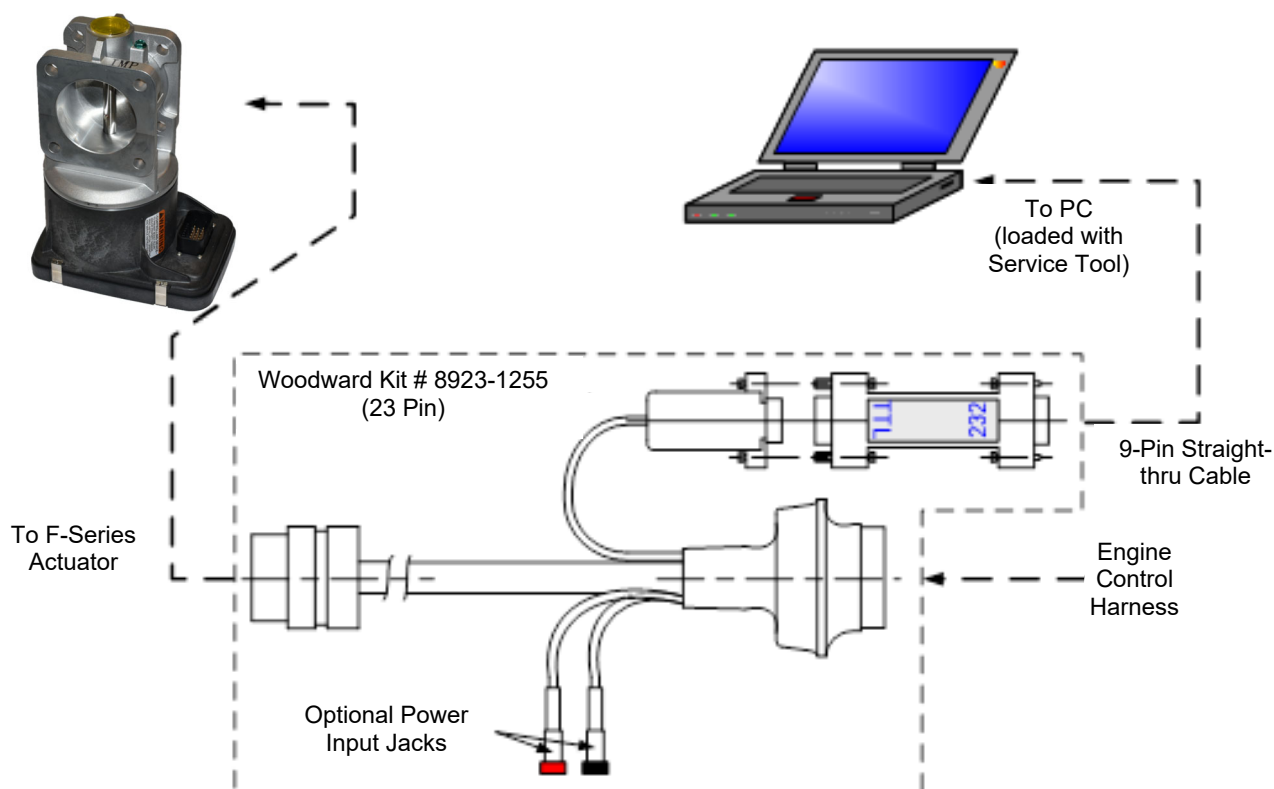


Figure 5-2. Communication- Harness Connections

NOTICE

There is a potential for serial port damage when communicating with the F-Series control. This is caused by a difference in AC voltage between neutral and earth ground. If the PC RS-232 port ground is referenced to AC neutral, and the F-Series control is referenced to battery ground (AC earth ground), a large amount of current can be experienced. To avoid this situation, Woodward strongly recommends either placing an isolation transformer between the AC outlet and the PC or utilizing an RS-232 port isolator (B+ B 9SPOP2).

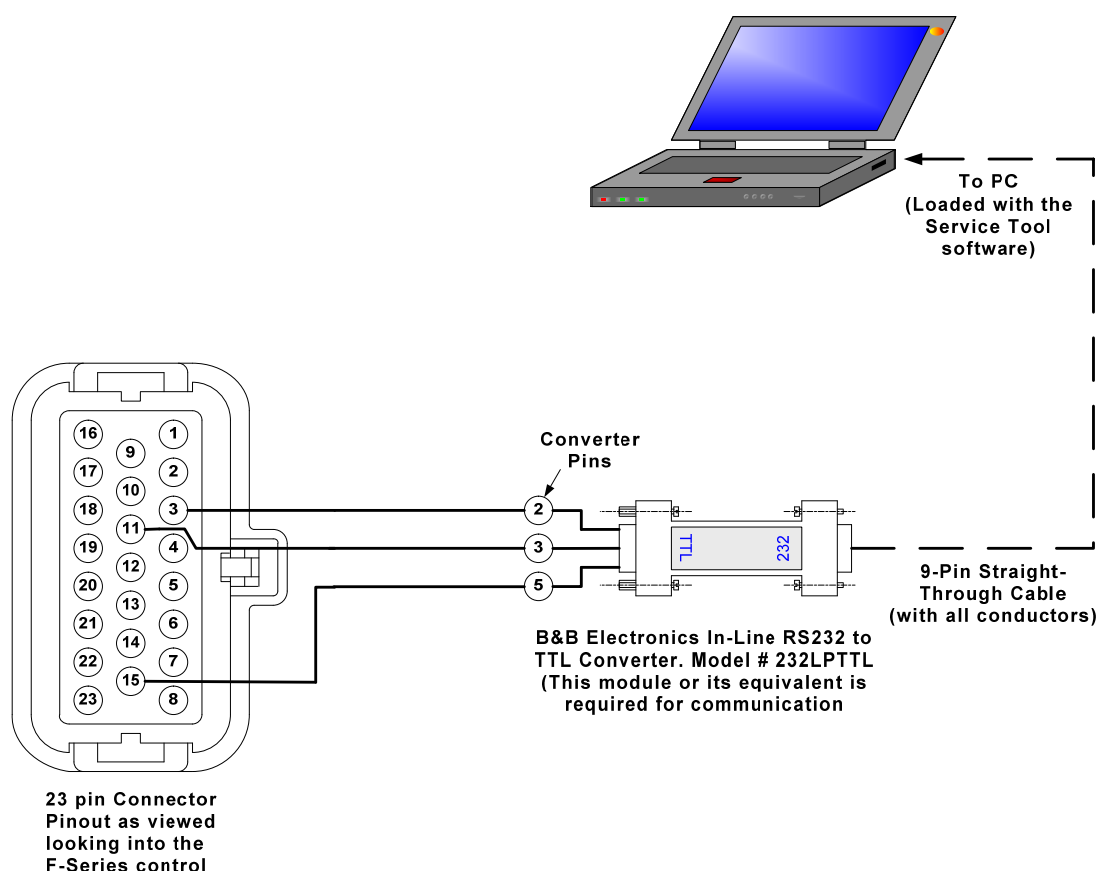


Figure 5-3. Programming Harness Wiring

System Requirements

The following hardware is required to work with the F-Series control:

- PC-compatible laptop or desktop computer
- Microsoft Windows® 7, Vista, XP (32- and 64-bit)
- Microsoft .NET Framework version 3.5 SP1
- 600 MHz Pentium® CPU
- 96 MB of RAM
- Minimum 800 by 600 pixel screen with 256 colors
- Serial Port
- Serial Extension Cable
- Communication/data link harness.

System Default Font

A system default font of 'large fonts' will cause some data on the Service Tool to be displayed incorrectly. The following describes the steps to set this value: right-click on the PC's screen and select 'Properties' then 'Settings' then 'Advanced' from the 'Settings' tab of the 'Display Properties' window. The DPI setting cannot be set to 'large'; set it to normal or small.

Getting Started

Installation Procedure

The F-Series Service Tool software can be downloaded and installed from the Woodward Internet site (www.woodward.com/software). The Service Tool is based on Woodward Toolkit software (standard version) included with the Service Tool installation. End users with a professional version of Toolkit (V3.6 or newer) already installed should skip installing the standard version.

Two F-Series Service Tools are provided for the different actuator types:

- F-Series Throttle (FST) Service Tool – 14-pin version
- F-Series Throttle (FSTP & Mod Actr) Service Tool – 23-pin versions

What to Do Next

After the software is installed, install the correct programming harness and connect a serial communications cable between the transceiver RS-232 port and an unused serial port on your computer. Power must be applied to the F-Series control for the Service Tool to connect.

Run the appropriate Service Tool program and select an available comm. port. Connect to the F-Series control by clicking the connect button on the tool bar.

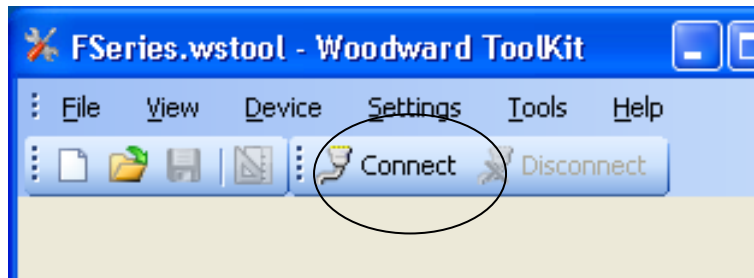


Figure 5-4. Connect to Device

Once connected to the control, the screen view will populate with current values and the status bar will display 'Connected on COM x' (lower left corner of tool).

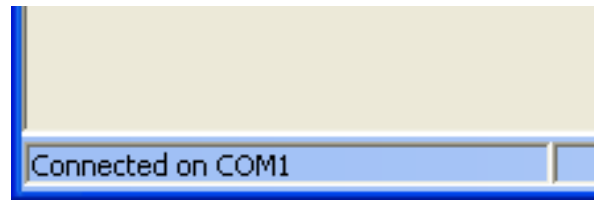


Figure 5-5. Connected Status Indication

The application type (FSTP, Mod Act) of the control, is displayed on the Overview screen.

Control Values	
Supply Voltage	20.8 Volts
Electronics Temp	32.9 deg C
Actual Position Analog Output	1.99 Volts
Estimated Current (driver output)	0.69 A
Spring Check Status	Failed
Application Type	F_MOD_ACTR

Figure 5-6. Application Type Indication

The Application firmware version can be verified by clicking on the Details button on the bottom of the screen. The Application ID is the firmware version of the connected device. This window is closed by clicking on the Details button again.

FSeries.wstool - Woodward ToolKit

File View Device Settings Tools Help

Overview

Position Control

Input Type Configured - Primary: Analog

Input Type Configured - Backup: CAN

Actual Position: 100.1 %

Position Setpoint: 45.2 %

Analog Demand: 45.2 %

PWM Demand: 0.0 %

CAN Demand: 0.0 %

Input Values

Analog Input Type: 0-5 V

Analog Input:

PWM Input Duty Cycle:

PWM Input Frequency:

Run Enable Not Active

CAN Unit Number:

Source Address: 34

Status Conditions

Shutdown

Alarm

Auto Position Control Disabled

Manual Position Control Enabled

Status Output

Control Values

Supply Voltage:

Electronics Temperature:

Actual Position Analog Output:

Estimated Current (Driver Output):

Spring Check Status: Passed

Network Device	Tool Device	Application Id	Status
1	F-Series	5418-3055 rev 101	Connected

Disconnect Log In Log Out Save Values

Connected on COM1 Details...

Figure 5-7. Communications Window

The following window appears if the Service Tool cannot find the correct service interface definition (SID) file to communicate with the device. If this occurs, the device is not compatible with the Service Tool version. The latest versions can be downloaded at www.woodward.com.

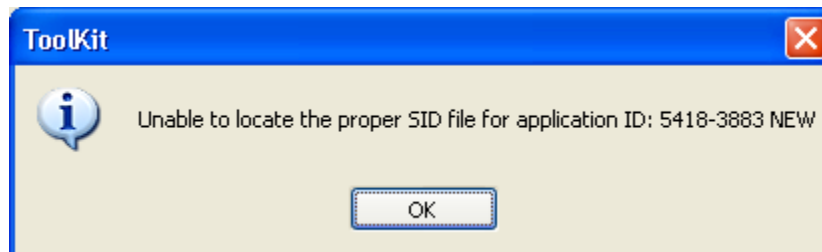


Figure 5-8. Improper SID Window

To set this up initially, select Options under the Tools menu.

Service Tool Help

Online Service Tool help is available and included with the installation of the Service Tool product. Help can be accessed from the Service Tool 'Help' menu located on the Main Window.

Service Tool Security

There are no password security levels provided by the F-Series Service Tool.

Troubleshooting the Driver

All Service Tools have four screens for troubleshooting driver parameters:

- Overview (Figure 5-9)
- Shutdowns (Figure 5-10)
- Alarms (Figure 5-11)
- Position Trend (Figure 5-12)

The Modular Actuator model has one additional setup and tuning screen: Position Dynamics & Stops Settings (see Figure 5-18)

The FST model has fewer features than the FSTP and Modular Actuator versions. The FSTP model has fewer features than the Modular Actuator version. The Service Tool for each actuator version only displays values applicable to each particular actuator.

IMPORTANT

Some screens shown in these instructions are for the more heavily populated Modular Actuator Service Tool. The FSTP version will have fewer parameters and screens. The parameter description will identify those parameters and screens not common to all models.

Screen Navigation

Service Tool screens can be selected for viewing in a variety of ways:

- Pull Down Box on the tool bar
- Next/Previous Page buttons on the tool bar
- Page Up/Page Down keyboard keys.
- Navigation buttons

Overview Screen

To view general F-Series control parameters, go to the Overview screen.

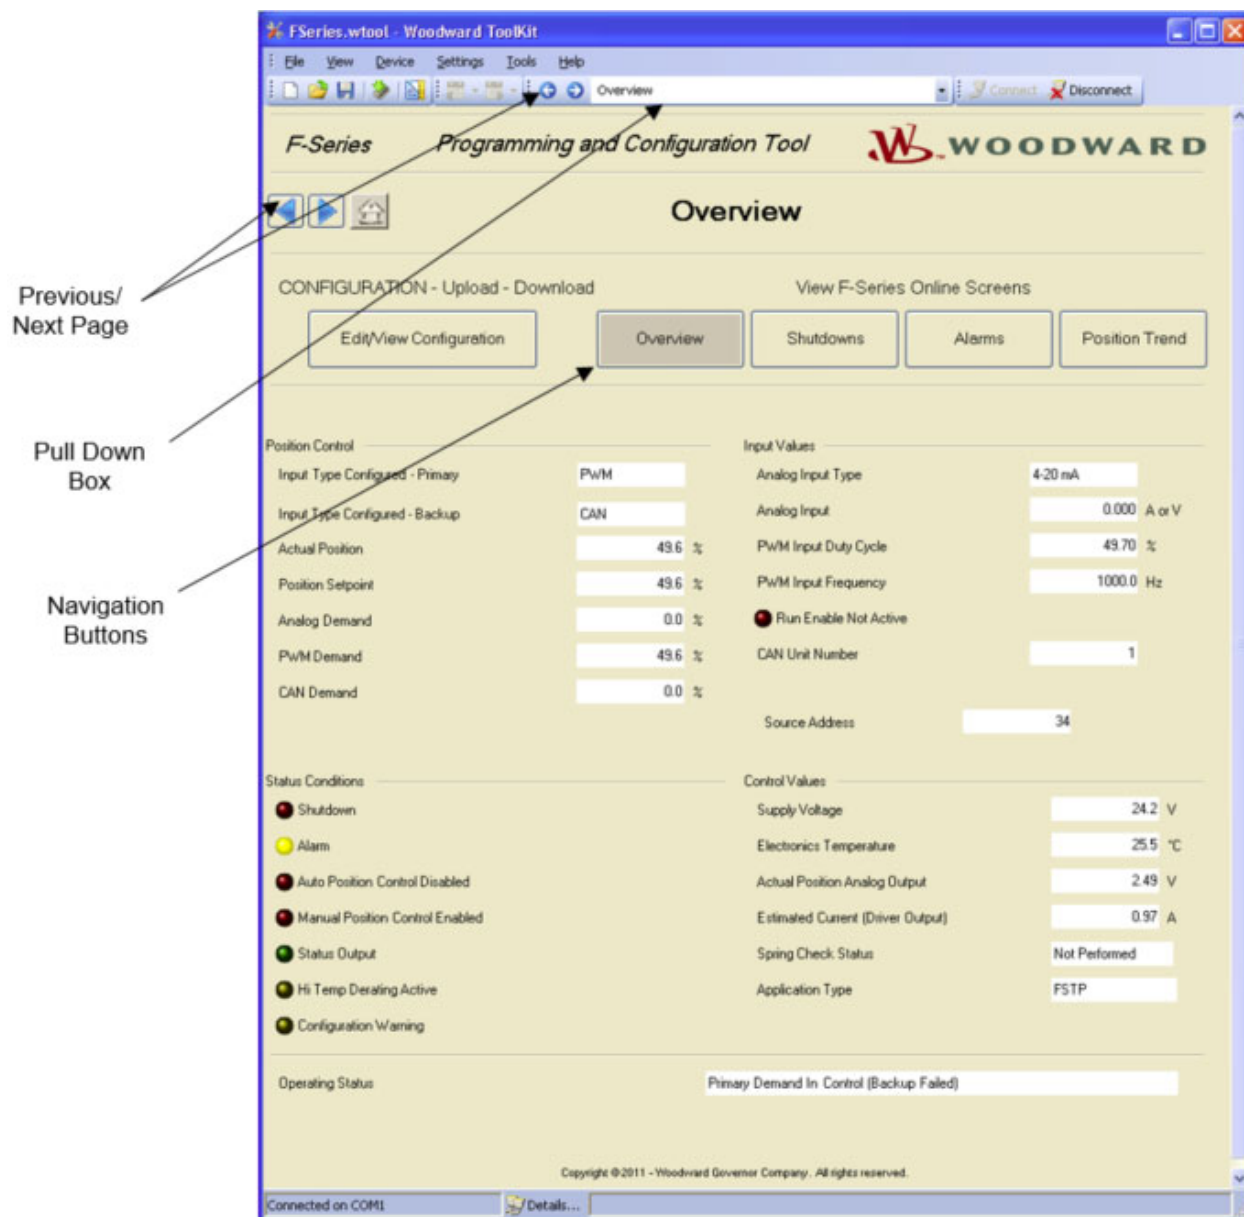


Figure 5-9. Overview Screen

Position Control Section**Input Type Configured - Primary**

Displayed value of the configured primary demand source (Analog, CAN, or PWM).

Input Type Configured - Backup

Displayed value of the configured backup demand source (Analog, CAN, or PWM).

Position Setpoint

Displayed value of the Position Setpoint – in percent.

Actual Position

Displayed value of the Actual Position – in percent.

Analog Demand

Displayed value of the Analog Input scaled to position demand before being limited between 0% and 100% – in percent.

PWM Demand

Displayed value of the PWM Input scaled to position demand before being limited between 0% and 100% – in percent.

CAN Demand

Displayed value of the CAN Input scaled to position demand before being limited between 0% and 100% – in percent.

Status Conditions Section**Shutdown LED**

Indicates an active or shutdown condition when illuminated (Red). The cause of any shutdown is displayed on the shutdown screen.

Alarm LED

Indicates an active alarm condition when illuminated (Yellow). The cause of any alarm is displayed on the alarm screen.

Auto Position Control Disabled LED

Indicates automatic position control is disabled when illuminated (Red). See the Position Trend screen.

Manual Position Control Enabled LED

Indicates manual position control is enabled when illuminated (Red). See the Position Trend screen.

Status Output LED

Indicates an active status discrete output condition when illuminated (Green).

Hi Temp Derating Active LED

Indicates reduced actuator power output operation (due to detection of high actuator temperature) when illuminated (Yellow).

Configuration Warning LED

Indicates an active configuration warning condition when illuminated (Yellow).

Input Values Section**Analog Input Type**

Displayed value of the Analog Input Type (4 mA to 20 mA or 0 V to 5 VDC).

Analog Input

Displayed value of the Analog Input – in amps or volts DC.

PWM Input Duty Cycle

Displayed value of the PWM Input Duty Cycle – in percent.

PWM Input Frequency

Displayed value of the PWM Input Frequency – in hertz.

Run Enable not active LED

Indicates the Run Enable input is not active (actuator output current is zero) when illuminated (Yellow).

CAN Unit Number

Displayed value of the CAN Unit number based on the CAN ID Low and High Discrete inputs (1-4).

Source Address

Displayed when CAN J1939 protocol is used. This is a value of the last successfully claimed CAN source address, may be different from configured source address if dynamic addressing is enabled.

Node Id

Displayed when CANopen protocol is used. This is a value of currently used Node Id.

Control Values Section**Supply Voltage**

Displayed value of the input power, in volts, as read by the processor.

Electronics Temperature

Displayed value of the electronics temperature sensor, in degrees Celsius, as read by the processor.

Actual Position Analog Output

Displayed value of the actual position analog output, in volts, as read by the processor.

Estimated Current (driver output)

Displayed value of the estimated actuator coil current, in amperes, as calculated by the processor.

Spring Check Status

Displayed value of the spring check results (Not Performed, Passed, and Failed).

Application Type

Displayed value of the control's firmware application (FST, FSTP, and F_MOD_ACTR).

Operating Status

Displayed value of the primary/backup demands, indicating which is in control.

Shutdown and Alarm Indications

The Shutdowns and Alarms screens display the status of active and logged fault conditions. To view active or logged faults go to the Shutdowns and Alarms screens.

Active faults are those presently detected, or previously detected but latched and not reset. To clear active faults that are latched on, click the 'Reset Active Faults' button on the Shutdowns or Alarms screens. If configured as non-latching, active faults self-clear when the fault condition no longer exists.

A logged fault is one that has occurred but is no longer active or latched in the control. Logged faults are non-volatile and can only be cleared by clicking the 'Reset Logged Faults' button on the Shutdowns or Alarms screens.

Shutdowns Screen

To view shutdowns, go to the Shutdowns screen. The Shutdowns screen displays the status (Red LEDs) of active or logged shutdown conditions.

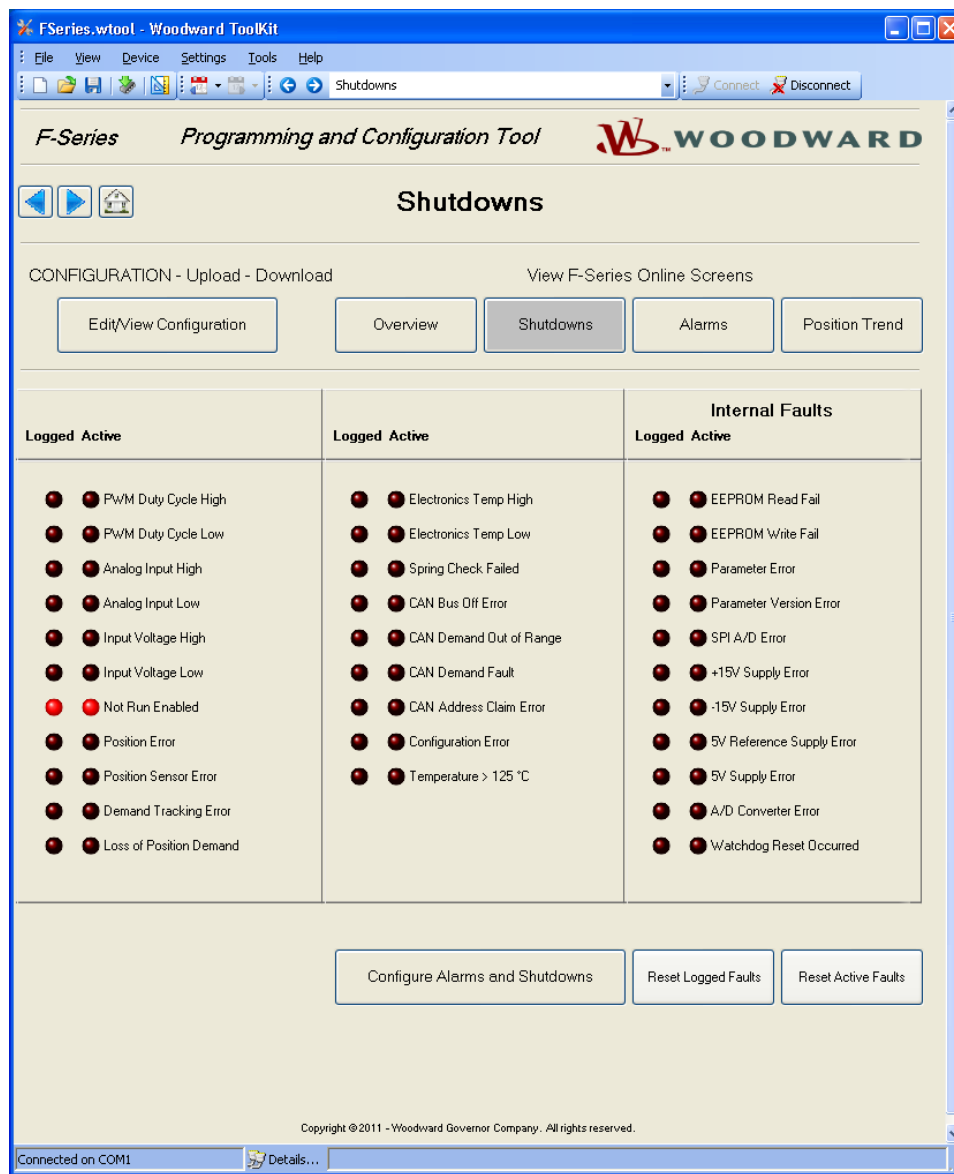


Figure 5-10. Shutdowns Screen

IMPORTANT

Refer to Chapter 4 for a complete listing and description of all the fault conditions.

Alarms Screen

The alarms screen displays the status (Yellow LEDs) of active or logged alarm conditions.

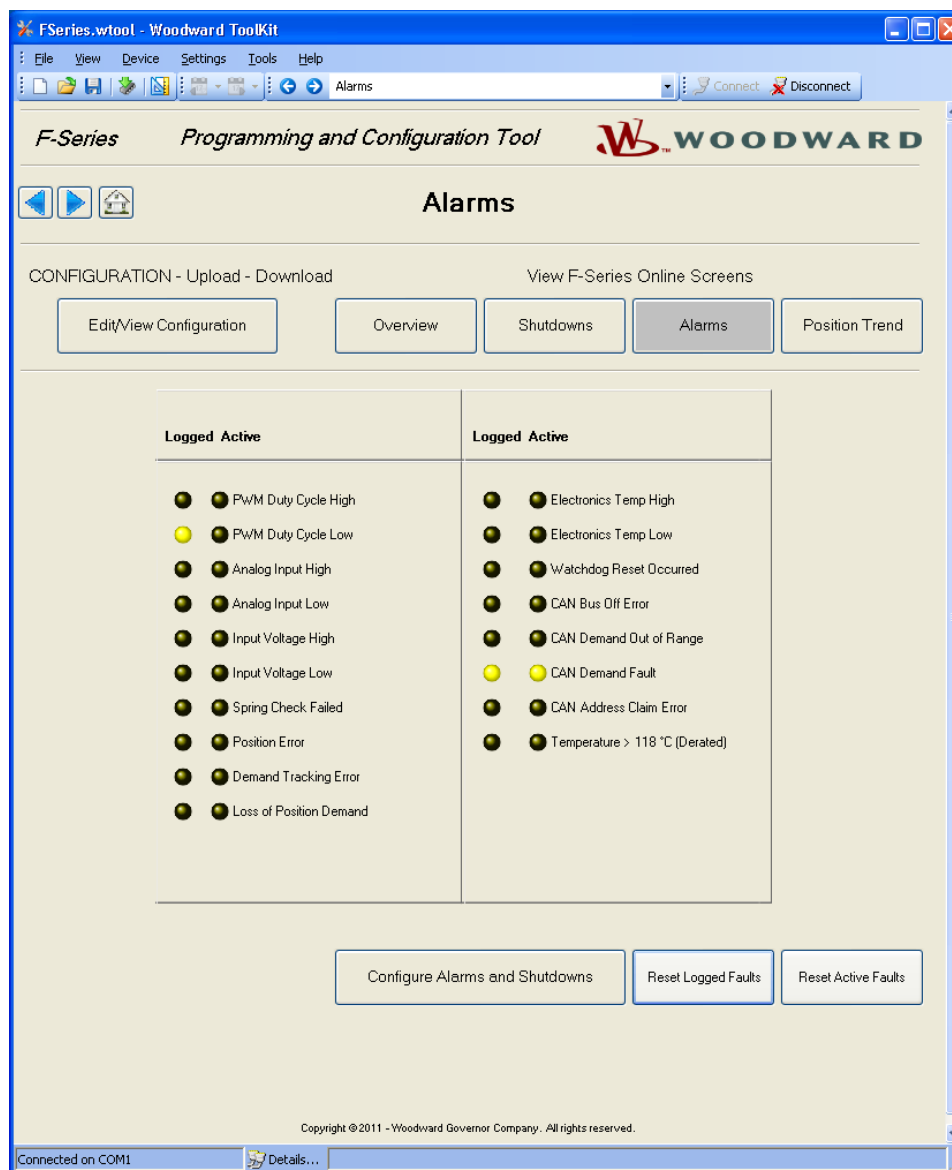


Figure 5-11. Alarms Screen

Position Trend Screen

To view a trend of the Actual Position and Position Setpoint, go to the Trend screen. These trend parameters are fixed and include:

Table 5-1. Position Trend Parameters

Actual Position:	(Default range is 0% to 100%)
Position Setpoint:	(Default range is 0% to 100%)
Input Voltage	(Default range is 0 V to 30 VDC)
Estimated Current	(Default range is -4 A to +4 A)

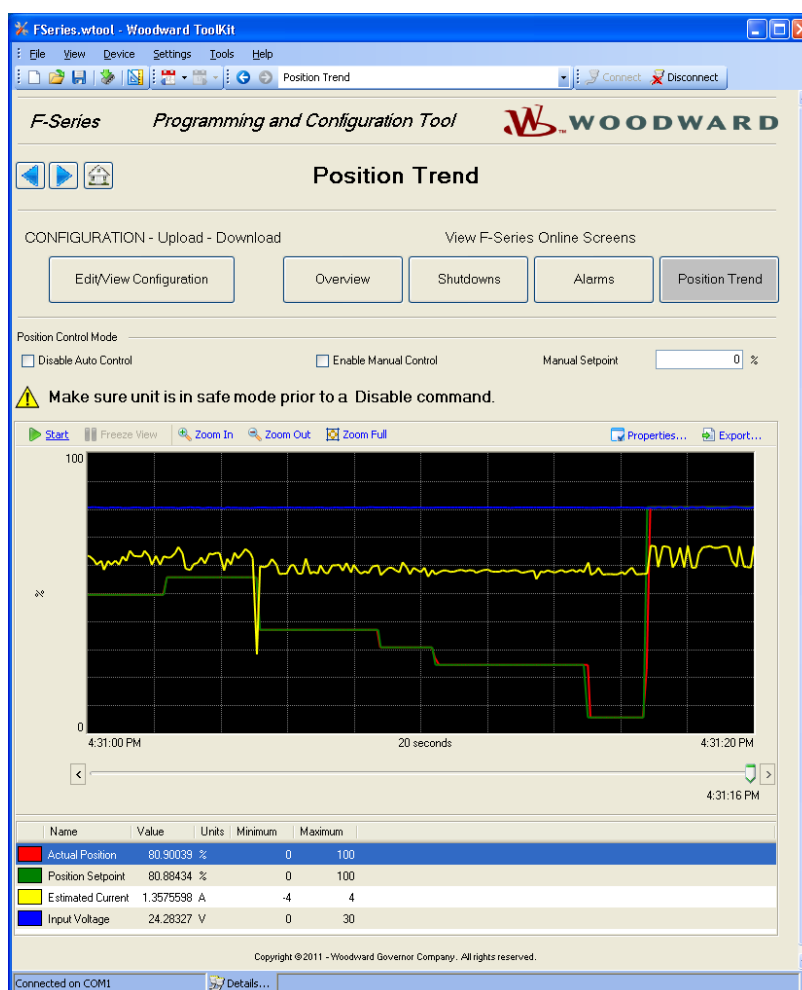


Figure 5-12. Position Trend Screen

Start/Stop

Click the Start button to begin a position trend. Click the Stop button to freeze the currently displayed values. Clicking the Start button again erases the frozen values and begins trending current values again.

Position Control Mode

Manual position control is provided on the trend screen to facilitate testing the actuator travel, linkage or valve setup, and dynamic response.



Make sure the unit is in a safe mode prior to disabling auto position control. Failure to comply with this recommendation can cause personal injury and/or property damage.

Disable Auto Control

Checking Disable Auto Control Mode disables automatic position control causing the actuator to go limp (zero drive current) and allows manual position control.

Unchecking the Disable Auto Control Mode restores automatic position control and blocks manual position control.



Stay clear of the actuator output shaft and all attachments as sudden movement can occur at any time. Failure to comply with this recommendation can cause personal injury and/or property damage.

Enable Manual Control

Checking the Enable Manual Control check box enables manual position control when automatic position control is disabled. The actuator immediately drives to and follows the Manual Position Setpoint. Manual position control is blocked when automatic position control is not disabled.

Manual Setpoint

When both the Disable Auto Control and Enable Manual Control check boxes are checked, the actuator position follows the Manual Position Setpoint.

To change the position setpoint, highlight the present value and type in a new value.

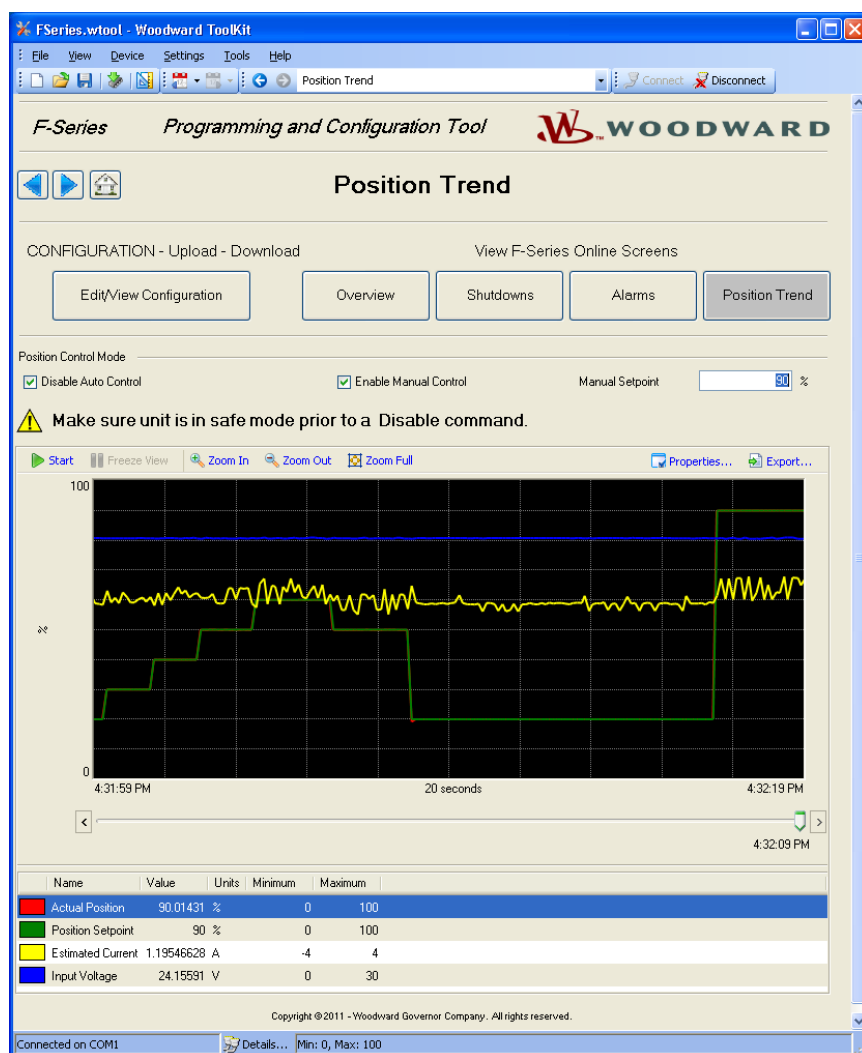


Figure 5-13. Position Trend Screen – Manual Control

Properties

Trend properties can be changed. Click the Properties button to open the Trending Properties window (Figure 5-14). From this window the trend time span, sample rate, pen colors and high and low range scaling can be changed.

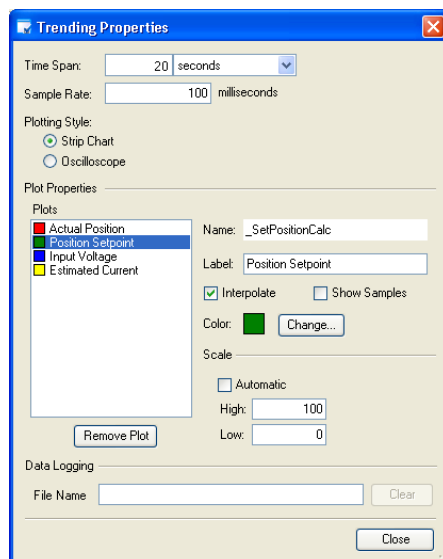


Figure 5-14. Trending Properties Window

Checking the show samples option causes the trend plot points to be displayed as enclosed points on the displayed trend.

Click Color Change to select a different plot color for the highlighted plot (e.g., Position Setpoint).

Checking the automatic scale option dynamically sets the range at the maximum and minimum values measured during a trend run. Checking the automatic scale check box overrides the high and low range scaling settings. Unchecking uses the high and low settings. Click 'X' to close the Trend Properties pop-up window.

Export

Click the Export button to save file the values of the trend data points taken during the time period just prior to clicking the stop button (Figure 5-15a). The format of the file is html, but it can be opened for analysis using other programs (example Excel Figure 5-15b).

Time started: 5/23/2011 12:06:27 PM							
Actual Position		Position Setpoint		Input Voltage		Estimated Current	
Seconds	%	Seconds	%	Seconds	V	Seconds	A
0	100.057998657227	0.0156252	100	0.0156252	26.4165496826172	0.0312504	0.999922037124634
0.0937512	100.057998657227	0.1093764	100	0.1093764	26.4165496826172	0.1250016	0.999922037124634
0.2031276	100.057998657227	0.2187528	100	0.2187528	26.4165496826172	0.2187528	0.999922037124634
0.312504	100.057998657227	0.312504	100	0.3281292	26.4165496826172	0.3281292	0.999922037124634
0.4218804	100.057998657227	0.4375056	100	0.4375056	26.4165496826172	0.4531308	0.999922037124634

Figure 5-15a. Trend Data Points (in Web Browser)

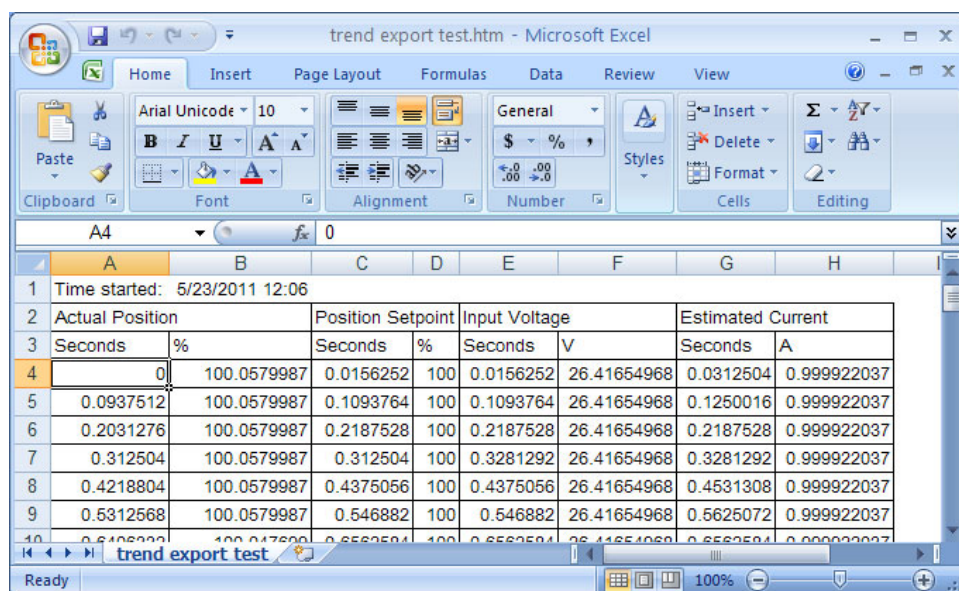


Figure 5-15b. Trend Data Points (in Excel)

Creating a Custom Trend

Any control parameter can be trended by merely right clicking the value.

Control Values

Supply Voltage	14.0	Volts
Electronics Temp	35.8	deg C
Actual Position	3.87	Volts
Analog Output		
Estimated Current (driver output)	1.30	A
Spring Check Status	Not Performed	

Add to trend

Figure 5-16. Custom Trend

For example, right clicking the Estimated Current, then clicking 'Add to trend' produces the following trend.

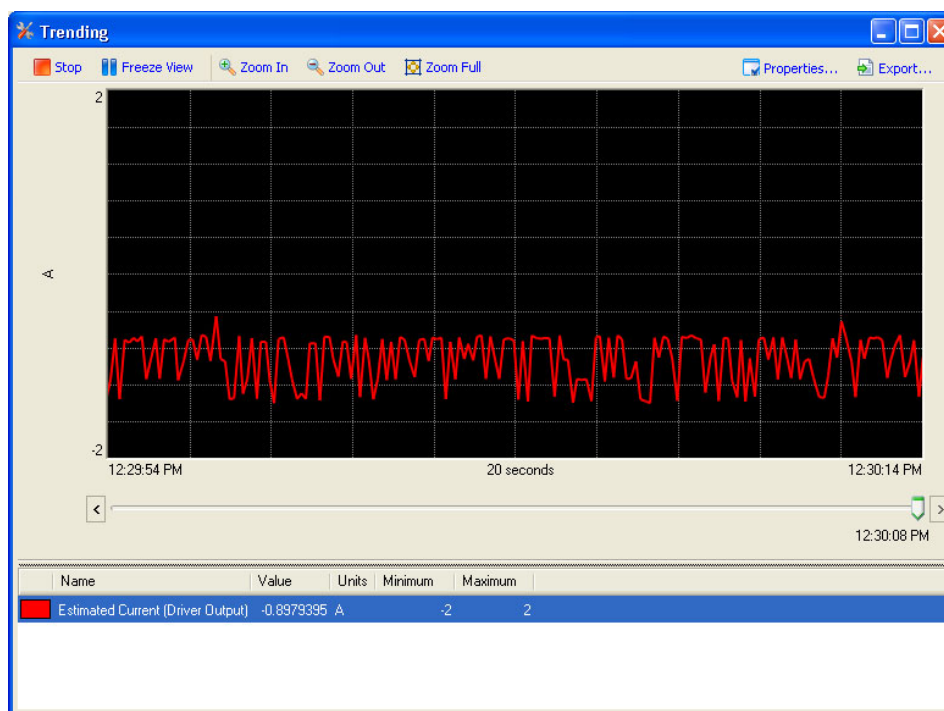


Figure 5-17. Custom Trend Example

The properties default range is automatic, and the time span is 20 seconds. Use the properties button to make any desired changes. Additional values can be added to this trend as desired by right-clicking other values. Custom trend values can be exported to a file. Zoom in, zoom out, and zoom full change the displayed time window while keeping the same data scaling.

Position Setup Screen

(Modular Actuator Only)

To setup and view the modular actuator position dynamics (inertia) and stops settings, go to the Position Setup screen.

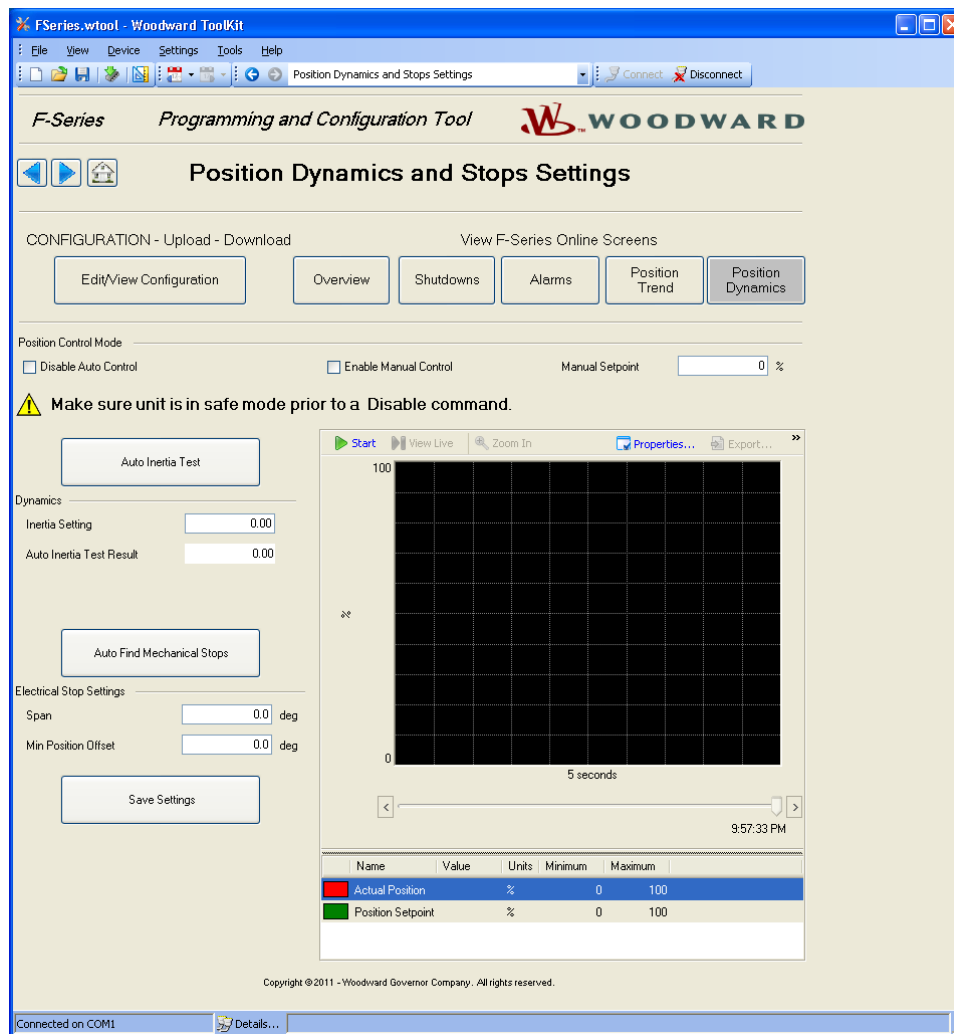


Figure 5-18. Position Setup Screen (Mod Act Only)



WARNING An improperly calibrated control could cause an overspeed or other damage to the engine. To prevent possible serious injury from an overspeeding engine, read and follow this entire procedure before starting the engine.

Automatic position control must be disabled in order to activate the settings shown on the Position Setup screen. Setting changes will not be effective and cannot be saved while operating in automatic position control.

When automatic position control is disabled, the actuator goes limp (zero drive current). Make sure the unit is in a safe mode (e.g., engine stopped, etc.) prior to selecting the Disable Auto Control check box.

**WARNING**

Make sure unit is in a safe mode prior to disabling auto position control. Failure to comply with this recommendation can cause personal injury and/or property damage.

Disable Auto Control

Checking Disable Auto Control Mode disables automatic position control, causes the actuator to go limp (zero drive current), enables the dynamics and stops settings, and allows manual position control.

Unchecking the Disable Auto Control Mode restores automatic position control and blocks manual position control, dynamics and stops settings, and the save position settings.

**WARNING**

Stay clear of the actuator output shaft and all attachments as sudden movement can occur at any time. Failure to comply with this recommendation can cause personal injury and/or property damage.

Enable Manual Control

Checking the Enable Manual Control check box enables manual position control when automatic position control is disabled. The actuator immediately drives to and follows the Manual Position Setpoint.

Manual position control is useful for stroking the actuator from the min and max positions to verify the actuator travel is correct, that the linkage moves freely, and the stops are properly set. This feature is also useful for stroking the actuator to the desired end positions and reading the actual position in degrees to manually enter Span and Offset settings if desired.

Manual position control is also useful for stroking the actuator to view the dynamic response. Step changes can be made by setting the Manual position Setpoint to a high value then checking and unchecking the Enable Manual Control check box.

Manual Setpoint

When both the Disable Auto Control and Enable Manual Control check boxes are checked, the actuator position follows the Manual Position Setpoint.

Adjustable range: 0% to 100%

**WARNING**

The Modular Actuator inertia setting must be properly adjusted using the F-Series Service Tool prior to engine operation. Improper inertia setting can result in unpredictable actuator movement and possible personal injury or damage to equipment.

Auto Inertia Test

To have the control automatically find the optimum Inertia Setting, click the Auto Inertia Test button. The control runs a brief inertia test and displays the resulting inertia value in the Auto Inertia Test Result. This tuning method is preferred and recommended.

Inertia Setting

Displays the inertia value used by the position control. To manually change the Inertia Setting, highlight the present value and type in a new value. These settings are used by the control when they are entered. Adjustable range: 1-10

To save the modified Inertia Setting value to the control, click the Save Settings button. If the modified inertia value is not saved, the previous value will be restored on the next power cycle.

Auto Inertia Test Result

Displays the inertia value from the Auto Inertia Test.

To save the Auto Inertia Test Result value to the control, click the Save Settings button. If the inertia test result value is not saved, the previous value will be restored on the next power cycle.

Auto Find Mechanical Stops

To have the control automatically find the mechanical stop position settings (whether internal or external to the actuator), click the Auto Find Mechanical Stops button. This method of setting the stops position is preferred and recommended.

To save the stops position settings to the control, click the Save Settings button. If the stop position values are not saved, the previous values will be restored on the next power cycle.

Min Position Offset

To manually set the actuator Min Position Offset, highlight the present value and type in a new value. Adjustable range: 0–72 degrees

To save the modified Min Position Offset value to the control, click the Save Settings button. If the modified offset value is not saved, the previous value will be restored on the next power cycle.



WARNING

External mechanical stops must be provided in the linkage system. Do not use the internal actuator stops to limit output shaft travel. The internal actuator stops are provided for actuator setup purposes only.

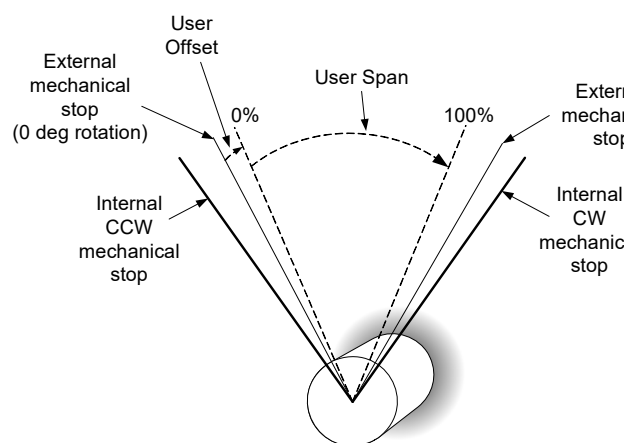


Figure 5-19a. Stops Setup for CW Operation

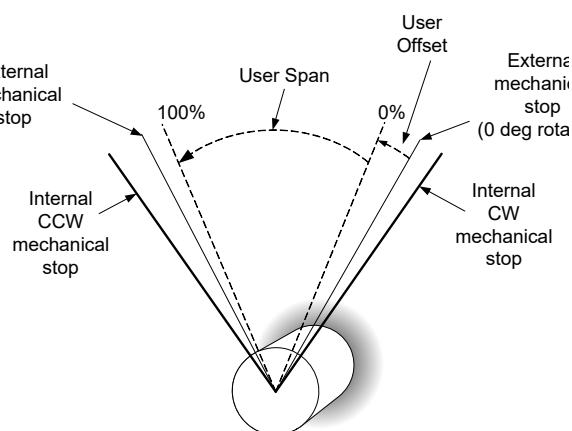


Figure 5-19b. Stops Setup for CCW Operation

IMPORTANT

It is highly recommended that the minimum fuel position setting stops the engine. This is essential for any configured shutdowns in the F-Series control to be directly effective. If this is not possible, the discrete output should be configured to actuate an external shutdown device.

Span

To manually set the actuator Span, highlight the present value and type in a new value.

To save the modified Span value to the control, click the Save Settings button. If the modified span value is not saved, the previous value will be restored on the next power cycle. If a span is entered that would cause the actuator to try to move beyond the mechanical stop, the span value is automatically limited to keep the 0% to 100% stroke range within the mechanical stops.

Adjustable range: 1-72 degrees

NOTICE

The Modular Actuator Inertia and Stop settings are only saved temporarily until the user presses the Save Settings button. If modified values are not saved, the previous values will be restored and used by the control on the next power cycle.

Actual Position Feedback

The Actual Position is displayed in percent and degrees travel text boxes. A trend of the Actual Position and Position Setpoint is also provided for viewing the dynamic response. Trend properties can be set, and data points can be exported to a file as described earlier for the Position Trend screen.

Chapter 6. Configuration

Overview

The F-Series control is configured using the Service Tool. Refer to Chapter 5 for Service Tool installation and connection instructions.

The F-Series control can be configured either on-line or off-line. On-line configuration can only be performed when the Service Tool is connected to the F-Series control. Off-line configuration can be done at any time. On-line and off-Line configuration settings do not take effect until they are loaded into the control.

IMPORTANT

Many F-Series actuators are delivered pre-configured and calibrated with OEM specific settings. These units do not require the use of the Service Tool. However, the Service Tool is a valuable troubleshooting aid.

NOTICE

An unsafe condition could occur with improper use of these software tools. Only trained personnel should have access to these tools.

OEM Configuration File Data

The OEM can save configuration file specific data with the Service Tool. A notes text field is provided on each configuration screen that can be used to store data for each configuration such as:

- Customer
- Engine Type
- Application Type
- Notes

Configuring the Unit—On-Line

Unit On-Line configuration is summarized as follows:

1. Connect to the F-Series using the associated Service Tool.
2. On the Overview page select the "Edit/View Configuration" button. Allow time for the PC Service Tool to download the parameter values (a second or two).
3. Navigate to the parameters using the buttons displayed on the screen and modify as needed.
4. Load the parameters to the device by selecting the "Apply" button located at the bottom right corner of the screen.

Configuring the Unit—Off-Line

Unit Off-Line configuration is summarized as follows:



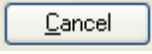
1. Open a new or saved Settings File.
2. Edit the configuration settings.
3. Do a 'Save' to keep the same configuration filename OR do a 'Save As' to create a new configuration file.
4. When convenient, connect to the F-Series control and Load the configuration settings to the control.

IMPORTANT

New controls are supplied with a configuration. These configurations may consist of default settings or OEM specific settings. Creating a 'New Settings from SID Defaults' is not recommended and not described. Modifying, saving, and loading an existing configuration is described.

Configuring the Unit Using Edit/View Configuration Button

Pressing Edit/View Configuration Button when Service Tool is connected to the control opens Settings Editor with currently used settings. From this window, the user can monitor settings or modify them.

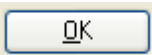- | | |
|---|------------------------------------|
|  | - to apply changes and exit editor |
|  | - to apply changes (no exit) |
|  | - to exit editor with no changes |

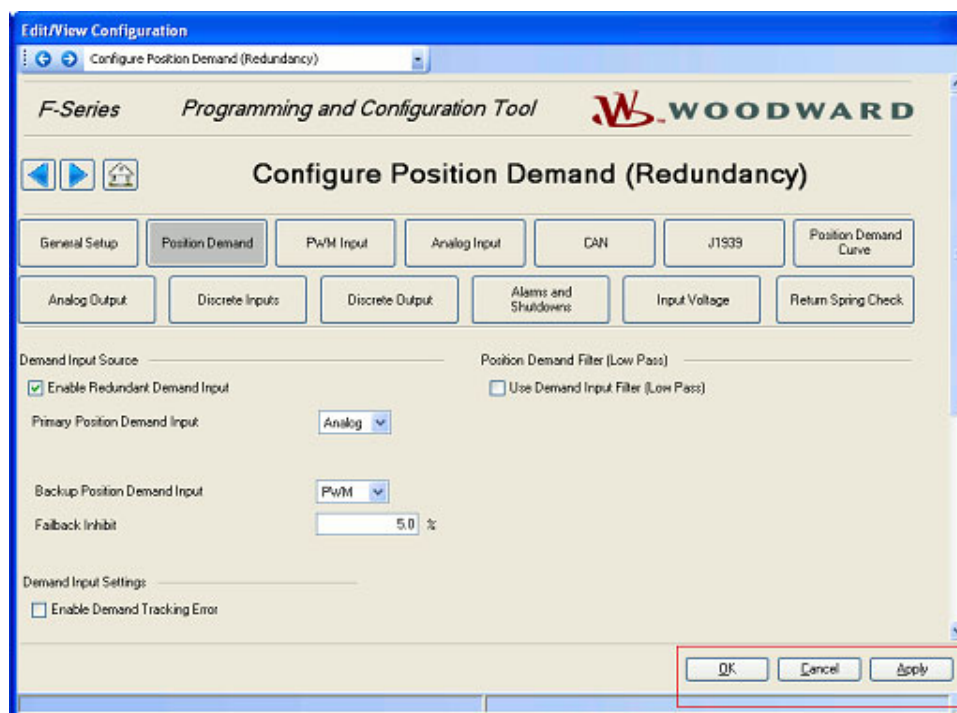


Figure 6-1. Ok, Cancel, and Apply Buttons

Creating a Configuration Settings File

The existing F-Series control configuration settings can be viewed by connecting the Service Tool to the control, reading the settings, saving the settings to a file then opening the saved file. For Service Tool instructions, see Chapter 5.

A settings file can be created on-line (connected to control) or off-line (not connected). To create a settings file using Service Tool default settings, click 'Settings' on the Service Tool menu bar then 'New from SID Specification Defaults'. To create a settings file based on the control's current values, click 'Settings' on the Service Tool menu bar then 'Save from Device to File'.

This starts a Save Setting Wizard to save the F-Series control settings to a configuration settings file. You will be prompted for a File name. These settings can be saved to an existing file or, by entering a new file name, to a new file.

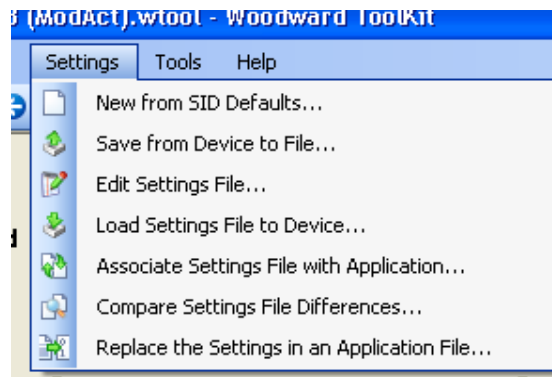


Figure 6-2. Settings Menu Options

Opening Configuration Settings Files

Settings Files can be opened to view configuration settings, edit settings, 'save' (or 'save as') settings and download settings to the control.

To open the Settings Files, click 'Settings' on the F-Series Service Tool menu bar, then select 'Edit Settings File'. From the list of names, simply double click the desired file name. This opens a Settings Editor screen for viewing or editing the configuration settings (for example, Figure 6-2, Configure PWM Input).

Configuration Parameters

The number of Settings Editor screens varies between the different control types— FST, FSTP, and Modular Actuator. These settings editor screens are used to set the configuration parameters.

The following screens may be displayed. Screens, content, and available functionality vary with firmware version.

- Configure General Setup (*modular actuator only*)
- Configure Position Demand
- Configure PWM Input
- Configure Position Demand Curve
- Configure Analog Output
- Configure CAN
- Configure J1939 (*5418-3055, -3056, -7289, -7290 or newer only*)
- Configure Discrete Inputs
- Configure Discrete Output
- Configure Alarms & Shutdowns
- Configure Input Voltage
- Configure Return Spring Check

Screen navigation can be performed using the on-screen left- and right-arrow icons, the screen drop-down, or by selecting the screen name pushbutton.

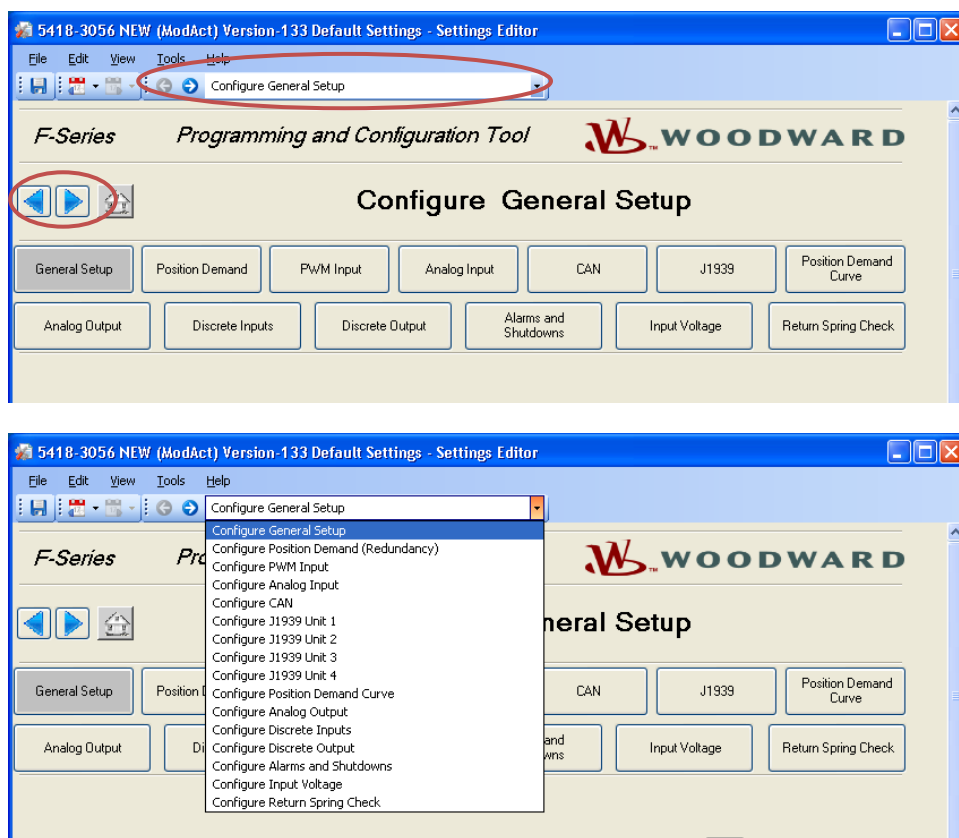


Figure 6-3. Screen Navigation Options

The tuning range of a selected parameter is displayed on the screen status bar. Attempts to enter values outside the parameter minimum and maximum range will not be accepted and an error message is displayed

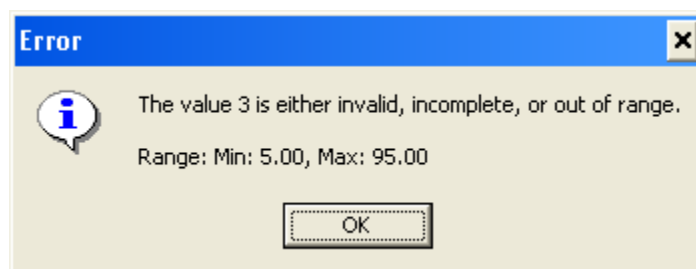


Figure 6-4. Error Message Example

Configure General Setup

(Modular Actuator Only)

The Configure General Setup screen provides settings for the shaft direction of rotation setup, shutdown direction, dynamics (Inertia) and min and max stop holding current.

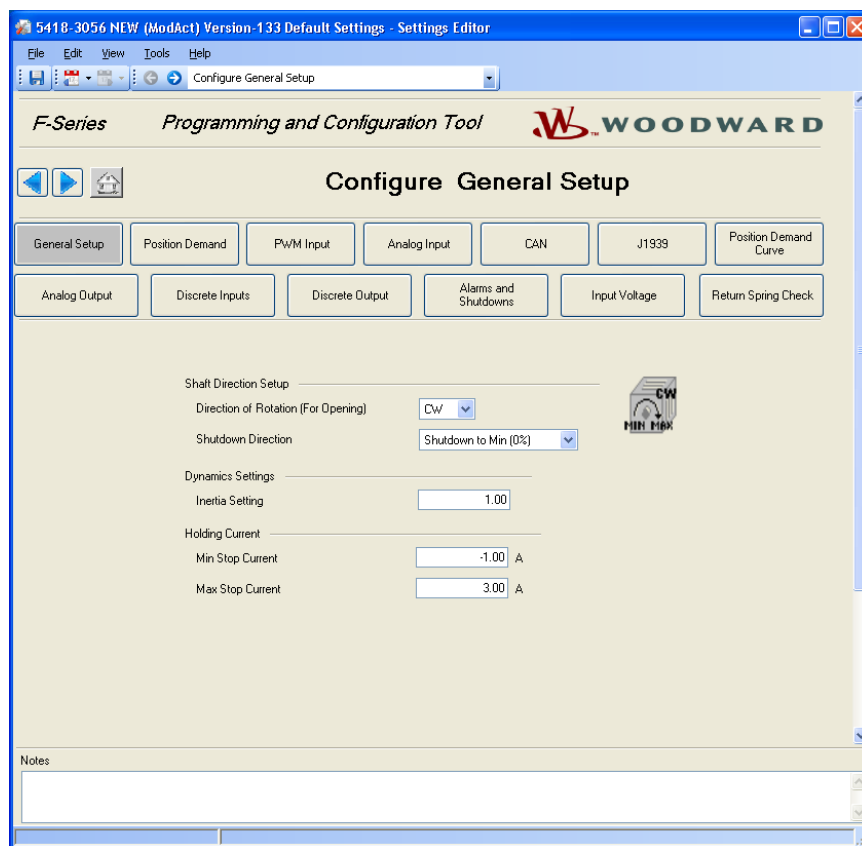




Figure 6-5. Configure General Setup (Modular Actuator Only)

Shaft Direction Setup Section

Direction of Rotation (for opening)

- **CW**—Sets the actuator rotation as clockwise for opening (increasing position demand).
 - **CCW**—Sets the actuator rotation as counterclockwise for opening (increasing position demand).
- Default = CW.

IMPORTANT	Actuator rotation is determined while looking into the actuator shaft end:	
	 Clockwise	 Counter-Clockwise

Shutdown Direction

Sets the position the actuator moves to when shutdown. Options: Shutdown to Min (0%), Shutdown to Max (100%), Shutdown to Limp (available only in 5418-3056), default=Min.

Dynamics Settings Section

Inertia Setting

Sets the Modular Actuator system inertia for the control dynamics. The inertia setting calibrates the position controller to the load inertia. A setting of zero represents the actuator shaft with no load attached. Higher load inertia requires a higher inertia setting.

If the inertia setting is too low, there may be a slow oscillation when the actuator should be steady, or the step response may show excessive overshoot and ringing. If the inertia setting is too high, a high frequency oscillation or limit cycle may be seen. If a range of values is seen to provide adequate response, the lowest value that does not produce overshoot should be chosen.

If the optimum Inertia Setting is unknown, initially set this value at 1.0, then follow inertia setting instructions described with the Position Setup screen found in Chapter 5.

Adjustable range 1-10, default =1.0.

Holding Current Section

Min Stop Current

Sets the minimum holding current when the actuator is near the min mechanical stop. Adjustable range: -4.0 A to 0.0 A, default = -1.

Max Stop Current

Sets the maximum holding current when the actuator is near the max mechanical stop. Adjustable range: 0.0 A to 4.0 A, default =3.

Configure Position Demand

The Configure Position Demand screen provides demand input selection, demand redundancy, and demand filtering setting. There are two variations of functionality available, each with different settings. Firmware versions 5418-2724, -2725 and -3834 are non-redundant position demand versions; 5418-3055, -3056, -7289, -7290 and newer are redundant position demand versions. See screen captures below for examples.

■ Note: Analog Demand is not available in firmware-5418-9520.

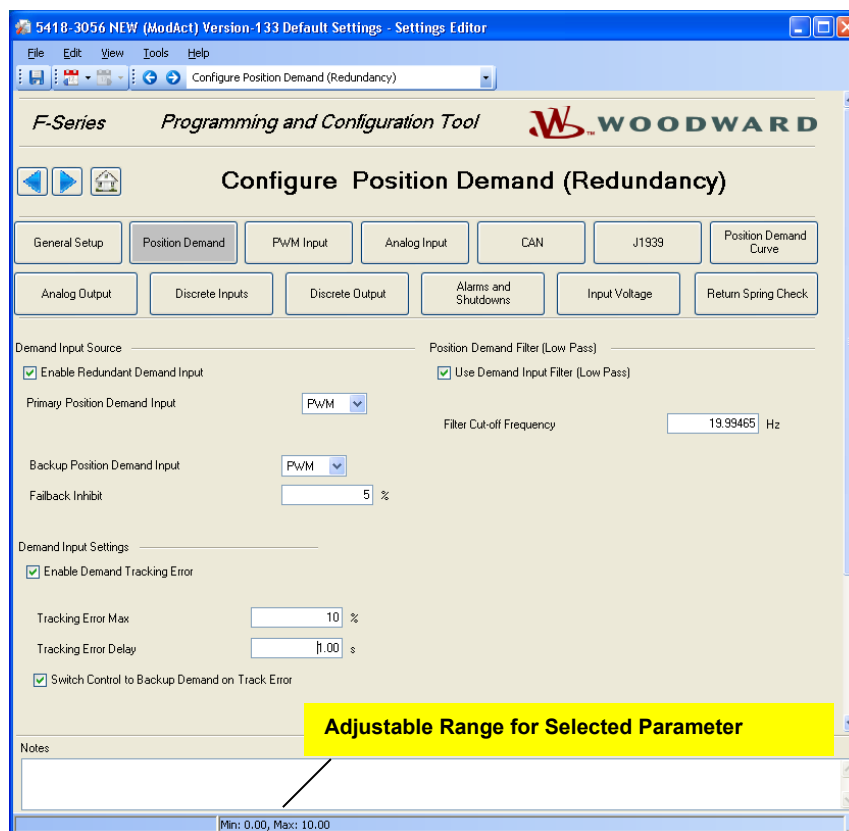


Figure 6-6a. Configure Position Demand (Redundant Versions)

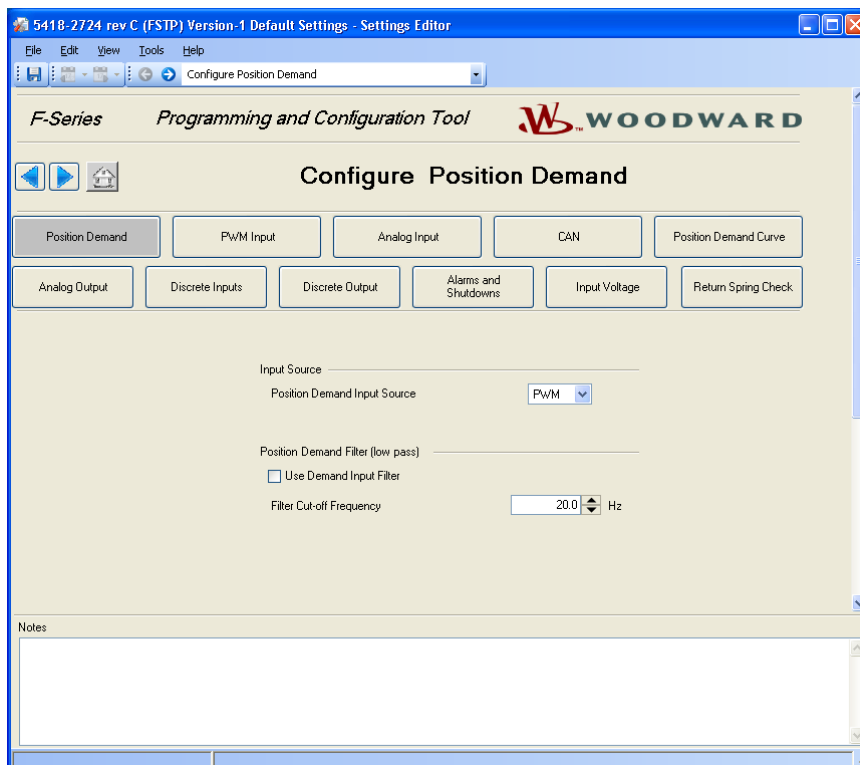


Figure 6-6b. Configure Position Demand (Non-Redundant Versions)

Demand Input Source Section**Enable Redundant Demand Tracking Fault -**

Selection of the demand input as either single (unchecked) or redundant (checked). Default: unchecked

Primary Position Demand Input

The Primary Position Demand source can be set to one of the following:

- PWM** Selects a PWM position demand input.
- Analog** Selects an analog (0 V to 5 V or 4 mA to 20 mA) position demand input.
- CAN** Selects a CAN position demand input.

Allowed values: PWM, Analog, CAN Default: PWM

Backup Position Demand Input

The Backup Position Demand source can be set to one of the following:

- PWM** Selects a PWM position demand input.
- Analog** Selects an analog (0 V to 5 V or 4 mA to 20 mA) position demand input.
- CAN** Selects a CAN position demand input.

Allowed values: PWM, Analog, CAN Default: PWM

Failback Inhibit - *(Only displayed if configured for Redundant Demand Inputs)*

When the backup demand is in control (after primary has failed and is restored), this setting determines the max difference between the primary and the backup demands before transferring back into primary demand control.

Allowed values: 0.0 to 100% Default: 5%

Input Source - *(Non-redundant applications only – 5418-2724, -2725, or -3834 firmware)*

Sets the position demand source as either the PWM input or the Analog input.

Adjustable range: PWM, Analog, CAN – default PWM.

Demand Input Settings Section *(only displayed if configured for Redundant Demand Inputs)***Enable Demand Tracking Fault**

Demand Tracking Fault selector which monitors the two demand inputs and verifies they are tracking each other within the defined window settings. Default: unchecked

Tracking Error Maximum (%) – *(Only displayed if Tracking Error is used)*

Maximum deviation between the primary position demand and the backup position demand. If the Error is exceeded for longer than the Tracking Error Delay, then the Tracking Error Fault is annunciated.

Allowed values: 0% to 100% but must be greater than the Failback Inhibit setting. Default: 10%

Tracking Error Delay (sec) – *(Only displayed if Tracking Error is used)*

Delay for tracking error fault.

Allowed values: 0–10 seconds. Default: 1 second

Switch Control to Backup Demand on Track Error– *(only displayed if Tracking Error is used)*

Determines which demand input to select when the demands differ as determined by the tracking error detection, primary or backup. When checked and a tracking error is detected, selects the backup demand input for positioning and sets the primary demand as failed. When unchecked, selects the primary demand and sets the backup demand as failed.

Default: Unchecked

Position Demand Filter (Low Pass) Section

Use Demand Input Filter (Low Pass)

Check to filter the position demand input. Uncheck to ignore the filter.

Default: Not used.

Filter Cut-off Frequency *(Only displayed if Use Demand Input Filter is selected)*

Sets the position demand filter cut-off frequency.

Adjustable range: 1 to 20 Hz, default 20.

Configure PWM Input

The configure PWM input screen provides settings for the PWM input scaling and fault thresholds.

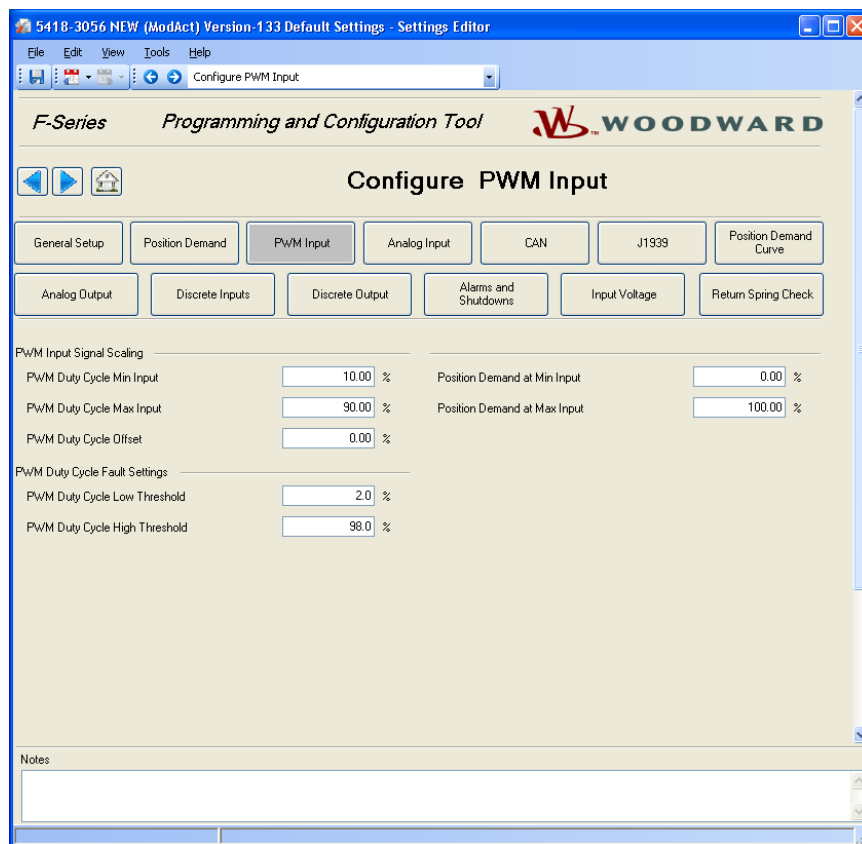


Figure 6-7. Configure PWM Input

PWM Input Scaling Section

PWM Duty Cycle Min Input

Sets the PWM Duty Cycle, in percent that corresponds to the Position Demand at Min Input setting.

Setting the minimum duty cycle higher than the maximum is allowed to provide for a reverse acting signal as needed.

Adjustable range: 5% to 95%, default 10.

PWM Duty Cycle Max Input

Sets the PWM Duty Cycle, in the percent that corresponds to the Position Demand at Max Input setting.

Adjustable range: 5% to 95%, default 90.

PWM Duty Cycle Offset – (Only available in 5418-3055, -3056, -7289, or -7290 and newer)

Duty Cycle offset that is added to the input to compensate for differences from the commanded signal. This setting is provided to compensate for duty cycle variations in PWM input frequencies, voltages, and types. Adjustable range: -20% to +20%, default 0.

Position Demand at Min Input

Scales the position demand, in percent, for the configured PWM Duty Cycle Min Input setting. Adjustable range: 0% to 100%, default 0.

Position Demand at Max Input

Scales the position demand, in percent, for the configured PWM Duty Cycle Max Input setting. Adjustable range: 0 & to 100%, default 100.

PWM Input Scaling Section**PWM Duty Cycle Low Threshold**

Sets the PWM duty cycle, in percent, which triggers a PWM Duty Cycle Low fault indication. Adjustable range: 2% to 50%, default 2.

PWM Duty Cycle High Threshold

Sets the PWM duty cycle, in percent, which triggers a PWM Duty Cycle High fault indication. Adjustable range: 50% to 98%, default 98.

Configure Analog Input

The Configure Analog Input screen provides settings for the analog input type, analog position demand scaling and fault thresholds.

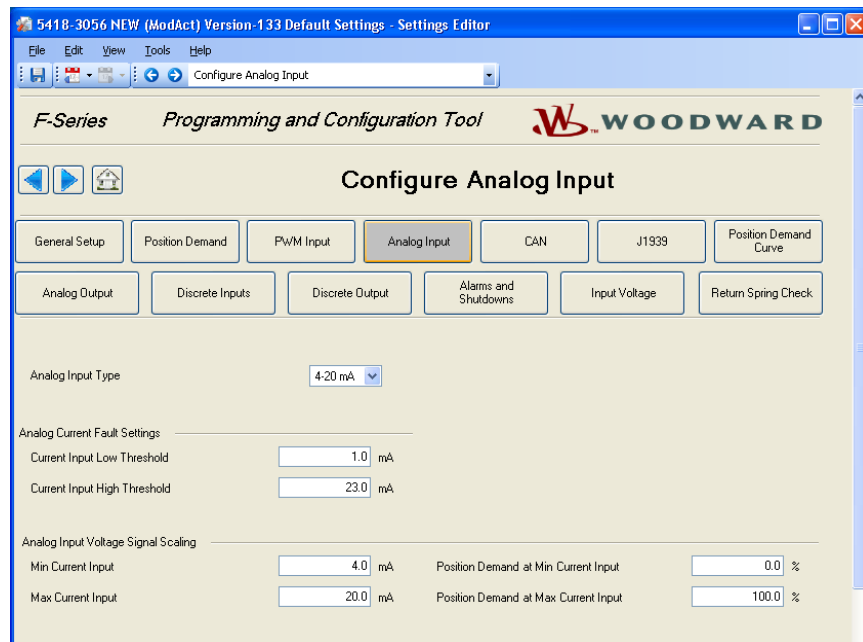


Figure 6-8. Configure Analog Input

Analog Input Type

Sets the position demand analog input type as either a 4 mA to 20 mA input or a 0 V to 5 VDC input. Adjustable range: 0 V to 5 V, 4 mA to 20 mA, default 4 mA to 20 mA.

IMPORTANT

A hardware jumper must be configured to match the analog input type configured in the software. A jumper must be installed between the two 'Analog Input 4 mA to 20 mA Select' pins when a 4 mA to 20 mA analog input is connected and must be removed when a 0 V to 5 VDC analog input is connected.

Analog Input Fault Settings Section**Current Input Low Threshold**

Sets the current, in milliamps, which triggers an analog input low fault indication. Adjustable range: 0 mA to 24 mA, default 1.

Current Input High Threshold

Sets the current, in milliamps, which triggers an analog input high fault indication. Adjustable range: 0 mA to 24 mA, default 23.

Voltage Input Low Threshold

Sets the voltage, in VDC, which triggers an analog input low fault indication. Adjustable range: 0.0 V to 5.0 V, default 0.1.

Voltage Input High Threshold

Sets the voltage, in VDC, which triggers an analog input high fault indication. Adjustable range: 0.0 V to 5.0 V, default 4.9.

Analog Input Signal Scaling Section**Min Current Input**

Sets the current, in milliamps, that corresponds to the Position Demand at Min Current Input setting. Setting the minimum higher than the maximum is allowed to provide for a reverse acting signal as needed. Adjustable range: 0 mA to 24 mA, default 4.

Max Current Input

Sets the current, in milliamps, that corresponds to the Position Demand at Max Current Input setting. Adjustable range: 0 mA to 24 mA, default 20.

Position Demand at Min Current Input

Scales the position demand, in percent, for the configured Min Current Input setting. Adjustable range: 0% to 100%, default 0.

Position Demand at Max Current Input

Scales the position demand, in percent, for the configured Max Current Input setting. Adjustable range: 0% to 100%, default 100.

Min Voltage Input

Sets the voltage, in VDC, that corresponds to the Position Demand at Min Voltage Input setting. Adjustable range: 0.0 V to 5.0 V, default 0.5.

Max Voltage Input

Sets the voltage, in VDC, that corresponds to the Position Demand at Max Voltage Input setting. Adjustable range: 0.0 V to 5.0 V, default 4.5.

Position Demand at Min Voltage Input

Scales the position demand, in percent, for the configured Min Voltage Input setting. Adjustable range: 0% to 100%, default 0.

Position Demand at Max Voltage Input

Scales the position demand, in percent, for the configured Max Voltage Input setting. Adjustable range: 0% to 100%, default 100.

Configure CAN

The Configure CAN screen provides settings for the Controller Area Network (CAN) communications port.

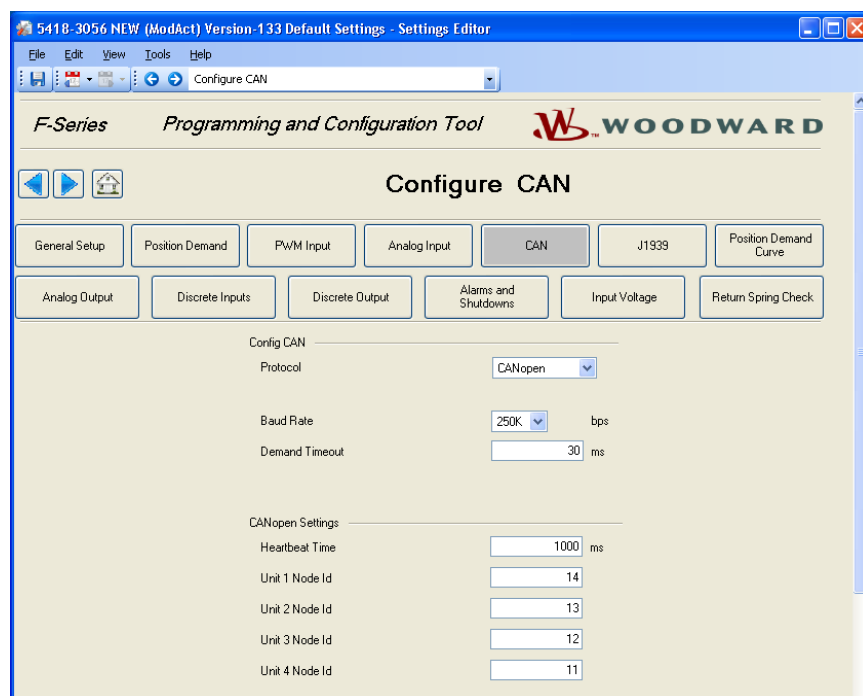


Figure 6-9. Configure CAN Input (CANopen Settings)

The screenshot shows the 'Configure CAN' window in the Woodward F-Series Programming and Configuration Tool. The window has a menu bar (File, Edit, View, Tools, Help) and a toolbar. Below the toolbar is a navigation pane with buttons for General Setup, Position Demand, PWM Input, Analog Input, CAN (selected), J1939, Position Demand Curve, Analog Output, Discrete Inputs, Discrete Output, Alarms and Shutdowns, Input Voltage, and Return Spring Check. The main area is titled 'Configure CAN' and contains the following settings:

- Config CAN:**
 - Protocol: J1939 (dropdown)
 - Baud Rate: 250K (dropdown) bps
 - Demand Timeout: 30 ms (text box)
- CAN/J1939 Settings:**

	Unit 1	Unit 2	Unit 3	Unit 4
Source Address	34	122	123	124
Legacy Messages	Yes	Yes	Yes	Yes
Dynamic Addressing	No	No	No	No
Function Field	255	255	255	255
Function Instance	0	0	0	0
ECU Instance	0	1	2	3

Figure 6-10. Configure CAN Input (J1939 Settings)

Config CAN Section**CAN Protocol**

Sets the CAN protocol. Set to Not Used to completely disable CAN communications or to J1939 or CANopen. Adjustable range: CAN Not Used, J1939, CANopen, default CAN Not Used. The section below will change depending on the protocol choice.

Baud Rate

Sets the CAN baud rate. Adjustable range: 125K, 250K, 500K, or 1000K bps, default 250K.

Demand Timeout

Sets the maximum time, in ms, between receiving the CAN messages which contains the position demand data before a CAN Fault will be annunciated. This setting is valid when the Input Type is set to CAN.

Resolution: 10 ms. Adjustable range: 10–10,000 ms, default 30.

CANopen Settings Section - (only displayed when CANopen is configured)**Heartbeat Time**

Sets the heartbeat producer rate, in ms, for the CANopen Heartbeat object message. Set to zero to disable the heartbeat message. Resolution: 10 ms. Adjustable range: 0–10,000 ms, default 1000.

Unit 1 Node Id

Configures the CANopen Node Id for unit #1 as selected by the CAN ID discrete inputs. Adjustable range: 1-31, default 14.

Unit 2 Node Id

Configures the CANopen Node Id for unit #2 as selected by the CAN ID discrete inputs. Adjustable range: 1-31, default 13.

Unit 3 Node Id

Configures the CANopen Node Id for unit #3 as selected by the CAN ID discrete inputs. Adjustable range: 1-31, default 12.

Unit 4 Node Id

Configures the CANopen Node Id for unit #4 as selected by the CAN ID discrete inputs. Adjustable range: 1-31, default 11.

CAN J1939 Settings Section - *(only displayed when J1939 is configured)*

Example J1939 applications and SAE application information is provided in Appendix B.

Source Address

Sets the J1939 source address for each harness code address (Unit 1-4).

Allowed values: 0-253 Defaults: 34, 122, 123, 124

Legacy Messages

When set to yes, legacy (as used in the initial versions of the F-Series) J1939 messages are used. When set to 'no' the CAN messages are fully configurable with settings provided on the Configure J1939 page. Adjustable range: No, Yes, default Yes.

Dynamic Addressing

When set to Yes, allows dynamic address claiming. The first address attempted is the configured source address. If that fails, claiming attempts continue starting at SA=128 and increasing to SA=160. The first successfully claimed address will be retained and saved so that the next power-up cycle will automatically begin by trying to claim the last successfully saved address.

Adjustable range: No, Yes, default No.

Function Field

Sets the J1939 Name function field for each harness code address (Unit 1-4).

Allowed values: 0-255 Default: 255 (Unspecified)

Function Instance

Sets the J1939 Name function instance for each harness code address (Unit 1-4). Allowed values: 0-31 Default: 0 (First Instance)

ECU Instance

Sets the J1939 Name ECU instance field for each harness code address (Unit 1-4). Allowed values: 0-7 Defaults: 0, 1, 2, 3

Configure J1939

(not available in 5418-2724, 5418-2725, or 5418-3834 firmware versions)

These four pages provide settings for the diagnostics support and data message configuration (SPN, PGN, data location, priority, and update rate). A separate page is provided for each J1939 CAN ID (i.e., Unit 1-4). Configuration is only available for J1939 non-legacy mode.

Examples and detailed explanations are provided in Appendix B. The default values (used only when Legacy mode is not used), correspond as:

- Unit 1: Engine Compressor Bypass – Instance 1
- Unit 2: Engine Throttle Valve – Instance 1
- Unit 3: Engine Fuel Rack
- Unit 4: Engine Turbocharger Wastegate – Instance 1

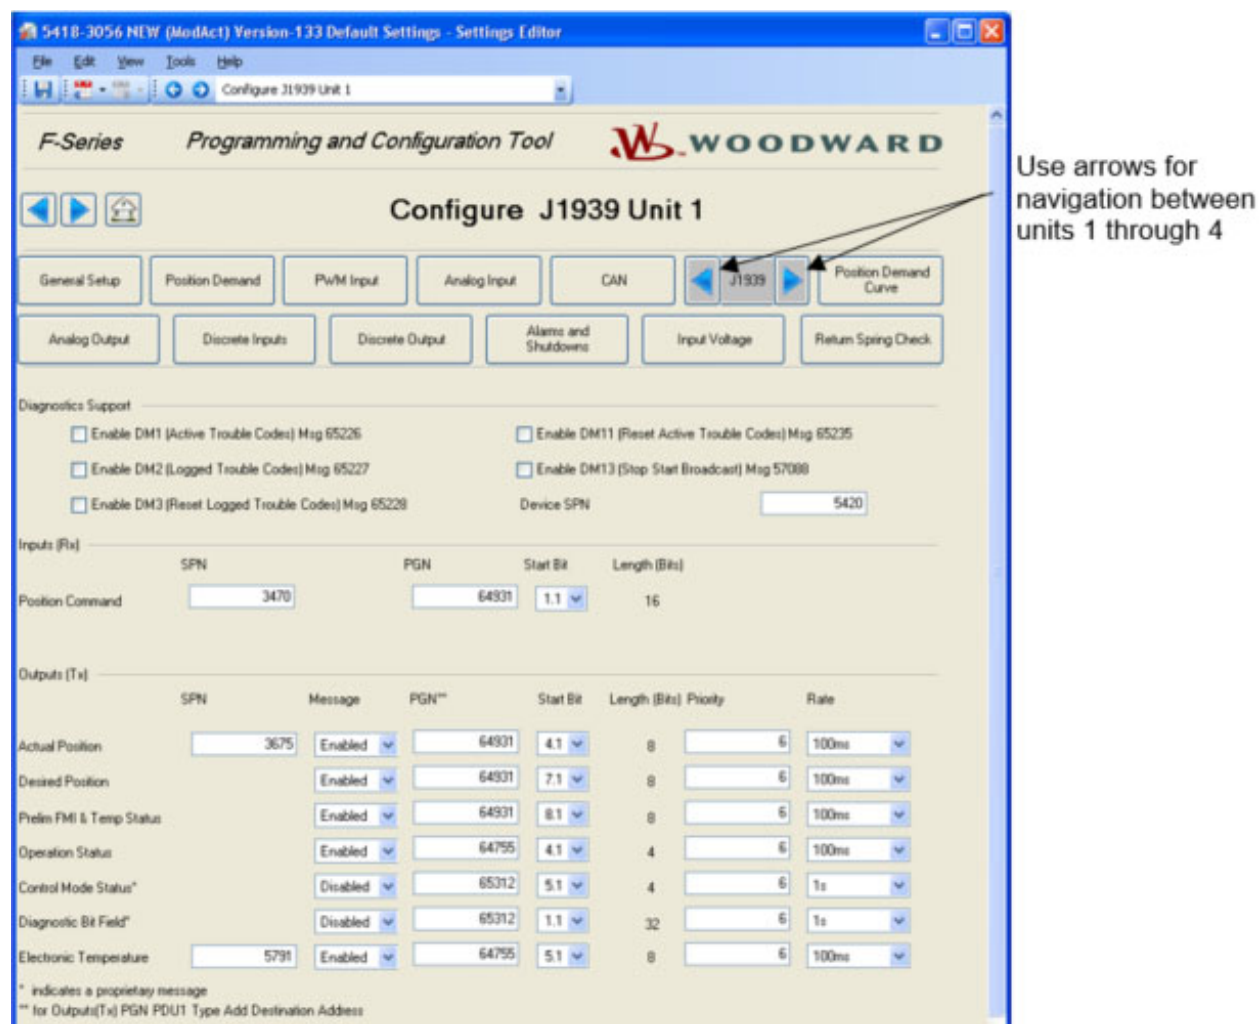


Figure 6-11. Configure CAN J1939

Diagnostics Support Section

Enable DM1 (Active Trouble Codes) Msg 65226

Enables DM1 messages to be sent 1/sec with active diagnostics. Default unchecked.

Enable DM2 (Logged Trouble Codes) Msg 65227

Enables DM2 messages to be sent upon request with previously active diagnostics. Default unchecked.

Enable DM3 (Reset Logged Trouble Codes) Msg 65228

Enables DM3 support for resetting previously active fault history. Default unchecked.

Enable DM11 (Reset Active Trouble Codes) Msg 65235

Enables DM11 support for resetting active faults. Default unchecked.

Enable DM13 (Stop Start Broadcast) Msg 57088

Enables DM13 support for quiet mode to be used typically when programming other devices on the network. Default unchecked.

Device SPN

Sets the device SPN (19-bits) for DM1 and DM2 usage. Used specifically for Internal Fault, Spring check Failed, Configuration Error, Demand Tracking Fault and Loss of Position Demand. Allowed values: 0-524287, should be unique within Unit x. Defaults: 5420, 5419, 5418, 5421

Inputs (Rx) Section

Position Command Settings

These settings are only used when CAN is configured as a primary or backup position demand input (see Configure Position Demand page).

SPN: Allowed values: 0-524287, should be unique within Unit x. Defaults: 3470, 3464, 633, 5386. Used specifically for CAN Demand and CAN Bad Signal errors.

PGN: Allowed values: 0-131071. Shall not be a reserved PGN, see listing in Configuration Check section. Defaults: 64931, 61466, 61466, 61486

Start Bit: Allowed values: 1.1, 2.1, 3.1, 4.1, 5.1, 6.1, 7.1. PGN data must not overlap. Defaults: 1.1, 1.1, 5.1, 1.1

Length: 16

Note: for 5418-7289 and 5418-7290, If CAN demand is used and the received command message PGN is directed globally, the message shall be ignored

Run/Stop Command Settings

These settings are only visible when the Run Enable Input is configured as a CAN input (see Discrete Input page). This is a 2-bit proprietary SPN providing run/stop (Keyswitch) functionality.

PGN: Allowed values: 0-131071. Shall not be a reserved PGN, see listing in Configuration Check section. Defaults: 65312, 65312, 65312, 65312

Start Bit: Allowed values: 1.1, 1.3, 1.5, 1.7, 2.1, 2.3, 2.5, 2.7, 3.1, 3.3, 3.5, 3.7, 4.1, 4.3, 4.5, 4.7, 5.1, 5.3, 5.5, 5.7, 6.1, 6.3, 6.5, 6.7, 7.1, 7.3, 7.5, 7.7, 8.1, 8.3, 8.5, 8.7. PGN data must not overlap. Defaults: 6.1, 6.3, 6.5, 6.6

Length: 2

Outputs (Tx) Section

Actual Position Data Settings

SPN: Allowed values: 0-524287, should be unique within Unit x. Defaults: 3675, 51, 1442, 1188. Used specifically for Position Error.

Message: Values: Disabled, Enabled Default: Enabled

PGN: Allowed values: 0-131071. Shall not be a reserved PGN, see listing in Configuration Check section. Defaults: 64931, 65266, 65153, 65174. For PGN PDU1 type, add destination address under which message shall be sent.

Start Bit: Allowed values: 1.1, 2.1, 3.1, 4.1, 5.1, 6.1, 7.1, 8.1. PGN data must not overlap. Default: 4.1, 7.1, 5.1, 1.1

Length: 8

Priority: Allowed values: 0-7. Priority must be identical within a PGN. Default: 6

Rate: Allowed values: 20 ms, 50 ms, 100 ms, 200 ms, 500 ms, 1 s, 2 s, On Request. Rate must be identical within a PGN. Default: 100 ms

Desired Position Data Settings

Message: Values: Disabled, Enabled Default: Enabled

PGN: Allowed values: 0-131071. Shall not be a reserved PGN, see listing in Configuration Check section. Defaults: 64931, 64754, 65153, 65174. For PGN PDU1 type, add destination address under which message shall be sent.

Start Bit: Allowed values: 1.1, 2.1, 3.1, 4.1, 5.1, 6.1, 7.1, 8.1. PGN data must not overlap. Default: 7.1, 7.1, 7.1, 6.1

Length: 8

Priority: Allowed values: 0-7. Priority must be identical within a PGN. Default: 6

Rate: Allowed values: 20 ms, 50 ms, 100 ms, 200 ms, 500 ms, 1 s, 2 s, On Request. Rate must be identical within a PGN. Default: 100 ms

Prelim FMI & Temp Status data settings**Message:** Values: Disabled, Enabled Default: Enabled**PGN:** Allowed values: 0-131071. Shall not be a reserved PGN, see listing in Configuration Check section. Defaults: 64931, 64754, 64754, 65174. For PGN PDU1 type, add destination address under which message shall be sent.**Start Bit:** Allowed values: 1.1, 2.1, 3.1, 4.1, 5.1, 6.1, 7.1, 8.1. PGN data must not overlap. Default: 8.1, 2.1, 5.1, 7.1**Length:** 8**Priority:** Allowed values: 0-7. Priority must be identical within a PGN. Default: 6**Rate:** Allowed values: 20 ms, 50 ms, 100 ms, 200 ms, 500 ms, 1 s, 2 s, On Request . Rate must be identical within a PGN. Default: 100 ms**Operation Status Data Settings****Message:** Values: Disabled, Enabled Default: Enabled**PGN:** Allowed values: 0-131071. Shall not be a reserved PGN, see listing in Configuration Check section. Default: 64755, 64755, 64754, 64753. For PGN PDU1 type, add destination address under which message shall be sent.**Start Bit:** Allowed values: 1.1, 1.5, 2.1, 2.5, 3.1, 3.5, 4.1, 4.5, 5.1, 5.5, 6.1, 6.5, 7.1, 7.5, 8.1, 8.5 . PGN data must not overlap. Defaults: 4.1, 7.1, 8.1, 2.1**Length:** 4**Priority:** Allowed values: 0-7. Priority must be identical within a PGN. Default: 6**Rate:** Allowed values: 20 ms, 50 ms, 100 ms, 200 ms, 500 ms, 1 s, 2 s, On Request . Rate must be identical within a PGN. Default: 100 ms**Control Mode Data Settings**

Settings for the Control Mode data. This is a proprietary SPN consisting of 4 bits of data.

Message: Values: Disabled, Enabled Default: Disabled**PGN:** Allowed values: 0-131071. Shall not be a reserved PGN, see listing in Configuration Check section. Default: 65312, 65312, 65312, 65312. For PGN PDU1 type, add destination address under which message shall be sent.**Start Bit:** Allowed values: 1.1, 1.5, 2.1, 2.5, 3.1, 3.5, 4.1, 4.5, 5.1, 5.5, 6.1, 6.5, 7.1, 7.5, 8.1, 8.5. PGN data must not overlap. Defaults: 5.1, 1.1, 5.1, 5.1**Length:** 4**Priority:** Allowed values: 0-7. Priority must be identical within a PGN. Default: 6**Rate:** Allowed values: 20 ms, 50 ms, 100 ms, 200 ms, 500 ms, 1 s, 2 s, On Request. Rate must be identical within a PGN. Default: 1 s**Diagnostic Bit Field Data Settings**

Settings for the diagnostics bit data. This is a proprietary SPN consisting of 32 bits of data.

Message: Values: Disabled, Enabled Default: Disabled**PGN:** Allowed values: 0-131071. Shall not be a reserved PGN, see listing in Configuration Check section. Default: 65312, 65312, 65312, 65312. For PGN PDU1 type, add destination address under which message shall be sent.**Start Bit:** Allowed values: 1.1, 2.1, 3.1, 4.1, 5.1. PGN data must not overlap. Defaults: 1.1, 5.1, 1.1, 1.1**Length:** 32**Priority:** Allowed values: 0-7. Priority must be identical within a PGN. Default: 6**Rate:** Allowed values: 20 ms, 50 ms, 100 ms, 200 ms, 500 ms, 1 s, 2 s, On Request. Rate must be identical within a PGN. Default: 1 s

Electronics Temperature Data Settings

SPN: Allowed values: 0-524287, should be unique within Unit x. Default: 5791, 5783, 5785, 5788. Used Specifically for Temperature Sensor Failed, Derating Active (>118 °C), Zero Drive Current (>125 °C)

Message: Values: Disabled, Enabled Default: Enabled

PGN: Allowed values: 0-131071. Shall not be a reserved PGN, see listing in Configuration Check section. Default: 64755, 64713, 64713, 64753. For PGN PDU1 type, add destination address under which message shall be sent.

Start Bit: Allowed values: 1.1, 2.1, 3.1, 4.1, 5.1, 6.1, 7.1, 8.1. PGN data must not overlap. Defaults: 5.1, 1.1, 3.1, 6.1

Length: 8

Priority: Allowed values: 0-7. Priority must be identical within a PGN. Default: 6

Rate: Allowed values: 20 ms, 50 ms, 100 ms, 200 ms, 500 ms, 1 s, 2 s, On Request. Rate must be identical within a PGN. Defaults: 100 ms, 1 s, 1 s, 100 ms

Configure Position Demand Curve

This screen provides position demand curve configuration settings.

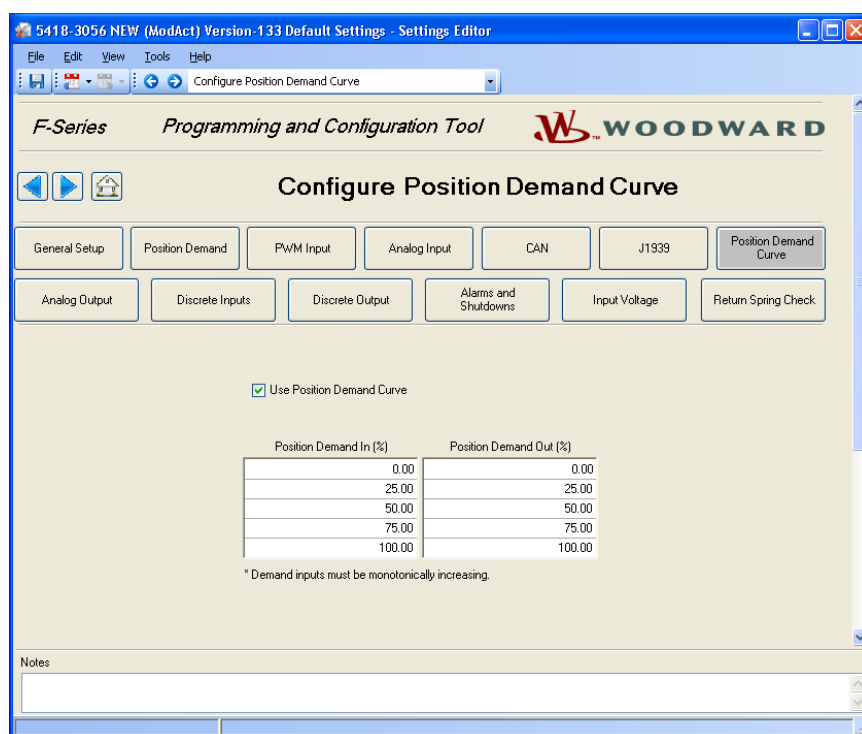


Figure 6-12. Configure Position Demand Curve

Use Position Demand Curve

Check this box to use the position demand curve settings. Uncheck this box to ignore the position demand curve settings. Default: not used.

Position Demand In (%)

Sets position demand input breakpoints (%) for the demand curve. Each breakpoint [5] value must be larger than the previous and less than the next value. Adjustable range: 0% to 100%, must be monotonically increasing. Defaults 0, 25, 50, 75, 100.

Position Demand Out (%)

Sets the position demand output percentage [5] for the configured position demand input breakpoint (%). Adjustable range: 0% to 100%, defaults 0, 25, 50, 75, 100.

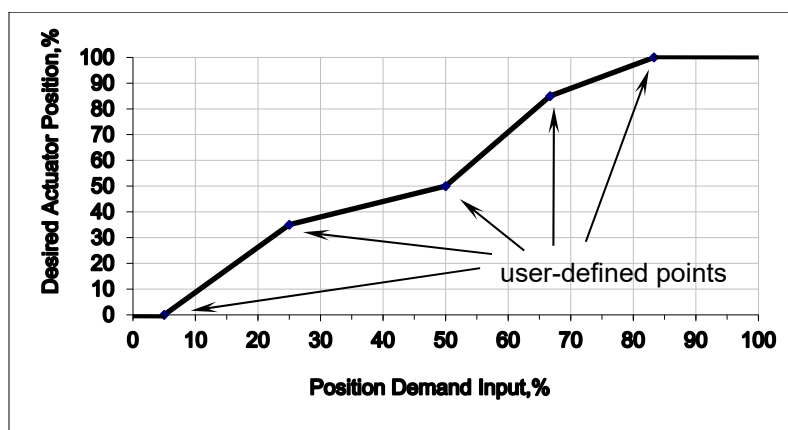


Figure 6-13. Position Demand Curve Example

IMPORTANT

When the optional non-linear position demand curve is configured, the TPS is corrected to account for the effect of the curve, so that the TPS should still normally match the position demand input. Be sure the TPS output (if used) is applied correctly for this configuration.

Configure Analog Output

This screen provides settings for scaling the TPS analog output.

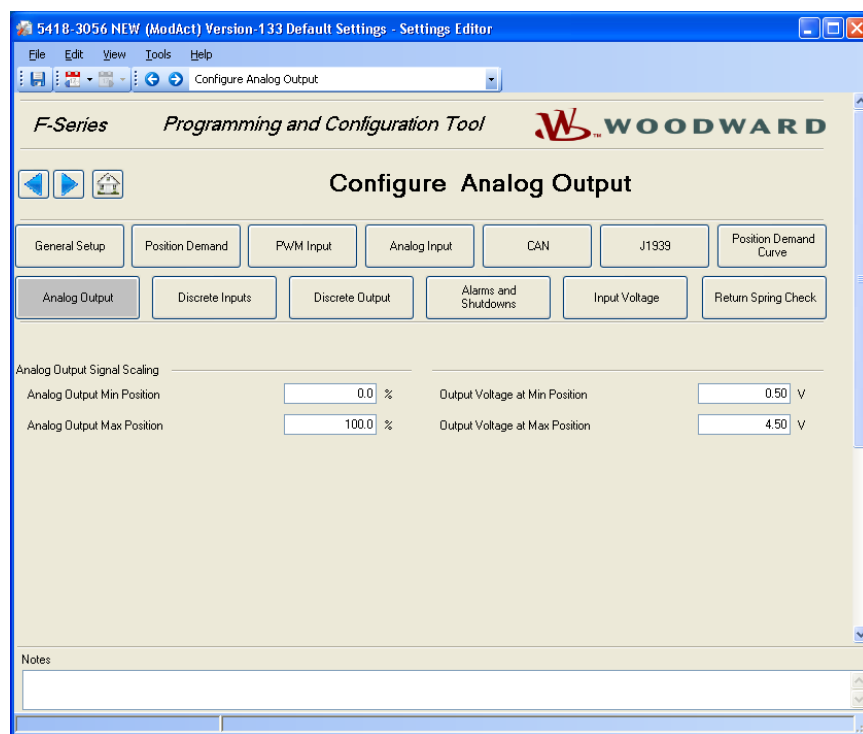


Figure 6-14. Configure Analog Output

Analog Output Min Position

Sets the actuator position, in percent, that corresponds to the Output Voltage at Min Position setting. Adjustable range: 0% to 100%, default 0.

Analog Output Max Position

Sets the actuator position, in percent, that corresponds to the Output Voltage at Max Position setting. Adjustable range: 0% to 100%, default 100.

Output Voltage at Min Position

Scales the output voltage, in VDC, for the configured Analog Output Min Position setting. Adjustable range: 0 V to 4.70 VDC, default 0.5.

Output Voltage at Max Position

Scales the output voltage, in VDC, for the configured Analog Output Max Position setting. Adjustable range: 0 V to 4.70 VDC, default 4.5.

Configure Discrete Inputs

The Configure Discrete Input screen provides settings for the run enable and CAN ID inputs.

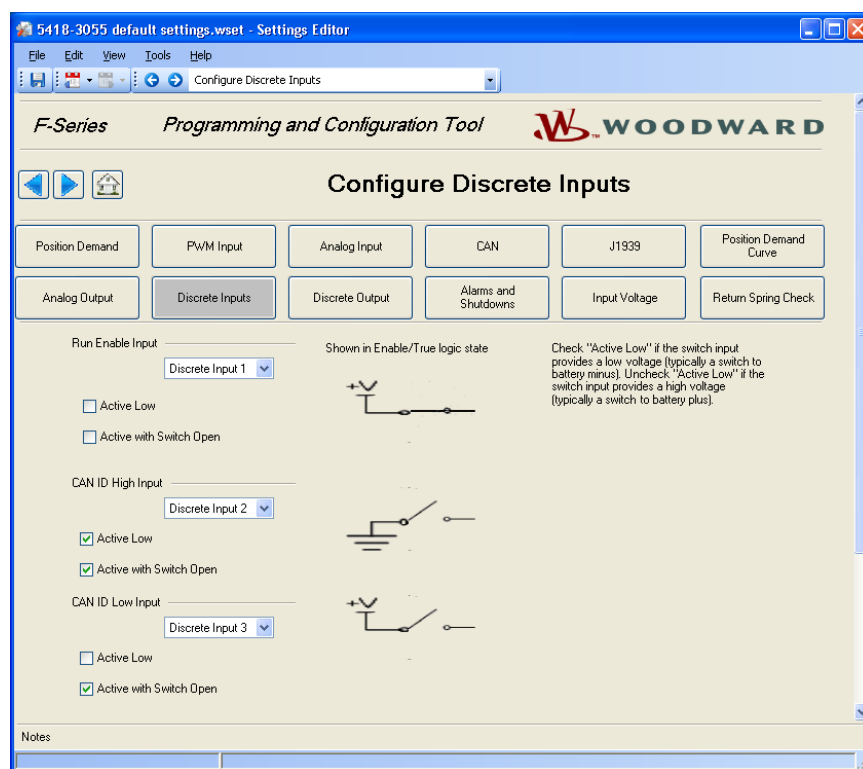


Figure 6-15. Configure Discrete Inputs

Run Enable Input

Sets up the run enable discrete input.

- **Assignment**—Allowed values are Not Used, Discrete Input 1, CAN.
 - **Not Used**—Ignores the run input and sets the software to always run. This is the default setting.
 - **Discrete Input**—Requires input wiring on Discrete Input 1
 - **CAN**—Enable CANopen or J1939 see corresponding configuration pages.
- **Active Low**—Uncheck if the switch input provides a high voltage (typically a switch to battery positive) or check if the switch input provides a low voltage (typically a switch to battery minus).
- **Active with Switch Open**—Uncheck to activate the Run Enable Input with a closed switch contact or check to activate with an open contact.

Default: not used, active high, active closed.

CAN ID High Input

Sets up the CAN ID High discrete input.

- **Assignment**—Allowed values are Discrete Input 2 and Discrete Input 3. Default is Discrete Input 3.
- **Active Low**—Uncheck if the switch input provides a high voltage (typically a switch to battery positive) or check if the switch input provides a low voltage (typically a switch to battery minus).
- **Active with Switch Open**—Uncheck to activate the input with a closed switch contact or check to activate with an open contact.

CAN ID Low Input

Sets up the CAN ID Low discrete input.

- **Assignment**—Allowed values are Discrete Input 2 and Discrete Input 3. Default is Discrete Input 2.
- **Active Low**—Uncheck if the switch input provides a high voltage (typically a switch to battery positive) or check if the switch input provides a low voltage (typically a switch to battery minus).
- **Active with Switch Open**—Uncheck to activate the input with a closed switch contact or check to activate with an open contact.

Default: active high, active closed.

IMPORTANT

The CAN ID discrete inputs are read at power up, changes to configuration settings or input state will not take effect until the next power cycle.

Configure Discrete Output

The Configure Discrete Output screen provides settings for the relay output action and the relay status output selections.

WARNING

It is recommended that the Status Discrete Output be configured for the 'Normally On' mode, to ensure maximum fault protection and annunciation. Failure to follow these guidelines could, under exceptional circumstances, can lead to personal injury and/or property damage.

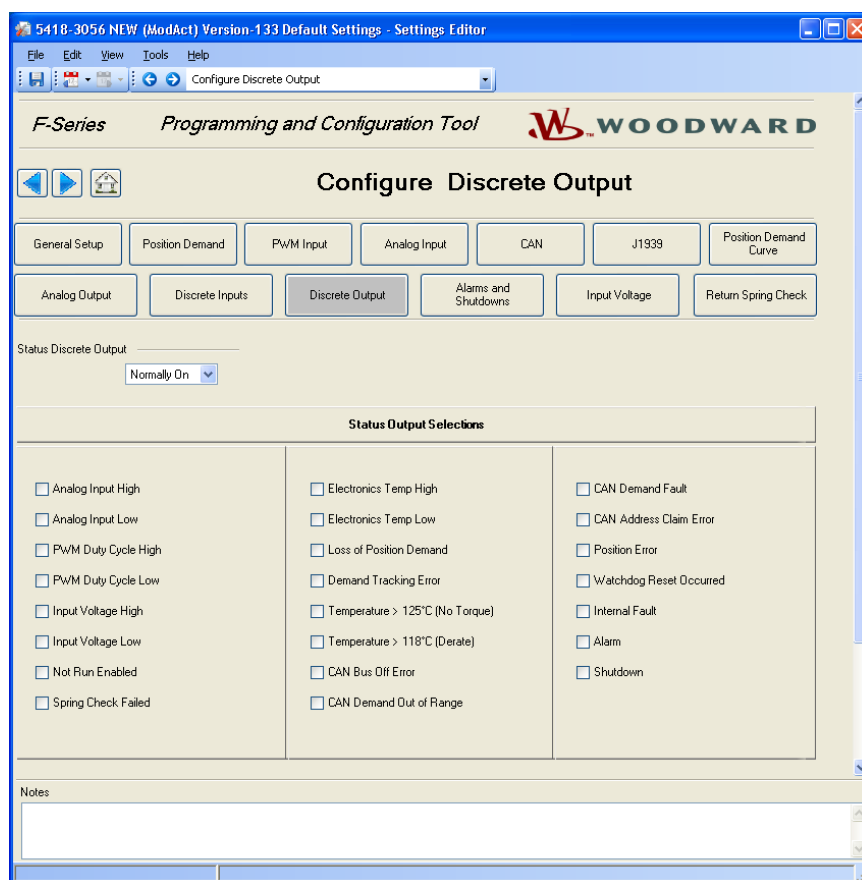


Figure 6-16. Configure Discrete Output

Status Discrete Output

Sets the discrete output action to be Always Off, Normally On, or Normally Off.

- **Normally On**—Sets the relay driver to a normally on state that turns off with any of the selected faults.
- **Normally Off**—Sets the relay driver to a normally off state that turns on with any of the selected faults.

Default = Normally On.

**WARNING**

It is recommended that all faults be configured to activate the Status Discrete Output, this ensures maximum fault annunciation.

Status Output Selections

The list of faults displayed can be individually selected to activate the Status Discrete Output. Any of the selected faults, when faulted, will either turn the output off if configured Normally On or will turn the output on if configured Normally Off. Checking the Alarm and Shutdown boxes will cause the relay output to activate when any selected alarm or shutdown occurs. Default: all options unselected.

NOTICE

Even if the diagnostic condition is not enabled (See Configure Alarms and Shutdowns) it can still operate the Discrete Output.

Configure Alarms & Shutdowns


This screen provides alarm & shutdown configuration settings.



Figure 6-17. Configure Alarms & Shutdowns

Used

For each of the faults from the list, check the Used checkbox to use the adjacent fault condition as either an alarm or shutdown. Uncheck the Used checkbox to ignore the adjacent fault condition.

 WARNING	<p>It is recommended that all faults be used and configured as shutdowns to ensure maximum fault protection.</p>
--	---

Alarm (Checked) or Shutdown (Unchecked)

Set the desired action for each of the used faults from the list (unused faults are ignored). Adjustable range: Alarm, Shutdown

- Check to set the fault condition as an alarm. Setting the selection as an Alarm allows the unit to attempt to continue running.
- Uncheck to set the fault condition as a shutdown. Setting the selection as a Shutdown will position the output in the configured position upon fault. The Modular actuator shutdown position is user configurable. The FST and FSTP shutdown position is factory configured only.

For details on each fault condition, refer to the Fault section of the Description of Operation, Chapter 4.

Configure Input Voltage

The Configure Input Voltage screen provides settings for the input voltage fault settings.

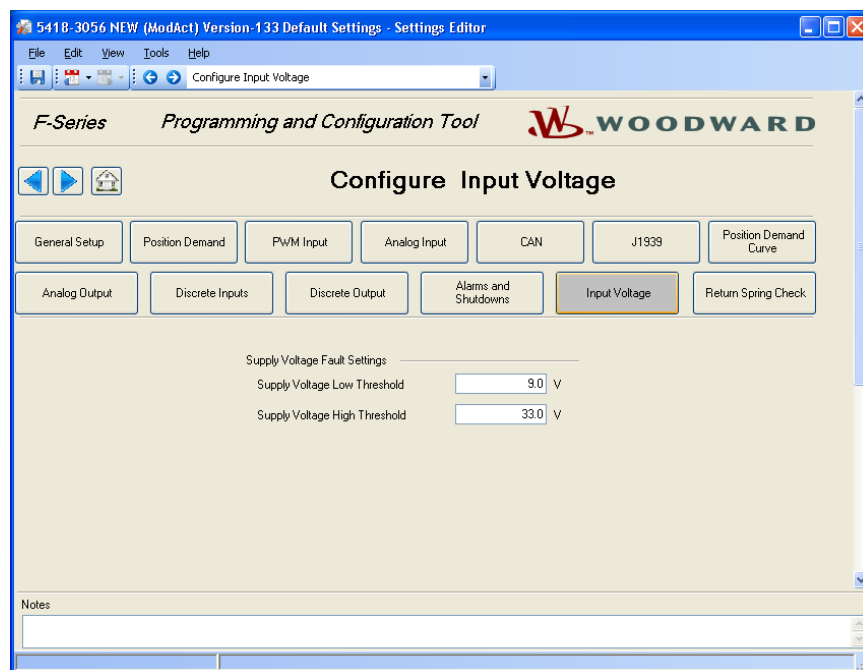


Figure 6-18. Configure Input Voltage

Supply Voltage Low Threshold

Sets the voltage, in VDC, which triggers an input voltage low fault indication.
Adjustable Range: 6 V to 18 VDC, default 9.

Supply Voltage High Threshold

Sets the voltage, in VDC, which triggers an input voltage high fault indication.
Adjustable Range: 12 V to 36 VDC, default 33.

Configure Return Spring Check

This screen provides the return spring check configuration settings.

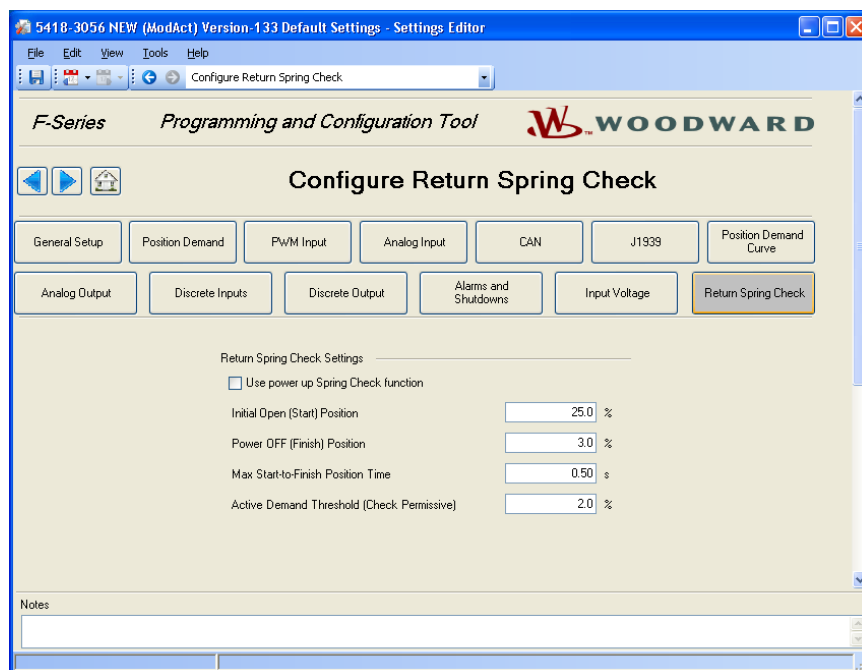


Figure 6-19. Configure Return Spring Check

Use Power-up Spring Check Function

Check this box to use the spring check function.

Uncheck this box to ignore the spring check function.

Default: not used.

Initial Open (Start) Position

Sets the initial position (%) the output shaft moves to at power up. This is also the position used to 'Start' the spring check function.

Adjustable range: 0% to 100%, default 25.

Power OFF (Finish) Position

Sets the final position (%) to which the output shaft must return when powered off. Adjustable range: 0% to 100%, default 3.

Max Start-to-Finish Position Time

Sets the duration (sec.) for the spring check function from 'Start' to 'Finish'. Adjustable range: 0.05 to 5.00 seconds, default 0.5.

- The spring check status displayed on the Overview screen will show 'Passed' if the 'Finish' position is reached before this time expires.
- The spring check status displayed on the Overview screen will show 'Failed' if the 'Finish' position is not reached before this time expires or if the 'Start' position is not reached in 200 ms or less.

Active Demand Threshold (Check Permissive)

Sets the level at which the position demand (%) is considered valid. If a valid position demand is present (above the threshold level) the actuator will immediately follow the position demand and ignore the spring check function. The spring check status will show 'Not Performed'.

If the application is spring 'open', it is assumed the demand will normally be at 100% position command. In this case the Active Demand Threshold/Permissive must be set to a value greater than the Initial Open (Start) Position (98%) and the position demand must be greater than this setting at power up to permit the spring check test to run. Adjustable range: 0% to 100%, default 2.

Save the Configuration Settings File

Once all configuration settings have been made in the Settings Editor, click 'File' on the Settings Editor menu bar and select 'Save' to overwrite the existing Settings File or select 'Save As' to create a new configuration Settings File. You will be prompted for a new file name.

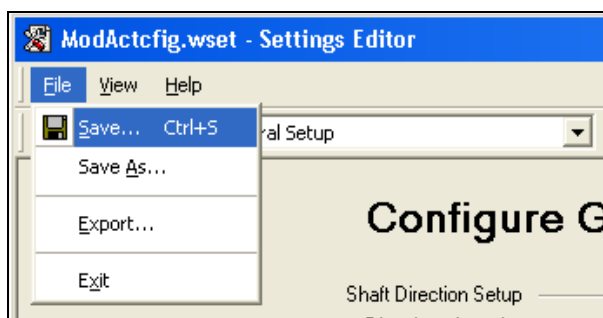


Figure 6-20. Select Save As

Load the Configuration Settings to the Control

Once all configuration settings have been saved to a Settings File, the settings can be loaded to the F-Series control. From the main tool, select 'settings' then 'Load Settings File to Device' on the F-Series Service Tool menu bar. This will start a wizard to assist in the loading process.

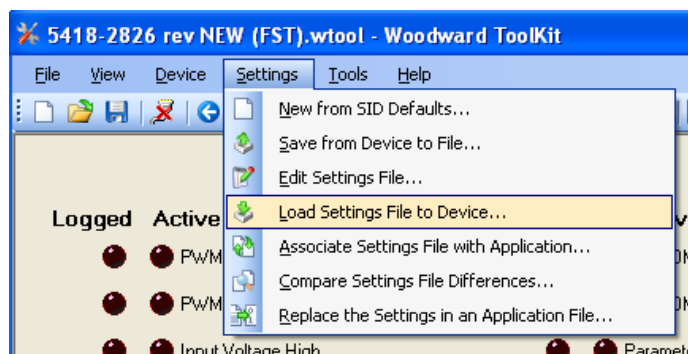


Figure 6-21. Settings - Load Settings File to Device

A Load Settings window opens (Figure 6-21). After the settings have been loaded into the control and saved, they are checked. If no issues are found, a successful load message is displayed (Figure 6-19). Configuration Error and Configuration Warning messages indicate settings that must or should be addressed, respectively (Figure 6-28). A configuration error is a shutdown condition, and the F-Series will not run until the problem is corrected. A configuration warning is indicating a problem with the settings but not severe enough to prohibit operation of the device. Configuration check details are provided in the next section.

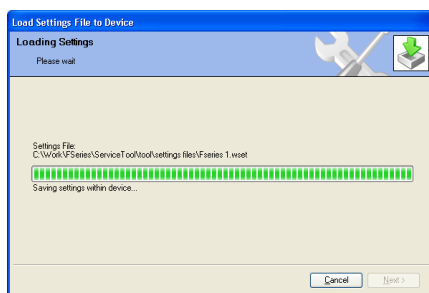


Figure 6-22. Load Settings Window

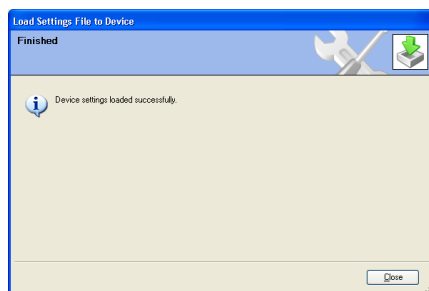


Figure 6-23. Load Settings Finished – No Errors

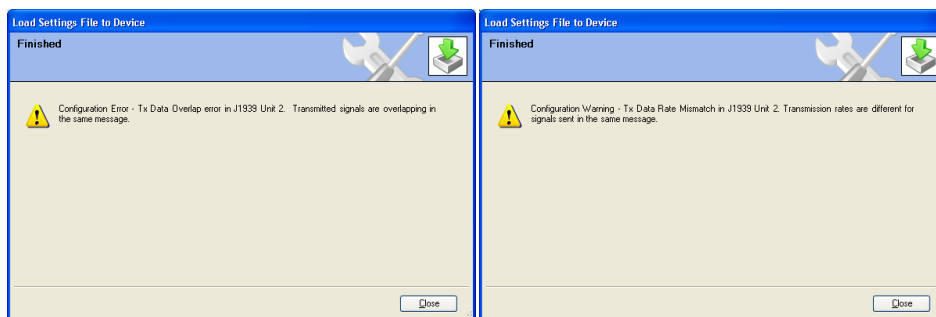


Figure 6-24. Load Settings Error Dialog

Configuration Checks (Errors and Warnings)

This section contains a complete listing of the configuration errors and warnings provided in the F-Series. When settings are loaded into the control, they are sanity checked for validity. If issues are discovered with the settings, they are indicated as either an Error or a Warning. An error condition sets a Configuration Error shutdown diagnostic fault, and the unit will not run until this is corrected. A warning condition indicates something that should be addressed but is not severe enough to prevent device operation. Status of the Configuration Warning is provided on the Overview tab in the Status Conditions section.

Table 6-1. Configuration Check Summary

Configuration Error:	Rx PGN error in J1939 Unit x
Configuration Error:	Rx Data Overlap error in J1939 Unit x
Configuration Error:	Tx PGN error in J1939 Unit x
Configuration Error:	Tx Data Overlap error in J1939 Unit x
Configuration Warning:	Tx Data Rate Mismatch in J1939 Unit x
Configuration Warning:	Tx Priority Mismatch in J1939 Unit x
Configuration Warning:	SPN Duplication in J1939 Unit x
Configuration Warning:	Rx PGN Invalid in J1939 Unit x

Configuration check details are listed below. A configuration error is a shutdown condition, and the F-Series will not run until the problem is corrected. A configuration warning is indicating a problem with the settings but not severe enough to prohibit operation of the device. When multiple errors exist, only one is displayed at a time. Configuration errors have priority over warnings.

Each CAN Unit (1-4) is checked individually. Since only one set of CAN data is active at a time, all configuration checks are within a specific unit's settings - not unit-to-unit. Messages that are disabled are not checked. Selecting legacy mode (see Configure CAN) removes the CAN configurability and eliminates configuration issues for that unit.

Reserved PGN Listing

The following PGNs are not allowed:

- *60928 (0xEE00) reserved for Address Claimed
- 65226 (0xFECA) reserved for DM1 - Active Diagnostic Trouble Codes
- 65227 (0xFECE) reserved for DM2 - Previously Active Diagnostic Trouble Codes
- 65228 (0xFECC) reserved for DM3 - Diagnostics Data Clear/Reset for Previously Active DTCs
- 65235 (0xFED3) reserved for DM11 - Diagnostic Data Clear/Reset for Active DTCs
- *57088 (0xDF00) reserved for DM13 - Stop Start Broadcast
- *60416 (0xEC00) reserved for Transport Protocol – Connection Management
- *60160 (0xEB00) reserved for Transport Protocol – Data Transfer
- *59904 (0xEA00) reserved for PGN Request Message
- *59392 (0xE800) reserved for Acknowledgment Message
- 65242 (0xFEDA) reserved for Software Identification
- 64965 (0xFDC5) reserved for ECU Identification Information

*No PDU Specific values are allowed for the selected PDU Format. For example, values of 60928 through 61183 (0xEE00..0xEEFF) are all PGNs that are prohibited and will result in a configuration error.

NOTICE

All Configuration Errors should be corrected. Failure to correct all errors can result in a latent shutdown condition.

In addition, it is good practice to correct all Configuration Warnings.

Configuration Check Details

1. **Configuration Error - Rx PGN error in J1939 Unit x. Configured PGN in received frame is a reserved one.**

The reserved PGN listing is provide above. Selecting a PGN included in this listing will result in a configuration error.

2. **Configuration Error - Rx Data Overlap error in J1939 Unit x. Start bit settings result in signals that overlap in the same message.**

Indicates that the Position Command and Run/Stop Command are in the same message and are overlapping based on the start bit settings. This condition results in a configuration error.

3. **Configuration Error - Tx PGN error in J1939 Unit x. Configured PGN in transmitted frame is a reserved one.**

Selecting a PGN from the reserved PGN listing (provided above) will result in a configuration error.

4. **Configuration Error - Tx Data Overlap error in J1939 Unit x. Transmitted signals are overlapping in the same message.**

An overlap of data within a PGN is prohibited and will result in a configuration error. The start bit selects the location of the data within the PGN's 8-byte (64 bit) message. The format used for the start bit is byte.bit with a range of 1-8. Data length values are provided on the settings editor screen (see Configure J1939 Unit 1..4). As an example, the 8-bit actual position indication with start bit 4.1 would occupy the 4th byte of the data message (4.1 through 4.8).

5. **Configuration Warning - Tx Data Rate Mismatch in J1939 Unit x. Transmission rates are different for signals sent in the same message.**
The data rates within any PGN must be the same or will result in a configuration warning. The settings should be corrected to ensure the expected update rate is used.
6. **Configuration Warning - Tx Priority Mismatch in J1939 Unit x. Priority settings are different for signals sent in the same message.**
The priority settings within any PGN must be the same or will result in a configuration warning. The settings should be corrected to ensure the expected message priority value.
7. **Configuration Warning - SPN Duplication in J1939 Unit x. Configured SPN values are not unique.**
Within each CAN unit (1-4), all SPN values should be unique or will result in a configuration warning. The SPN values are used in the DM1 and DM2 diagnostic messages.
8. **Configuration Warning - Rx PGN Invalid in J1939 Unit x. Receive Data PGN is PDU 1 type but with specified address. Do not specify the address for Rx PGNs.**
The receive PGN is invalid for a PDU1 type message. Note that PDU1 Format range is 0-239 (0xEF) and PDU2 format range is 240-255. Selecting a PDU1 type PGN requires the PDU Specific field to be 0. Selection of a value other than zero will result in a configuration warning when a PDU1 type is set.

Exporting the Settings File Configuration

A Settings File configuration can be exported to an *.htm document file (e.g., FSTcfig.htm). This provides for listing the configuration settings, printing a hard copy of the settings, or e-mailing the control settings.

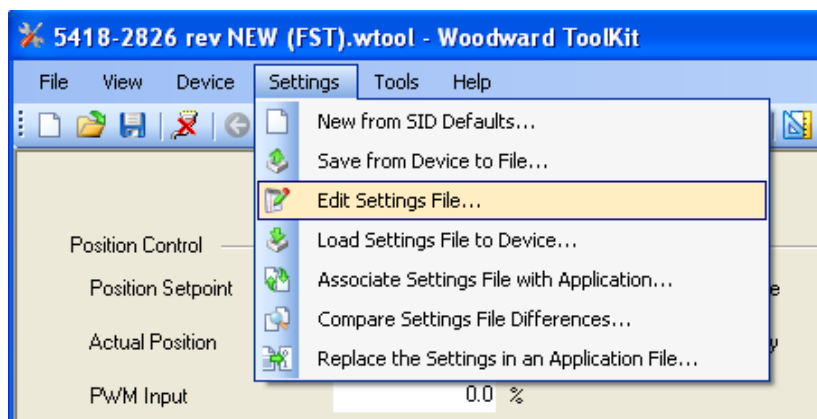


Figure 6-25. Edit Settings File

To select settings file to be exported, from the main tool, select 'Settings' then 'Edit Settings File' on the F-Series Service Tool menu bar and choose proper settings file.

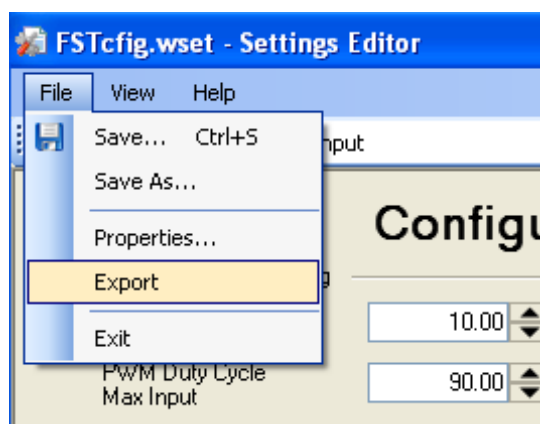


Figure 6-26. Save - Export

Once the Settings Editor screen opens, select "File, Export" on the menu bar. The export format can be selected as either hierarchical or tabular. Select Browse for the file name and location selection window. Select Close to cancel.

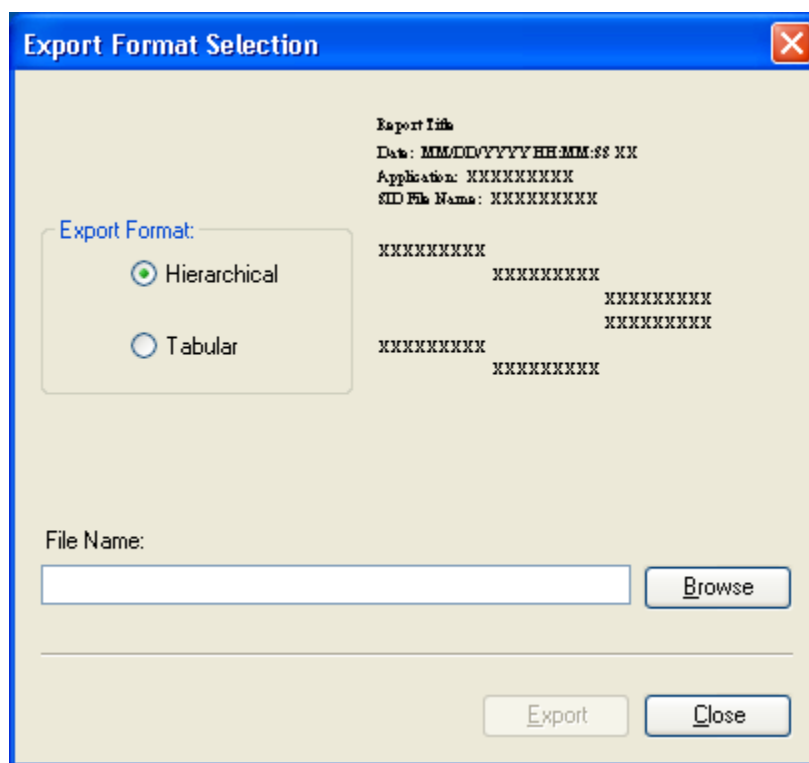


Figure 6-27. Export Format Selection

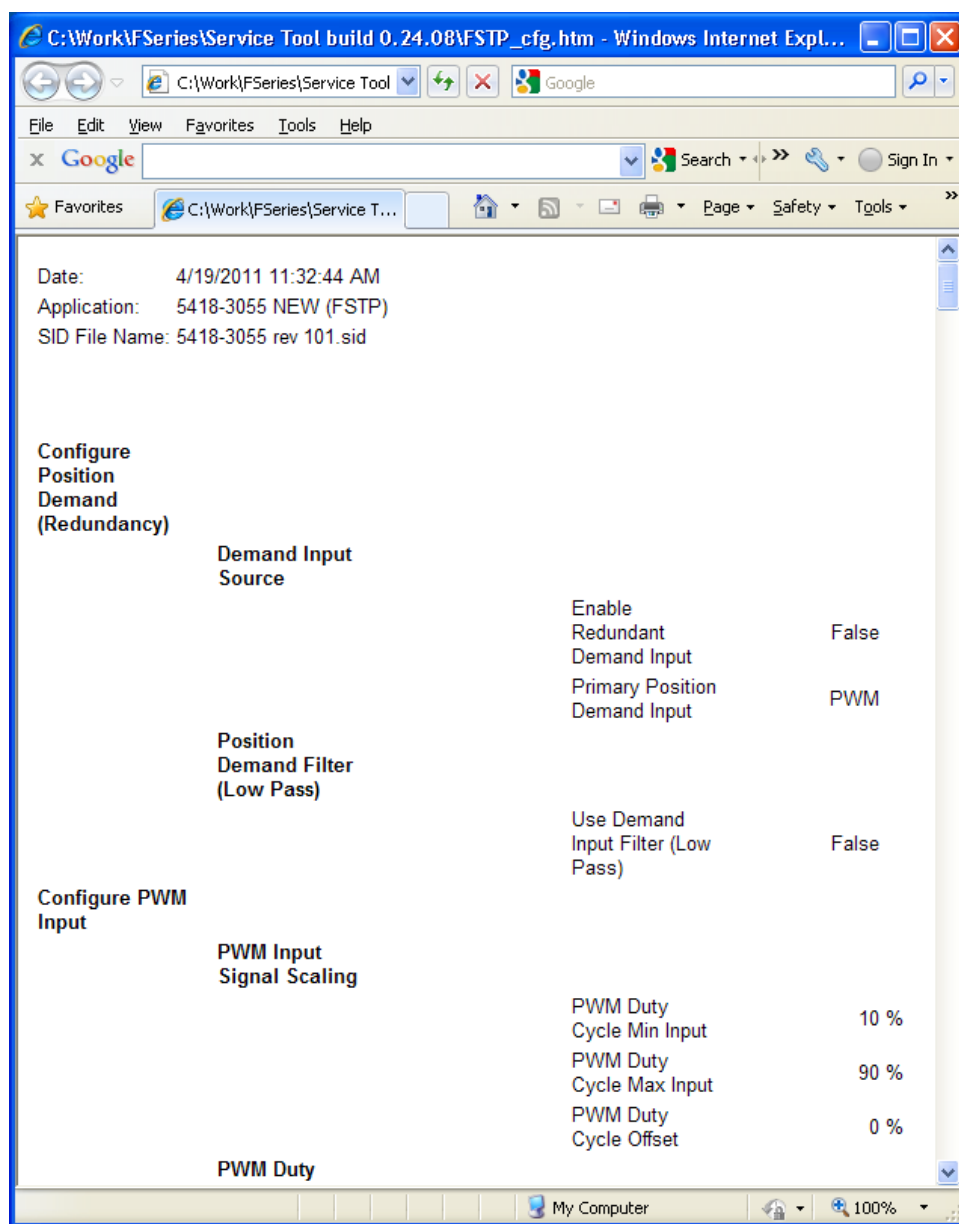


Figure 6-28. Configuration Document Hierarchical Example

Date: 4/19/2011 11:35:04 AM
 Application: 5418-3055 NEW (FSTP)
 SID File Name: 5418-3055 rev 101.sid

Configure Position Demand (Redundancy)	Demand Input Source	Enable Redundant Demand Input	False
Configure Position Demand (Redundancy)	Demand Input Source	Primary Position Demand Input	PWM
Configure Position Demand (Redundancy)	Position Demand Filter (Low Pass)	Use Demand Input Filter (Low Pass)	False
Configure PWM Input	PWM Input Signal Scaling	PWM Duty Cycle Min Input	10 %
Configure PWM Input	PWM Input Signal Scaling	PWM Duty Cycle Max Input	90 %
Configure PWM Input	PWM Input Signal Scaling	PWM Duty Cycle Offset	0 %
Configure PWM Input	PWM Duty Cycle Fault Settings	PWM Duty Cycle Low Threshold	2 %
Configure PWM Input	PWM Duty Cycle Fault Settings	PWM Duty Cycle High Threshold	98 %

Figure 6-29. Configuration Document Tabular Example

Chapter 7. Troubleshooting

Introduction

This chapter presents several broad categories of application failures typically experienced in the field, possible causes, and some tests used to verify the causes. Because the exact failure experienced in the field is the product of the mechanical/electrical failure combined with the configuration file resident in the control, it is left as the OEM's responsibility to create a more detailed troubleshooting chart for the end user. Ideally, this end-user troubleshooting chart will contain information about mechanical, electrical, engine, and load failures in addition to the possible actuator failures.

The troubleshooting scenarios listed below assume that the end user has a digital multi-meter at his disposal for testing voltages and checking continuity, and that the application has been engineered and tested thoroughly.

There are four parts to the troubleshooting section:

- General Troubleshooting
- Engine/Generator Troubleshooting
- Alarm/Shutdown Diagnostic Flags Troubleshooting
- Input/Output (I/O) Troubleshooting

WARNING

The actions described may not be appropriate for all situations. The operator should verify that any actions taken while troubleshooting will not take equipment outside of specification and will not damage property or result in dangerous situations. Also check with the local safety authority.

WARNING

The engine should be equipped with an overspeed shutdown device to protect against runaway or damage to the engine with possible personal injury, loss of life, or property damage.

The overspeed shutdown device must be totally independent of the engine control system. An over temperature or overpressure shutdown device may also be needed for safety, as appropriate.

CAUTION

Due to typical noise levels in engine environments, hearing protection should be worn when working on or around the F-Series actuator.

CAUTION

The surface of this product can become hot enough or cold enough to be a hazard. Use protective gear for product handling in these circumstances. Temperature ratings are included in the specification section of this manual.

General System Troubleshooting Guide

The following is a general troubleshooting guide for areas to check which may present potential difficulties. By making these checks appropriate to your engine/turbine before contacting Woodward for technical assistance, your system problems can be more quickly and accurately assessed.

- Is the wiring correct?
- Is the direction of the stroke correct?
- Is the direction of the failsafe shutdown correct?
- Does the linkage/valve move through its proper stroke smoothly?
- Does the linkage/valve travel its full stroke?
- Can mid-stroke be obtained and held?
- Does the valve fully seat (closed)?
- Does the valve fully open?

Engine/Generator Troubleshooting

Table 7-1. Engine/Generator Troubleshooting Chart

Problem	Possible Cause	Suggested Test/Correction
Engine does not start.	Power not applied to control	Test for +12/24 V between +12/24 V pin and ground pin.
	Run Enable not closed	Verify status of input. Measure input. Verify input and configuration using Service Tool.
	Incorrect configuration in control	Using Service Tool, read configuration from control and evaluate parameters for correction.
	Fault detected in control.	Using Service Tool, read faults from control. Verify/correct any shutdown conditions.
	Stuck throttle/frozen shaft	Move throttle by hand. Assess smoothness, friction, and return spring force.
The actuator is not opening the control valve during engine cranking.	No demand input is present at the actuator.	Verify Demand input from controller.
	The control is configured for the wrong opening direction.	Check linkage setup.
	The Run Enable input is not enabled.	Make sure the run enable input, if configured for use, is made active. Check wiring.
	The control has detected a shutdown situation and has not been reset.	Reset the control by cycling power to the control, hitting reset on the Service Tool, or toggling the run enable switch.
	There is no power supplied to the control.	Check fuse, wiring, and battery voltage.
The engine over speeds on start-up.	The control is setup for the wrong opening direction.	Check linkage setup.
	Speed setting too high within the controlling speed control.	Verify speed control setpoint
	Improper configured valve position relative to demand input.	Verify valve demand configuration.
	An overshoot in speed is caused by speed control.	Speed control dynamic settings or acceleration ramp rate are overly responsive. Tune the speed control
	The overspeed trip level is set incorrectly.	Verify the overspeed trip setting.

Problem	Possible Cause	Suggested Test/Correction
Engine starts but shuts down on error.	Error detected by control.	Verify the exact cause of the error using the Service Tool.
Unable to develop full power.	Non-indexed linkage slipped on shaft.	Manually verify full travel of throttle plate.
	Fault detected in control.	Using Service Tool, view status of fault codes. Take appropriate action for active faults.
	Improper configured valve position relative to demand input.	Verify position settings within the configuration file.
Not controlling at desired position setpoint.	PWM input signal inaccuracy.	Measure input duty cycle and convert to percentage. Verify controller signal using Service Tool. If different, adjust the PWM input scaling in the Settings Editor.
	Wiring fault or ground loop.	Check the wiring. Look for loose connections and disconnected or misconnected cables and connections. Remove all wiring except the position demand and power input and verify operation/functionality.
	Analog input signal inaccuracy.	As applicable, measure the analog demand voltage or current to verify that it is at the expected value in the range of 0 to 5 V or 4 mA to 20 mA. Use the Service Tool to verify that analog input is being read correctly.
	Output shaft is bound or sticking.	Move output shaft by hand. Assess smoothness, friction, and return spring force.
	Incorrect dynamics / Incorrect position calibration.	Follow the procedures in chapter 6 for verifying both the dynamics and the position calibration
	Scaling mismatch.	Verify the value of the position setpoint using the Service Tool. Verify the configured scaling of the demand inputs.
	Running on backup demand.	Verify the demand source using the Service Tool.
Discrete output not working.	Wiring fault.	Check the wiring leading to pin 23 for open connections or misconnections. Verify that pin 23 is not connected directly to input power or ground.
	Configuration.	Using the Service Tool, verify that the faults and shutdowns are selected properly and that the output is configured for expected operation (either normally "on" or normally "off").

Problem	Possible Cause	Suggested Test/Correction
Service Tool not communicating—'Establishing Connection on Com x' status indicated.	Power not applied to control.	Disconnect starter motor solenoid. Disconnect harness from actuator. Test for +12/24 V between +12/24 V pin and ground pin.
	Wiring fault.	Check pins TTL TX, TTL RX and Ground for loose or misconnected wiring connections.
	Incorrect cable used or converter missing.	Converter interconnect cable must be straight-through and have all 9 pins connected. In-line TTL to RS-232 converter required. See Chapter 5 for details.
	The Service Tool is disconnected.	Verify harness setup and connections (see Chapter 4). Check that Service Tool is running. Check fuse, wiring, and battery voltage.
	The wrong communication port has been selected.	Connect the Service Tool by using the connect icon or 'Device Connect' menu selection. Verify the port setting is correct.
Service Tool not communicating—'Error message displayed on PC when trying to connect.	Old version of Service Tool or file corruption or bad install.	Re-install Service Tool. Get the latest version from the Woodward web site (www.woodward.com/software).
Power supply fluctuation (if using a switching power supply instead of battery power).	Flyback energy on the Batt(+) input can interfere with some switching power sources.	Add a forward-biased power diode in series with the Batt(+) input of the F-Series. Use at least a 6 A, fast recovery diode.

Troubleshooting Diagnostic Fault Flags

Table 7-2. Troubleshooting Diagnostic Fault Flags

Error Flag	Description	Possible Source	Possible Action
Analog Input High	The analog input is higher than the configured diagnostic limits.	Analog input is driven outside of the diagnostic high limit.	Check signal and fix incorrect signal level.
		Diagnostic limit is setup incorrectly.	Set correct diagnostic limit in the F-Series control.
		Analog wiring is shorted to a power source like the battery plus.	Correct wiring problem.
		Jumper setting is wrong for the input type.	Add or remove the jumper to match the input signal type.

Error Flag	Description	Possible Source	Possible Action
Analog Input Low	The analog input is lower than the configured diagnostic limits.	Analog input is driven outside of the diagnostic low limit.	Check signal and fix incorrect signal level.
		Diagnostic limit is set up incorrectly.	Set correct diagnostic limit in the F-Series control.
		Analog wiring is shorted to a low signal like battery minus.	Correct wiring problem.
		Analog signal wiring is lost.	Correct wiring connection.
		The control that is driving the analog input is turned off or damaged.	Turn on control or check external controls manual for troubleshooting.
		Jumper setting is wrong for the input type.	Add or remove the jumper to match the input signal type.
Input Voltage High	The power supply voltage is higher than the configured diagnostic limits.	Bad or damaged battery.	Replace battery.
		Defective battery charging system.	Fix battery charging system.
		Incorrect settings of power supply voltage level.	Set correct voltage levels on power supply.
Input Voltage Low	The Power supply voltage is lower than the configured diagnostic limits.	Defective battery charging system.	Fix battery charging system.
		Power supply wiring too long or too thin. Control will flag low voltage during higher power uses.	Make sure wiring is of the correct thickness and length according to manual.
		Incorrect setting of power supply voltage levels.	Set correct voltage levels on power supply.
Electronics Temperature High	The temperature inside the control is higher than allowed by specifications.	The F-Series actuator has been placed in an environment that is too hot.	Lower temperature by adding cooling, heat shielding, moving the unit, etc.
		The internal temperature sensor is defective. Check the temperature of the unit and compare this to the Service Tool value of the electronics temperature to determine this.	Return unit to Woodward for repair.
Electronics Temperature Low	The temperature inside the control is lower than allowed by specifications.	F-Series actuator has been placed in an environment that is too cold.	Increase temperature by adding heat.
		The internal temperature sensor is defective. Check the temperature of the unit and compare this to the Service Tool value of the electronics temperature to determine this.	Return unit to Woodward for repair.
Not Run Enabled	Control detected that the Run Enable discrete in is not active.	Incorrect or intermittent wiring problem.	Check wiring for bad or lost connection.
		Incorrect configuration.	Verify configuration. Check Run Enable Input setting. Active Open or Active Closed setting and Active Low or High settings.
Position Error	Indicates demanded position and the actual position are outside hard coded diagnostic limits.	Binding or excessive friction in the actuator linkage, or stops are set inside the desired range of travel.	Check all mechanical linkages and stops.

Error Flag	Description	Possible Source	Possible Action
Demand Tracking Error	The configured demand signals are not tracking each other within the configured tolerances.	Incorrect configuration. Inputs invalid or failed.	Check configuration of demand tracking.
		Demand signals not matching, incorrectly sent or scaling problem.	Verify demand inputs in Service Tool. Make sure they are tracking each other.
		Device not sending demand signals that track each other.	Correct signals to ensure they track within configured limits.
		Incorrect configuration.	Verify configuration. Check Demand Tracking settings.
Loss of Position Demand	All configured position demand signals have been detected as out of range or failed.	Incorrect configuration.	Check configuration of demand selection.
		Inputs invalid or failed.	Check troubleshooting of each input below (e.g. PWM Input Fault)
PWM Duty Cycle High	The PWM Duty Cycle is higher than the configured diagnostic limits.	PWM Duty Cycle is driven outside of the diagnostic high limit.	Check signal and fix incorrect signal level.
		Diagnostic limit is setup incorrectly.	Set correct diagnostic limit in the F-Series control.
PWM Duty Cycle Low	The PWM Duty Cycle is Lower than the configured diagnostic limits.	PWM Duty Cycle is driven outside of the diagnostic low limit. Incorrect or intermittent wiring problem.	Check signal and fix incorrect signal level.
		Diagnostic limit is setup incorrectly.	Set correct diagnostic limit in the F-Series control.
CAN Bus Off	The CAN port is detected in the Bus Off condition.	Incorrect or intermittent wiring problem.	Check wiring for broken or loose connection.
		Incorrect or missing termination resistors.	Verify proper termination resistors at the ends of the CAN network.
		Electrical problems within the controller or unit.	Possible problem with the F-Series, although additional testing recommended before returning to Woodward.

Error Flag	Description	Possible Source	Possible Action
CAN Demand Fault	The CAN demand value received was detected above 100% (0x9C40).	CAN demand is missing (no signal) or is too slow (slower than the Demand Timeout setting), or the value received is above 0xFAFF.	Verify correct configuration (demand timeout). Verify CANbus communication and connections.
		Incorrect F-Series number.	Check the CAN ID inputs to the valve.
		ECM is not sending Demand messages or is not sending to the correct F-Series number.	Verify that the ECM is powered up and sending valid demand messages, and that the correct F-Series ID numbers are selected.
		CAN termination problem.	Check if the CANbus has the right termination resistor connected at both ends of the bus.
		CAN wiring problem.	Check the CAN wiring for shorts, open connections, interchanged connections, and intermittent contacts.
		CAN noise problem.	Verify that the CAN wiring is installed according to the installation instruction
		CANbus incompatibility with ECM, e.g., baud rate.	Verify ECM CANbus compatibility.
		CAN traffic overload.	Verify that there is not excessive CAN traffic that has higher priority than the F-Series demand message.
CAN Demand Out of Range	The CAN demand value received was detected above 100% (0x9C40).	Incorrect value sent from ECM.	Verify ECM limits the values sent to the F-Series to be within the specified 0% to 100% range.
		CAN noise problem.	Verify that the CAN wiring is installed according to the installation instruction.
		CAN wiring problem.	Check the CAN wiring for shorts, open connections, interchanged connections, and intermittent contacts.
CAN Address Claim Error	This J1939 fault is set if the control's address cannot be claimed on the CANbus.	Another unit on the bus with the same id with a higher priority.	Verify correct CAN ID discrete input state, and unit number selection. Verify Source Addresses of units communicating on the bus, resolve conflict.
		No other units on the CANbus.	Verify CANbus communication and connections. Check wiring for broken or loose connection.
		CAN wiring problem.	Check the CAN wiring for shorts, open connections, interchanged connections, and intermittent contacts.

Error Flag	Description	Possible Source	Possible Action
Configuration Error	The loaded settings file has improper settings.	Invalid or corrupt settings.	Using the Service Tool, check and fix configuration settings and reload them into device.
Configuration Warning	The loaded settings file has improper settings.	Invalid or corrupt settings.	Using the Service Tool, check and fix configuration settings and reload them into device.
Temperature > 118 °C (Derated)	The internally monitored electronics temperature has exceeded 118 °C. Performance may be reduced.	High device temperature.	Monitor temperature using the Service Tool. Verify reasonable value as compared to ambient temperature of the device.
		Possible failed or intermittent temperature sensor.	Provide cooling for device. Return unit to Woodward for repair.
Temperature > 125 °C	The internally monitored electronics temperature has exceeded 125 °C. Drive current is zero, limp.	High device temperature.	Monitor temperature using the Service Tool. Verify reasonable value as compared to ambient temperature of the device.
		Possible failed or intermittent temperature sensor.	Provide cooling for device. Return unit to Woodward for repair.
Internal Shutdown	All internal shutdowns will set this flag	The F-Series actuator is defective.	Return unit to Woodward for repair.
Main EE PROM Write Failure	The software can't write to the EEPROM.	The F-Series actuator is defective.	Return unit to Woodward for repair.
Main EE PROM Read Failure	The software can't read from the EEPROM.	The F-Series actuator is defective.	Return unit to Woodward for repair.
Parameter Error	The software has detected a checksum error on one of the parameter blocks.	The F-Series control software was upgraded with an incompatible parameter set.	Return unit to Woodward for repair.
		The F-Series actuator is defective.	
Parameter Version Error	The version of the parameter set is incorrect.	The F-Series actuator is defective.	Return unit to Woodward for repair.
5 V Supply Error	The 5 V power supply is defective.	The F-Series actuator is defective.	Return unit to Woodward for repair.
5 V Reference Supply Error	The A/D Converter reference voltage is defective.	The F-Series actuator is defective.	Return unit to Woodward for repair.
+15 V Supply Error	The +15 V power supply is defective.	The F-Series actuator is defective.	Return unit to Woodward for repair.
-15 V Supply Error	The -15 V power supply is defective.	The F-Series actuator is defective.	Return unit to Woodward for repair.
A/D Converter Error	The 12 bit A/D converter is defective.	The F-Series actuator is defective.	Return unit to Woodward for repair.
SPI A/D Error	The 12 bit A/D converter is defective.	The F-Series actuator is defective.	Return unit to Woodward for repair.
Watchdog Reset Occurred	The watchdog has reset the F-Series control.	The software is disrupted by EMI or an internal component failure.	Clear logged fault indication and monitor for recurrence.
			Return unit to Woodward for repair.
Position Sensor Failed	Indicates the internal position sensor is outside hard coded diagnostic limits.	Internal failure of position sensor.	Return unit to Woodward for repair.

Chapter 8.

Product Support and Service Options

IMPORTANT

There are no user serviceable parts on the F-Series actuator.

Product Support Options

If you are experiencing problems with the installation, or unsatisfactory performance of a Woodward product, the following options are available:

- Consult the troubleshooting guide in the manual.
- Contact the manufacturer or packager of your system.
- Contact the Woodward Full Service Distributor serving your area.
- Contact Woodward technical assistance (see “How to Contact Woodward” later in this chapter) and discuss your problem. In many cases, your problem can be resolved over the phone. If not, you can select which course of action to pursue based on the available services listed in this chapter.

OEM or Packager Support: Many Woodward controls and control devices are installed into the equipment system and programmed by an Original Equipment Manufacturer (OEM) or Equipment Packager at their factory. In some cases, the programming is password-protected by the OEM or packager, and they are the best source for product service and support. Warranty service for Woodward products shipped with an equipment system should also be handled through the OEM or Packager. Please review your equipment system documentation for details.

Woodward Business Partner Support: Woodward works with and supports a global network of independent business partners whose mission is to serve the users of Woodward controls, as described here:

- A **Full Service Distributor** has the primary responsibility for sales, service, system integration solutions, technical desk support, and aftermarket marketing of standard Woodward products within a specific geographic area and market segment.
- An **Authorized Independent Service Facility (AISF)** provides authorized service that includes repairs, repair parts, and warranty service on Woodward's behalf. Service (not new unit sales) is an AISF's primary mission.

A current list of Woodward Business Partners is available at:

<https://www.woodward.com/en/support/industrial/service-and-spare-parts/find-a-local-partner>

Product Service Options

The following factory options for servicing Woodward products are available through your local Full-Service Distributor or the OEM or Packager of the equipment system, based on the standard Woodward Product and Service Warranty (5-09-0690) that is in effect at the time the product is originally shipped from Woodward or a service is performed:

- Replacement/Exchange (24-hour service)
- Flat Rate Repair
- Flat Rate Remanufacture

Replacement/Exchange: Replacement/Exchange is a premium program designed for the user who is in need of immediate service. It allows you to request and receive a like-new replacement unit in minimum time (usually within 24 hours of the request), providing a suitable unit is available at the time of the request, thereby minimizing costly downtime. This is a flat-rate program and includes the full standard Woodward product warranty (Woodward Product and Service Warranty 5-09-0690).

This option allows you to call your Full-Service Distributor in the event of an unexpected outage, or in advance of a scheduled outage, to request a replacement control unit. If the unit is available at the time of the call, it can usually be shipped out within 24 hours. You replace your field control unit with the like-new replacement and return the field unit to the Full-Service Distributor.

Charges for the Replacement/Exchange service are based on a flat rate plus shipping expenses. You are invoiced the flat rate replacement/exchange charge plus a core charge at the time the replacement unit is shipped. If the core (field unit) is returned within 60 days, a credit for the core charge will be issued.

Flat Rate Repair: Flat Rate Repair is available for the majority of standard products in the field. This program offers you repair service for your products with the advantage of knowing in advance what the cost will be. All repair work carries the standard Woodward service warranty (Woodward Product and Service Warranty 5-09-0690) on replaced parts and labor.

Flat Rate Remanufacture: Flat Rate Remanufacture is very similar to the Flat Rate Repair option with the exception that the unit will be returned to you in "like-new" condition and carry with it the full standard Woodward product warranty (Woodward Product and Service Warranty 5-09-0690). This option is applicable to mechanical products only.

Returning Equipment for Repair

If a control (or any part of an electronic control) is to be returned for repair, please contact your Full-Service Distributor in advance to obtain Return Authorization and shipping instructions.

When shipping the item(s), attach a tag with the following information:

- Return authorization number
- Name and location where the control is installed
- Name and phone number of contact person
- Complete Woodward part number(s) and serial number(s)
- Description of the problem
- Instructions describing the desired type of repair

Packing a Control

Use the following materials when returning a complete control:

- Protective caps on any connectors
- Antistatic protective bags on all electronic modules
- Packing materials that will not damage the surface of the unit
- At least 100 mm (4 inches) of tightly packed, industry-approved packing material
- A packing carton with double walls
- A strong tape around the outside of the carton for increased strength

NOTICE

To prevent damage to electronic components caused by improper handling, read and observe the precautions in Woodward manual 82715, *Guide for Handling and Protection of Electronic Controls, Printed Circuit Boards, and Modules*.

Replacement Parts

When ordering replacement parts for controls, include the following information:

- The part number(s) (XXXX-XXXX) that is on the enclosure nameplate
- The unit serial number, which is also on the nameplate

Engineering Services

Woodward offers various Engineering Services for our products. For these services, you can contact us by telephone, by email, or through the Woodward website.

- Technical Support
- Product Training
- Field Service

Technical Support is available from your equipment system supplier, your local Full-Service Distributor, or from many of Woodward's worldwide locations, depending upon the product and application. This service can assist you with technical questions or problem solving during the normal business hours of the Woodward location you contact. Emergency assistance is also available during non-business hours by phoning Woodward and stating the urgency of your problem.

Product Training is available as standard classes at many of our worldwide locations. We also offer customized classes, which can be tailored to your needs and can be held at one of our locations or at your site. This training, conducted by experienced personnel, will assure that you will be able to maintain system reliability and availability.

Field Service engineering on-site support is available, depending on the product and location, from many of our worldwide locations or from one of our Full-Service Distributors. The field engineers are experienced both on Woodward products as well as on much of the non-Woodward equipment with which our products interface.

For information on these services, please contact one of the Full-Service Distributors listed at www.woodward.com/local-partner.

Contacting Woodward's Support Organization

For the name of your nearest Woodward Full-Service Distributor or service facility, please consult our worldwide directory at <https://www.woodward.com/support>, which also contains the most current product support and contact information.

You can also contact the Woodward Customer Service Department at one of the following Woodward facilities to obtain the address and phone number of the nearest facility at which you can obtain information and service.

Products Used in Electrical Power Systems

<u>Facility</u>	<u>Phone Number</u>
Brazil -----	+55 (19) 3708 4800
China -----	+86 (512) 8818 5515
Germany -----	+49 (711) 78954-510
India -----	+91 (124) 4399500
Japan -----	+81 (43) 213-2191
Korea -----	+82 (32) 422-5551
Poland -----	+48 (12) 295 13 00
United States -----	+1 (970) 482-5811

Products Used in Engine Systems

<u>Facility</u>	<u>Phone Number</u>
Brazil -----	+55 (19) 3708 4800
China -----	+86 (512) 8818 5515
Germany -----	+49 (711) 78954-510
India -----	+91 (124) 4399500
Japan -----	+81 (43) 213-2191
Korea -----	+ 82 (32) 422-5551
The Netherlands --	+31 (23) 5661111
United States -----	+1 (970) 482-5811

Products Used in Industrial Turbomachinery Systems

<u>Facility</u>	<u>Phone Number</u>
Brazil -----	+55 (19) 3708 4800
China -----	+86 (512) 8818 5515
India -----	+91 (124) 4399500
Japan -----	+81 (43) 213-2191
Korea -----	+ 82 (32) 422-5551
The Netherlands --	+31 (23) 5661111
Poland -----	+48 (12) 295 13 00
United States -----	+1 (970) 482-5811

Technical Assistance

If you need to contact technical assistance, you will need to provide the following information. Please write it down here before contacting the Engine OEM, the Packager, a Woodward Business Partner, or the Woodward factory:

General

Your Name _____

Site Location _____

Phone Number _____

Fax Number _____

Prime Mover Information

Manufacturer _____

Engine Model Number _____

Number of Cylinders _____

Type of Fuel (gas, gaseous, diesel, dual-fuel, etc.) _____

Power Output Rating _____

Application (power generation, etc.) _____

Control/Governor Information

Control/Governor #1

Woodward Part Number & Rev. Letter _____

Control Description or Governor Type _____

Serial Number _____

Control/Governor #2

Woodward Part Number & Rev. Letter _____

Control Description or Governor Type _____

Serial Number _____

Control/Governor #3

Woodward Part Number & Rev. Letter _____

Control Description or Governor Type _____

Serial Number _____

Symptoms

Description _____

If you have an electronic or programmable control, please have the adjustment setting positions or the menu settings written down and with you at the time of the call.

Appendix A.

Acronyms/Abbreviations

AUX	Auxiliary
CAN	Control area network
CCW	Counterclockwise
CRC	Cyclic redundancy check
CW	Clockwise
DA	Destination address
EEPROM	Electrically erasable programmable read-only memory
EMC	Electromagnetic compatibility
GUI	Graphic user interface
I/O	Inputs/outputs
ITB	Integrated throttle body
F-SERIES ACTUATOR	Woodward modular bi-directional actuator with integral position feedback control and driver
FST	F-Series throttle
FSTP	F-Series throttle plus
LED	Light emitting diode
MWP	Maximum working pressure
OEM	Original equipment manufacturer
PC	Personal computer
PDU	Protocol data unit
PF	PDU format
PGN	Parameter group number
PS	PDU specific
PWM	Pulse-width modulated
RS-232	A communications standard
SA	Source address
SID	Service interface definition
SPI A/D	Serial peripheral interface analog/digital
SPI D/A	Serial peripheral interface digital/analog
SPN	Suspect parameter number
TPS	Throttle position sensor

Appendix B.

SAE J1939 Profiles

The SAE J1939 protocol defines many SPNs (Suspect Parameter Numbers) and PGNs (Parameter Group Numbers) in part 71 for engine applications. Finding the relevant ones for a given application can take time. For convenience, the common applications for an F-Series are summarized here along with the correct way to configure the F-Series to use these public messages.

J1939 Configuration Example

This example is provided to aid in understanding the relationship of the settings to the J1939 standard. There are two main J1939 components to set up in the F-Series, the unit identification (ACL NAME) and the data (SPN)/messages (PGN).

Unit Identification Settings

(Address Claimed Message NAME, PGN 60928)

A device's name must be unique; no two devices may share the same name on a vehicle network. The F-Series provides four configurable components of the address claimed name data: the source address, function field, function instance, and ECU instance. The remaining components are fixed values that cannot be changed.

For convenience, the J1939 common actuator definitions are repeated below. The J1939 standard is updated frequently so the information provided below may not represent the latest; however, SAE is careful to allow backward compatibility.

Source Address

Table B-1. Source Address

18 (Fuel System)	May be used with Function 15
34 (aux valve control or engine air system valve)	May be used with Function 142, 143, 147, or 148

Function Field

Table B-2. Function Field

15	Fuel System - Controls fuel flow from the tank to the filter to the engine and back
142	Turbocharger Compressor Bypass
143	Turbocharger Wastegate
144	Throttle
146	Fuel Actuator (Rack Actuator)
147	Engine Exhaust Gas Recirculation
148	Engine Exhaust Backpressure
255	Unspecified

Function Instance: A value of 0 corresponds to 'first', and a value of 1 would be used for the second instance. When multiple actuators of the same type are used to control multiple of the same type of device, then each must have a unique Function (the first instance relates to the Left bank or first in the flow path).

ECU Instance: A value of 0 corresponds to 'first', and a value of 1 would be used for the second instance. When multiple actuators of the same type are used to control the same device, then each must have a unique ECU Instance.

Configuration of these settings is provided on the Configure CAN screen of the Service Tool (see Figure 6-8).

Message Setup

The SAE J1939 standard defines the message (PGN) and its content (SPNs). The F-Series provides data values (like actual position) that can be enabled/disabled, placed in appropriate PGNs, and the data locations (start bit) may be defined. In addition, the message priority and transmission rate are configurable. This scheme provides fully configurable messaging with predefined data.

Figure B-1 shows how the components from the standard are mapped to the configuration tool settings for the position command message [Input (Rx)].

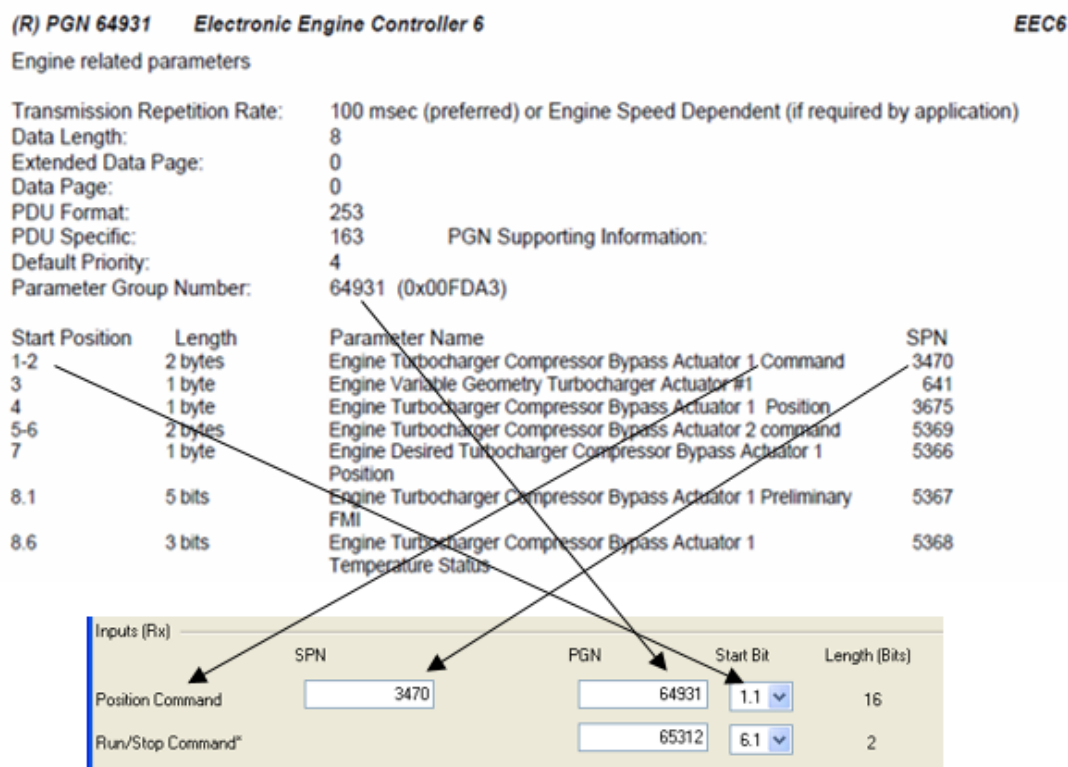


Figure B-1. Position Command Mapping

Figure B-2 shows how the components from the standard are mapped to the configuration tool settings for the actual position reported [Output (Tx)]. Other components are similar.

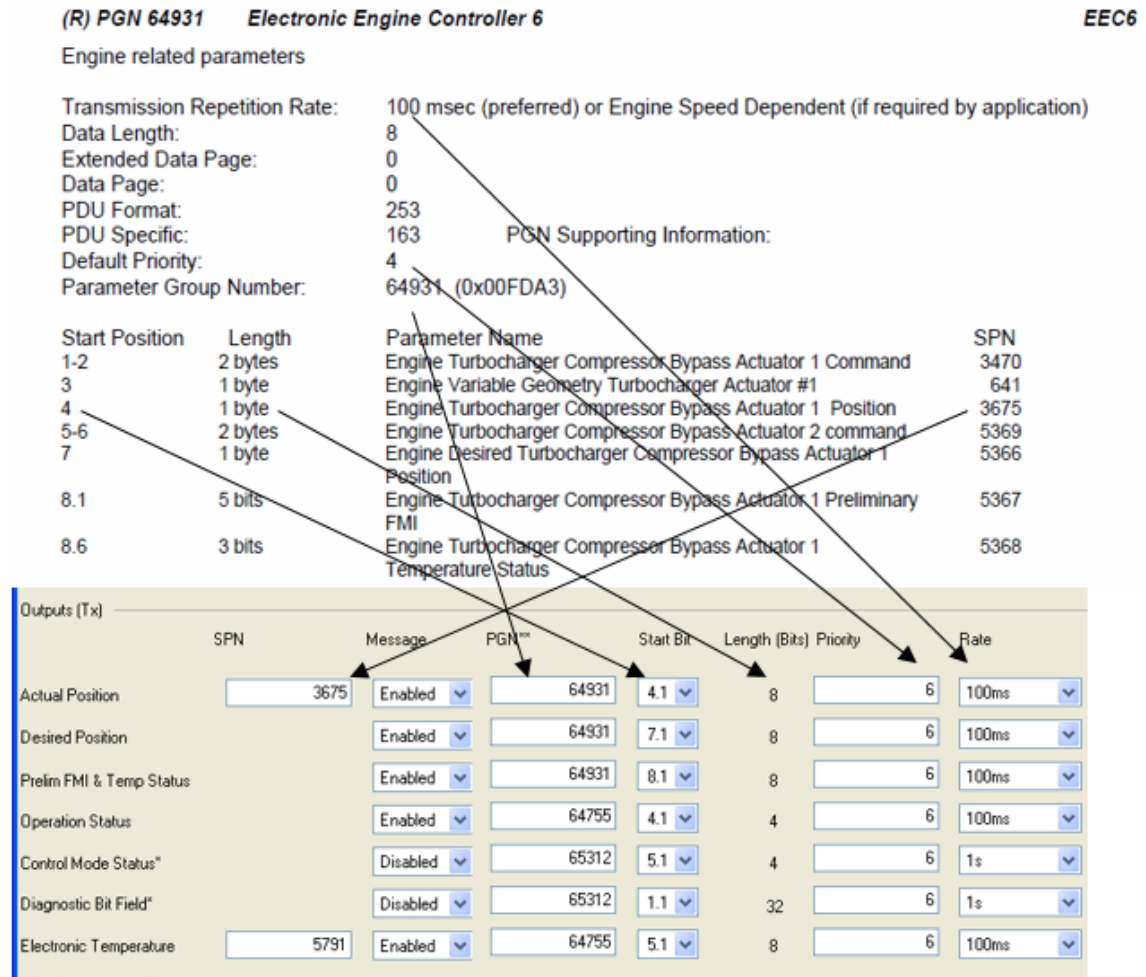


Figure B-2. Actual Position Mapping

Turbocharger Compressor Bypass

The Turbocharger Compressor Bypass Actuator defined in J1939 has two instances (normally for left and right bank) already defined in the standard. The tables below summarize which PGNs and SPNs relate to these actuators. The Byte Location, Priority, and Rate, as well as the NAME components are provided as defined in the standard to aid configuration.

Table B-3. Turbocharger Compressor Bypass Instance 1

PGN	SPN	Name	Byte	Priority	Rate
64931	3470	Engine Turbo Compressor Bypass Actuator 1 Control Command	1-2	Rcv	Rcv
64931	3675	Engine Turbo Compressor Bypass Actuator 1 Position	4	4	100 ms
64931	5366	Engine Turbo Compressor Bypass Actuator 1 Desired Position	7	4	100 ms
64931	5367	Engine Turbo Compressor Bypass Actuator 1 Preliminary FMI	8.1	4	100 ms
64931	5368	Engine Turbo Compressor Bypass Actuator 1 Temperature Status	8.6	4	100 ms
64755	5449	Engine Turbo Compressor Bypass Actuator 1 Operation Status	4.1	6	100 ms
64755	5791	Engine Turbo Compressor Bypass Actuator 1 Temperature	5	6	100 ms

Table B-4. Turbocharger Compressor Bypass Instance 2

PGN	SPN	Name	Byte	Priority	Rate
64931	5369	Engine Turbo Compressor Bypass Actuator 2 Control Command	5-6	Rcv	Rcv
64755	5388	Engine Turbo Compressor Bypass Actuator 2 Position	1	6	100 ms
64755	5389	Engine Desired Turbo Compressor Bypass Actuator 2 Position	2	6	100 ms
64755	5390	Engine Turbo Compressor Bypass Actuator 2 Preliminary FMI	3.1	6	100 ms
64755	5391	Engine Turbo Compressor Bypass Actuator 2 Temperature Status	3.6	6	100 ms
64755	5450	Engine Turbo Compressor Bypass Actuator 2 Operation Status	4.5	6	100 ms
64755	5792	Engine Turbo Compressor Bypass Actuator 2 Temperature	6	6	100 ms

Table B-5. Turbocharger Compressor Bypass Instance 1 and Instance 2 NAME Components

NAME Component	Instance 1	Instance 2
Function Field	142	142
Function Instance	0	1
ECU Instance	0	0
Source Address	34	34
Device SPN	5420	NA

Turbocharger Wastegate

The Turbocharger Wastegate Actuator defined in J1939 has two instances (normally for left and right bank) already defined in the standard. The tables below summarize which PGNs and SPNs relate to these actuators. The Byte Location, Priority, and Rate as well as the NAME components are provided as defined in the standard to aid configuration.

Table B-6. Turbocharger Wastegate Instance 1

PGN	SPN	Name	Byte	Priority	Rate
61486	5386	Engine Turbocharger Wastegate Actuator 1 Control Command	1-2	Rcv	Rcv
65174	1188	Engine Turbocharger Wastegate Actuator 1 Position	1	6	100 ms
65174	5370	Engine Turbocharger Wastegate Actuator 1 Desired Position	6	6	100 ms
65174	5371	Engine Turbocharger Wastegate Actuator 1 Preliminary FMI	7.1	6	100 ms
65174	5372	Engine Turbocharger Wastegate Actuator 1 Temperature Status	7.6	6	100 ms
64753	5451	Engine Turbocharger Wastegate Actuator 1 Operation Status	2.1	6	100 ms
64753	5788	Engine Turbocharger Wastegate Actuator 1 Temperature	6	6	100 ms

Table B-7. Turbocharger Wastegate Instance 2

PGN	SPN	Name	Byte	Priority	Rate
61486	5387	Engine Turbocharger Wastegate Actuator 2 Control Command	3-4	Rcv	Rcv
65174	1189	Engine Turbocharger Wastegate Actuator 2 Position	2	6	100 ms
65174	5373	Engine Desired Turbocharger Wastegate Actuator 2 Position	8	6	100 ms
64753	5384	Engine Turbocharger Wastegate Actuator 2 Preliminary FMI	1.1	6	100 ms
64753	5385	Engine Turbocharger Wastegate Actuator 2 Temperature Status	1.6	6	100 ms
64753	5452	Engine Turbocharger Wastegate Actuator 2 Operation Status	2.5	6	100 ms
64713	5787	Engine Turbocharger Wastegate Actuator 2 Temperature	5	6	100 ms

Table B-8. Turbocharger Wastegate Instance 1 and Instance 2 NAME Components

NAME Component	Instance 1	Instance 2
Function Field	143	143
Function Instance	0	1
ECU Instance	0	0
Source Address	34	34
Device SPN	5421	NA

Throttle

The Throttle Valve Actuator defined in J1939 has two instances (normally for left and right bank) already defined in the standard. The tables below summarize which PGNs and SPNs relate to these actuators. The Byte Location, Priority, and Rate as well as the NAME components are provided as defined in the standard to aid configuration.

Table B-9. Throttle Instance1

PGN	SPN	Name	Byte	Priority	Rate
61466	3464	Engine Throttle Valve 1 Control Command	1-2	Rcv	Rcv
65266	51	Engine Throttle Valve 1 Position	7	6	100 ms
64754	5374	Engine Desired Throttle Valve 1 Position	1	6	100 ms
64754	5375	Engine Throttle Valve 1 Preliminary FMI	2.1	6	100 ms
64754	5376	Engine Throttle Valve 1 Temperature Status	2.6	6	100 ms
64754	5445	Engine Throttle Valve 1 Operation Status	7.1	6	100 ms
64713	5783	Engine Throttle Valve 1 Temperature	1	6	100 ms

Table B-10. Throttle Instance 2

PGN	SPN	Name	Byte	Priority	Rate
61466	3465	Engine Throttle Valve 2 Control Command	3-4	Rcv	Rcv
65266	3673	Engine Throttle Valve 2 Position	8	6	100 ms
64754	5377	Engine Desired Throttle Valve 2 Position	3	6	100 ms
64754	5378	Engine Throttle Valve 2 Preliminary FMI	4.1	6	100 ms
64754	5379	Engine Throttle Valve 2 Temperature Status	4.6	6	100 ms
64754	5446	Engine Throttle Valve 2 Operation Status	7.5	6	100 ms
64713	5784	Engine Throttle Valve 2 Temperature	2	6	100 ms

Table B-11. Throttle Instance 1 and Instance 2 NAME Components

NAME Component	Instance 1	Instance 2
Function Field	144	144
Function Instance	0	1
ECU Instance	0	0
Source Address	34	34
Device SPN	5419	NA

Gaseous Fuel Valve

The Fuel Valve Actuator defined in J1939 has two instances (normally for left and right bank) already defined in the standard. The tables below summarize which PGNs and SPNs relate to these actuators. The Byte Location, Priority, and Rate, as well as the NAME components are provided as defined in the standard to aid configuration.

Table B-12. Gas Fuel Valve Instance 1

PGN	SPN	Name	Byte	Priority	Rate
61466	633	Engine Fuel Valve 1 Control Command	5-6	Rcv	Rcv
65153	1442	Engine Fuel Valve 1 Position	5	7	Req
65153	1765	Engine Fuel Valve 1 Desired Position	7	7	Req
64754	5380	Engine Fuel Valve 1 Preliminary FMI	5.1	6	100 ms
64754	5381	Engine Fuel Valve 1 Temperature Status	5.6	6	100 ms
64754	5447	Engine Fuel Valve 1 Operation Status	8.1	6	100 ms
64713	5785	Engine Fuel Valve 1 Temperature	3	6	100 ms

Table B-13. Gas Fuel Valve Instance 2

PGN	SPN	Name	Byte	Priority	Rate
61466	1244	Engine Fuel Valve 2 Control Command	7-8	Rcv	Rcv
65153	1443	Engine Fuel Valve 2 Position	6	7	Req
65153	1766	Engine Desired Fuel Valve 2 Position	8	7	Req
64754	5382	Engine Fuel Valve 2 Preliminary FMI	6.1	6	100 ms
64754	5383	Engine Fuel Valve 2 Temperature Status	6.6	6	100 ms
64754	5448	Engine Fuel Valve 2 Operation Status	8.5	6	100 ms
64713	5786	Engine Fuel Valve 2 Temperature	4	6	100 ms

Table B-14. Gas Fuel Valve Instance 1 and Instance 2 NAME Components

NAME Component	Instance 1	Instance 2
Function Field	146	146
Function Instance	0	1
ECU Instance	0	0
Source Address	18	18
Device SPN	5418	NA

Fuel Rack Actuator

The Fuel Rack Actuator defined in J1939 has a single instance already defined in the standard. The tables below summarize which PGNs and SPNs relate to this actuator. The Byte Location, Priority, and Rate, as well as the NAME components are provided as defined in the standard to aid configuration.

Table B-15. Fuel Rack Actuator Single Instance

PGN	SPN	Name	Byte	Priority	Rate
			16		
61466	633	Engine Fuel Actuator 1 Control Command	bits	5-6	Rcv
65153	1442	Engine Fuel Actuator 1 Position	8 bits	5	Req
65153	1765	Engine Desired Fuel Actuator 1 Position	8 bits	7	Req
64754	5380	Engine Fuel Actuator 1 Preliminary FMI	5 bits	5.1	100 ms
64754	5381	Engine Fuel Actuator 1 Temperature Status	3 bits	5.6	100 ms
64754	5447	Engine Fuel Actuator 1 Operation Status	4 bits	8.1	100 ms

Table B-16. Fuel Rack Actuator Single Instance NAME Components

NAME Component	Instance 1
Function Field	15
Function Instance	0
ECU Instance	0
Source Address	18
Device SPN	834

Exhaust Backpressure Actuator

The Exhaust Backpressure Actuator defined in J1939 has a single instance already defined in the standard. The tables below summarize which PGNs and SPNs relate to this actuator. The Byte Location, Priority, and Rate, as well as the NAME components are provided as defined in the standard to aid configuration.

Table B-17. Exhaust Backpressure Actuator Single Instance

PGN	SPN	Name	Byte	Priority	Rate
61486	649	Engine Exhaust Back Pressure Control Command	1-2	Rcv	Rcv
64753	5625	Engine Exhaust Back Pressure Actuator 1 Position	3	6	100 ms
64753	5789	Engine Exhaust Back Pressure Actuator 1 Desired Position	7	6	100 ms
64753	5626	Engine Exhaust Back Pressure Actuator 1 Preliminary FMI	4.1	6	100 ms
64753	5627	Engine Exhaust Back Pressure Actuator 1 Temperature Status	4.6	6	100 ms
64753	5628	Engine Exhaust Back Pressure Actuator 1 Operation Status	5.1	6	100 ms
64753	5790	Engine Exhaust Back Pressure Actuator 1 Temperature	8	6	100 ms

Table B-18. Exhaust Backpressure Single Instance NAME Components

NAME Component	Single Instance
Function Field	148
Function Instance	0
ECU Instance	0
Source Address	34
Device SPN	8322

EGR Actuator

The EGR (Exhaust Gas Recirculation) Actuator defined in J1939 has four instances already defined in the standard. The tables below summarize which PGNs and SPNs relate to these actuators. The Byte Location, Priority, and Rate, as well as the NAME components are provided as defined in the standard to aid configuration. The Actual Position feedback is omitted from the tables below because it is formatted as a 16-bit value in the standard, but the F-Series uses an 8-bit value (the EGR actuator is unique compared to all others in J1939). A proprietary PGN is needed to send back the actual position.

Table B-19. EGR Actuator Instance 1

PGN	SPN	Name	Byte	Priority	Rate
64981	2791	Engine EGR 1 Actuator 1 Control Command	5-6	Rcv	Rcv
64715	5763	Engine EGR 1 Actuator 1 Preliminary FMI	1.1	6	100 ms
64715	5764	Engine EGR 1 Actuator 1 Temperature Status	1.6	6	100 ms
64715	5765	Engine EGR 1 Actuator 1 Temperature	2	6	100 ms
64715	5766	Engine EGR 1 Actuator 1 Desired Position	3	6	100 ms
64715	5771	Engine EGR 1 Actuator 1 Operation Status	7.1	6	100 ms

Table B-21. EGR Actuator Instance 2

PGN	SPN	Name	Byte	Priority	Rate
64879	3821	Engine EGR 1 Actuator 2 Control Command	1-2	Rcv	Rcv
64715	5767	Engine EGR 1 Actuator 2 Preliminary FMI	4.1	6	100 ms
64715	5768	Engine EGR 1 Actuator 2 Temperature Status	4.6	6	100 ms
64715	5769	Engine EGR 1 Actuator 2 Temperature	5	6	100 ms
64715	5770	Engine EGR 1 Actuator 2 Desired Position	6	6	100 ms
64715	5772	Engine EGR 1 Actuator 2 Operation Status	7.5	6	100 ms

Table B-22. EGR Actuator Instance 3

PGN	SPN	Name	Byte	Priority	Rate
64762	5264	Engine EGR 2 Actuator 1 Control Command	1-2	Rcv	Rcv
64714	5773	Engine EGR 2 Actuator 1 Preliminary FMI	1.1	6	100 ms
64714	5774	Engine EGR 2 Actuator 1 Temperature Status	1.6	6	100 ms
64714	5775	Engine EGR 2 Actuator 1 Temperature	2	6	100 ms
64714	5776	Engine EGR 2 Actuator 1 Desired Position	3	6	100 ms
64714	5781	Engine EGR 2 Actuator 1 Operation Status	7.1	6	100 ms

Table B-23. EGR Actuator Instance 4

PGN	SPN	Name	Byte	Priority	Rate
64762	5265	Engine EGR 2 Actuator 2 Control Command	3-4	Rcv	Rcv
64714	5777	Engine EGR 2 Actuator 2 Preliminary FMI	4.1	6	100 ms
64714	5778	Engine EGR 2 Actuator 2 Temperature Status	4.6	6	100 ms
64714	5779	Engine EGR 2 Actuator 2 Temperature	5	6	100 ms
64714	5780	Engine EGR 2 Actuator 2 Desired Position	6	6	100 ms
64714	5782	Engine EGR 2 Actuator 2 Operation Status	7.5	6	100 ms

Table B-24. EGR Actuator Instance 1, 2, 3 and 4 NAME Components

NAME Component	Instance 1	Instance 2	Instance 3	Instance 4
Function Field	147	147	147	147
Function Instance	0	1	2	3
ECU Instance	0	0	0	0
Source Address	34	34	34	34
Device SPN	NA	NA	NA	NA

Appendix C.

Technical Specifications

F-Series Control General Specifications

Table C-1. General Specifications

Power Supply	12/24 V systems (10 V to 32 VDC), reverse polarity protection
Power Source Capacity	10 A minimum
Power Consumption	24 W steady-state, 98 W instantaneous during transient
Travel	70 \pm 2 degrees
Torque	Steady State: 1.36 N·m (1.0 lb-ft) at 105 °C, 12 VDC Transient: 2.71 N·m (2 lb-ft) at 105 °C, 12 VDC
Throttle (ITB) Sizes	35 mm, 48 mm, 60 mm, 68 mm, and 75 mm
Mass/Weight	33 mm ITB = 5.0 kg (11.1 lb) 48 mm ITB = 4.9 kg (10.8 lb) 60 mm ITB = 4.7 kg (10.4 lb) 68 mm ITB = 4.5 kg (10.0 lb) 75 mm ITB = 6.3 kg (13.8 lb) Modular Actuator = 3.9 kg (8.7 lb)
Position Feedback	0.5 V to 4.5 VDC, configurable in software
Connector Orientation	4 versions at 90° rotation intervals
Modular Actuator Load Inertia	Ranges from 0 (bare shaft) to 0.0025 kg·m ²

Table C-2. Performance Specifications

Positioning Accuracy (actual position relative to position demand)	\pm 4% full stroke for all input types after effects from –40 °C to +85 °C board temperature \pm 7% full stroke all input types above 85 °C board temperature
Positioning Repeatability	\leq 1% of full stroke
Power-Up Time	< 1 s
10% to 90% step Slew Time	55 ms (at 12 VDC, room temperature, no external load)
Overshoot	< 2%
1% Settling Time	200 ms
Bandwidth	\geq 10 Hz at –3 db, \pm 0.5% of full scale \geq 14 Hz at –3 db, \pm 2% of full scale
No-load Steady State Limit Cycle	< 0.25-degree p-p (at 12 VDC, room temperature)

Table C-3. Environmental Specifications

Ambient Operating Temperature	–40 °C to +105 °C (–40 °F to +221 °F)
ITB Flowing Medium Temperature	–40 °C to +105 °C (–40 °F to +221 °F)
ITB Maximum Working Pressure	60mm, 68mm, and 75mm ITB: 50 psi (absolute) 33mm and 48mm ITB: 80 psi (absolute)
Storage Temperature	–40 °C to +125 °C (–40 °F to +257 °F) Unpowered
EMC	EN61000-6-2 (2005): Immunity for Industrial Environments
	EN61000-6-4 (2007+A1:2011): Emissions for Industrial Environments
	ISO 10605 (2001): ESD Immunity for Packaging and Handling, ± 4 kV contact discharge
	ISO 11452-4 (2005): Conducted RF Immunity (BCI method), 1 MHz to 200 MHz, 100 mA induced current
	ISO 11452-2 (2004): Radiated RF Immunity, 200 MHz to 1 GHz @ 100 V/m, 1 GHz to 2 GHz @ 30 V/m
	CISPR 25 (2002): Radiated RF Emissions, 30 MHz to 1 GHz, 2004/104/EC and ECE Regulation 10 limits
	ISO 7637-2 (2004): Conducted Transient Immunity Pulse 1c, Disconnect of Inductive Loads Pulse 2a, Sudden Interruption of Series Current Pulse 3a, Negative Switching Spikes Pulse 3b, Positive Switching Spikes Pulse 4, Starter Motor Engagement Disturbance Pulse 5a, 24 V Load Dump NOTE: Pulse 2b is not required since dc motors will not be wired in parallel with the switched battery input
Humidity	US MIL-STD 810D, 507.2, Procedure III (60 °C, 95% RH), Lloyd's Register of Shipping Humidity Test 1 and Det Norske Veritas Damp Heat per Woodward Procedure 4-04-6230
Salt Fog	SAE J1455, 4.3
Dust Exposure	SAE J1455, 4.7
Chemical Resistance	SAE J1455, 4.4.3 (except water immersion testing)
Shock	40 G, 11 ms duration saw-tooth pulse Per Woodward Procedure 3-04-6231, MS1
Vibration	Random: 0.3 G ² /Hz, 10 Hz to 2000 Hz (22.1 Grms) 3 h/axis per Woodward Procedure 3-04-6231, RV3
Drop Test	SAE J1455, Section 4.10.3.1
Thermal Shock	SAE J1455, 4.1.3.2. Modified, –40 °C to +105 °C and 20 cycles
Ingress Protection	NEMA 4 Watertight
Immersion and Splash, Steam Cleaning and Pressure Washing	SAE J1455, 4.4.3 (submerged, frozen, thawed) SAE J1455, 4.5 (steam cleaning and pressure wash)
HALT Testing	Units driven to failure with simultaneous loading through vibration, temperature and humidity and evaluated for improvements.

Table C-4. Reliability Specifications

Integrated Product: The target B10 life in the field is 35,000 hours at 60 °C ambient and steady state operation.

I/O Specifications

Table C-5. Power Supply Input

Parameter	Value
Max Input Power	~24 W (32 VDC at 0.75 A)
Input Voltage Range	10 V to 32 VDC
Transient Suppression	54 V to 58 VDC during surge and load dump up to 200 ms
Hold Up Time	NOTE: Depends on operating conditions. 0.4 ms at 12 VDC with max load 2.7 ms at 24 VDC with max load
Jump Start	40 VDC max.
Battery Voltage Monitor	Voltage divider circuit read directly from the power bus that feeds the H-Bridge
Configurable Fault Range	Low voltage = 6 V to 18 VDC. High voltage = 12 V to 36 VDC

Table C-6. PWM Demand Input

Parameter	Value
PWM Input Type	Low-Side and Push-Pull (differential input)
PWM Amplitude Range	4 V to 32 V p-p
Specified Frequency Range	300 Hz to 2000 Hz
Max Allowed Frequency	5000 Hz
PWM Detection Threshold	1.15 VDC nominal
PWM Hysteresis	0.6 V to 1.7 VDC
Duty Cycle Scaling	Configurable in software. See Chapter 6.
Isolation	None
Input Impedance	10 k Ω all modes
Resolution	12 bits up to 1953 Hz The duty cycle and frequency are read with reduced resolution at higher frequencies
Accuracy	$\pm 1\%$ all modes at 32 V and frequencies < 1000 Hz $\pm 2\%$ all modes at 32 V and frequencies > 1000 Hz NOTE: Low-Side detection accuracy could depend on integrity of signal source.
Pull-Up Level	5 V through 4.99 k Ω
I/O Execution Rate	600 μ s
Calibration	Configurable in software. See Chapter 6.
Loss of Signal	<153 Hz. Sets Duty Cycle and Frequency to zero.
Out of Range Duty Cycle	Configurable in software. See Chapter 6.

Table C-7. Analog (TPS) Output

Parameter	Value
Output Type	0.5 V to 4.5 VDC
Output Scaling	Configurable in Software. See Chapter 6.
Isolation	None
Response Time Min to Max	~ 4 ms (0.5 VDC steady-state to settling at 4.5 VDC)
Position Output Update Rate	9.6 ms
Filter Cutoff Frequency	1000 Hz at 3 dB pass band attenuation
Final Low Pass Filter	1 ms ($f_o = 169$ Hz)
Transient Protection	According to EMC norm
Impedance at Output Pin	20 k Ω
Accuracy of Position Output	$\pm 1\%$ FS over entire operating temperature range
Calibration Method	Factory calibrated to maintain 1% accuracy
Overvoltage Protection	Output protected against 32 VDC, steady-state. Also protected from direct short to ground.
Minimum Impedance	2500 Ω to ensure $\pm 1\%$ accuracy. Accuracy will degrade with larger loads (less impedance).

Table C-8. Serial Communication Service Port

Parameter	Value
Isolation	None
Baud Rate	Fixed 38.4 K baud
Electrical Interface	Outputs are TTL level. Requires external transceiver for conversion to RS-232 levels for proper communication.
FST Pinout	Tx = pin 3, Rx = pin 8, Gnd = pin 11
FSTP & Modular Actuator Pinout	Tx = pin 3, Rx = pin 11, Gnd = pin 15
Maximum Cable Length	10 m (33 ft) – for service only (not intended for permanent connection)
Cable Type	Straight-through (no crossover)

Table C-9. CAN Communication Port

Parameter	Value
Isolation	None
Baud Rate	J1939: 250 Kbps; CANopen: configurable from 250 K to 1 Meg
Electrical Interface	CAN Hi and CAN Lo differential transmit/receive
Type	F-Series supports CAN2.0B and SAE J1939-11
FSTP & Modular Actuator Pinout	CAN Hi = pin 13 CAN Lo = pin 21 CAN Shld= pin 14
Maximum Cable Length	30 m
Cable Type	Two-conductor shielded cable according to SAE J1939-11

Table C-10. Discrete Output

Parameter	Value
Output Type	Low-side driver
Max Voltage at Output Pin	40 VDC
Max Current through Switch	500 mA
Max On-State Saturation Voltage at Max Current	1 VDC
Max Off-State Leakage Current at 24 VDC	8 μ A
Activating Latency	<1 ms
I/O Execution Rate	9.6 ms
Output Action	Configurable in software. See Chapter 6.
Output Selections	Configurable in software. See Chapter 6.
Driving Inductive Loads Protection	Yes, internally protected low-side switch. Utilizes circuitry that will open the contact when output contacts are short-circuited. Self-resetting when fault is removed.

Table C-11. Discrete Inputs

Parameter	Value
Input Type	General Purpose
Input Assignments	Input 1 = Configurable as Run Enable or Not Used
	Input 2 = Configurable as CAN ID High or Low
	Input 3 = Configurable as CAN ID High or Low
Input Voltage Range	0 V to 10 VDC
Reference	3.3 V
Input Thresholds	> 5.85 VDC = "High" < 3.25 VDC = "Low"
Open Terminal Voltage	1.35 V \pm 0.06 VDC
Max Input Voltage	32 V
Resolution	10 bit
I/O Execution Rate	9.6 ms
Isolation	None. Use with external relay or other dry contact.
Accuracy	<0.5%
Drift	<0.1% over a 100 degree C range
Anti-Aliasing Filter	1 pole at 15.9 kHz (10 ms)
Input Current	1.5 mA @ 32 VDC, 35 μ A @ 10 VDC

Table C-12. Analog Input

Parameter	Value
Input Type	0 V to 5 VDC, 4 mA to 20 mA differential input
Input Range Selection	Jumper required to activate 4 mA to 20 mA range
Input Scaling	Configurable in software. See Chapter 6.
Voltage Input Range	-3 V to +5 VDC
Current Input Range	0 mA to 24 mA
Isolation	None
Transient Protection	According to EMC norm
Common Mode Impedance	> 200 k Ω to circuit common
Common Mode Voltage Range	± 270 V. Will be evaluated up to 50 V CM
Common Mode Rejection	86 dB
Anti-Aliasing Filter	A single pole at 470 μ s (338 Hz)
Resolution	12 bit with a 5 V reference
Voltage Input Accuracy	$\pm 0.2\%$ at 25 $^{\circ}$ C
Voltage Input Drift	< 0.1% FS
Current Input Accuracy	$\pm 0.6\%$ at 25 $^{\circ}$ C
Current Input Drift	< 0.25% FS
Linearity	1% FS over specified operating range
I/O Execution Rate	600 μ s
Calibration Method	2-point linear software calibration. See Chapter 6.
Out of Range Signal	Configurable in software. See Chapter 6.
Over Voltage Protection	32 VDC continuous
Over Current Protection	140 mA continuous at 25 $^{\circ}$ C
Reverse Polarity Protection	Voltage Input, 5 V continuous Current Input, 24 mA continuous at 25 $^{\circ}$ C
Out of Range Analog Input	Configurable in software. See Chapter 6.

Table C-13. Internal Electronics Temperature Sensor

Parameter	Value
Accuracy	± 2 $^{\circ}$ C at 25 $^{\circ}$ C
	± 3 $^{\circ}$ C over full 165 $^{\circ}$ C range
Scaling	Fixed at factory
Temperature Fault Levels	Configurable in software. See Chapter 6.
I/O Execution Rate	9.6 ms

Table C-14. 5 V Sensor Supply Output

Parameter	Value
Tolerance	$\pm 0.5\%$ of 5 V full-scale over the full temperature range

Table C-15. Aux Power Out

Parameter	Value
Output Voltage	Equals Input Voltage and is internally referenced to the discrete return.
Max output current	4 A

Actuator Response

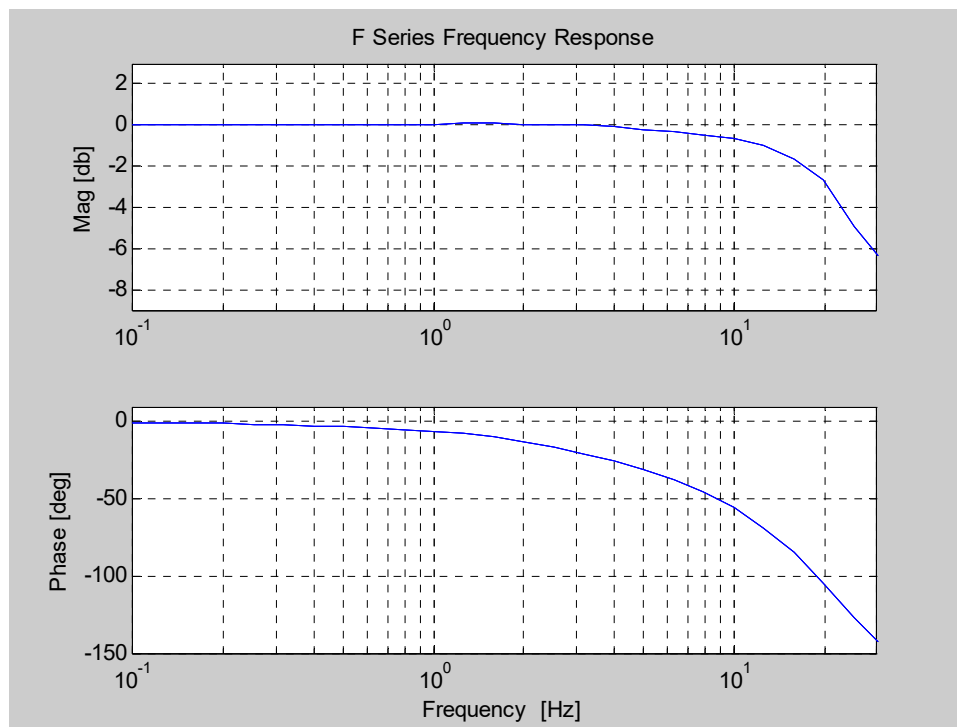


Figure C-1. Typical Bode Plot of F-Series Actuator Response

Revision History

Changes in Revision A:

- Added J1939 CAN Demand Crosstalk and notice box to Warnings and Notices page.
- Added note: “5418-3834, 5418-7289 (FSTP), and 5418-7290 (Actr) are proprietary part numbers and some features perform differently than documented here” (page 12).
- Added note, “Analog Demand is not available in firmware 5418-9520” (pages 16, 45, 54, 116).

New Manual—

Declarations

EU DECLARATION OF CONFORMITY

EU DoC No.: 00336-04-EU-02-01
Manufacturer's Name: WOODWARD INC.
Manufacturer's Contact Address: 3800 Wilson Avenue
Loveland, CO 80538 USA
Model Name(s)/Number(s): F-Series Actuators and Integrated Throttle Body (ITB) Valves
The object of the declaration described above is in conformity with the following relevant Union harmonization legislation: Directive 2014/30/EU of the European Parliament and of the Council of 26 February 2014 on the harmonization of the laws of the Member States relating to electromagnetic compatibility (EMC)
Directive 2011/65/EU of the European Parliament and of the Council of 8 June 2011 on the restriction of the use of certain hazardous substances in electrical and electronic equipment
Exemptions in use: 7(c)-I
Applicable Standards: EN61000-6-2, 2005: EMC Part 6-2: Generic Standards - Immunity for Industrial Environments
EN61000-6-4, 2011: EMC Part 6-4: Generic Standards - Emissions for Industrial Environments
Conformity Assessment: Woodward EMC Conformity Assessment 00336-04-EU-EMC-06-02

This declaration of conformity is issued under the sole responsibility of the manufacturer
We, the undersigned, hereby declare that the equipment specified above conforms to the above Directive(s).

MANUFACTURER



Signature

Mike Row

Full Name

Compliance Engineering Supervisor

Position

Woodward, Fort Collins, CO, USA

Place

26-Feb-2020

Date

**DECLARATION OF INCORPORATION
Of Partly Completed Machinery
2006/42/EC**

File name: 00336-04-EU-02-03

Manufacturer's Name: WOODWARD INC.

Manufacturer's Address: 3800 Wilson Avenue
Loveland, CO 80538 USA

Model Names: F-Series Actuators and Integrated Throttle Bodies

**This product complies, where
applicable, with the following
Essential Requirements of Annex I:** 1.1, 1.2, 1.3, 1.4, 1.5, 1.6, 1.7

The relevant technical documentation is compiled in accordance with part B of Annex VII. Woodward shall transmit relevant information if required by a reasoned request by the national authorities. The method of transmittal shall be agreed upon by the applicable parties.


The person authorized to compile the technical documentation:

Name: Dominik Kania, Managing Director
Address: Woodward Poland Sp. z o.o., ul. Skarbowa 32, 32-005 Niepolomice, Poland

This product must not be put into service until the final machinery into which it is to be incorporated has been declared in conformity with the provisions of this Directive, where appropriate.

The undersigned hereby declares, on behalf of Woodward Governor Company of Loveland and Fort Collins, Colorado that the above referenced product is in conformity with Directive 2006/42/EC as partly completed machinery:

MANUFACTURER


Signature
Mike Row
Full Name
Compliance Engineering Supervisor
Position
Woodward Inc., Fort Collins, CO, USA
Place
25-Feb-2020
Date

Document: 5-09-1182 (rev. 16)

We appreciate your comments about the content of our publications.

Send comments to: industrial.support@woodward.com

Please reference publication **35143**.



B 3 5 1 4 3 : A



PO Box 1519, Fort Collins CO 80522-1519, USA
1041 Woodward Way, Fort Collins CO 80524, USA
Phone +1 (970) 482-5811

Email and Website—www.woodward.com

Woodward has company-owned plants, subsidiaries, and branches, as well as authorized distributors and other authorized service and sales facilities throughout the world.

Complete address / phone / fax / email information for all locations is available on our website.