



## **EPG Electrically Powered Governor**

**Isochronous Models 512/524 and 1712/1724**  
**Standard, Start Fuel Limit, Dual Dynamics**  
**UL Listed E97763**

**Installation and Operation Manual**



### General Precautions

Read this entire manual and all other publications pertaining to the work to be performed before installing, operating, or servicing this equipment.

Practice all plant and safety instructions and precautions.

Failure to follow instructions can cause personal injury and/or property damage.



### Revisions

This publication may have been revised or updated since this copy was produced. To verify that you have the latest revision, check manual **26311**, *Revision Status & Distribution Restrictions of Woodward Technical Publications*, on the *publications page* of the Woodward website:

[www.woodward.com/publications](http://www.woodward.com/publications)

The latest version of most publications is available on the *publications page*. If your publication is not there, please contact your customer service representative to get the latest copy.



### Proper Use

Any unauthorized modifications to or use of this equipment outside its specified mechanical, electrical, or other operating limits may cause personal injury and/or property damage, including damage to the equipment. Any such unauthorized modifications: (i) constitute "misuse" and/or "negligence" within the meaning of the product warranty thereby excluding warranty coverage for any resulting damage, and (ii) invalidate product certifications or listings.



### Translated Publications

If the cover of this publication states "Translation of the Original Instructions" please note:

The original source of this publication may have been updated since this translation was made. Be sure to check manual **26311**, *Revision Status & Distribution Restrictions of Woodward Technical Publications*, to verify whether this translation is up to date. Out-of-date translations are marked with . Always compare with the original for technical specifications and for proper and safe installation and operation procedures.

**Revisions**—Changes in this publication since the last revision are indicated by a black line alongside the text.

Woodward reserves the right to update any portion of this publication at any time. Information provided by Woodward is believed to be correct and reliable. However, no responsibility is assumed by Woodward unless otherwise expressly undertaken.

# Contents

<b>WARNINGS AND NOTICES .....</b>	<b>III</b>
<b>ELECTROSTATIC DISCHARGE AWARENESS .....</b>	<b>IV</b>
<b>CHAPTER 1. GENERAL INFORMATION.....</b>	<b>1</b>
Introduction .....	1
Application .....	1
Part Number Selection .....	1
Accessories .....	2
References .....	3
<b>CHAPTER 2. INSTALLATION, CHECKOUT, AND CALIBRATION.....</b>	<b>6</b>
General .....	6
Speed Control Mounting.....	6
Actuator Mounting and Linkage.....	6
Wiring Instructions .....	8
Installation Checks .....	13
<b>CHAPTER 3. OPERATION .....</b>	<b>18</b>
<b>CHAPTER 4. DESCRIPTION.....</b>	<b>19</b>
Speed Control Applications .....	19
Applications Using a Ramp Generator .....	21
Paralleled Generator Applications.....	21
<b>CHAPTER 5. TROUBLESHOOTING .....</b>	<b>23</b>
Troubleshooting Procedure .....	23
Other Checks.....	23
<b>CHAPTER 6. PRODUCT SUPPORT AND SERVICE OPTIONS.....</b>	<b>25</b>
Product Support Options .....	25
Product Service Options.....	25
Returning Equipment for Repair.....	26
Replacement Parts .....	26
Engineering Services.....	27
Contacting Woodward's Support Organization .....	27
Technical Assistance.....	28
<b>DECLARATIONS.....</b>	<b>30</b>

## Illustrations and Tables

Figure 1-1. Basic Electrically Powered Governor System.....	4
Figure 1-2. Outline Drawing for EPG 512/1712 and 524/1724 Speed Controls ....	5
Figure 1-3. Outline Drawing for EPG 1712/1724 and 512/524 Actuators .....	5
Figure 2-1. Typical Installation Kit .....	6
Figure 2-2. Linear Linkage.....	7
Figure 2-3. Carburetor Compensating Linkage at Minimum Fuel .....	7
Figure 2-4. Carburetor Compensating Linkage at Maximum Fuel .....	7
Figure 2-5. Typical EPG (Isochronous) Wiring Diagram .....	9
Figure 2-6. Correct and Incorrect Wiring to Battery.....	10
Figure 2-7. Typical Wiring to 2500 Ramp Generator.....	11
Figure 2-8. Additional Wiring to Install the EPG Load Sensor .....	12
Figure 2-9. Starting and Transient Response Curves .....	17
Figure 4-1. EPG Block Schematic Diagram .....	20
Figure 4-2. Actuator Schematic.....	21
Table 1-1. Part Number Selection Table .....	2

## Warnings and Notices

### Important Definitions



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

- **DANGER**—Indicates a hazardous situation which, if not avoided, will result in death or serious injury.
- **WARNING**—Indicates a hazardous situation which, if not avoided, could result in death or serious injury.
- **CAUTION**—Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.
- **NOTICE**—Indicates a hazard that could result in property damage only (including damage to the control).
- **IMPORTANT**—Designates an operating tip or maintenance suggestion.

#### **WARNING**

**Overspeed /  
Overtemperature /  
Overpressure**

The engine, turbine, or other type of prime mover should be equipped with an overspeed shutdown device to protect against runaway or damage to the prime mover with possible personal injury, loss of life, or property damage.

The overspeed shutdown device must be totally independent of the prime mover control system. An overtemperature or overpressure shutdown device may also be needed for safety, as appropriate.

#### **WARNING**

**Personal Protective  
Equipment**

The products described in this publication may present risks that could lead to personal injury, loss of life, or property damage. Always wear the appropriate personal protective equipment (PPE) for the job at hand. Equipment that should be considered includes but is not limited to:

- Eye Protection
- Hearing Protection
- Hard Hat
- Gloves
- Safety Boots
- Respirator

Always read the proper Material Safety Data Sheet (MSDS) for any working fluid(s) and comply with recommended safety equipment.

#### **WARNING**

**Start-up**

Be prepared to make an emergency shutdown when starting the engine, turbine, or other type of prime mover, to protect against runaway or overspeed with possible personal injury, loss of life, or property damage.

#### **WARNING**

**Automotive  
Applications**

On- and off-highway Mobile Applications: Unless Woodward's control functions as the supervisory control, customer should install a system totally independent of the prime mover control system that monitors for supervisory control of engine (and takes appropriate action if supervisory control is lost) to protect against loss of engine control with possible personal injury, loss of life, or property damage.

**NOTICE****Battery Charging  
Device**

To prevent damage to a control system that uses an alternator or battery-charging device, make sure the charging device is turned off before disconnecting the battery from the system.

## Electrostatic Discharge Awareness

**NOTICE****Electrostatic  
Precautions**

Electronic controls contain static-sensitive parts. Observe the following precautions to prevent damage to these parts:

- Discharge body static before handling the control (with power to the control turned off, contact a grounded surface and maintain contact while handling the control).
- Avoid all plastic, vinyl, and Styrofoam (except antistatic versions) around printed circuit boards.
- Do not touch the components or conductors on a printed circuit board with your hands or with conductive devices.

To prevent damage to electronic components caused by improper handling, read and observe the precautions in Woodward manual **82715**, *Guide for Handling and Protection of Electronic Controls, Printed Circuit Boards, and Modules*.

Follow these precautions when working with or near the control.

1. Avoid the build-up of static electricity on your body by not wearing clothing made of synthetic materials. Wear cotton or cotton-blend materials as much as possible because these do not store static electric charges as much as synthetics.
2. Do not remove the printed circuit board (PCB) from the control cabinet unless absolutely necessary. If you must remove the PCB from the control cabinet, follow these precautions:
  - Do not touch any part of the PCB except the edges.
  - Do not touch the electrical conductors, the connectors, or the components with conductive devices or with your hands.
  - When replacing a PCB, keep the new PCB in the plastic antistatic protective bag it comes in until you are ready to install it. Immediately after removing the old PCB from the control cabinet, place it in the antistatic protective bag.

# Chapter 1.

## General Information

### Introduction

This manual covers Electrically Power Governor (EPG) models 512/524 and 1712/1724. Refer to the appropriate manual or contact Woodward for information about other versions of the EPG.

### Application

The EPG is used to control the speed of diesel, gas, and gasoline engines. It can also control the speed of gas turbines. Installation of EPG actuators is simple because they require neither mechanical drive nor hydraulic supply.

The EPG handles prime movers with mechanical loads and generator loads equally well. Generator sets which will be paralleled, however, require additional appropriate switch gear, current and potential transformers, and the Woodward Generator Load Sensor.

An EPG is a three-component system, requiring a magnetic pickup, speed control, and actuator.

A battery charger must be used to keep the battery charged. Maximum steady state current consumption is 4 A for the 12-volt models (512/1712), and 3 A for the 24-volt models (524/1724).

### Part Number Selection

Use EPG Model 512/1712 for operation in 12-volt systems. Use Model 524/1724 for operation in 24-volt systems.

Additionally, speed controls are available for four ranges of magnetic pickup frequencies, for diesel engines and gas turbines, or for gasoline and gas engines. Actuators have a double-ended output shaft for either clockwise or counterclockwise rotation to increase fuel.

Speed controls and actuators must be compatible. Use the Part Number Selection Table below (Table 1-1) to choose compatible EPG speed controls and actuators.

The optional Start Fuel Limit feature allows setting a maximum actuator position during start-up. The maximum position remains in effect until the engine reaches the selected idle or rated speed. The limit may be adjusted out of the way by turning the adjustment potentiometer fully clockwise.

The Dual Dynamics feature allows tailoring a special set of responses for unloaded and loaded operating conditions. This type of control is often needed for gas engines and other systems with non-linear fuel systems. A switch is used to change between slow and fast dynamics.

<b>Isochronous Speed Control—</b>					
For use with engine type (system battery voltage)	Speed Range (Hz) Required				Actuator Part Number
	750 to 1500	1500 to 3000	3000 to 6000	6000 to 12 000	
Diesel or Gas Turbine (12 V)	8290-062	8290-050			8256-022 (512) **
Gasoline or Gas Engine (12 V)				8290-051	
Diesel w/ Start Fuel Limit (12 V)			8290-186* **		
Diesel w/o Start Fuel Limit (12 V)			8290-190* **		8256-017 (1712) **
Gas w/ Start Fuel Limit (12 V)			8290-187* **		
Gasoline or Gas Engine (24 V)				8290-052	8256-021 (524) **
Diesel w/ Start Fuel Limit (24 V)			8290-184* **		
Diesel w/o Start Fuel Limit (24 V)			8290-189* **		8256-016 (1724) **
Gasoline or Gas w/ Start Fuel Limit (24 V)			8290-185* **		
<b>Droop Speed Control—</b>					
Gasoline or Gas Engine (24 V)			8290-045		8256-021 (524) **  8256-016 (1724) **

\*—These part numbers are EU Directive compliant.

\*\*—These part numbers are UL/cUL Listed.

Table 1-1. Part Number Selection Table

## Accessories

This manual includes some information about accessories frequently used with EPGs.

### To Parallel Generators

Add the Generator Load Sensor to the EPG in paralleled generator applications. Woodward makes many accessories for paralleled generator applications.

### To Decrease Acceleration and Deceleration

The Ramp Generator or an optional, external capacitor can be used to increase the time to go from idle to rated speeds and vice versa. The Ramp Generator provides a linear ramp with times adjustable to 25 seconds in a typical case. It is useful in smoke-limiting applications. Use the 8271-909 with 24 V batteries and the 8271-910 for 12 V batteries. The capacitor provides an exponential ramp with times up to four seconds. Exponential means it changes (speed in this case) rapidly at first but slows as it approaches its final value. See the typical wiring diagram for capacitor requirements.



## References

These publications can be obtained from your Woodward authorized Distributor or AISF (Authorized Independent Service Facility). All are also available on the Woodward website ([www.woodward.com](http://www.woodward.com)).

<b>Product Specification</b>	<b>Title</b>
04106	Model 512/1712 & 524/1724 Electrically Powered Governors

<b>Manual</b>	<b>Title</b>
25070	Electric Governor Installation Guide
82510	Magnetic Pickups for Electric Governors

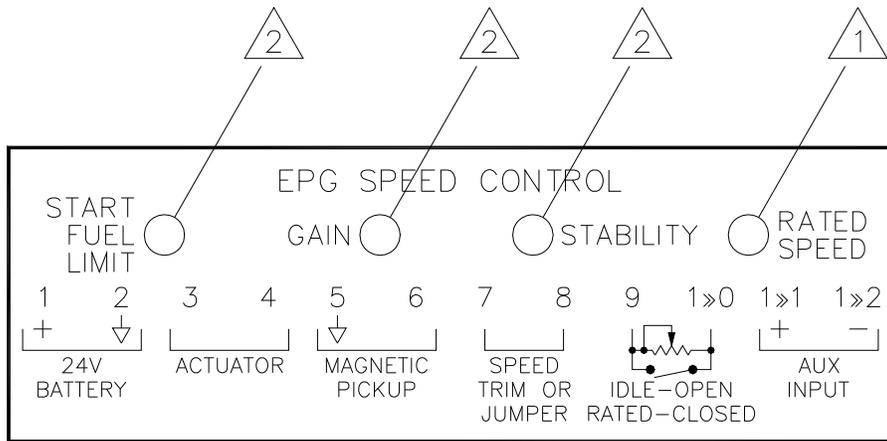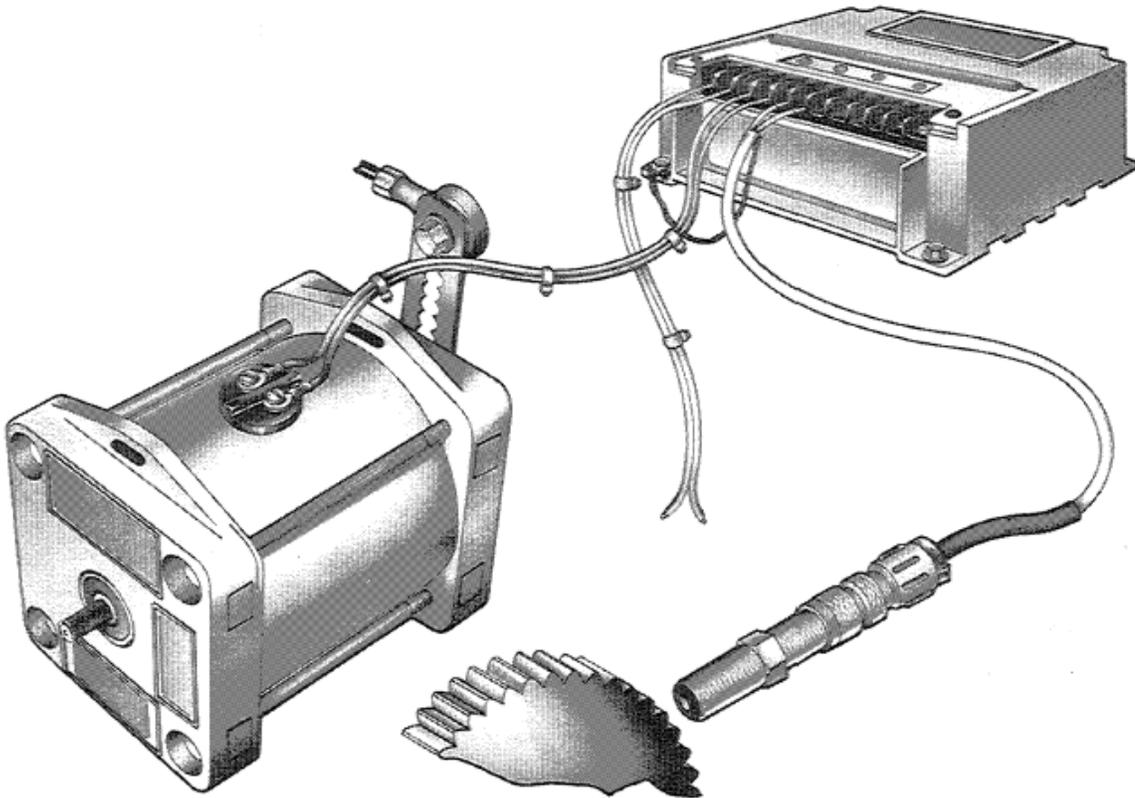

824-306  
91-02-20 GA

1 25-TURN POTENTIOMETER. RATCHET-TYPE CLUTCHES AT BOTH ENDS OF TRAVEL.

2 ONE-TURN POTENTIOMETER. SOLID STOPS AT BOTH ENDS OF TRAVEL.

MOST MODELS DO NOT HAVE THE START FUEL LIMIT OR DUAL DYNAMICS.

Figure 1-1. Basic Electrically Powered Governor System

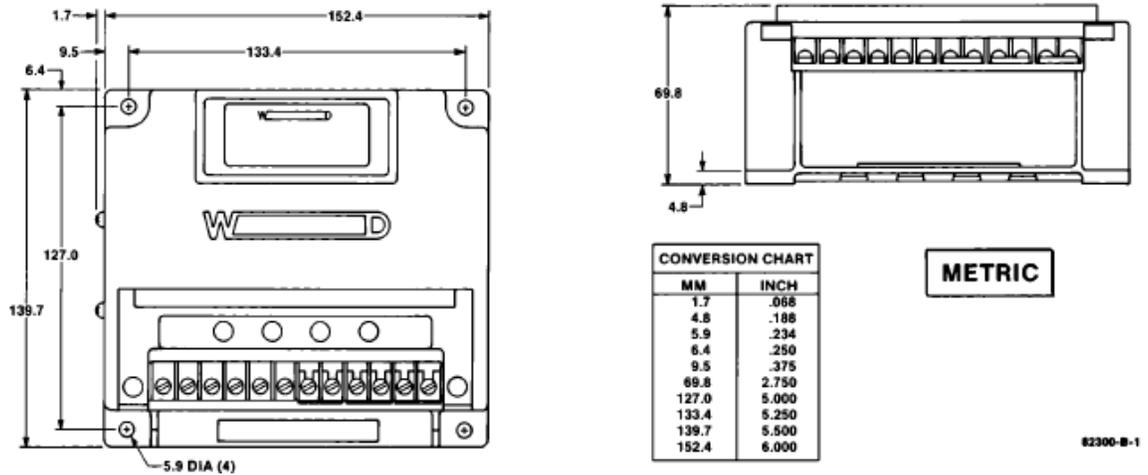


Figure 1-2. Outline Drawing for EPG 512/1712 and 524/1724 Speed Controls  
(Do not use for construction.)

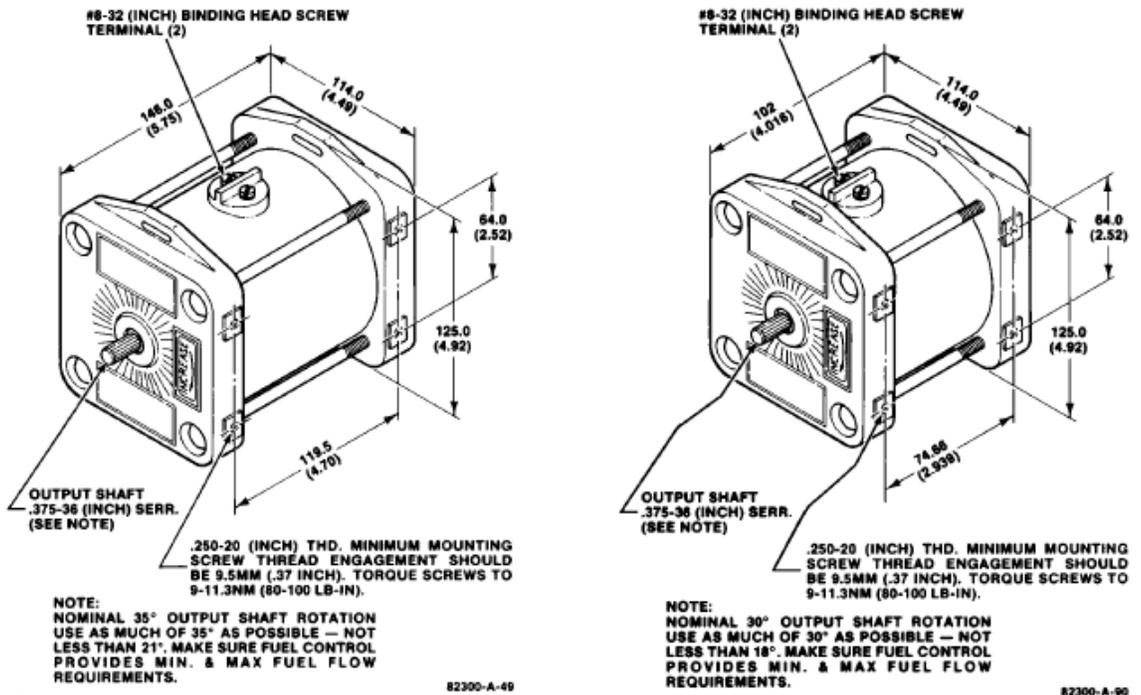


Figure 1-3. Outline Drawing for EPG 1712/1724 and 512/524 Actuators  
(Do not use for construction.)

## Chapter 2. Installation, Checkout, and Calibration

### General

Custom installation kits, including actuator mounting hardware, linkage, and actuator wiring harness, are available for some specific engines. Contact Woodward for more information.

#### **WARNING**

The engine, turbine, or other type of prime mover should be equipped with an overspeed shutdown device to protect against runaway or damage to the prime mover with possible personal injury, loss of life, or property damage.

The overspeed shutdown device must be totally independent of the prime mover control system. An overtemperature or overpressure shutdown device may also be needed for safety, as appropriate.

### Speed Control Mounting

The speed control is designed to operate within a temperature range of  $-40$  to  $+75$  °C ( $-40$  to  $+167$  °F). Mount the control in a location with space for adjustment and wiring access. If mounted on the prime mover, do not expose the speed control to sources of radiant heat such as exhaust manifolds or turbochargers. Also choose a protected location so that the control won't be damaged when moving the prime mover or when equipment is moving near by. Mount the control close to the actuator and battery to meet the wire length requirements. Allow for adequate ventilation.

The EPG speed control must be mounted on a metal plate that is at the same ground potential as the case. The case and mounting plate must be grounded to either the protective earth of the building or, if no protective earth is available, the frame ground of the engine/skid.

### Actuator Mounting and Linkage

#### **MOUNTING SCREWS**

0.250-20 (inch) thread. Minimum mounting screw engagement should be 9.5 mm (0.375 inch).

Torque screws to 9–11 N·m (80–100 lb-in). Use star washers between the screw heads and control body to break paint and ground the EPG chassis to the mounting plate.

Actuator location must allow installation of a suitable linkage. The actuators are designed to operate within a temperature range of  $-40$  to  $+93$  °C ( $-40$  to  $+200$  °F). Do not expose the actuator to sources of excessive heat.

Match the actuator's direction of rotation for increased fuel with the fuel control's direction of rotation for increased fuel by choosing a suitable linkage.

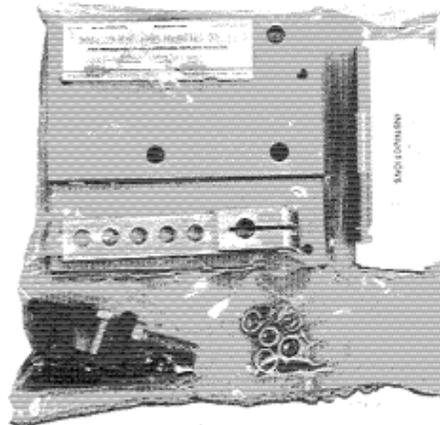


Figure 2-1. Typical Installation Kit

If you are using a Woodward supplied installation kit, follow its instructions and skip over Linkage Compatibility. Begin again with Installing the Magnetic Pickup.

## Linkage Compatibility

Also match linkage linearity to the fuel control. Use a linear linkage as shown in Figure 2-2 unless the prime mover has a carburetor or other non-linear fuel control. See Figures 2-3 and 2-4 for a carburetor compensating linkage. Contact Woodward if a linkage different from those shown is required. Incorrect linearity matching can cause stable operation at some fuel settings but oscillation at other fuel settings.




250-073  
02-7-31

Figure 2-2. Linear Linkage



25000-A-74

Figure 2-3. Carburetor Compensating Linkage at Minimum Fuel

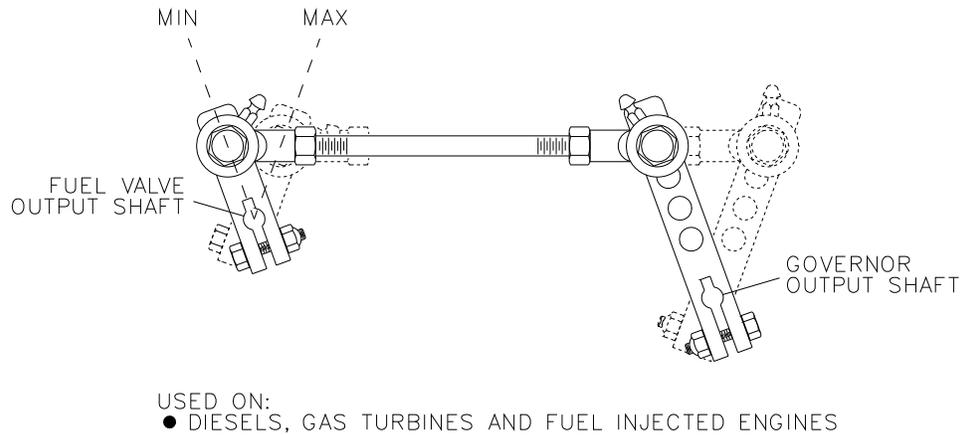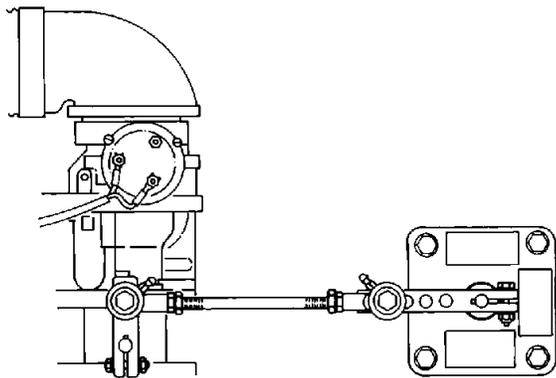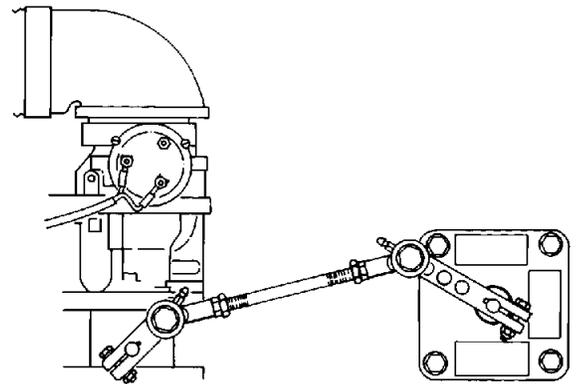

25000-A-75

Figure 2-4. Carburetor Compensating Linkage at Maximum Fuel

Manually stroke the fuel control linkage from stop to stop as if the actuator were moving it. The linkage must move freely without friction and without backlash. Lubricate or replace linkage or fuel control parts as required.

Mount the actuator and install a suitable linkage.

A return spring is included in the actuator. Do not use an additional return spring. (Low force return springs that may be located in an engine's valve cover usually don't affect EPG performance.)

Make sure that the actuator is capable of moving the fuel control to the maximum and minimum limits. Let the fuel control limit actuator travel. Set the linkage so that the actuator is just above minimum when the fuel control is at its minimum stop and (except for Detroit Diesel engines) so that the actuator is just below maximum when the fuel control is at its maximum stop. We recommend that Woodward installation kits be used for Detroit Diesel engines.

Use good rod end connectors. The link connecting the actuator lever to the fuel control lever must not be so long that it flexes when the prime mover is running.

## Installing the Magnetic Pickup

Mount the magnetic pickup through a housing or rigid bracket. Make sure that the sensed gear is of magnetic material. The gap between the pickup and the outside diameter of the gear should be set to approximately 1.0 mm (0.04") at the closest point (radial runout). Using the pickup with small gears may require spacing as close as 0.25 mm (0.010").

If you cannot measure the gap directly, it can be set in this manner: with the prime mover shut down, turn the pickup in (clockwise) until it touches the outside diameter of a tooth. Then back out the pickup (counterclockwise) approximately three-quarters of a turn. Run the gear slowly through 360 degree rotation to check the clearance of the pickup. When the gap is set, tighten the jam nut securely against the housing or bracket.

The standard pickup models require mating connectors, MS 3102R-18-3P. The connectors are not furnished with the pickup, but may be ordered from Woodward if desired. See manual 82510, *Magnetic Pickups and Proximity Switches for Electronic Controls*, for more information

## Wiring Instructions


Use a wiring diagram for the specific part number of your EPG system to make all wiring connections. The wiring diagram is available from Woodward. Typical wiring is shown in Figure 2-5.

Make all connections using insulated terminals. The wiring from actuator to speed control and from the battery to the speed control must be as short as possible. Maximum wiring lengths are:

Maximum Wiring Length Chart

EPG Model	Maximum Wire Length	
	14 AWG (2 mm <sup>2</sup> )	12 AWG (3 mm <sup>2</sup> )
512/1712	10 ft (3 m)	20 ft (6 m)
524/1724	35 ft (11 m)	75 ft (23 m)

The fuse and switch or circuit breaker must be in the non-grounded battery lead. Use a fuse or circuit breaker as specified in the Switch and Fuse Requirements Chart. Do not use a fuse of higher current rating. Starter relays make good EPG power switches.

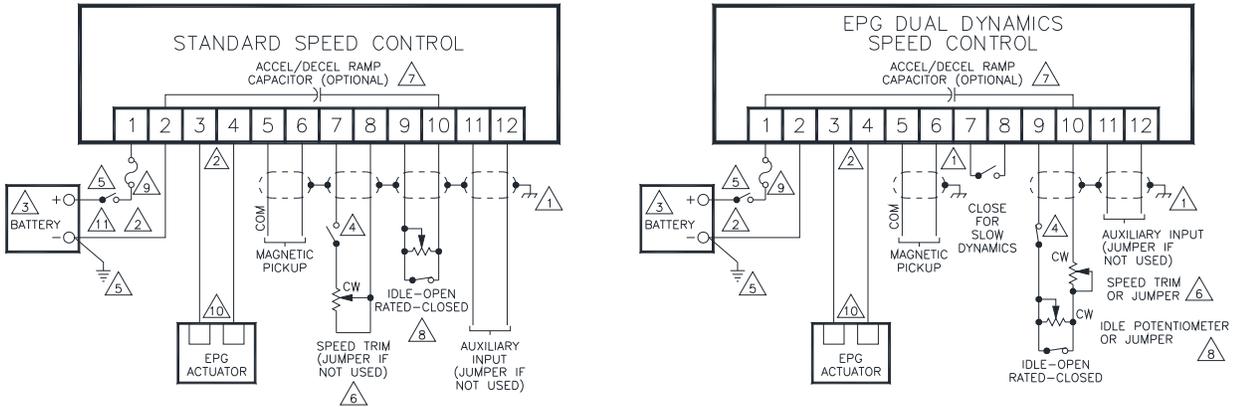

EPG SPEED CONTROL PLANT WIRING

NOTE:

- 1 SHIELDED WIRES TO BE TWISTED PAIRS OR TWISTED 3 CONDUCTOR, GROUNDED AT ONE END ONLY.
  - 2 NO. 12 AWG OR 14 AWG STRANDED WIRE, MUST BE AS SHORT AS POSSIBLE AND ROUTED AS A PAIR  $\leq 10$  MM APART. (SEE MAX LENGTH IN CHART).
- NOTE: IN EXPENSIVE AC OR DC BATTERY CHARGERS USED FOR MAINTAINING THE BATTERY CHARGE, ALLOW MODERATE SURGES FROM THE AC MAINS TO COUPLE TO DC POWER: TO PROTECT THE EPG & MEET EMC REQUIREMENTS A SURGE ARRESTOR OF AT LEAST THE ENERGY & VOLTAGE CAPABILITY OF A V47ZA7 MOV SHOULD BE PLACED FROM BATTERY MINUS TO BATTERY PLUS TERMINALS.
- 3 SEE TEXT FOR VOLTAGE.
  - 4 OPEN FOR MINIMUM FUEL, DO NOT USE EITHER THE MINIMUM FUEL OPTION, OR DISCONNECT THE ACTUATOR LEADS, OR DISCONNECT THE POWER TO THE CONTROL AS PART OF ANY EMERGENCY STOP SEQUENCE.
  - 5 FOR POSITIVE GROUND SYSTEMS, SWITCH AND FUSE TO BE LOCATED IN SERIES WITH BATTERY (-) AND TERMINAL 2. POS TERMINAL BECOMES CHASSIS GROUND, LEADS FROM BATTERY TO TERMINALS 1 & 2 MUST BE DIRECT AND NOT PASS THROUGH DISTRIBUTION POINTS. USE 10 A FUSE AND SWITCH.

- 6 APPROXIMATE SPEED CHANGE WITH TRIM POTENTIOMETER:  
 $\pm 2.5\%$  USING A 1K OHM POTENTIOMETER  
 $\pm 5\%$  USING A 2K OHM POTENTIOMETER
- 7 APPROXIMATELY ONE SECOND RAMP TIME PER 50 UF. CAPACITOR SPECIFICATION: 200 UF MAXIMUM 15 WVDC MINIMUM, LESS THAN 30 UA DC LEAKAGE CURRENT OVER TEMPERATURE RANGE.
- 8 IDLE RANGE APPROXIMATELY 25% TO 100% OF RATED USING 50K POTENTIOMETER. FOR FIXED IDLE SPEED, CALCULATE THE VALUE OF THE RESISTOR:  

$$R = 17 \text{ K OHM} \left( \frac{\text{RATED SPEED}}{\text{IDLE SPEED}} - 1 \right)$$
 JUMPER IF IDLE SPEED IS NOT USED.
- 9 USE A 10 AMP FUSE (3 AG OR GBB TYPE).
- 10 POLARITY NOT IMPORTANT.
- 11 CONNECT CONTROL WIRES ONLY AT BATTERY POSTS, NOT AT OTHER CONNECTION POINTS.

824-315  
02-7-31

Figure 2-5. Typical EPG (Isochronous) Wiring Diagram (Do not use for construction.)

Switch and Fuse Requirements Chart

EPG Model	Voltage	Switch Rating	Fuse
512/1712	12	10 A	10 A
524/1724	24	10 A	10 A

Wire Harness Part Numbers Chart

Harness Part Number	Harness Lengths		
	MPU	Actuator	Battery
8924-621	10 ft (3 m)	15 ft (5 m)	15 ft (5 m)
8924-620	10 ft (3 m)	25 ft (8 m)	25 ft (8 m)

The battery connection to speed control terminals 1 and 2 must be directly from the terminals, not through distribution points (see Figure 2-6).


Do not connect any other wires to terminals 1 and 2 except the power for the 2500 Ramp Generator, if used.

<b>NOTICE</b>	<b>To prevent damage to the control, never disconnect the battery while the engine is running.</b>
---------------	--

NOTICE


**Connect power wires directly to the battery terminals. The speed control can be damaged if these wires are connected to distribution points. See Figure 2-6.**

Note: In expensive AC to DC Battery chargers used for maintaining the battery charge allow moderate surges from the AC mains to couple to DC power: To protect the EPG a surge arrestor of at least the energy & voltage capability of a V47ZA7 MOV should be placed from battery minus to battery plus terminals.

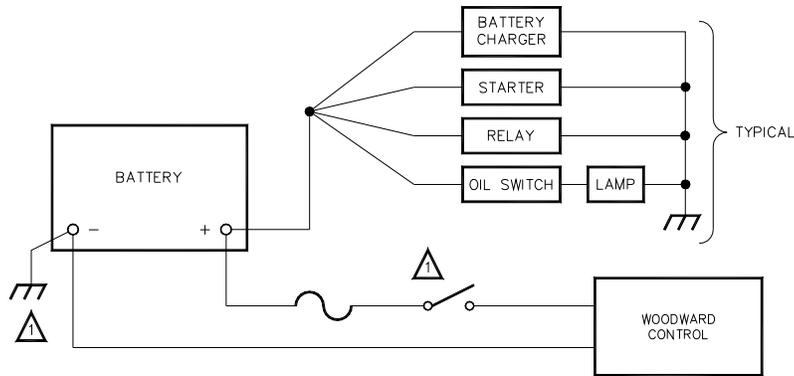

RIGHT

NOTE: A NEGATIVE GROUND SYSTEM IS SHOWN. IF A POSITIVE GROUND SYSTEM IS USED, THE SWITCH AND FUSE MUST BE LOCATED IN SERIES WITH BATTERY (-) AND TERMINAL (TB1-2) ON THE WOODWARD CONTROL. THE POSITIVE TERMINAL BECOMES CHASSIS GROUND.

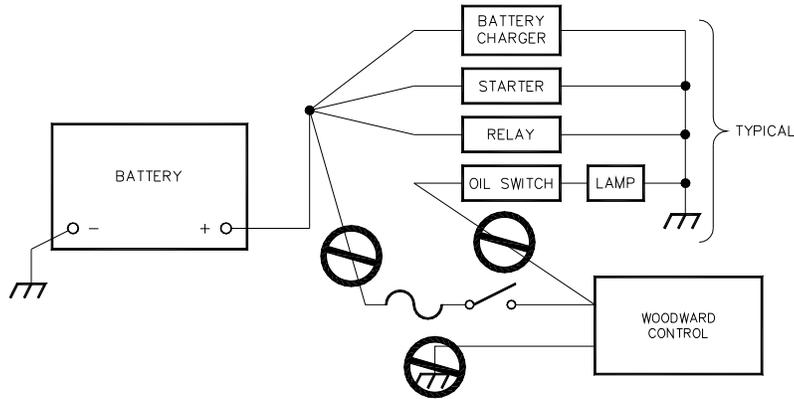

WRONG

824-143  
97-08-22 skw

Figure 2-6. Correct and Incorrect Wiring to Battery

**Shields**

Connect shields as shown in your wiring diagram. Terminate shields at a chassis mounting screw. Only one end of each shield (the end nearest the speed control) should be tied to ground. All shields must be tied to the same point.

When passing shields through connectors and terminal block, treat each shield as if it were a signal wire. Each shield must be given its own pin or terminal and be kept insulated from nearby wires and metal conductors. Do not tin (solder) braided shields.

Connect the speed control chassis to system ground ( ).

### Additional Wiring for 2500 Ramp Generators (optional)

Connect the 2500 Ramp Generator terminals 1 and 2 to speed control terminals 1 and 2, respectively. Connect 2500 Ramp Generator terminal 4 to speed control terminal 10 with a shielded wire. Connect the shield, at the speed control, to a chassis mounting screw for grounding. Do not connect the shield at the ramp generator end.

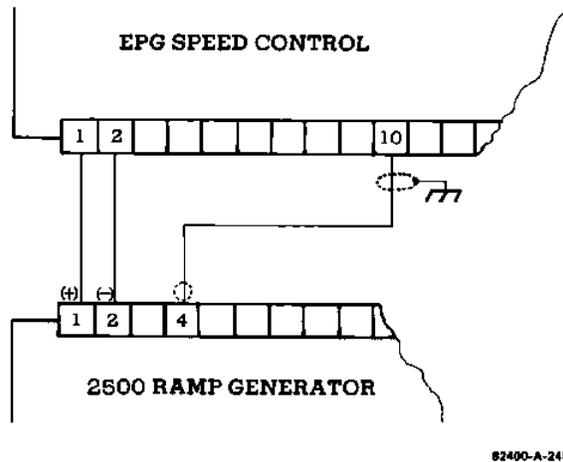



Figure 2-7. Typical Wiring to 2500 Ramp Generator

### Additional Wiring for EPG Load Sensor (optional)

Mount the Load Sensor where it will be between  $-40$  and  $+71$  °C ( $-40$  and  $+160$  °F). Do not mount it on the prime mover. The best location is usually the switchgear cabinet which has the CTs and PTs.

Wire the Load Sensor as shown in the diagram for additional wiring. Careful attention to correct CT and PT wiring can save time during the phasing checks later on. Install appropriate voltage selection jumpers at terminals 17 through 20. Refer to Manual 82313, *Generator Load Sensor 8290-048*, for load sensor information.

Contact Woodward before connecting anything other than the 8290-048 Load Sensor to terminals 11 and 12 of the EPG Speed Control.

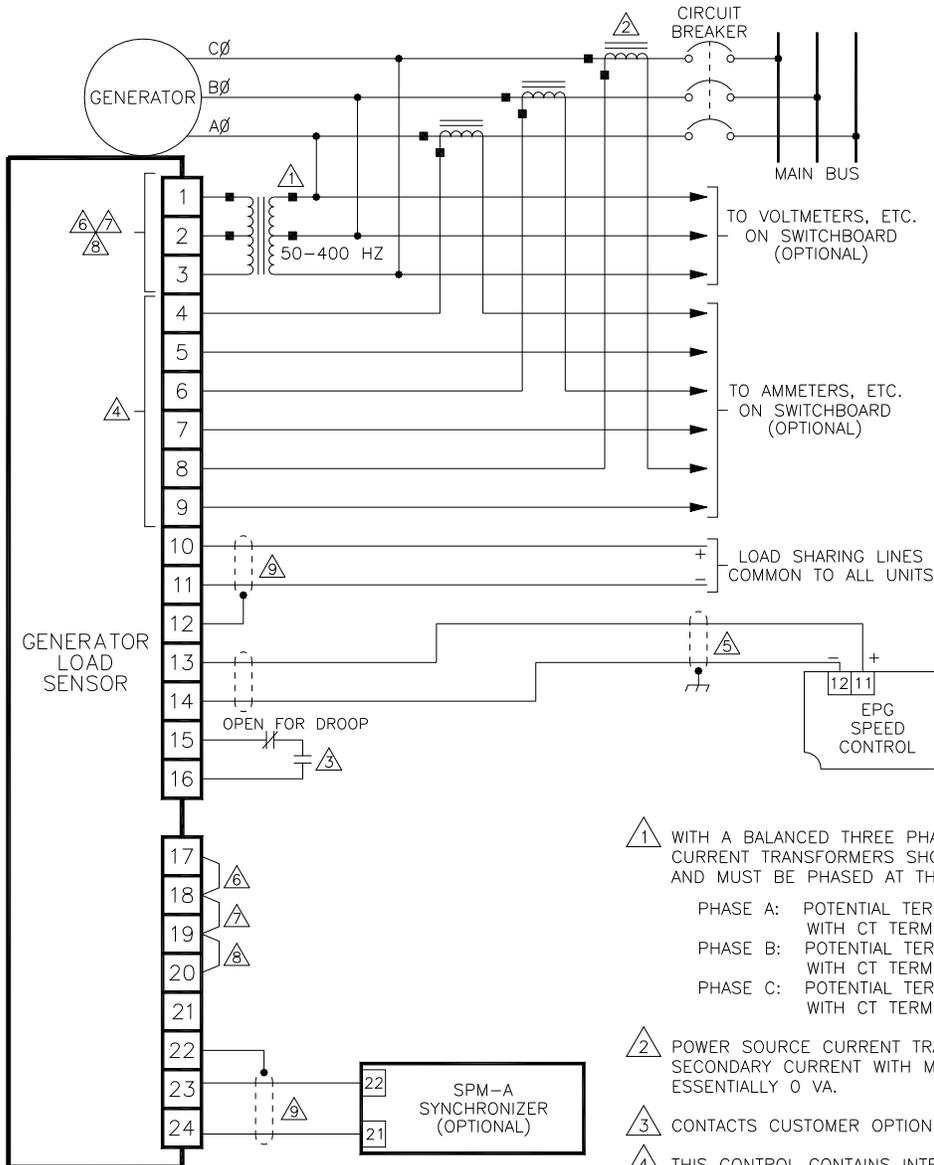

- ① WITH A BALANCED THREE PHASE LOAD AND UNITY POWER FACTOR, THE CURRENT TRANSFORMERS SHOULD BE WIRED IN THE CORRECT POTENTIAL LEG AND MUST BE PHASED AT THE CONTROL AS FOLLOWS:  
 PHASE A: POTENTIAL TERMINAL 1, WITH RESPECT TO NEUTRAL, IN PHASE WITH CT TERMINALS 4 TO 5.  
 PHASE B: POTENTIAL TERMINAL 2, WITH RESPECT TO NEUTRAL, IN PHASE WITH CT TERMINALS 6 TO 7.  
 PHASE C: POTENTIAL TERMINAL 3, WITH RESPECT TO NEUTRAL, IN PHASE WITH CT TERMINALS 8 TO 9.
- ② POWER SOURCE CURRENT TRANSFORMERS SHOULD BE SIZED TO PRODUCE 5A SECONDARY CURRENT WITH MAXIMUM GENERATOR CURRENT. CT BURDEN IS ESSENTIALLY 0 VA.
- ③ CONTACTS CUSTOMER OPTION.
- ④ THIS CONTROL CONTAINS INTERNAL BURDEN RESISTORS. THESE BURDEN RESISTORS MUST BE CONNECTED ACROSS POWER SOURCE CURRENT TRANSFORMERS WHENEVER UNIT IS RUNNING TO PREVENT LETHAL HIGH VOLTAGE FROM DEVELOPING ON LEADS TO THESE TERMINALS.
- ⑤ OUTPUT LINES SHOULD BE TWISTED SHIELDED PAIRS. SHIELD IS TO BE TIED TO GROUND AT SPEED CONTROL ONLY.
- ⑥ JUMPER 17 TO 18 AND 19 TO 20 WHEN POTENTIAL INPUT AT TERMINALS 1 THROUGH 3 IS 95 TO 130 VAC PHASE TO PHASE (50-400 HZ).
- ⑦ JUMPER 18 TO 19 WHEN POTENTIAL INPUT AT TERMINALS 1 THROUGH 3 IS 190 TO 260 VAC PHASE TO PHASE (50-400 HZ).
- ⑧ POTENTIAL TRANSFORMER BURDEN IS 5 VA PER PHASE WITH 230 VAC INPUT AND 2.5 VA PER PHASE WITH 115 VAC INPUT.
- ⑨ CONTROL SIGNAL LINES SHOULD BE TWISTED, SHIELDED PAIRS. SHIELD IS TO BE TIED TO COMMON AT ONE END ONLY.

824-313  
02-7-31

Figure 2-8. Additional Wiring to Install the EPG Load Sensor (for paralleled generator applications)

## Installation Checks

### Checks for all Applications

The following steps check only the speed control and actuator, which must work correctly before paralleling the generator. Since most faults appear when the prime mover is first run, this step-by-step approach eliminates most problems before they occur. The main part of Chapter 5 (Troubleshooting) is doing these checks.

If a Load Sensor is used, temporarily remove the wires at speed control terminals 11 and 12 and temporarily jumper terminals 11 to 12. The generator must not be paralleled during these tests. If a Ramp Generator is used, temporarily remove the wire at speed control terminal 10. If a capacitor is connected to terminal 10 to provide a ramp between unloaded and loaded, it must be removed during this test or calibration. Leave the idle-rated switch wiring connected. Do the checks in the order indicated. Terminal numbers in this section refer to the speed control.

1. Check that all electrical connections are correctly made and terminal screws are tight; the magnetic pickup is properly installed and the jam nut is tight; the actuator and linkage are securely fastened. If start-fuel limit is present, turn the adjustment fully clockwise during these tests. If dual dynamics are present, set the switch closed for slow dynamics.
2. Do **not** start the prime mover now. Turn on governor power. If the fuse or breaker opens as soon as power is applied, the battery polarity (terminals 14 and 15) is probably reversed. The actuator shaft can jump when power is turned on, but must quickly come back to the minimum fuel position. Check the battery voltage at terminal 1 (+) and 2 (-). It must be from 10 to 16 Vdc for 512/1712 controls, and from 20 to 32 Vdc for 524/1724 controls.
3. Disconnect any wiring or jumper on terminal 7. Measure  $7.2 \pm 1.0$  V from terminal 2 (-) to 7 (+) [terminals 2 (-) to 9 (+) for dual-dynamics control]. Reinstall the wiring to terminal 7 if voltage is correct. Do not use the control if voltage is incorrect.
4. If idle speed is desired, connect a 50 k $\Omega$  potentiometer or fixed resistor to terminals 9 and 10 as shown in the typical wiring diagram. To calculate the value of a fixed resistor:

$$R = 17 \text{ k}\Omega \left( \frac{\text{Rated Speed}}{\text{Idle Speed}} - 1 \right)$$

5. Put the idle-rated switch in the rated position or jumper terminals 9 and 10. Measure the voltage from terminal 7 (+) to 2 (-). Put the idle-rated switch in the idle position or remove the jumper. The voltage must increase. If it does not increase, check the speed trim pot, if used, and the idle-rated switch wiring.
6. If a signal generator with an isolated output is available, the failsafe and actuator travel can be checked, Rated and idle speed can be preset. If a signal generator is not available, skip to step 7.

Turn off governor power. Remove the magnetic pickup wires from terminals 5 and 6. Connect the signal generator to terminals 5 and 6. Set the output between 2 and 10 Vrms. The wave form can be sine, square, or triangular. Calculate the MPU frequency for idle and rated speeds (see part number selection in Chapter 1).

**Check Failsafe and Actuator Travel:**

Set the signal-generator frequency to about half of idle speed. Set the idle-rated switch to rated. Turn the signal generator and governor power on. The linkage must be at the maximum-fuel position. Except for Detroit Diesel engines, verify that linkage travel is limited by the prime-mover fuel control, not by the actuator stop. Turn the signal generator off and remove the connections at terminals 5 and 6. The linkage should move to the minimum fuel position. Verify that linkage travel is limited by the prime mover's fuel control, not by the actuator stop.

**Preset Rated Speed:**

Set the signal generator for MPU frequency at rated speed and connect it to terminals 5 and 6. Put the idle-rated switch in the rated position. Set the speed trim pot, if connected, to mid-position. Observe the linkage position.

If the linkage is at the maximum fuel position:

Slowly turn the rated speed pot counterclockwise until the linkage just begins to move to the minimum fuel position. Start Fuel (if present) must be adjusted to the maximum clockwise position or the actuator will not move to maximum.

If the linkage is at the minimum fuel position:

Slowly turn the rated speed pot clockwise until the linkage just begins to move to the maximum fuel position.

Continue to adjust the rated speed pot very slowly in the appropriate direction, trying to stop the linkage between the minimum and maximum fuel stops. Because it is not possible to stop the motion, cease adjusting when the linkage moves slowly. The rated speed reference is now set very close to desired speed. A slight adjustment when the engine is running will achieve the exact speed.

**Preset Idle Speed:**

Preset idle speed only after presetting rated speed. Set the signal generator for the MPU frequency at idle speed. Put the idle-rated switch in the idle position. Observe the linkage position.

If the linkage is at the maximum fuel position:

Slowly turn the idle speed pot counterclockwise until the linkage just begins to move to the minimum fuel position. Start Fuel (if present) must be adjusted to the maximum clockwise position or the actuator will not move to maximum.

If the linkage is at the minimum fuel position:

Slowly turn the idle speed pot clockwise until the linkage just begins to move to the maximum fuel position.

Continue to adjust the idle speed pot very slowly in the appropriate direction, trying to stop the linkage between the minimum and maximum fuel stops. Because it is not possible to stop the motion, cease adjusting when the linkage moves slowly. The idle speed reference is now set very close to desired speed. A slight adjustment when the engine is running will achieve the exact speed.

7. If the idle and rated speed pots were not preset with a signal generator, set the rated speed pot fully counterclockwise.

8. Remove the MPU wires from speed control terminals 5 and 6. Measure the resistance of the MPU at the wire ends. It should be between 100 and 300  $\Omega$ . Reconnect the MPU wires.
9. Set the idle-rated switch for rated speed. Turn governor power on.



**Be prepared to make an emergency shutdown when starting the engine, turbine, or other type of prime mover, to protect against runaway or overspeed with possible personal injury, loss of life, or property damage.**

10. Gain and Stability  
Set the gain and stability pots to mid-position. (Units with dual dynamics should select Slow Dynamics if the goal is to have separate dynamics for loaded and unloaded conditions. If the dual dynamics are being used for dual-fuel engines, select and set the dynamics that fit the starting fuel.)

Connect an ac voltmeter to speed control terminals 5 and 6 to measure the MPU voltage. Start the prime mover and check the MPU voltage. It must be at least 1.5 Vrms while cranking.

If the prime mover does not start, check the linkage while cranking. If it is at the maximum fuel position, the EPG is operating correctly. Check the fuel supply, ignition, etc.

If the linkage is not at the maximum fuel position, cranking speed can be greater than the speed reference. (The Start Fuel Limit must be fully clockwise on controls with Start Fuel Limit.) Measure the resistance from speed control terminal 9 to 10. It must be a short circuit (0  $\Omega$ ). If not, the idle-rated switch is in the idle position, or the switch or wiring is defective. Place in rated position or repair. If the resistance is 0  $\Omega$ , the rated speed reference can be lower than cranking speed. Turn the rated-speed pot clockwise four turns and try to restart. Be prepared to quickly adjust rated speed counterclockwise to minimize overspeed if the prime mover starts. If it still doesn't start, turn the rated-speed pot fully counterclockwise to minimize overspeed when it does start. Refer to Chapter 5 (Troubleshooting).

When the prime mover starts, slowly turn the gain pot back and forth to observe high and low frequency oscillation. (Be sure to select the correct low-speed or high-speed dynamics pot on units with dual dynamics.) Eliminate oscillation by slowly turning the gain pot for the stable region between high and low frequency oscillation. If oscillation does not stop at the high-low crossover, turn the stability pot slightly counterclockwise and slowly readjust the gain pot. Continue adjusting the stability pot slightly counterclockwise followed by readjusting gain until the prime mover runs at a steady speed. (The stability pot adjusted must be for the same dynamics as the gain pot on dual dynamics units.)

By turning gain slightly clockwise and stability slightly counterclockwise, or vice-versa, it is possible to maintain stable speed and vary transient response. The four curves on the response curve diagram are examples of a naturally aspirated (not turbocharged) diesel engine. Note that increasing gain and decreasing stability causes shorter settling times at the expense of ringing. A chart recorder makes it easier to observe transient response.

Check response after each adjustment by momentarily changing speed. Repeat the following tuning procedure until the prime mover responds as desired. Note that settings with high gain and low stability can result in stable operation at normal temperatures and oscillation when the prime mover is cold.

To decrease settling time, turn the gain pot clockwise. Turn the stability pot counterclockwise as required to eliminate oscillation and obtain the desired response.

To decrease ringing, turn the stability pot clockwise. Turn the gain pot counterclockwise as required to eliminate oscillation and obtain the desired response.

Check response by applying and removing load, manually hitting the linkage, or quickly switching to idle and back to rated speed.

(Units with Dual Dynamics will require setting of the second dynamics under the operating conditions where they will be used—such as engine loaded or a different fuel being used. Repeat step 10 in its entirety to set the second set of dynamics.)

#### 11. Setting Speed References

The prime mover should not be oscillating. Make sure the idle-rated switch is in the rated speed position. Adjust the rated speed pot for exactly rated speed. Set the idle-rated switch for idle speed. Adjust the idle speed pot for the desired idle speed. Set the idle-rated switch back to rated.


12. Set the Start Fuel Limit on units so equipped at mid-position. Attempt to start the engine. If the actuator moves to a position higher than desired, adjust slightly counterclockwise. To increase the start fuel position, turn the potentiometer clockwise. In most diesel applications the ideal setting will be where the engine starts with a minimum amount of ejected smoke. Start Fuel Limit is adjusted on gas fueled engines to prevent flooding while allowing the engine to start. The Start Fuel Limit will be overridden should the cranking speed of the engine exceed the selected idle or rated speed.

### Checks for Applications with the 2500 Ramp Generator

Reconnect the ramp generator output to terminal 10 of the speed control. Turn the accel time and decel time pots counterclockwise four turns. Switch from rated speed to idle and back, noting the time it takes each way. Turn the accel and decel pots two turns clockwise. Check that it now takes longer to go from rated to idle and from idle to rated. Set each pot for the desired time.

### Paralleled Generator Applications with the Load Sensor

See Manual 82313, *Generator Load Sensor 8290-048*, for information concerning load sensor.

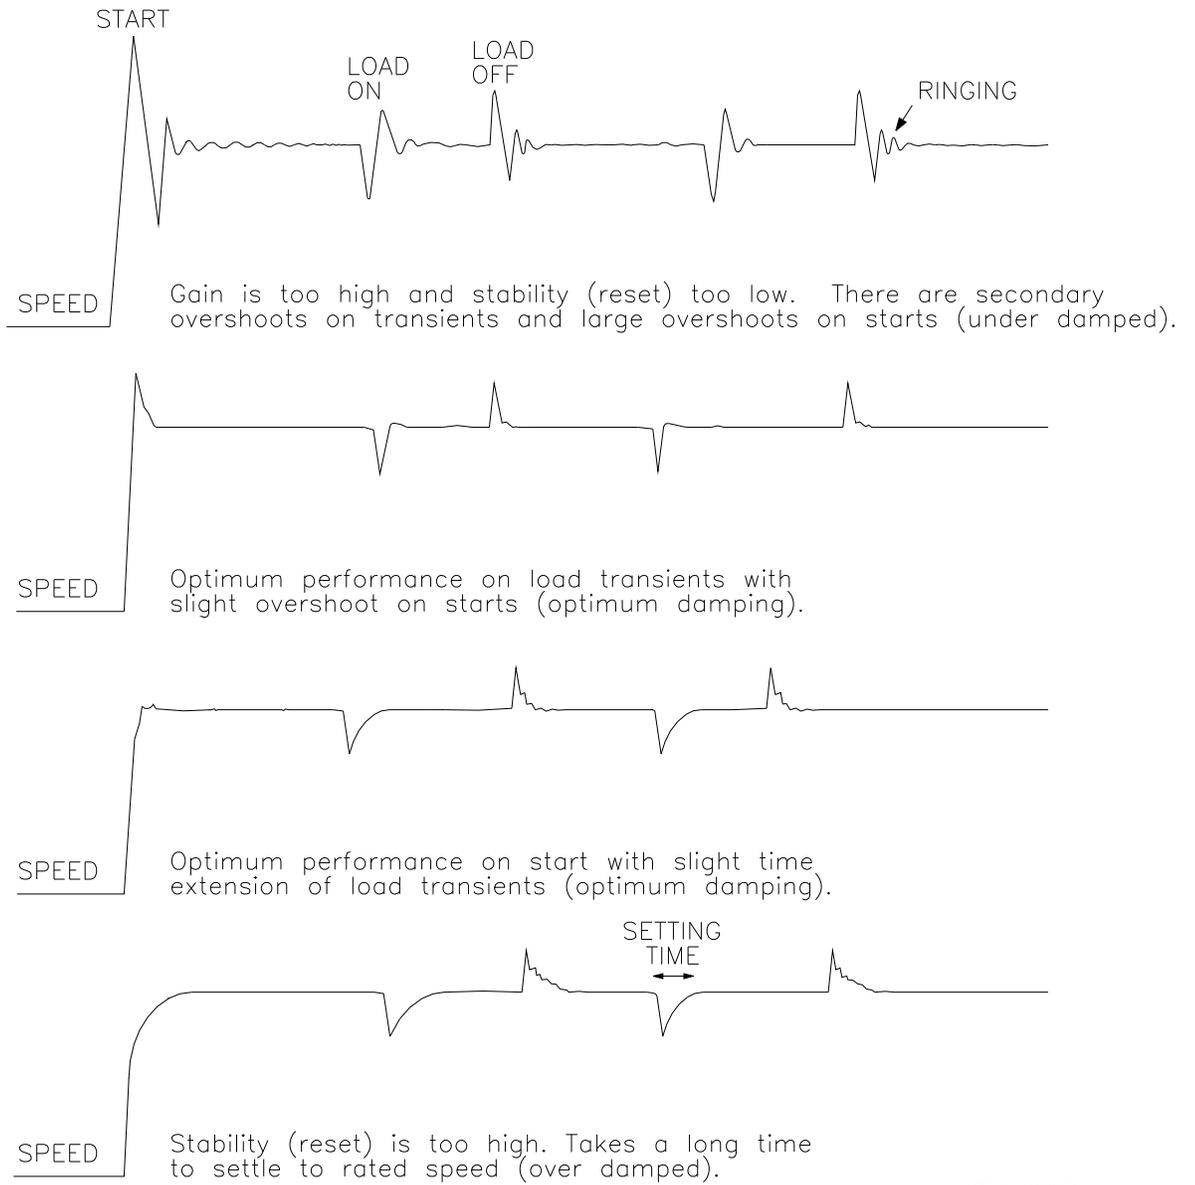

851-004D  
02-7-31

Figure 2-9. Starting and Transient Response Curves

## Chapter 3. Operation

---

The speed control requires that power be on when starting, and that power be off when stopping (power off causes shutdown if fuel flow is stopped when the fuel control is at the minimum fuel position). Paralleled generator applications require synchronizing and paralleling. If paralleling in droop mode, a speed trim pot adjustment is required to set the amount of power generated.

The EPG is designed for unattended operation. Governor power can be controlled by the prime mover's start-stop control.

The idle-rated switch can be controlled by devices such as an oil pressure switch or a time switch. Alternatively, the prime mover can run to rated speed on starting (refer to the curves in Figure 2-9). Paralleled generator applications can be equally automatic when a Woodward SPM Synchronizer is used.

In both automatically and manually controlled applications, a Ramp Generator can be used to provide adjustable time to go from rated to idle speeds.

## Chapter 4. Description

### Speed Control Applications

#### Speed Control

The basic speed control components and connections are shown in Figure 1-1. There are no mechanical drive or hydraulic connections. All input power comes from the battery. The speed control compares the actual speed with the desired speed. It then calculates an error signal and drives the actuator in the increase or decrease fuel direction to correct prime mover speed.

Figure 4-1 shows the Electrically Powered Governor in more detail. The speed control is housed in a die-cast aluminum enclosure.

The EPG has two control loops. The speed loop ensures prime mover speed remains constant. The current loop ensures proper drive to the actuator.

#### Speed Loop

The speed loop controller has two inputs: the desired speed (speed reference signal) and the actual speed (the speed sensor signal). It compares the two and calculates an error signal which includes dynamic response considerations. Gain and stability adjustments tailor the governor's response to the requirements of the specific prime mover. Rated speed is set by the rated speed pot and, if attached, a speed trim pot. The idle reference is controlled by an external idle speed pot. Rated speed should be set before idle speed. Speed sensor output is a voltage proportional to magnetic pickup frequency. The frequency range of the magnetic pickup is set by an internal resistor. The specific frequency range of a specific EPG Speed Control is indicated by the part number of the speed control.

#### Current Loop

The current loop error signal can be considered a command for the correct amount of actuator current.

The actuator's controller circuit compares actual current (from the current sensor circuit) to the desired current level (from the speed loop controller) and generates a current loop error signal. To make the current driver efficient, it is operated as a switch. Actuator current is changed by changing the duty cycle. The pulse width modulator converts the current loop error signal from a dc voltage to a switching signal. For this reason measurements of speed control output [3 (+) and 4 (-)] indicate only general conditions. Excessive currents are prevented from flowing through the actuator coil by the energy limiter. It prevents the actuator from overheating but allows enough current to keep the actuator at the maximum fuel position.

The auxiliary input is jumpered except when a Load Sensor is added for paralleled generator applications. There is a failsafe circuit which senses MPU frequency and forces the pulse width modulator input to zero if the MPU frequency or voltage are below acceptable limits, as they would be if an MPU wire broke.



### Actuator

As shown in Figure 4-2, the actuator is mechanically simple. It has specially designed rotor and stator shapes which provide reliable, effective performance. The rotary design gives 35° \* shaft rotation to low-mass, low-friction fuel controls. The magnetic circuit, when powered by the speed control, applies torque in the increase-fuel direction. Two \*\* preloaded internal return springs supply shaft torque in the decrease fuel direction. The preload can be factory reduced to compensate for some external linkage forces acting in the decrease fuel direction.

\*—For 1712/1724 Actuators, and 30° for 512/524 Actuators.

\*\*—Two springs for 1712/1724 Actuators; one spring for 512/524 Actuators.

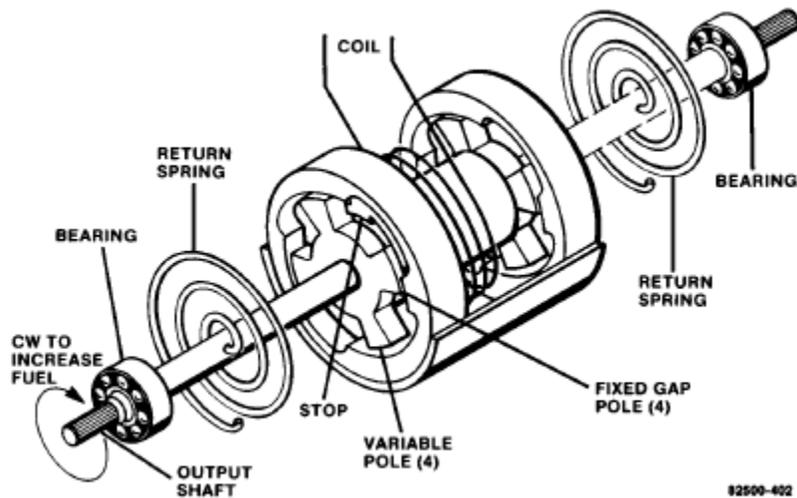


Figure 4-2. Actuator Schematic

## Applications Using a Ramp Generator

The Ramp Generator slows the speed change between idle and rated speeds. It has no effect on steady-state speeds. Once set it provides a constant speed change per second by biasing the speed reference when changing from idle to rated and vice versa. The accel and decel pots control the rate of change. Acceleration and deceleration times depend on accel and decel pot settings and the difference between idle and rated speeds.

## Paralleled Generator Applications

A Load Sensor is used with the EPG for isochronous or droop paralleling.

With an isolated bus, isochronous load sharing is usually chosen. In an isochronous load sharing system, the load gain signal voltage is shared with all other controls through paralleling lines, and provides an average load gain signal used by the controller circuits.

By comparing the paralleling line voltage to its own load gain voltage, the controller calculates an output to raise or lower, as necessary, the generator output to make the load gain voltage of its unit equal to the paralleling line. Load Sensor output directly biases the speed loop controller circuit of the speed control to affect the actuator fuel level setting and precisely maintain its proportional share of system load while maintaining a fixed frequency. See Figure 2-8, Additional Wiring to Install the EPG Load Sensor.

Droop operation is required when paralleling with an infinite bus or units not having compatible electric governors. The Load Sensor and Speed Control can be in isochronous when used against an infinite bus with a Generator Loading Control or Import/Export Control. The Droop signal then comes from either the Generator Loading Control or the Import/Export Control.

# Chapter 5.

## Troubleshooting

### Troubleshooting Procedure

Even though governor faults cause improper prime mover operation, improper prime mover operation can be also caused by other items such as low fuel pressure. When the prime mover stops working properly, find out which part is defective. Do this by:

1. Substituting, if available, a part that works for the one suspected of causing the problem.
2. Simplifying the system. Remove options and observe performance after each removal.
3. Testing the parts suspected of causing the problem. Follow the manufacturer's instructions or set up input and operating conditions which produce known outputs.

To test the EPG, use Chapter 2 to verify that the installation is correct and perform the installation check. Those checks are the best way to test the EPG. The Preset Rated Speed section (under Step 6 of the Installation Checks in Chapter 2) is the best test of the EPG's ability to control speed. It requires the use of a signal generator with an isolated output. If appropriate, do the checks for Paralleled Generator Applications with the Load Sensor (referenced in Chapter 2, manual 82313).

### Other Checks

Do the installation checks described in the previous paragraph first. Then check the following:

1. If the prime mover is stable at some speeds or power outputs but oscillates at others, the linkage may not be compatible with the fuel control. Refer to Linkage Compatibility under Actuator Mounting and Linkage in Chapter 2.
2. If the prime mover oscillates at low frequency (about 1 Hz) and the Gain and Stability adjustments (in Chapter 2) are correct, then friction in the linkage may be the cause.
  - Disconnect the actuator from the fuel control.
  - Manually stroke the fuel control linkage from stop to stop as if the actuator were moving it. The linkage must move freely without friction and without backlash. Lubricate or replace linkage or fuel control parts as required.
3. If the prime mover is unstable only when load sharing, verify that:
  - Load sensor CTs and PTs are wired correctly.
  - Voltage regulator droop or cross current compensation is set correctly.
  - The voltage regulator is not intermittent or otherwise faulty.

If the problem is still there, reduce the load gain a little and set the load gain pot on all other load sensors in the system for the same load signal at full load. It may be necessary to reduce the load signal to 3 volts in extreme cases. Consult with your authorized Distributor or with Woodward in such cases.

4. If the fuse or breaker opens after the prime mover has been running, high voltage spikes from the battery or battery charger may be the problem. Provide separate wires from the speed control to the battery terminals as shown in the top of figure 2-6.
5. If the fuse or breaker opens upon initial start-up, the battery connections may be incorrect. Verify that the battery connections are correct. Remove the wires to terminals 1 through 4. Check for a short to ground on each wire.
6. If the prime mover oscillates when cold and stabilizes when warm, turn the gain pot slightly counterclockwise. Turn the stability pot slightly clockwise if required to maintain stability.

## Chapter 6.

# Product Support and Service Options

### Product Support Options

If you are experiencing problems with the installation, or unsatisfactory performance of a Woodward product, the following options are available:

1. Consult the troubleshooting guide in the manual.
2. Contact the **OE Manufacturer or Packager** of your system.
3. Contact the **Woodward Business Partner** serving your area.
4. Contact Woodward technical assistance via email ([EngineHelpDesk@Woodward.com](mailto:EngineHelpDesk@Woodward.com)) with detailed information on the product, application, and symptoms. Your email will be forwarded to an appropriate expert on the product and application to respond by telephone or return email.
5. If the issue cannot be resolved, you can select a further course of action to pursue based on the available services listed in this chapter.

**OEM or Packager Support:** Many Woodward controls and control devices are installed into the equipment system and programmed by an Original Equipment Manufacturer (OEM) or Equipment Packager at their factory. In some cases, the programming is password-protected by the OEM or packager, and they are the best source for product service and support. Warranty service for Woodward products shipped with an equipment system should also be handled through the OEM or Packager. Please review your equipment system documentation for details.

**Woodward Business Partner Support:** Woodward works with and supports a global network of independent business partners whose mission is to serve the users of Woodward controls, as described here:

- A **Full-Service Distributor** has the primary responsibility for sales, service, system integration solutions, technical desk support, and aftermarket marketing of standard Woodward products within a specific geographic area and market segment.
- An **Authorized Independent Service Facility (AISF)** provides authorized service that includes repairs, repair parts, and warranty service on Woodward's behalf. Service (not new unit sales) is an AISF's primary mission.
- A **Recognized Engine Retrofitter (RER)** is an independent company that does retrofits and upgrades on reciprocating gas engines and dual-fuel conversions, and can provide the full line of Woodward systems and components for the retrofits and overhauls, emission compliance upgrades, long term service contracts, emergency repairs, etc.

A current list of Woodward Business Partners is available at [www.woodward.com/directory](http://www.woodward.com/directory).

### Product Service Options

Depending on the type of product, the following options for servicing Woodward products may be available through your local Full-Service Distributor or the OEM or Packager of the equipment system.

- Replacement/Exchange (24-hour service)
- Flat Rate Repair
- Flat Rate Remanufacture

**Replacement/Exchange:** Replacement/Exchange is a premium program designed for the user who is in need of immediate service. It allows you to request and receive a like-new replacement unit in minimum time (usually within 24 hours of the request), providing a suitable unit is available at the time of the request, thereby minimizing costly downtime.

This option allows you to call your Full-Service Distributor in the event of an unexpected outage, or in advance of a scheduled outage, to request a replacement control unit. If the unit is available at the time of the call, it can usually be shipped out within 24 hours. You replace your field control unit with the like-new replacement and return the field unit to the Full-Service Distributor.

**Flat Rate Repair:** Flat Rate Repair is available for many of the standard mechanical products and some of the electronic products in the field. This program offers you repair service for your products with the advantage of knowing in advance what the cost will be.

**Flat Rate Remanufacture:** Flat Rate Remanufacture is very similar to the Flat Rate Repair option, with the exception that the unit will be returned to you in “like-new” condition. This option is applicable to mechanical products only.

## Returning Equipment for Repair

If a control (or any part of an electronic control) is to be returned for repair, please contact your Full-Service Distributor in advance to obtain Return Authorization and shipping instructions.

When shipping the item(s), attach a tag with the following information:

- return number;
- name and location where the control is installed;
- name and phone number of contact person;
- complete Woodward part number(s) and serial number(s);
- description of the problem;
- instructions describing the desired type of repair.

## Packing a Control

Use the following materials when returning a complete control:

- protective caps on any connectors;
- antistatic protective bags on all electronic modules;
- packing materials that will not damage the surface of the unit;
- at least 100 mm (4 inches) of tightly packed, industry-approved packing material;
- a packing carton with double walls;
- a strong tape around the outside of the carton for increased strength.

### **NOTICE**

To prevent damage to electronic components caused by improper handling, read and observe the precautions in Woodward manual 82715, *Guide for Handling and Protection of Electronic Controls, Printed Circuit Boards, and Modules*.

## Replacement Parts

When ordering replacement parts for controls, include the following information:

- the part number(s) (XXXX-XXXX) that is on the enclosure nameplate;
- the unit serial number, which is also on the nameplate.

## Engineering Services

Woodward's Full-Service Distributors offer various Engineering Services for our products. For these services, you can contact the Distributor by telephone or by email.

- Technical Support
- Product Training
- Field Service

**Technical Support** is available from your equipment system supplier, your local Full-Service Distributor, or from many of Woodward's worldwide locations, depending upon the product and application. This service can assist you with technical questions or problem solving during the normal business hours of the Woodward location you contact.

**Product Training** is available as standard classes at many Distributor locations. Customized classes are also available, which can be tailored to your needs and held at one of our Distributor locations or at your site. This training, conducted by experienced personnel, will assure that you will be able to maintain system reliability and availability.

**Field Service** engineering on-site support is available, depending on the product and location, from one of our Full-Service Distributors. The field engineers are experienced both on Woodward products as well as on much of the non-Woodward equipment with which our products interface.

For information on these services, please contact one of the Full-Service Distributors listed at [www.woodward.com/directory](http://www.woodward.com/directory).

## Contacting Woodward's Support Organization

For the name of your nearest Woodward Full-Service Distributor or service facility, please consult our worldwide directory published at [www.woodward.com/directory](http://www.woodward.com/directory).

You can also contact the Woodward Customer Service Department at one of the following Woodward facilities to obtain the address and phone number of the nearest facility at which you can obtain information and service.

<b>Products Used In Electrical Power Systems</b>	<b>Products Used In Engine Systems</b>	<b>Products Used In Industrial Turbomachinery Systems</b>
<u>Facility</u> ----- <u>Phone Number</u>	<u>Facility</u> ----- <u>Phone Number</u>	<u>Facility</u> ----- <u>Phone Number</u>
Brazil -----+55 (19) 3708 4800	Brazil -----+55 (19) 3708 4800	Brazil -----+55 (19) 3708 4800
China -----+86 (512) 6762 6727	China -----+86 (512) 6762 6727	China -----+86 (512) 6762 6727
Germany:	Germany-----+49 (711) 78954-510	India -----+91 (129) 4097100
Kempen----+49 (0) 21 52 14 51	India -----+91 (129) 4097100	Japan-----+81 (43) 213-2191
Stuttgart--+49 (711) 78954-510	Japan-----+81 (43) 213-2191	Korea-----+82 (51) 636-7080
India -----+91 (129) 4097100	Korea-----+82 (51) 636-7080	The Netherlands- +31 (23) 5661111
Japan-----+81 (43) 213-2191	The Netherlands- +31 (23) 5661111	Poland-----+48 12 295 13 00
Korea-----+82 (51) 636-7080	United States----+1 (970) 482-5811	United States----+1 (970) 482-5811
Poland-----+48 12 295 13 00		
United States----+1 (970) 482-5811		

For the most current product support and contact information, please visit our website directory at [www.woodward.com/directory](http://www.woodward.com/directory).

## Technical Assistance

If you need to contact technical assistance, you will need to provide the following information. Please write it down here before contacting the Engine OEM, the Packager, a Woodward Business Partner, or the Woodward factory:

**General**

Your Name \_\_\_\_\_  
 Site Location \_\_\_\_\_  
 Phone Number \_\_\_\_\_  
 Fax Number \_\_\_\_\_

**Prime Mover Information**

Manufacturer \_\_\_\_\_  
 Engine Model Number \_\_\_\_\_  
 Number of Cylinders \_\_\_\_\_  
 Type of Fuel (gas, gaseous, diesel, dual-fuel, etc.) \_\_\_\_\_  
 Power Output Rating \_\_\_\_\_  
 Application (power generation, marine, etc.) \_\_\_\_\_

**Control/Governor Information**

**Control/Governor #1**

Woodward Part Number & Rev. Letter \_\_\_\_\_  
 Control Description or Governor Type \_\_\_\_\_  
 Serial Number \_\_\_\_\_

**Control/Governor #2**

Woodward Part Number & Rev. Letter \_\_\_\_\_  
 Control Description or Governor Type \_\_\_\_\_  
 Serial Number \_\_\_\_\_

**Control/Governor #3**

Woodward Part Number & Rev. Letter \_\_\_\_\_  
 Control Description or Governor Type \_\_\_\_\_  
 Serial Number \_\_\_\_\_

**Symptoms**

Description \_\_\_\_\_  
 \_\_\_\_\_  
 \_\_\_\_\_

*If you have an electronic or programmable control, please have the adjustment setting positions or the menu settings written down and with you at the time of the call.*

---

## Revision History

---

**Changes in Revision U—**

- Updated Declaration of Conformity
- Updated Figure 2-5

# Declarations

## DECLARATION OF CONFORMITY

**DoC No.:** 00149-04-EUR-02-01.DOCX  
**Manufacturer's Name:** WOODWARD INC  
**Manufacturer's Address:** 1000 E. Drake Rd.  
 Fort Collins, CO, USA, 80525


**Model Name(s)/Number(s):** EPG 12V 8290-187 and Similar  
 EPG 24V 8290-185 and Similar

**The object of the declaration described above is in conformity with the following Directives of the European Parliament and of the Council:** 2014/30/EU COUNCIL DIRECTIVE of 26 February 2014 on the approximation of the laws of the Member States relating to electromagnetic compatibility and all applicable amendments.  
**Conformance to Directive(s):**

**Applicable Standards:** EN 61000-6-2:2005 Electromagnetic Compatibility (EMC) -Part 6-2: Generic Standards - Immunity Standard for Industrial Environments  
 EN 61000-6-4:2011 Electromagnetic Compatibility (EMC) -Part 6-4: Generic Standards - Emission Standard for Industrial Environments

This declaration of conformity is issued under the sole responsibility of the manufacturer  
 We, the undersigned, hereby declare that the equipment specified above conforms to the above Directive(s).

MANUFACTURER



Signature

Christopher Perkins

Full Name

SIE Engineering Manager

Position

Woodward, Fort Collins, CO, USA

Place

25-January-2016

Date

We appreciate your comments about the content of our publications.

Send comments to: [icinfo@woodward.com](mailto:icinfo@woodward.com)

Please reference publication **82493U**.



B 8 2 4 9 3 : U



PO Box 1519, Fort Collins CO 80522-1519, USA  
1000 East Drake Road, Fort Collins CO 80525, USA  
Phone +1 (970) 482-5811

Email and Website—[www.woodward.com](http://www.woodward.com)

Woodward has company-owned plants, subsidiaries, and branches,  
as well as authorized distributors and other authorized service and sales facilities throughout the world.

Complete address / phone / fax / email information for all locations is available on our website.