



## **SOGAV™ Solenoid Operated Gas Admission Valve**

**Unbalanced/Bottom-load SOGAV 105**

**Installation and Operation Manual**





### General Precautions

Read this entire manual and all other publications pertaining to the work to be performed before installing, operating, or servicing this equipment.

Practice all plant and safety instructions and precautions.

Failure to follow instructions can cause personal injury and/or property damage.



### Revisions

This publication may have been revised or updated since this copy was produced. To verify that you have the latest revision, check manual **26311**, *Revision Status & Distribution Restrictions of Woodward Technical Publications*, on the *publications* page of the Woodward website:

[www.woodward.com/publications](http://www.woodward.com/publications)

The latest version of most publications is available on the *publications* page. If your publication is not there, please contact your customer service representative to get the latest copy.




### Proper Use

Any unauthorized modifications to or use of this equipment outside its specified mechanical, electrical, or other operating limits may cause personal injury and/or property damage, including damage to the equipment. Any such unauthorized modifications: (i) constitute "misuse" and/or "negligence" within the meaning of the product warranty thereby excluding warranty coverage for any resulting damage, and (ii) invalidate product certifications or listings.



### Translated Publications

If the cover of this publication states "Translation of the Original Instructions" please note:

The original source of this publication may have been updated since this translation was made. Be sure to check manual **26311**, *Revision Status & Distribution Restrictions of Woodward Technical Publications*, to verify whether this translation is up to date. Out-of-date translations are marked with . Always compare with the original for technical specifications and for proper and safe installation and operation procedures.

**Revisions**—Changes in this publication since the last revision are indicated by a black line alongside the text.

Woodward reserves the right to update any portion of this publication at any time. Information provided by Woodward is believed to be correct and reliable. However, no responsibility is assumed by Woodward unless otherwise expressly undertaken.



# Contents

<b>WARNINGS AND NOTICES .....</b>	<b>III</b>
<b>ELECTROSTATIC DISCHARGE AWARENESS .....</b>	<b>IV</b>
<b>REGULATORY COMPLIANCE .....</b>	<b>V</b>
<b>CHAPTER 1. GENERAL INFORMATION.....</b>	<b>1</b>
Introduction .....	1
Principles of Operation .....	1
<b>CHAPTER 2. INSTALLATION/ADJUSTMENT .....</b>	<b>5</b>
Installation .....	5
Initial Operation/Adjustment .....	6
<b>CHAPTER 3. APPLICATION GUIDELINES.....</b>	<b>7</b>
Introduction .....	7
Wiring.....	9
Sizing .....	10
Input Power Limitations .....	11
Safety.....	11
<b>CHAPTER 4. SERVICING.....</b>	<b>12</b>
<b>CHAPTER 5. MAINTENANCE/TROUBLESHOOTING.....</b>	<b>13</b>
Introduction .....	13
Troubleshooting .....	13
<b>CHAPTER 6. SPECIFICATIONS .....</b>	<b>17</b>
Construction .....	17
Environment .....	17
Performance .....	19
<b>CHAPTER 7. PRODUCT SUPPORT AND SERVICE OPTIONS.....</b>	<b>20</b>
Product Support Options .....	20
Product Service Options.....	20
Returning Equipment for Repair.....	21
Replacement Parts .....	21
Engineering Services.....	22
Contacting Woodward's Support Organization .....	22
Technical Assistance.....	23
<b>APPENDIX. INTERPRETING SOLENOID RATINGS .....</b>	<b>24</b>
Introduction .....	24
Equivalent Average Direct Current (EADC) .....	24
Equivalent Average Power (EAP) .....	25
<b>REVISION HISTORY.....</b>	<b>27</b>
<b>DECLARATIONS.....</b>	<b>28</b>



# Illustrations and Tables

Figure 1-1. Unbalanced/Bottom-load SOGAV 105 Outline Drawing .....3

Figure 1-2. In-Manifold Electric Gas Admission .....4

Figure 1-3. Timing: In-Manifold Gas Admission .....4

Figure A-1. Two Tier Current Waveform Parameters.....25

Table A-1. Maximum Solenoid Coil Resistance (Rc) Values for Woodward  
SOGAV 105 Solenoids .....26

The following are trademarks of Woodward, Inc.:

- In-Pulse
- SOGAV
- Woodward



# Warnings and Notices

## Important Definitions



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

- **DANGER**—Indicates a hazardous situation which, if not avoided, will result in death or serious injury.
- **WARNING**—Indicates a hazardous situation which, if not avoided, could result in death or serious injury.
- **CAUTION**—Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.
- **NOTICE**—Indicates a hazard that could result in property damage only (including damage to the control).
- **IMPORTANT**—Designates an operating tip or maintenance suggestion.

### **WARNING**

**Overspeed /  
Overtemperature /  
Overpressure**

The engine, turbine, or other type of prime mover should be equipped with an overspeed shutdown device to protect against runaway or damage to the prime mover with possible personal injury, loss of life, or property damage.

The overspeed shutdown device must be totally independent of the prime mover control system. An overtemperature or overpressure shutdown device may also be needed for safety, as appropriate.

### **WARNING**

**Personal Protective  
Equipment**

The products described in this publication may present risks that could lead to personal injury, loss of life, or property damage. Always wear the appropriate personal protective equipment (PPE) for the job at hand. Equipment that should be considered includes but is not limited to:

- Eye Protection
- Hearing Protection
- Hard Hat
- Gloves
- Safety Boots
- Respirator

Always read the proper Material Safety Data Sheet (MSDS) for any working fluid(s) and comply with recommended safety equipment.

### **WARNING**

**Start-up**

Be prepared to make an emergency shutdown when starting the engine, turbine, or other type of prime mover, to protect against runaway or overspeed with possible personal injury, loss of life, or property damage.

### **WARNING**

**Automotive  
Applications**

On- and off-highway Mobile Applications: Unless Woodward's control functions as the supervisory control, customer should install a system totally independent of the prime mover control system that monitors for supervisory control of engine (and takes appropriate action if supervisory control is lost) to protect against loss of engine control with possible personal injury, loss of life, or property damage.



**NOTICE****Battery Charging  
Device**

To prevent damage to a control system that uses an alternator or battery-charging device, make sure the charging device is turned off before disconnecting the battery from the system.

## Electrostatic Discharge Awareness

**NOTICE****Electrostatic  
Precautions**

Electronic controls contain static-sensitive parts. Observe the following precautions to prevent damage to these parts:

- Discharge body static before handling the control (with power to the control turned off, contact a grounded surface and maintain contact while handling the control).
- Avoid all plastic, vinyl, and Styrofoam (except antistatic versions) around printed circuit boards.
- Do not touch the components or conductors on a printed circuit board with your hands or with conductive devices.

To prevent damage to electronic components caused by improper handling, read and observe the precautions in Woodward manual **82715**, *Guide for Handling and Protection of Electronic Controls, Printed Circuit Boards, and Modules*.

Follow these precautions when working with or near the control.

1. Avoid the build-up of static electricity on your body by not wearing clothing made of synthetic materials. Wear cotton or cotton-blend materials as much as possible because these do not store static electric charges as much as synthetics.
2. Do not remove the printed circuit board (PCB) from the control cabinet unless absolutely necessary. If you must remove the PCB from the control cabinet, follow these precautions:
  - Do not touch any part of the PCB except the edges.
  - Do not touch the electrical conductors, the connectors, or the components with conductive devices or with your hands.
  - When replacing a PCB, keep the new PCB in the plastic antistatic protective bag it comes in until you are ready to install it. Immediately after removing the old PCB from the control cabinet, place it in the antistatic protective bag.



## Regulatory Compliance

### European Compliance for CE Marking:

These listings are limited only to those units bearing the CE Marking.

<b>ATEX – Potentially Explosive Atmospheres Directive:</b>	Declared to 94/9/EC COUNCIL DIRECTIVE of 23 March 1994 on the approximation of the laws of the Member States concerning equipment and protective systems intended for use in explosive atmospheres. Zone 2, Category 3, Group II G, Ex nA IIC T3 X Gc IP54
--	--

<b>Low Voltage Directive:</b>	Declared to 2006/95/EC COUNCIL DIRECTIVE of 12 December 2006 on the harmonization of the laws of the Member States relating to electrical equipment designed for use within certain voltage limits.
-------------------------------	---

### Other European Compliance:

Compliance with the following European Directives or standards does not qualify this product for application of the CE Marking:

<b>Machinery Directive:</b>	Compliant as partly completed machinery with Directive 2006/42/EC of the European Parliament and the Council of 17 May 2006 on Machinery.
-----------------------------	---

<b>Pressure Equipment Directive:</b>	Exempt per Article 1-3.10
--------------------------------------	---------------------------

<b>EMC Directive:</b>	Not applicable to this product. Electromagnetically passive devices are excluded from the scope of the 2004/108/EC Directive.
-----------------------	---

### North American Compliance:

These listings are limited only to those units bearing the CSA identification.

<b>CSA:</b>	CSA Certified for Class I, Division 2, Groups A, B, C, D, T4 at 105 °C Ambient for use in Canada and the United States. Certificate 1514353
-------------	--

The SOGAV 105 solenoid is certified as a component for on-engine use. The final assembly is subject to acceptance by the authority having jurisdiction.

### Special Conditions for Safe Use

Wiring must be in accordance with North American Class I, Division 2, or European or other international Zone 2, Category 3 wiring methods as applicable, and in accordance with the authority having jurisdiction.

Field wiring must be suitable for at least 105 °C.

Connect the ground terminal on the SOGAV 105 solenoid to earth ground.



SOGAV 105 solenoids are labeled with maximum rated values of input current and input power. These input ratings must not be exceeded during solenoid operation in order to prevent exceeding a prescribed coil temperature rise at the maximum rated ambient operating temperature. These solenoids must be driven by specially designed current-limiting drivers providing periodic, two-tier current waveforms. Refer to the Appendix for details on how to determine and interpret these input rating values.

**! WARNING**

Do not connect or disconnect while circuit is live unless area is known to be non-hazardous.

Explosion Hazard

**! WARNING**

Substitution of components may impair suitability for Class I, Division 2 or Zone 2 applications.

Explosion Hazard

**! AVERTISSEMENT**

Ne pas raccorder ni débrancher tant que l'installation est sous tension, sauf en cas l'ambiance est décidément non dangereuse.

Risque d'explosion

**! AVERTISSEMENT**

La substitution de composants peut rendre ce matériel inacceptable pour les emplacements de Classe I, Division 2 ou Zone 2.

Risque d'explosion



# Chapter 1.

## General Information

### Introduction



#### **WARNING**

#### **Explosion Hazard**

The engine, turbine, or other type of prime mover should be equipped with an independent fuel shut-off device to protect against fuel leakage or damage to the prime mover with possible personal injury, loss of life, or property damage. The fuel shut off device must be totally independent of the prime mover control system.

This manual provides the information necessary to properly install, operate, maintain, and troubleshoot the Woodward SOGAV 105 (Solenoid Operated Gas Admission Valve), unbalanced/bottom-load version. See manual 26498 for the top-load versions (pressure-balanced and unbalanced).

### Principles of Operation

#### **Magnetic**

An E-core solenoid magnetically generates all valve actuation forces. Magnetic flux generated in the E-core solenoid attracts a low-carbon steel plate (the armature) that is attached to the valve mechanism. The E-core produces very high forces over short travels. The valve mechanism travels approximately 0.42 mm from full closed to full open. The short travel along with the high solenoid force results in fast and consistent opening and closing response.

#### **Valve**

The valve is similar to an air (or gas) compressor valve. It is a face-type poppet with multiple concentric grooves. The moving metering plate is spring-loaded and pressure-loaded against the lower stop/metering plate and is pulled off the lower stop by the force generated on the attached armature by the E-core solenoid. When the plates are separated, gas flows from the grooves in the moving metering plate to the grooves in the lower stop/metering plate. When the moving metering plate and the lower stop/metering plate are in contact, gas cannot pass from the grooves in the moving metering plate to the grooves in the lower stop/metering plate.

The groove edges are the metering edges. Overlapped, flat-lapped sealing surfaces, spring loading, and pressure imbalance across the moving metering plate provide excellent sealing while the valve is closed.

An array of springs, combined with pressure imbalance across the moving metering plate, rapidly closes the valve once the E-core is de-energized. The same array of springs centers the moving plate relative to the lower stop/metering plate. This centering technique eliminates sliding (wearing) motion.



## **SOGAV 105 Versions**

The SOGAV 105 is available in a pressure-balanced/top-load version, an unbalanced/top-load version, and an unbalanced/bottom-load version. The pressure-balanced version utilizes a balance area that is attached to the armature (described in manual 26498). This balance area effectively neutralizes the pressure-related forces on the valve seat, thus enabling the valve to open at a higher P1-to-P2 pressure differential.

Top-load and bottom-load refer to how the valve components are loaded into the valve housing. The bottom-load version is identifiable by a snap ring visible from the bottom of the valve. The balanced/top-load version has a through-hole located in the center of the bottom plate. The unbalanced/top-load version does not have a through-hole in the center of the bottom plate.



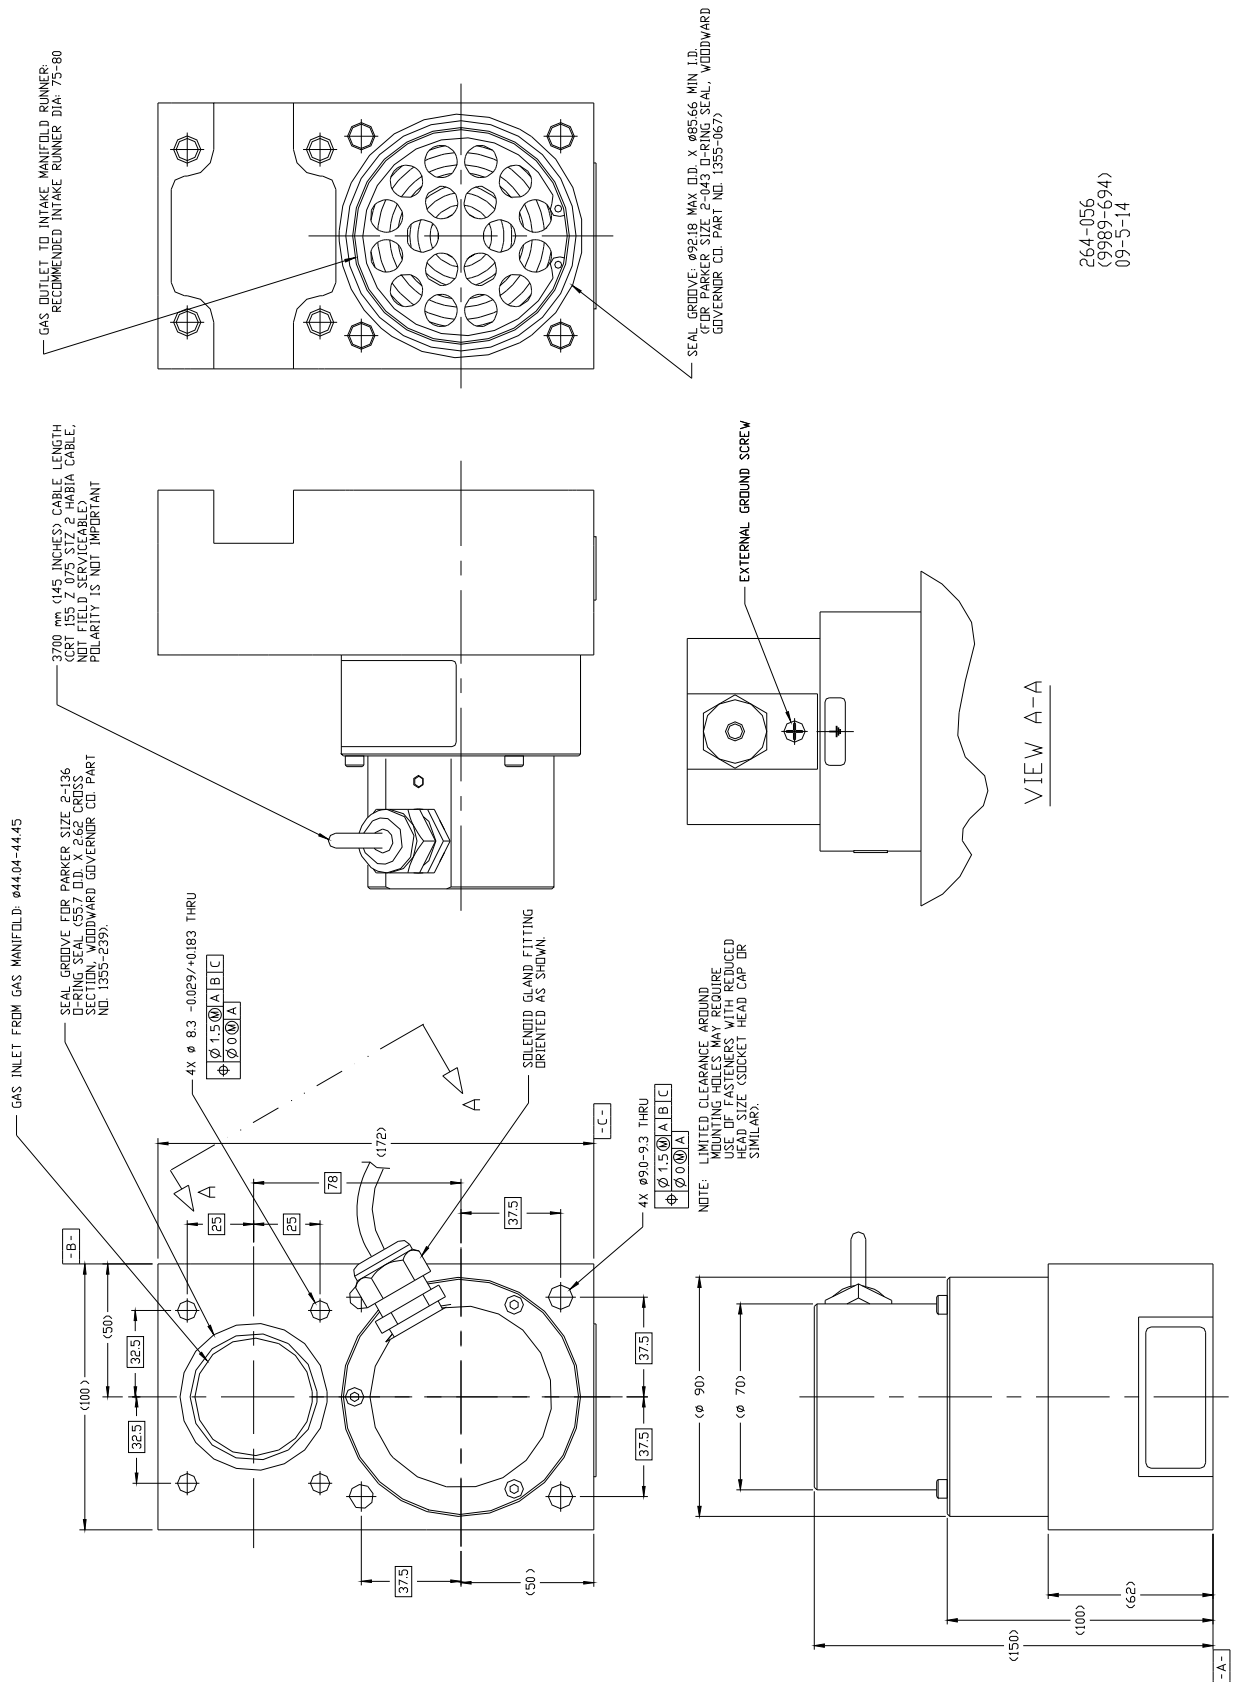


Figure 1-1. Unbalanced/Bottom-load SOGAV 105 Outline Drawing  
(MS Connector)



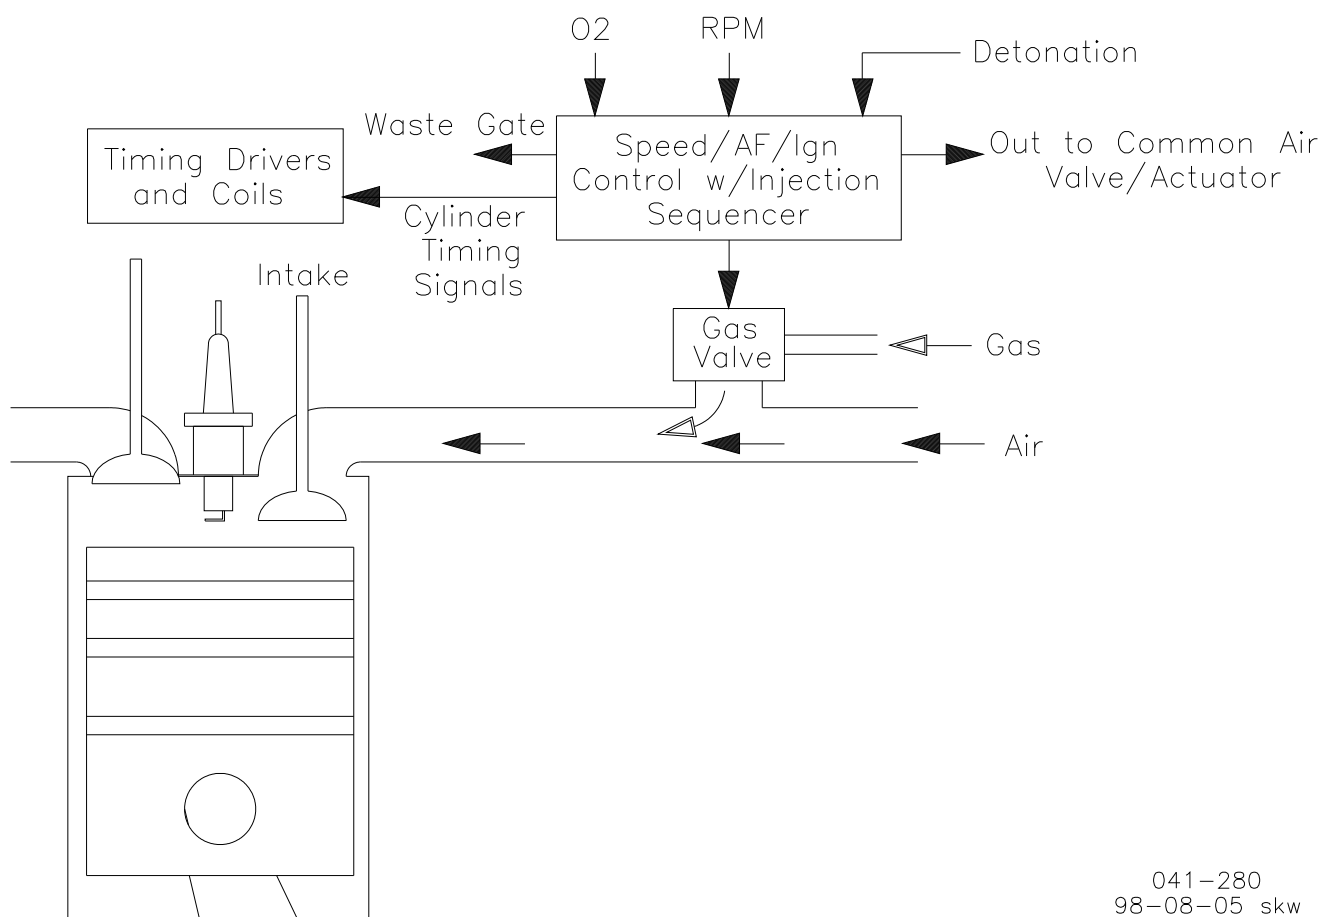


Figure 1-2. In-Manifold Electric Gas Admission

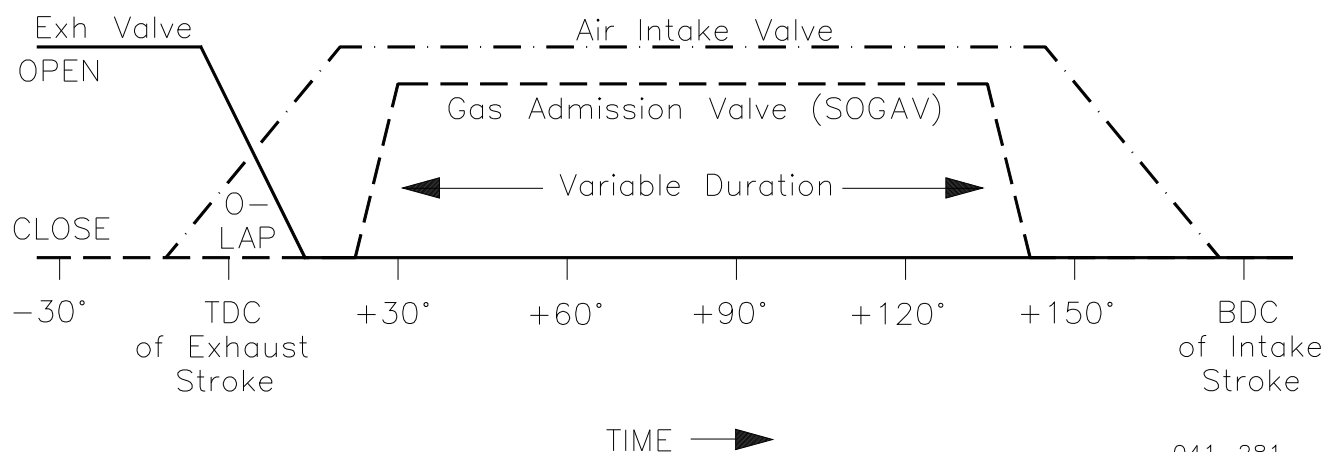


Figure 1-3. Timing: In-Manifold Gas Admission



## Chapter 2. Installation/Adjustment

### Installation

#### **WARNING**

Do not connect or disconnect while circuit is live unless area is known to be non-hazardous.

**Explosion Hazard**

#### **WARNING**

Substitution of components may impair suitability for Class I, Division 2 or Zone 2 applications.

**Explosion Hazard**

#### **WARNING**

**HEARING PROTECTION**—Due to typical noise levels in engine environments, hearing protection should be worn when working on or around the SOGAV 105.

**Personal Injury**

#### **WARNING**

**HOT SURFACES**—The surface of this product can become hot enough or cold enough to be a hazard. Use protective gear for product handling in these circumstances. Temperature ratings are included in the specification section of this manual.

**Personal Injury**

#### **WARNING**

External fire protection is not provided in the scope of this product. It is the responsibility of the user to satisfy any applicable requirements for their system.

**External Fire  
Protection**

Refer to the outline drawing, Figure 1-1 (gland nut location and wire treatment vary depending on model).

#### **NOTICE**

It is imperative that the interior of all gas manifolding be absolutely clean prior to SOGAV installation and engine start-up. There must be no dirt, weld slag, metal chips, etc., present. Contamination of this type can prevent the valve from operating properly and can damage the engine if it passes through the valve.

The region around the SOGAV installation pad must also be very clean so that no debris gets into the air manifold during SOGAV valve installation.

Locate the appropriate O-ring (specified on the outline drawing) in the groove on the base of the SOGAV valve.

Mount the SOGAV valve to the cylinder head or air intake manifold runner using either M8 or 5/16-inch socket-head screws. Socket-head screws are required for bolt-head clearance. Tighten these screws evenly to a torque recommended by the engine manufacturer.



Install the gas inlet line to the inlet side of the SOGAV valve using the O-ring specified on the outline drawing. Two methods of gas inlet flange retention may be used:

1. One configuration uses clearance holes for M8 (or 5/16-inch) screws that pass through the SOGAV 105 valve and engage tapped holes in the cylinder head or air intake manifold. For this situation, use the O-ring specified on the outline drawing and tighten the screws to a torque recommended by the engine manufacturer.
2. The second configuration uses M8x1.25 threads in the housing, and the gas inlet flange mounting screws thread directly into the SOGAV 105 body. Again, use the O-ring specified on the outline drawing. Ensure that the screws have at least 10 threads of engagement, lubricate the threads, and torque evenly to 20 N·m (175 lb-in).

## NOTICE

**Note that the second configuration is made from the first configuration by installing helical thread inserts into tapped threads already existing in the clearance holes. Therefore, tapped threads (for the insert) will be visible in the clearance holes in the first configuration, but no attempt should be made to use them.**

If applicable, the cable connector should be installed last. Assure that the knurled locking nut is tight.

The solenoid cable must be terminated at the engine-mounted fuel-injection driver. The cable connection at the solenoid is not field-serviceable.

## Initial Operation/Adjustment

There are no field adjustments to the SOGAV valve.

After installation, pressurize the gas manifold system (preferably with air or inert gas) and check for leaks around all valves and all interface flanges, by brushing on a soap and water solution.

Refer to the overall control system documentation for start-up/operation procedures. These procedures will vary from application to application.

If background noise is minimal, basic valve operation can be confirmed by an audible ticking sound.



## Chapter 3.

# Application Guidelines

### Introduction

Figure 1-3 shows the general timing relationships between exhaust valve position, intake valve position, and SOGAV opening.

This method allows for fresh air scavenging of the combustion chamber during the overlap period around TDC (top dead center) of the exhaust stroke. After the overlap period (immediately after the exhaust valve closes), the SOGAV valve rapidly opens and admits gas into the air stream passing through the inlet runner. The gas is then carried into the combustion chamber with the air through the open air intake valve.

The SOGAV valve remains open for a duration necessary to keep the engine under speed or load control (by way of the electronic governor or In-Pulse unit).

The SOGAV valve must always close sufficiently before the air inlet valve closes in order to assure that all gas admitted into the inlet runner gets carried into the combustion chamber. If this time is not sufficient, gas will remain in the inlet runner after the intake valve closes and will pass through to the exhaust during the next overlap period (wasting fuel and emitting unburned hydrocarbons).

#### **IMPORTANT**

**It is the responsibility of the engineer applying the SOGAV system to determine the timing of SOGAV valve opening as well as the maximum allowable duration.**

To maximize the allowable duration and reduce the possibility of trapped gas in the runner after intake valve closing:

- Locate the SOGAV valve as close as possible to the air intake valve, and
- Minimize the length of the connecting passage between the SOGAV valve and the air manifold runner.

The SOGAV valve can be mounted in any orientation with the solenoid axis greater than horizontal, placing the solenoid higher than the metering plates.

#### **NOTICE**

**A vertical orientation (valve inlet facing upward) is preferred and will substantially increase valve life versus a horizontal orientation.**

**Take care to keep the SOGAV valve and wiring from being exposed to extremely hot surfaces (such as exhaust systems).**

Proper gas manifold design is absolutely essential. Ideally, the dynamic flow performance of the manifold design should be checked out using computer modeling before making hardware. After design and during developmental testing, the manifold should be instrumented and monitored in order to verify acceptability of the design.

The inside diameter of the gas feeder pipes connecting the SOGAV valves to the gas manifold must be the same size or greater than the gas inlet hole in the SOGAV valve. This diameter is 44 mm. This pipe must be as short as possible. The length of this pipe affects the acceleration of the gas immediately after the valve opens. Increased opening duration is required to compensate for long feeder pipe lengths.



**IMPORTANT****All gas feeder pipes must be the same length.**

The feeder pipes connecting the gas manifold to the SOGAV valves must not impart substantial stress into the SOGAV valve when installed. Flexible lines are preferred to rigid steel welded assemblies.

The gas manifold should be sufficiently large so that:

- Local pressure drops at the entries to the feeder pipes are minor (while the valve is at full flow), and
- Pulsations are damped such that flow through the gas pressure regulating device is essentially steady.

It is best if the gas manifold is fed at multiple locations. The engineer designing the gas manifold must consider the effects of multiple valves being open at the same time. For example, a V-16 engine will often have three SOGAV valves open and flowing at the same time. If that engine were equipped with a common manifold fed at one end only, the furthest of the three valves could be starved because of pressure drops caused by the other two open valves.

The surface to which the valve mounts must have an opening of approximately the same size as the SOGAV outlet (refer to the outline drawing). A smaller hole will restrict flow, and a larger hole must not be so large as to interfere with the O-ring seating surface. The O-ring seating surface finish must meet industry standards for O-ring sealing with gasses.

Gas distribution (dispersion) devices in the air manifold runner might help to increase the homogeneity of the mix entering the combustion chamber. Before designing such a device, the engineer must consider that:

- These devices restrict gas flow and can easily be more restrictive than the (wide open) SOGAV valve itself, and
- These devices might not get well purged of gas during the period after the SOGAV valve closes and before the air intake valve closes. During the SOGAV valve's closed period, this trapped gas may trickle out so that during the following overlap period, unburned gas passes through to the exhaust.

In addition to controlling gas admission events, the main engine controller must control air manifold pressure and gas manifold pressure.

Air manifold pressure control is required in order to achieve the desired air/fuel ratio. This can be done with an air throttle valve/actuator and/or a wastegate valve/actuator.

Gas manifold pressure regulation is necessary because:

- Air manifold pressure varies significantly during operation,
- The amount of fuel admitted per event varies significantly depending on speed and load, and
- The unbalanced SOGAV 105 valve is limited to 150 kPa (1.5 bar) of pressure drop across it. Pressure drops greater than these limits will prevent the valve from opening.

If operating at a low load condition, a relatively small pressure drop is required to prevent extremely short durations. Extremely short durations are not desirable because they can reduce mixture homogeneity. Also, small unit-to-unit SOGAV response variations result in substantial unit-to-unit fuel admission variations when operating at extremely short durations. These response variations have a very minor effect when duration is relatively long.



If operating at full speed and full load, a fairly high pressure drop (150 kPa / 1.5 bar) is generally required to admit the required amount of fuel in the time permitted. If the engine's load were substantially reduced without reducing the gas manifold pressure, a pressure drop greater than the 150 kPa / 1.5 bar limit would exist across the valve and the valve would not function.

Gas pressure regulation must be handled by the main engine controller and is discussed here to assist in understanding how the overall system works.

## Wiring

### **WARNING**

Do not connect or disconnect while circuit is live unless area is known to be non-hazardous.

**Explosion Hazard**

### **WARNING**

Substitution of components may impair suitability for Class I, Division 2 or Zone 2 applications.

**Explosion Hazard**

### **WARNING**

**PROPER WIRING**—Due to the hazardous location listings associated with this product, proper wire type and wiring practices are critical to operation.

**Explosion Hazard**

The wiring connecting the In-Pulse unit to the valves should be shielded, twin-lead wire with an insulation adequate for the on-engine environment. The shielding should be grounded through the In-Pulse connector, but not grounded on the SOGAV end.

The mating connectors are defined on the outline drawing (Figure 1-1).

Connect the ground terminal on the SOGAV solenoid to earth ground.

The cables do not need to all be the same length as long as each cable meets the electrical code requirements for the location of operation and the following length/wire gauge criteria:

- Up to 15 m cable length: 1 mm<sup>2</sup> (18 AWG) required
- 15 to 25 m cable length: 1.5 mm<sup>2</sup> (16 AWG) required
- 25 to 40 m cable length: 2 mm<sup>2</sup> (14 AWG) required

SOGAV applications utilizing the Woodward In-Pulse II controller or ECM3 controller should be set up such that the SOGAV cable shielding is not grounded to the SOGAV. The cable gland that holds and seals the cable relative to the SOGAV solenoid should therefore be the non-grounding style for these applications.

### **NOTICE**

Failure to comply with this requirement may cause controller and engine operational issues, and will invalidate the controller EMC certification(s).

This requirement applies only to the controllers mentioned in this paragraph. Applications utilizing other controllers may be set up differently, assuming they meet the necessary performance and EMC requirements.



## Sizing

Always consult a Woodward application engineer to determine the appropriate system and hardware for the specific application.

For an indication of which SOGAV valve is most appropriate for an application, follow these steps:

1. Assuming the full-speed and full-load condition, determine the air manifold pressure required to achieve the desired air/fuel ratio. Call this variable P2 and use units of bar (absolute; 1 bar = 100 kPa).
2. Determine the properties of the poorest quality gas expected to be used on this application. In addition to energy content, the following properties are required:
  - Specific gravity relative to air. Call this variable sg (unitless).
  - Ratio of specific heats (CP/CV). Call this variable k (unitless).
3. Assuming the full speed and full load condition and the fuel energy content, determine the mass (in grams) of fuel required per combustion event.
4. Determine the maximum allowable SOGAV valve admission time duration per combustion event (in seconds). Subtract 0.005 seconds to compensate for SOGAV valve opening and closing times and for gas acceleration delay in the gas manifold runner. Consider the timing and duration issues discussed in the previous section.
5. Using the data from steps 3 and 4 above, determine the required mass flow rate while the valve is in the open condition. Call this variable MR and use units of grams/second.
6. Using a P1 (gas manifold pressure) of 1.5 bar greater than P2, perform the Available Flow Rate calculation. Determine if the available flow (MA) exceeds the required flow (MR) calculated in step 5.
7. If available flow calculated in step 6 is too low, a larger valve will be needed.

Available Flow Rate Equation (with valve in full open condition; this equation is set up for a scientific calculator, where \* indicates multiplication and ^ indicates raising to a power):

$$MA = Z * ((2 * k / (k - 1)) * sg * P1^{2 * (293.15 / (273.15 + Tg)) * ((P2 / P1)^{(2 / k)} - (P2 / P1)^{((k + 1) / k)})})^{.5}$$

where:

MA = available gas mass flow rate (g/s)  
 Z = valve constant (use 105 for SOGAV 105)  
 k = ratio of specific heats (CP/CV)  
 sg = gas specific gravity (relative to air)  
 P1 = gas absolute upstream pressure at valve entry (bar)  
 P2 = gas absolute downstream pressure at valve exit (bar)  
 Tg = gas temperature (°C)

The above equation is valid only for ratios of P2/P1 greater than 0.544. For P2/P1 ratios less than 0.544, flow is choked (sonic or critical). To make the equation valid for P2/P1 ratios less than 0.544, use P2/P1 = 0.544 instead.

For example, if k = 1.31, sg = 0.55, P1 = 4.5 bar, P2 = 3.0 bar, and Tg = 20 °C, steady state full open flow would be approximately 226 g/s.



## Input Power Limitations

Woodward solenoids are labeled with maximum rated values of input current and input power. These input ratings must not be exceeded during continuous solenoid operation, to prevent exceeding a prescribed coil temperature rise at the maximum rated ambient operating temperature. These solenoids must be driven by specially designed current limiting drivers, providing periodic, two-tier current waveforms. Details on how to determine and interpret these values are in the Appendix.

## Safety

In addition to normal safety systems used with gas engines, the gas manifold should be immediately de-pressurized and evacuated after engine shutdown. This is required to prevent possible leaks of gas into the air manifold (through the SOGAV valves) after shutdown. Gas leaks of this type can cause overfueling during the next start-up.



## Chapter 4. Servicing

SOGAV valve life is highly dependent on the following variables, which are beyond the control of the manufacturer:

- Engine speed
- Fuel quality/contaminants
- Fuel filtration
- Temperature
- Vibration
- Driver electronics used
- Oil/lubrication content of fuel (2 ppm minimum oil content is recommended; for oil content less than 2 ppm, the appropriate coated version of the SOGAV should be used.)
- Valve orientation (a vertical orientation [valve inlet facing upward] is preferred)

Therefore, SOGAV valve maintenance/reconditioning should be carried out at intervals determined by the engine manufacturer for the particular application.

For optimum service/reconditioning, return SOGAV valves to Woodward, where trained personnel and sophisticated reconditioning and test equipment are available.

If on-site maintenance or troubleshooting is required, refer to Chapter 5.



## Chapter 5.

# Maintenance/Troubleshooting

### Introduction

Some SOGAV valve troubleshooting and minor valve maintenance can be done in the field. However, the lack of flow and response testing facilities often limits the ability to analyze the problem and verify the solution. If time permits, it is always advisable to return the SOGAV valves to Woodward for service.

#### **WARNING**

Do not connect or disconnect while circuit is live unless area is known to be non-hazardous.

**Explosion Hazard**

#### **WARNING**

Substitution of components may impair suitability for Class I, Division 2 or Zone 2 applications.

**Explosion Hazard**

#### **WARNING**

**Personal Injury**

**ELECTRICAL POWER / GAS PRESSURE**—Before performing any maintenance or troubleshooting on the SOGAV valve, remove all electrical power from the valve solenoid and relieve all gas pressure from the inlet and the outlet of the valve. Failure to remove all electrical power and relieve all inlet and outlet gas pressure before performing maintenance may result in equipment damage, personal injury, or death.

#### **WARNING**

**Personal Injury**

**ELECTRIC SHOCK HAZARD**—Hazardous voltages are present during the troubleshooting procedure and present a risk of electric shock, which could cause injury or death.

#### **WARNING**

**Personal Injury**

**TRAINED PERSONNEL**—Maintenance and troubleshooting should only be attempted by properly trained personnel. Failure to observe these warnings could lead to injury or death.

#### **NOTICE**

Disassembly without prior Woodward authorization voids the manufacturer's warranty.

### Troubleshooting

If you suspect a problem with the SOGAV valve, one of the following four tests will most likely isolate the problem. If the SOGAV valve passes the four tests, the problem is probably not with the SOGAV valve, and disassembly should not be required. The following tests assume that the valve has been removed from the engine. The tests should be done in the order listed.



## 1. Coil Integrity

1. Measure coil resistance from one connector pin to the other. At room temperature, the coil resistance should be within the following ranges:

High Voltage:

SOGAV 105/MS Connector     1.9–2.2  $\Omega$

Low Voltage:

SOGAV 105/MS Connector     0.78–0.90  $\Omega$

Because of the low resistance levels, make sure to compensate for the meter lead resistance. If outside of this tolerance, the E-core coil assembly should be replaced.

Additional indication of a coil problem can be observed by comparing coil resistance of a suspect SOGAV valve to one that is known to be good. This is particularly helpful if the meter's accuracy at low resistances is questionable.

2. Check for a ground fault. Measure resistance from either pin to the E-core solenoid assembly housing. If a low resistance is measured, a ground fault exists and the E-core solenoid assembly should be replaced.

Generally, a properly operating coil will measure infinite resistance to ground; however sometimes a high resistance will be measured at first ( $> 10 \text{ M}\Omega$ ) and the reading will gradually increase until the meter reads infinite. This is not a problem. This is a result of the meter's charging of the coil's natural capacitance.

## 2. Valve Leakage

Install a pressurization adapter to the gas inlet using the appropriate O-ring. This can be easily made or ordered from Woodward (Woodward tool 8995-279).

Apply 200 kPa/2.0 bar (29 psig) of air pressure to the SOGAV inlet. In a quiet area, listen to the outlet of the SOGAV valve. If the leakage is inaudible or barely audible, the valve is OK. If the leakage is appreciable, either the valve plates are damaged or contamination is present between the valve plates. In either case, disassembly and corrective action is required.

If instrumentation is available, measure the leakage flow rate and compare to the specified maximum in Chapter 6 of this manual.

## 3. Actuator Strength

Apply 150 kPa/1.5 bar (22 psig) of air pressure to the inlet of the SOGAV 105 valve as was done during the leakage test.



**WARNING** ELECTRIC SHOCK HAZARD—Exercise care in using the power supply below. The voltage and current are sufficient to cause death or serious injury.

**Personal Injury**



Using a power supply capable of 10 A at 24 Vdc (for solenoids indicating max peak voltage: 32 Vdc) or 90 Vdc (for solenoids indicating max peak voltage; 140 Vdc), set up as follows:

- Current limit: 10 A (Do not use the E-core to set up this current limit.)
- Voltage limit: > 24 Vdc (for solenoids indicating max peak voltage: 32 Vdc) or 90 Vdc (for solenoids indicating max peak voltage; 140 Vdc)

Install a switch between the power supply and SOGAV E-core solenoid assembly. Turn off the switch and turn on the power supply.

Turn the switch ON and then *immediately* OFF.

## NOTICE

**DO NOT LEAVE THE SOLENOID ASSEMBLY ENERGIZED WITH 10 A FOR MORE THAN 2 SECONDS.** The coil will overheat if left continually energized with 10 A for more than 2 seconds.

**Also, remember that two 1-second bursts in rapid succession are equivalent to one 2 second burst in terms of heat generation.**

**Allow one minute cool-down between bursts. (The coil does not overheat in operation because the In-Pulse driver limits the 10 A “on” time to a maximum of 0.001 second per event. This is not possible using the manual switch method.)**

If a loud pop is heard (like a balloon bursting), the actuator strength is adequate.

If no loud pop is heard and the current was applied properly, the valve should be disassembled and evaluated. Most likely, one of three situations exist:

- The socket head cap screw connecting the armature to the moving metering plate is loose; or
- There is debris between the moving metering plate and the upper plate; or
- There is debris between the armature and the E-core solenoid assembly.

## 4. Valve Travel

In the absence of elaborate flow-test apparatus, a fair check of flow capacity can be inferred from valve travel.

Reset the power supply used in the previous test to a 5 A current limit.

With no pressure applied to the SOGAV valve, turn the switch ON and quickly reduce the current to 1 A (the valve can be continually operated at 1 A without overheating).

Using a depth micrometer or dial indicator, measure the distance from the SOGAV valve's base flange down to the face of the moving metering plate. Then de-energize the solenoid assembly (turn switch OFF) and repeat the measurement. The difference in measurements (travel) should be 0.41 to 0.43 mm (0.016 to 0.017 inch).

The depth micrometer or dial indicator should have a stem with a diameter less than 3 mm. The lapped face of the moving metering plate can be accessed by inserting the stem through one of the outlet holes in the lower stop/metering plate. The stem must also pass through a face groove in the lower stop/metering plate and contact the face of the moving metering plate.



If the travel is less than 0.38 mm, debris is probably present between the moving metering plate and the upper plate or between the armature and E-core solenoid assembly. If the travel is greater than 0.43 mm, some wear probably exists and the valve should be disassembled and the parts evaluated.

## Comments

If the SOGAV valve passes the tests above, there should be no reason to disassemble it. The problem most likely lies elsewhere. In addition to suspecting the electronic controls (outside the scope of this manual), the following possibilities should be considered:

- Does pressure difference ( $\Delta P$ ) across the valve exceed 150 kPa/1.5 bar? This will prevent valve pull-in.
- Are the cables and connectors in good condition? Each lead should have less than 0.4  $\Omega$  resistance. Have the cables been burnt? Are there intermittent connections at the connectors? Are the connectors tight?

### **WARNING**

#### Personal Injury

**BERYLLIUM COPPER**—The beveled retaining ring is manufactured from beryllium copper. Do not machine, grind, cut, or physically modify the retaining ring in any way. Beryllium particulate (dust, mist, fumes, fragments, particles, and/or powder) that could result from machining, grinding, cutting, or physically modifying the retaining ring can be a health hazard (see Material Safety Data Sheet). Beryllium copper in solid form and as contained in finished products (in this case, the unmodified retaining ring) presents no special health risks.

Do not attempt to remove the receptacle from the E-core solenoid assembly. The back side of the receptacle is potted and attempts to remove the receptacle will damage the potting and coil lead wires.



## Chapter 6. Specifications

### Construction

All parts exposed to the gas are resistant to corrosion and stress corrosion cracking (a problem associated with hydrogen sulfides, which are sometimes present in natural gas).

### Environment

Operating Temperature: –20 to +105 °C (–4 to +221 °F)  
Storage Temperature: –40 to +70 °C (–40 to +158 °F)

Vibration: Contact Woodward for vibration qualification data and analysis.

Operating Humidity: ≤ 85% relative humidity, non-condensing  
Storage Humidity: ≤ 90% relative humidity, non-condensing

Salt Spray, Pressure Wash  
Resistance, etc.: The unit withstands exposure to pressure washing, salt spray, etc., without adverse corrosion or infiltration.

Ingress Protection: IP66

Maximum Altitude: 4000 m

Fuel Gas Specifications: NG = Natural Gas  
CMM = Coal Mine Ventilation Gas  
CBM = Coal Bed Methane



**Fuel Gas Specifications**

		Gas				
		NG	CMM	CBM	Biogas	Associated gas
Lower heating value, min (LHV <sub>v</sub> )	MJ / Nm <sup>3</sup>	<b>24</b>	<b>17</b>	<b>24</b>	<b>17</b>	<b>24</b>
Methane number, min (MN)		<b>Engine specific</b>	<b>90</b>	<b>Engine specific</b>	<b>90</b>	<b>30</b>
Methane content, min CH <sub>4</sub>	Vol-%	60	50	60	50	40
Carbon dioxide, max	Vol-%	30	5	30	60	30
Carbon monoxide, max	Vol-%					
Hydrogen sulphide, max H <sub>2</sub> S	Vol-%	0,05	0,05	0,05	0,05	0,05
Hydrogen, max H <sub>2</sub>	Vol-%	5	5	5	5	5
Condensate / Moisture		Not allowed	Not allowed	Not allowed	Not allowed	Not allowed
Ammonia, max	Mg/Nm <sub>3</sub>	40	40	40	40	40
Chlorine + Fluorines, max	Mg/Nm <sub>3</sub>	60	60	60	60	60
Silicon, max	Mg/Nm <sub>3</sub>				50	
Particles or solids, max content	Mg/Nm <sub>3</sub>	50	50	50	50	50
Particles or solids, max size	µm	5	5	5	5	5



## Performance

**Response (assumes the use of a Woodward In-Pulse control)** is dependent on current wave form and the pressure differential. Typical 90 V In-Pulse II and current wave form results below:

Time to full open after signal on:

0.0028 second max

Time to full closed after signal off:

0.0028 second max

**Steady State Flow Rate (with valve in full open condition)**

See the flow equation defined previously in the sizing section.

**Maximum Leakage When Closed**

Less than 10 SCFH (0.17 SCFM) tested with 22 psia air at the inlet, 12.3 psia air at the outlet at 68 °F

Less than 0.28 m<sup>3</sup>/h (0.0048 m<sup>3</sup>/min) tested with 152 kPa air at the inlet, 84.8 kPa air at the outlet at 20 °F

**Filtration Required**

5 µm absolute max particle size

**Expected Maximum Gas Supply Pressure (P1)**

450 kPa/4.5 bar absolute (65.3 psi absolute)

**Expected Maximum Air Manifold Pressure (P2)**

300 kPa/3.0 bar absolute (43.5 psi absolute)

**Maximum Gas Manifold to Air Manifold Pressure Difference**

(the limiting specification: P1 – P2)

150 kPa/1.5 bar (21.7 psi)

**Maximum Backfire Pressure Spike** (without back-flowing through valve)

50 kPa/0.5 bar (7 psi) above the current gas manifold pressure

Exceeding this by more than 2 bar (29 psi) may damage the valve.

**Expected Maximum Gas Supply Temperature**

80 °C (176 °F)



## Chapter 7.

# Product Support and Service Options

### Product Support Options

If you are experiencing problems with the installation, or unsatisfactory performance of a Woodward product, the following options are available:

1. Consult the troubleshooting guide in the manual.
2. Contact the **OE Manufacturer or Packager** of your system.
3. Contact the **Woodward Business Partner** serving your area.
4. Contact Woodward technical assistance via email ([EngineHelpDesk@Woodward.com](mailto:EngineHelpDesk@Woodward.com)) with detailed information on the product, application, and symptoms. Your email will be forwarded to an appropriate expert on the product and application to respond by telephone or return email.
5. If the issue cannot be resolved, you can select a further course of action to pursue based on the available services listed in this chapter.

**OEM or Packager Support:** Many Woodward controls and control devices are installed into the equipment system and programmed by an Original Equipment Manufacturer (OEM) or Equipment Packager at their factory. In some cases, the programming is password-protected by the OEM or packager, and they are the best source for product service and support. Warranty service for Woodward products shipped with an equipment system should also be handled through the OEM or Packager. Please review your equipment system documentation for details.

**Woodward Business Partner Support:** Woodward works with and supports a global network of independent business partners whose mission is to serve the users of Woodward controls, as described here:

- A **Full-Service Distributor** has the primary responsibility for sales, service, system integration solutions, technical desk support, and aftermarket marketing of standard Woodward products within a specific geographic area and market segment.
- An **Authorized Independent Service Facility (AISF)** provides authorized service that includes repairs, repair parts, and warranty service on Woodward's behalf. Service (not new unit sales) is an AISF's primary mission.
- A **Recognized Engine Retrofitter (RER)** is an independent company that does retrofits and upgrades on reciprocating gas engines and dual-fuel conversions, and can provide the full line of Woodward systems and components for the retrofits and overhauls, emission compliance upgrades, long term service contracts, emergency repairs, etc.

A current list of Woodward Business Partners is available at [www.woodward.com/directory](http://www.woodward.com/directory).

### Product Service Options

Depending on the type of product, the following options for servicing Woodward products may be available through your local Full-Service Distributor or the OEM or Packager of the equipment system.

- Replacement/Exchange (24-hour service)
- Flat Rate Repair
- Flat Rate Remanufacture



**Replacement/Exchange:** Replacement/Exchange is a premium program designed for the user who is in need of immediate service. It allows you to request and receive a like-new replacement unit in minimum time (usually within 24 hours of the request), providing a suitable unit is available at the time of the request, thereby minimizing costly downtime.

This option allows you to call your Full-Service Distributor in the event of an unexpected outage, or in advance of a scheduled outage, to request a replacement control unit. If the unit is available at the time of the call, it can usually be shipped out within 24 hours. You replace your field control unit with the like-new replacement and return the field unit to the Full-Service Distributor.

**Flat Rate Repair:** Flat Rate Repair is available for many of the standard mechanical products and some of the electronic products in the field. This program offers you repair service for your products with the advantage of knowing in advance what the cost will be.

**Flat Rate Remanufacture:** Flat Rate Remanufacture is very similar to the Flat Rate Repair option, with the exception that the unit will be returned to you in “like-new” condition. This option is applicable to mechanical products only.

## Returning Equipment for Repair

If a control (or any part of an electronic control) is to be returned for repair, please contact your Full-Service Distributor in advance to obtain Return Authorization and shipping instructions.

When shipping the item(s), attach a tag with the following information:

- return number;
- name and location where the control is installed;
- name and phone number of contact person;
- complete Woodward part number(s) and serial number(s);
- description of the problem;
- instructions describing the desired type of repair.

## Packing a Control

Use the following materials when returning a complete control:

- protective caps on any connectors;
- antistatic protective bags on all electronic modules;
- packing materials that will not damage the surface of the unit;
- at least 100 mm (4 inches) of tightly packed, industry-approved packing material;
- a packing carton with double walls;
- a strong tape around the outside of the carton for increased strength.

### NOTICE

To prevent damage to electronic components caused by improper handling, read and observe the precautions in Woodward manual 82715, *Guide for Handling and Protection of Electronic Controls, Printed Circuit Boards, and Modules*.

## Replacement Parts

When ordering replacement parts for controls, include the following information:

- the part number(s) (XXXX-XXXX) that is on the enclosure nameplate;
- the unit serial number, which is also on the nameplate.



## Engineering Services

Woodward's Full-Service Distributors offer various Engineering Services for our products. For these services, you can contact the Distributor by telephone or by email.

- Technical Support
- Product Training
- Field Service

**Technical Support** is available from your equipment system supplier, your local Full-Service Distributor, or from many of Woodward's worldwide locations, depending upon the product and application. This service can assist you with technical questions or problem solving during the normal business hours of the Woodward location you contact.

**Product Training** is available as standard classes at many Distributor locations. Customized classes are also available, which can be tailored to your needs and held at one of our Distributor locations or at your site. This training, conducted by experienced personnel, will assure that you will be able to maintain system reliability and availability.

**Field Service** engineering on-site support is available, depending on the product and location, from one of our Full-Service Distributors. The field engineers are experienced both on Woodward products as well as on much of the non-Woodward equipment with which our products interface.

For information on these services, please contact one of the Full-Service Distributors listed at [www.woodward.com/directory](http://www.woodward.com/directory).

## Contacting Woodward's Support Organization

For the name of your nearest Woodward Full-Service Distributor or service facility, please consult our worldwide directory published at [www.woodward.com/directory](http://www.woodward.com/directory).

You can also contact the Woodward Customer Service Department at one of the following Woodward facilities to obtain the address and phone number of the nearest facility at which you can obtain information and service.

### Products Used In Electrical Power Systems

<u>Facility</u> -----	<u>Phone Number</u>
Brazil -----	+55 (19) 3708 4800
China -----	+86 (512) 6762 6727
Germany:	
Kempen----	+49 (0) 21 52 14 51
Stuttgart--	+49 (711) 78954-510
India -----	+91 (129) 4097100
Japan-----	+81 (43) 213-2191
Korea -----	+82 (51) 636-7080
Poland-----	+48 12 295 13 00
United States----	+1 (970) 482-5811

### Products Used In Engine Systems

<u>Facility</u> -----	<u>Phone Number</u>
Brazil -----	+55 (19) 3708 4800
China -----	+86 (512) 6762 6727
Germany-----	+49 (711) 78954-510
India -----	+91 (129) 4097100
Japan-----	+81 (43) 213-2191
Korea -----	+82 (51) 636-7080
The Netherlands-	+31 (23) 5661111
United States----	+1 (970) 482-5811

### Products Used In Industrial Turbomachinery Systems

<u>Facility</u> -----	<u>Phone Number</u>
Brazil -----	+55 (19) 3708 4800
China -----	+86 (512) 6762 6727
India -----	+91 (129) 4097100
Japan-----	+81 (43) 213-2191
Korea -----	+82 (51) 636-7080
The Netherlands-	+31 (23) 5661111
Poland-----	+48 12 295 13 00
United States----	+1 (970) 482-5811

For the most current product support and contact information, please visit our website directory at [www.woodward.com/directory](http://www.woodward.com/directory).



## Technical Assistance

If you need to contact technical assistance, you will need to provide the following information. Please write it down here before contacting the Engine OEM, the Packager, a Woodward Business Partner, or the Woodward factory:

### General

Your Name \_\_\_\_\_

Site Location \_\_\_\_\_

Phone Number \_\_\_\_\_

Fax Number \_\_\_\_\_

---

### Prime Mover Information

Manufacturer \_\_\_\_\_

Engine Model Number \_\_\_\_\_

Number of Cylinders \_\_\_\_\_

Type of Fuel (gas, gaseous, diesel,  
dual-fuel, etc.) \_\_\_\_\_

Power Output Rating \_\_\_\_\_

Application (power generation, marine,  
etc.) \_\_\_\_\_

---

### Control/Governor Information

#### Control/Governor #1

Woodward Part Number & Rev. Letter \_\_\_\_\_

Control Description or Governor Type \_\_\_\_\_

Serial Number \_\_\_\_\_

---

#### Control/Governor #2

Woodward Part Number & Rev. Letter \_\_\_\_\_

Control Description or Governor Type \_\_\_\_\_

Serial Number \_\_\_\_\_

---

#### Control/Governor #3

Woodward Part Number & Rev. Letter \_\_\_\_\_

Control Description or Governor Type \_\_\_\_\_

Serial Number \_\_\_\_\_

---

### Symptoms

Description \_\_\_\_\_

*If you have an electronic or programmable control, please have the adjustment setting positions or the menu settings written down and with you at the time of the call.*



## Appendix.

# Interpreting Solenoid Ratings

### Procedure for interpreting the “Equivalent Average Direct Current” (EADC) and “Equivalent Average Power” (EAP) ratings of Woodward Solenoids

#### Introduction

Woodward solenoids are labeled with maximum rated values of input current and input power. These input ratings must not be exceeded during continuous solenoid operation, to prevent exceeding a prescribed coil temperature rise at the maximum rated ambient operating temperature. These solenoids must be driven by specially designed current limiting drivers, providing periodic, two-tier current waveforms (see example waveform in Figure A-1).

The first tier is the relatively large “pull-in” current pulse. The second tier is the lesser “hold-in” current pulse. Solenoid applications vary in regard to the current waveform required to achieve the desired solenoid performance, considering the device being actuated by the solenoid, the frequency of solenoid operation, etc. The parameters “Equivalent Average Direct Current” (EADC) and “Equivalent Average Power” (EAP) are used as ratings for these solenoids to achieve a rating procedure that can be applied to varying solenoid applications.

#### Equivalent Average Direct Current (EADC)

Equivalent Average Direct Current (EADC) equates to the equivalent dc current (I) that can be continuously applied to a solenoid, having the highest expected coil resistance and operating at the maximum rated ambient temperature, while not exceeding the rated solenoid coil temperature rise. The EADC rating can be related to various periodic, two-tier solenoid current waveforms used to drive the solenoids.

The average area under an “ $I^2$  vs. time” solenoid current waveform plot depicts the solenoid coil heating effect. If the area under the “ $I^2$  vs. time” waveform of a two-tier current waveform is equal to, or less than, the rated EADC of the solenoid, the two-tier waveform is acceptable (it will not overheat the coil) if the solenoid is operated at maximum rated ambient temperature. This approach is applied, in detail, as follows:

1. A solenoid application is established and a suitable, worst case, two-tier current waveform is defined, in terms of the parameters defined in Figure A-1, that achieve the desired solenoid dynamic performance.
2. The current waveform parameters are applied to the EADC equation as shown in the example calculation of Figure A-1. The resulting calculated EADC value must not exceed the solenoid’s rated EADC value, indicated on the solenoid nameplate.
3. The above analysis must include the “worst case” operating condition, which is the highest expected “duty cycle” waveform. The highest “duty cycle” waveform is a waveform whereby the duration of the current “ON” time, relative to the total time between periodic current waveform cycles, is the greatest.



## Equivalent Average Power (EAP)

While EADC, as discussed above, is the most accurate and preferred parameter for determining suitability of two-tier waveforms, Equivalent Average Power (EAP) is another parameter that defines solenoid input limitations.

Equivalent Average Power (EAP) equates to the equivalent input power that can be continuously applied to a respective solenoid, operating at the maximum rated ambient temperature, without overheating the solenoid coil. The EAP rating can be related to typical periodic two-tier solenoid current waveforms used to drive the solenoids.

The product of (average coil current)<sup>2</sup> and coil resistance ( $I^2R$ ) describes the solenoid coil heating effect (input power). For a given set of conditions, if the EADC (amps) of a two-tier current waveform is known, and if the associated solenoid coil resistance  $R_c$  (ohms) is known, the associated EAP can be calculated by the relationship:

$$\text{EAP} = \text{EADC}^2 * R_c \text{ (watts)}$$

If the calculated EAP of a two-tier current waveform is equal to, or less than, the rated EAP of the solenoid, the two-tier waveform is acceptable in that it will not overheat the solenoid coil when operating at maximum rated ambient temperature. This approach is applied, in detail, as follows:

1. The value of EADC is calculated for a given two-tier current waveform as described above.
2. The highest expected nominal solenoid coil resistance ( $R_c \text{ max}$ ), for the object solenoid, at the rated coil temperature (including temperature rise) is determined from Table A-1.
3. Entering the calculated EADC value and listed coil resistance into the above equation will result in the EAP value for a given solenoid part number.

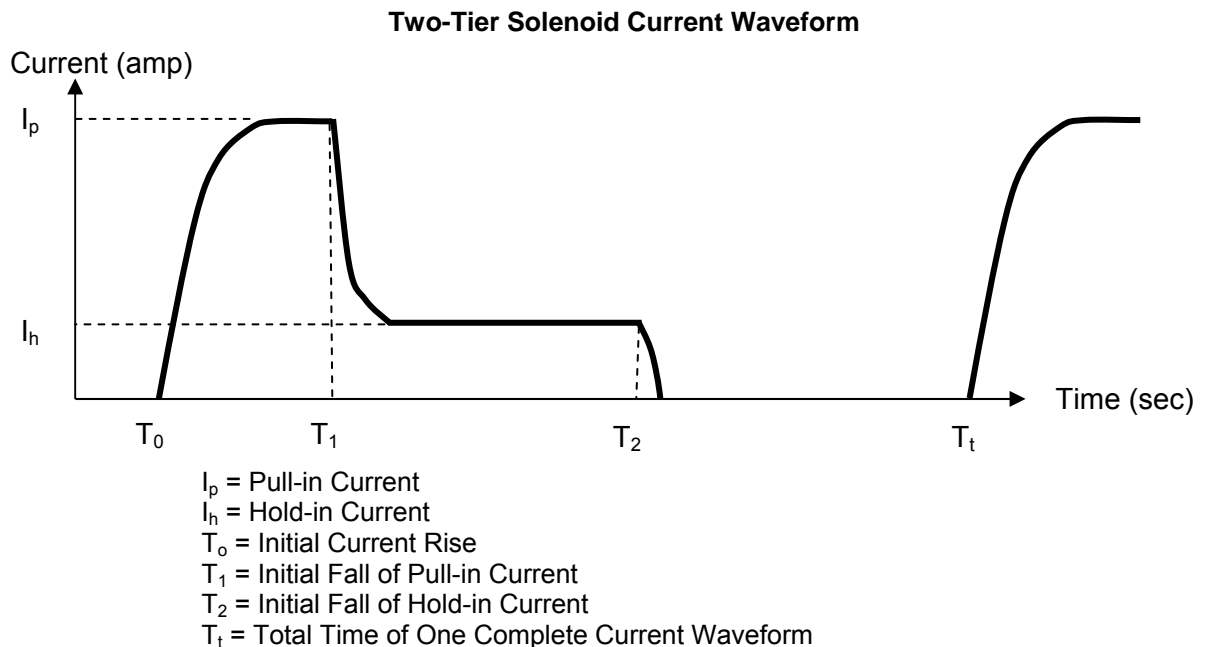


Figure A-1. Two Tier Current Waveform Parameters



**EXAMPLE CALCULATION**—Equivalent Average Direct Current (EADC)

Let:  $T_o = 0.0 \text{ s}$   $I_p = 10 \text{ A}$   
 $T_1 = 0.002 \text{ s}$   $I_h = 2 \text{ A}$   
 $T_2 = 0.020 \text{ s}$   
 $T_t = 0.100 \text{ s}$

$$\text{EADC} = [\{(T_1 - T_o) * (I_p)^2 + (T_2 - T_1) * (I_h)^2\} / (T_t - T_o)]^{0.5} \text{ (amps)}$$

$$\text{EADC} = [\{(0.002 * (10)^2) + \{0.018 * (2)^2\} / \{0.100\}]^{0.5} = [(0.2 + 0.072) / (0.100)]^{0.5}$$

$$\text{EADC} = 1.649 \text{ A}$$

**IMPORTANT**

Due to assumptions of current waveform rise times, fall times, and other waveform parameters, the EADC value obtained from the equation shown above typically results in a conservative value. A more precise method may be used to calculate the EADC value of an application's current waveform if the method shown above results in an EADC value at or slightly over the solenoid's rated EADC value. Contact Woodward for more information or assistance if needed with EADC calculations for a particular application.

Solenoid Part No.	Coil Resistance (max) (ohms)
5852-119.....	3.22
5852-130.....	1.32
5852-150.....	3.22
5852-152.....	1.32
5852-159.....	1.32
5852-173.....	3.22
5852-193.....	1.32
5852-229.....	1.32
5852-233.....	1.32
5852-257.....	3.22
5852-259.....	3.22

Table A-1. Maximum Solenoid Coil Resistance (Rc) Values for Woodward SOGAV 105 Solenoids

**IMPORTANT**

Coil resistance values listed represent the expected coil resistance when the coil has reached its maximum allowed operating temperature. In each case, the resistance, at a coil temperature of 21 °C, is assumed to be the maximum value allowed by the coil design specification.



## Revision History

**Changes in Revision E—**

- Updated ATEX information
- Updated Declarations

**Changes in Revision D—**

- Made minor changes for clarity


**Changes in Revision C—**

- Removed disassembly information, since field disassembly is not recommended




## Declarations

### DECLARATION OF CONFORMITY

**DoC No.:** 00147-04-CE-02-03  
**Manufacturer's Name:** Woodward, Inc.  
**Manufacturer's Address:** 1000 E. Drake Rd.  
Fort Collins, CO, USA, 80525  
**Model Name(s)/Number(s):** SOGAV 105, SOGAV 250  
**Conformance to Directive(s):** 2006/95/EC COUNCIL DIRECTIVE of 12 December 2006 on the harmonization of the laws of Member States relating to electrical equipment designed for use within certain voltage limits.  
**The object of the declaration described above is in conformity with the following Directives of the European Parliament and of the Council:** 94/9/EC COUNCIL DIRECTIVE of 23 March 1994 on the approximation of the laws of the Member States concerning equipment and protective systems intended for use in potentially explosive atmospheres  
**Markings in addition to CE mark:**  Category 3 Group II G, Ex nA IIC T3 X Gc IP54  
**Applicable Standards:** EN61010-1:2010 – Safety requirements for electrical equipment for measurement, control, and laboratory use - Part 1:General requirements  
EN60079-15:2010 – Explosive atmospheres – Part 15: Equipment protection by type of protection n  
**Last two digits of the year in which the CE marking was affixed for the first time:** 03

This declaration of conformity is issued under the sole responsibility of the manufacturer  
We, the undersigned, hereby declare that the equipment specified above conforms to the above Directive(s).

MANUFACTURER

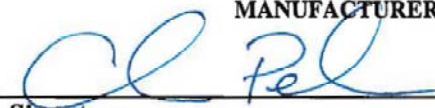  
\_\_\_\_\_  
**Signature**

\_\_\_\_\_  
**Full Name**

**Christopher Perkins**

\_\_\_\_\_  
**Position**

**Engineering Manager**

\_\_\_\_\_  
**Place**

**Woodward, Inc., Fort Collins, CO, USA**

\_\_\_\_\_  
**Date**

**14 May 2014**



**DECLARATION OF INCORPORATION  
Of Partly Completed Machinery  
2006/42/EC**

**Manufacturer's Name:** Woodward, Inc.

**Manufacturer's Address:** 1000 E. Drake Rd. 3800 N. Wilson Ave.  
Fort Collins, CO, USA, 80525 Loveland, CO, USA 80538

**Model Names:** SOGAV 2.2, 36, 43, 65, 105, 200, 245, and 250

**This product complies, where  
applicable, with the following  
Essential Requirements of Annex I:** 1.1, 1.2, 1.3, 1.4, 1.5, 1.6, 1.7

The relevant technical documentation is compiled in accordance with part B of Annex VII. Woodward shall transmit relevant information if required by a reasoned request by the national authorities. The method of transmittal shall be agreed upon by the applicable parties.

The person authorized to compile the technical documentation:

**Name:** Dominik Kania, Managing Director at Woodward Poland Sp. z o.o  
**Address:** Woodward Poland Sp. z o.o., ul. Skarbowa 32, 32-005 Niepolomice, Poland

This product must not be put into service until the final machinery into which it is to be incorporated has been declared in conformity with the provisions of this Directive, where appropriate.

The undersigned hereby declares, on behalf of Woodward Governor Company of Loveland and Fort Collins, Colorado that the above referenced product is in conformity with Directive 2006/42/EC as partly completed machinery:

**MANUFACTURER**



**Signature**

**Christopher Perkins**

**Full Name**

**Engineering Manager**

**Position**

**Woodward, Inc., Fort Collins, CO, USA**

**Place**

**14 May 2014**

**Date**



We appreciate your comments about the content of our publications.

Send comments to: [icinfo@woodward.com](mailto:icinfo@woodward.com)

Please reference publication **26499E**.



B26499:E



PO Box 1519, Fort Collins CO 80522-1519, USA  
1000 East Drake Road, Fort Collins CO 80525, USA  
Phone +1 (970) 482-5811 • Fax +1 (970) 498-3058

Email and Website—[www.woodward.com](http://www.woodward.com)

Woodward has company-owned plants, subsidiaries, and branches,  
as well as authorized distributors and other authorized service and sales facilities throughout the world.

Complete address / phone / fax / email information for all locations is available on our website.