



## easYgen-3000 Series (Package P1) Genset Control



## Configuration

Software Version: 1.10xx

Part Numbers: 8440-1816 / 8440-1817 / 8440-1818 / 8440-1831



Manual 37224D

**WARNING**

Read this entire manual and all other publications pertaining to the work to be performed before installing, operating, or servicing this equipment. Practice all plant and safety instructions and precautions. Failure to follow instructions can cause personal injury and/or property damage.

The engine, turbine, or other type of prime mover should be equipped with an overspeed (overtemperature, or overpressure, where applicable) shutdown device(s), that operates totally independently of the prime mover control device(s) to protect against runaway or damage to the engine, turbine, or other type of prime mover with possible personal injury or loss of life should the mechanical-hydraulic governor(s) or electric control(s), the actuator(s), fuel control(s), the driving mechanism(s), the linkage(s), or the controlled device(s) fail.

Any unauthorized modifications to or use of this equipment outside its specified mechanical, electrical, or other operating limits may cause personal injury and/or property damage, including damage to the equipment. Any such unauthorized modifications: (i) constitute "misuse" and/or "negligence" within the meaning of the product warranty thereby excluding warranty coverage for any resulting damage, and (ii) invalidate product certifications or listings.

**CAUTION**

To prevent damage to a control system that uses an alternator or battery-charging device, make sure the charging device is turned off before disconnecting the battery from the system.

Electronic controls contain static-sensitive parts. Observe the following precautions to prevent damage to these parts.

- Discharge body static before handling the control (with power to the control turned off, contact a grounded surface and maintain contact while handling the control).
- Avoid all plastic, vinyl, and Styrofoam (except antistatic versions) around printed circuit boards.
- Do not touch the components or conductors on a printed circuit board with your hands or with conductive devices.

**OUT-OF-DATE PUBLICATION**

This publication may have been revised or updated since this copy was produced. To verify that you have the latest revision, be sure to check the Woodward website:

<http://www.woodward.com/pubs/current.pdf>

The revision level is shown at the bottom of the front cover after the publication number. The latest version of most publications is available at:

<http://www.woodward.com/publications>

If your publication is not there, please contact your customer service representative to get the latest copy.

**Important definitions****WARNING**

Indicates a potentially hazardous situation that, if not avoided, could result in death or serious injury.

**CAUTION**

Indicates a potentially hazardous situation that, if not avoided, could result in damage to equipment.

**NOTE**

Provides other helpful information that does not fall under the warning or caution categories.

Woodward reserves the right to update any portion of this publication at any time. Information provided by Woodward is believed to be correct and reliable. However, Woodward assumes no responsibility unless otherwise expressly undertaken.

© Woodward  
All Rights Reserved.

# Revision History

Rev.	Date	Editor	Changes
NEW	06-11-23	TP	New release
A	07-07-04	TP	Minor corrections; update to reflect the extended functionality
B	08-02-07	TP	Minor corrections; command variable IDs added
C	08-07-24	TP	Minor corrections; update to reflect the extended functionality
D	09-10-23	TE	Minor corrections

# Content

<b>CHAPTER 1. GENERAL INFORMATION .....</b>	<b>9</b>
Document Overview .....	9
Abbreviations .....	10
<b>CHAPTER 2. CONFIGURATION .....</b>	<b>11</b>
Configuration Via The Front Panel .....	11
Configuration Using The PC .....	12
Install ToolKit Configuration and Visualization Software .....	12
Configure ToolKit .....	12
ToolKit Files .....	13
Connect ToolKit and the easYgen Unit .....	14
View easYgen Data with ToolKit .....	15
Configure the easYgen with ToolKit .....	16
The Settings File Function of ToolKit .....	16
Function of the Inputs and Outputs .....	17
<b>CHAPTER 3. PARAMETERS.....</b>	<b>21</b>
Configure Language / Clock .....	22
Configure Display .....	23
Lamp Test .....	23
Enter Password .....	23
System Management .....	25
System Management: Password System .....	26
Configuration .....	27
Configure Measurement .....	28
Configure Measurement: Configure Transformer .....	33
Configure Monitoring .....	38
Configure Monitoring: Generator .....	38
Configure Monitoring: Mains .....	73
Configure Monitoring: Engine .....	98
Configure Monitoring: Breaker Monitoring .....	112
Configure Monitoring: Flexible Limits .....	118
Configure Monitoring: Miscellaneous .....	122
Configure Application .....	134
Configure Application: Configure Breakers .....	134
Configure Application: Configure Inputs and Outputs .....	150
Configure Application: Configure Engine .....	167
Configure Application: Configure Emergency Run .....	180
Configure Application: Configure Automatic Run .....	182
Configure Application: Configure Controller .....	202

Configure Interfaces .....	232
Configure Interfaces: Configure CAN Interfaces ( <i>FlexCAN</i> ) .....	232
Configure Interfaces: Configure RS-232 Interfaces .....	242
Configure Interfaces: Configure RS-485 Interfaces .....	243
Configure <i>LogicsManager</i> .....	244
Configure <i>LogicsManager</i> : Configure Internal Flags .....	244
Configure <i>LogicsManager</i> : Set Timer .....	245
Configure Counters .....	247
Configure Counters: Maintenance Call .....	247
Configure Counters: Operation Hours, kWh, and kvarh .....	248
Configure Counters: Start Counter .....	249
<b>APPENDIX A. MISCELLANEOUS .....</b>	<b>250</b>
Alarm Classes .....	250
Conversion Factors .....	251
Temperature .....	251
Pressure .....	251
<b>APPENDIX B. <i>LOGICSMANAGER</i> .....</b>	<b>252</b>
Logical Symbols .....	253
Logical Outputs .....	254
Logical Outputs: Internal Flags .....	254
Logical Outputs: Internal Functions .....	255
Priority Hierarchy of the Logical Outputs .....	256
Logical Outputs: Relay Outputs .....	257
Logical Command Variables .....	258
Logical Command Variables: Group 00: Flags Condition 1 .....	259
Logical Command Variables: Group 01: Alarm System .....	261
Logical Command Variables: Group 02: Systems Condition .....	262
Logical Command Variables: Group 03: Engine Control .....	263
Logical Command Variables: Group 04: Applications Condition .....	264
Logical Command Variables: Group 05: Engine Related Alarms .....	265
Logical Command Variables: Group 06: Generator Related Alarms .....	266
Logical Command Variables: Group 07: Mains Related Alarms .....	267
Logical Command Variables: Group 08: System Related Alarms .....	268
Logical Command Variables: Group 09: Discrete Inputs .....	269
Logical Command Variables: Group 10: Analog Inputs .....	270
Logical Command Variables: Group 11: Clock and Timer .....	270
Logical Command Variables: Group 12: External Discrete Inputs 1 .....	271
Logical Command Variables: Group 13: Discrete Outputs .....	271
Logical Command Variables: Group 14: External Discrete Outputs 1 .....	272
Logical Command Variables: Group 15: Flexible Limits .....	273
Logical Command Variables: Group 18: Transistor Outputs .....	274
Factory Setting .....	275
Factory Setting: Functions .....	275
Factory Setting: Relay Outputs .....	284
Discrete Inputs .....	288
<b>APPENDIX C. ANALOG MANAGER .....</b>	<b>289</b>
Data Sources .....	289
Group 00: Internal Values .....	289
Group 01: Generator Values .....	290
Group 02: Mains Values .....	290
Group 03: Busbar 1 Values .....	291
Group 05: Controller Set Points .....	291
Group 06: DC Analog Input Values .....	291

Reference Values.....	292
Generator Rated Voltage .....	292
Mains Rated Voltage.....	292
Rated Frequency .....	293
Generator Rated Active Power .....	293
Generator Rated Reactive Power .....	294
Mains Rated Active Power .....	294
Mains Rated Reactive Power .....	295
Generator Rated Apparent Power .....	295
Mains Rated Apparent Power .....	296
Generator / Mains Power Factor .....	297
Generator Rated Current .....	298
Mains Rated Current.....	298
Rated Speed .....	298
Battery Voltage .....	299
Busbar 1 Rated Voltage.....	299
Display Value Format.....	299
<b>APPENDIX D. EVENT HISTORY.....</b>	<b>300</b>
Resetting the Event History .....	300
<b>APPENDIX E. TRIGGERING CHARACTERISTICS.....</b>	<b>304</b>
Time-Dependent Overshoot Monitoring .....	304
Two-Level Overshoot Monitoring .....	305
Two-Level Undershoot Monitoring .....	306
Two-Level Reversed/Reduced Load Monitoring .....	307
Two-Level Unbalanced Load Monitoring .....	308
One-Level Asymmetry Monitoring.....	309
<b>APPENDIX F. CHARACTERISTICS OF THE VDO INPUTS.....</b>	<b>310</b>
VDO Input "Pressure" (0 to 5 bar / 0 to 72 psi) - Index "III" .....	310
VDO Input "Pressure" (0 to 10 bar / 0 to 145 psi) - Index "IV" .....	311
VDO Input "Temperature" (40 to 120 °C / 104 to 248 °F) - Index "92-027-004" .....	312
VDO Input "Temperature" (50 to 150 °C / 122 to 302 °F) - Index "92-027-006" .....	313
Pt100 RTD.....	314
<b>APPENDIX G. LDSS FORMULAS.....</b>	<b>315</b>
Abbreviations .....	315
LDSS Mode Reserve Power .....	315
Isolated Operation.....	315
Mains Parallel Operation (Import/Export Control).....	315
LDSS Mode Generator Load.....	316
Isolated Operation.....	316
Mains Parallel Operation (Import/Export Control).....	316
LDSS Dynamic .....	316
<b>APPENDIX H. LIST OF PARAMETERS .....</b>	<b>317</b>
<b>APPENDIX I. SERVICE OPTIONS .....</b>	<b>343</b>
Product Service Options .....	343
Returning Equipment For Repair .....	343
Packing A Control .....	344
Return Authorization Number RAN.....	344
Replacement Parts.....	344
How To Contact Woodward .....	345
Engineering Services .....	346
Technical Assistance .....	347

# Figures And Tables

## Figures

Figure 2-1: ToolKit - Options window .....	12
Figure 2-2: ToolKit - visualization screen .....	15
Figure 2-3: ToolKit - analog value trending screen .....	15
Figure 2-4: ToolKit - configuration screen .....	16
Figure 3-1: AC power triangle .....	30
Figure 3-2: Monitoring - calculated generator ground fault.....	60
Figure 3-3: Monitoring - calculated generator ground current - vector diagram.....	61
Figure 3-4: Monitoring - generator inverse time-overcurrent - "Normal inverse" characteristic .....	65
Figure 3-5: Monitoring - generator inverse time-overcurrent - "Highly inverse" characteristic .....	66
Figure 3-6: Monitoring - generator inverse time-overcurrent - "Extremely inverse" characteristic .....	66
Figure 3-7: Monitoring - generator lagging power factor .....	69
Figure 3-8: Monitoring - generator leading power factor.....	71
Figure 3-9: Monitoring - phase shift .....	85
Figure 3-10: Monitoring - mains lagging power factor.....	94
Figure 3-11: Monitoring - mains leading power factor .....	96
Figure 3-12: Monitoring - plausibility check n/f.....	102
Figure 3-13: Monitoring - flexible limits - data source selection .....	119
Figure 3-14: Normally Open / Normally Closed contacts.....	144
Figure 3-15: Analog input scaling - table (example).....	150
Figure 3-16: Discrete inputs - alarm/control inputs - operation logic .....	158
Figure 3-17: Monitoring - analog outputs - data source selection.....	164
Figure 3-18: Configure application - engine - preglow criterion selection.....	168
Figure 3-19: Start /stop sequence - diesel engine.....	169
Figure 3-20: Start /stop sequence - gas engine - successful .....	171
Figure 3-21: Start /stop sequence - gas engine - unsuccessful .....	172
Figure 3-22: Engine - firing speed and engine delayed monitoring .....	174
Figure 3-23: Engine - Auxiliary services timing.....	177
Figure 3-24: Automatic run - engine start conditions .....	182
Figure 3-25: Automatic - Critical operation at busbar .....	197
Figure 3-26: Automatic - Critical operation at generator .....	199
Figure 3-27: Controllers - Behavior of the derivative parameter .....	203
Figure 3-28: CAN bus load/var sharing, diagram .....	227
Figure 3-29: Load sharing - grouping .....	229
Figure 3-30: Interfaces - Principle of PDO mapping .....	234
Figure 3-31: <i>LogicsManager</i> - function overview .....	252
Figure 3-32: <i>LogicsManager</i> - display in ToolKit .....	253
Figure 3-33: <i>LogicsManager</i> - display on LCD screen.....	253
Figure 3-34: Reference values - power factor scaling.....	297
Figure 3-35: Triggering characteristics - three-level time-dependent overshoot monitoring .....	304
Figure 3-36: Triggering characteristics - two-level overshoot monitoring.....	305
Figure 3-37: Triggering characteristics - two-level undershoot monitoring.....	306
Figure 3-38: Triggering characteristics - two-level reversed/reduced load monitoring .....	307
Figure 3-39: Triggering characteristics - two-level unbalanced load monitoring .....	308
Figure 3-40: Triggering characteristics - one-level asymmetry monitoring.....	309
Figure 3-41: Analog inputs - characteristics diagram VDO 0 to 5 bar, Index "III".....	310
Figure 3-42: Analog inputs - characteristics diagram VDO 0 to 10 bar, Index "IV".....	311
Figure 3-43: Analog inputs - characteristics diagram VDO 40 to 120 °C, Index "92-027-004" .....	312
Figure 3-44: Analog inputs - characteristics diagram VDO 50 to 150 °C, Index "92-027-006" .....	313
Figure 3-45: Analog inputs - characteristics diagram Pt100 .....	314

## Tables

Table 1-1: Manual - overview .....	9
Table 3-1: Monitoring - standard values - generator overfrequency .....	39
Table 3-2: Monitoring - standard values - generator underfrequency .....	41
Table 3-3: Monitoring - standard values - generator overvoltage .....	43
Table 3-4: Monitoring - standard values - generator undervoltage .....	45
Table 3-5: Monitoring - standard values - generator time-overcurrent .....	47
Table 3-6: Monitoring - standard values - generator reverse / reduced power .....	49
Table 3-7: Monitoring - standard values - generator overload IOP .....	51
Table 3-8: Monitoring - standard values - generator overload MOP .....	53
Table 3-9: Monitoring - standard values - generator unbalanced load .....	55
Table 3-10: Monitoring - standard values - generator voltage asymmetry .....	58
Table 3-11: Monitoring - standard values - generator ground fault .....	61
Table 3-12: Monitoring - standard values - generator voltage phase rotation .....	63
Table 3-13: Monitoring - standard values - generator inverse time-overcurrent .....	67
Table 3-14: Monitoring - standard values - generator lagging power factor .....	69
Table 3-15: Monitoring - standard values - generator leading power factor .....	71
Table 3-16: Monitoring - standard values - mains decoupling .....	75
Table 3-17: Monitoring - standard values - mains overfrequency .....	77
Table 3-18: Monitoring - standard values - mains underfrequency .....	79
Table 3-19: Monitoring - standard values - mains overvoltage .....	81
Table 3-20: Monitoring - standard values - mains undervoltage .....	83
Table 3-21: Monitoring - standard values - mains phase shift .....	85
Table 3-22: Monitoring - standard values - mains voltage phase rotation .....	88
Table 3-23: Monitoring - standard values - mains import power .....	90
Table 3-24: Monitoring - standard values - mains export power .....	92
Table 3-25: Monitoring - standard values - mains lagging power factor .....	94
Table 3-26: Monitoring - standard values - mains leading power factor .....	96
Table 3-27: Monitoring - standard values - engine overspeed .....	98
Table 3-28: Monitoring - standard values - engine underspeed .....	100
Table 3-29: Monitoring - standard values - plausibility control n/f .....	103
Table 3-30: Monitoring - standard values - generator active power mismatch .....	104
Table 3-31: Monitoring - standard values - mains active power mismatch .....	105
Table 3-32: Monitoring - standard values - generator unloading mismatch .....	106
Table 3-33: Monitoring - standard values - engine start failure .....	107
Table 3-34: Monitoring - standard values - engine shutdown malfunction .....	108
Table 3-35: Monitoring - standard values - engine unintended stop .....	109
Table 3-36: Monitoring - standard values - engine dead bus operation .....	110
Table 3-37: Monitoring - standard values - engine charge alternator failure .....	111
Table 3-38: Monitoring - standard values - breaker monitoring - GCB .....	112
Table 3-39: Monitoring - standard values - breaker monitoring - GCB synchronization .....	113
Table 3-40: Monitoring - standard values - breaker monitoring - MCB .....	114
Table 3-41: Monitoring - standard values - breaker monitoring - MCB synchronization .....	116
Table 3-42: Monitoring - standard values - mains voltage phase rotation .....	117
Table 3-43: Monitoring - standard values - flexible limits .....	118
Table 3-44: Monitoring - flexible limit examples .....	118
Table 3-45: Monitoring - flexible limits - analog value examples .....	120
Table 3-46: Monitoring - flexible limits - parameter IDs .....	121
Table 3-47: Monitoring - standard values - CANopen interface 1 .....	123
Table 3-48: Monitoring - standard values - CANopen interface 2 .....	124
Table 3-49: Monitoring - standard values - J1939 interface .....	125
Table 3-50: Monitoring - standard values - J1939 interface red stop lamp .....	126
Table 3-51: Monitoring - standard values - J1939 interface amber warning lamp .....	127
Table 3-52: Monitoring - standard values - battery overvoltage .....	128
Table 3-53: Monitoring - standard values - battery undervoltage .....	130
Table 3-54: Monitoring - standard values - multi-unit configuration check monitoring .....	132
Table 3-55: Monitoring - standard values - multi-unit communication monitoring .....	133
Table 3-56: Analog inputs - table characteristics - parameter IDs .....	151
Table 3-57: Discrete inputs - terminal assignment .....	158
Table 3-58: Discrete inputs - parameter IDs .....	160
Table 3-59: External discrete inputs - parameter IDs .....	161
Table 3-60: Relay outputs - assignment .....	162
Table 3-61: Discrete outputs - parameter IDs .....	162
Table 3-62: External discrete outputs - parameter IDs .....	163
Table 3-63: Analog outputs - parameter table .....	163
Table 3-64: Analog outputs - signal type selection .....	165

Table 3-65: MPU input - typical configurations .....	178
Table 3-66: Load-dependent start/stop - parameters for reserve power operation .....	183
Table 3-67: Load-dependent start/stop - parameters for generator load operation .....	184
Table 3-68: Load-dependent start/stop - dynamic influence on stopping a genset .....	192
Table 3-69: Internal flags - parameter IDs .....	244
Table 3-70: <i>LogicsManager</i> - command overview .....	252
Table 3-71: <i>LogicsManager</i> - logical symbols .....	253
Table 3-72: Relay outputs - terminal assignment .....	257
Table 3-73: Analog Manager - display value format .....	291
Table 3-74: Event history - event list .....	300
Table 3-75: Event history - alarm list .....	303
Table 3-76: Analog inputs - characteristics diagram VDO 0 to 5 bar, Index "III" .....	310
Table 3-77: Analog inputs - characteristics diagram VDO 0 to 10 bar, Index "IV" .....	311
Table 3-78: Analog inputs - characteristics diagram VDO 40 to 120 °C, Index "92-027-004" .....	312
Table 3-79: Analog inputs - characteristics diagram VDO 50 to 150 °C, Index "92-027-006" .....	313
Table 3-80: Analog inputs - characteristics diagram Pt100 .....	314



# Chapter 1.

## General Information

### Document Overview

Type	English	German
<b>easYgen-3000 Series</b>		
easYgen-3000 - Installation	37223	GR37223
easYgen-3000 - Configuration	<a href="#">this manual</a> ⇨	GR37224
easYgen-3000 - Operation	37225	GR37225
easYgen-3000 - Application	37226	-
easYgen-3000 - Interfaces	37383	-
easYgen-3200 - Brief Operation Information	37399	GR37399
easYgen-3100 - Brief Operation Information	37409	-

Table 1-1: Manual - overview

**Intended Use** The unit must only be operated for the uses described in this manual. The prerequisite for a proper and safe operation of the product is correct transportation, storage, and installation as well as careful operation and maintenance.



#### NOTE

This manual has been developed for a unit fitted with all available options. Inputs/outputs, functions, configuration screens and other details described, which do not exist on your unit may be ignored. The present manual has been prepared to enable the configuration of the unit. On account of the large variety of parameter settings, it is not possible to cover every possible combination. The manual is therefore only a guide. In case of incorrect entries or a total loss of functions, the default settings can be taken from the enclosed list of parameters at the rear of this manual or from ToolKit and the respective \*.SID file.



#### NOTE

Some parameters, inputs, and outputs are dependent on the configured application mode (parameter 3401 on page 134) regarding their availability and/or function. The following abbreviations indicate the application mode for which the concerned information is valid:

- {0}**    {0 (breaker control)} Application mode setting "None" - "Measuring transducer and engine control function"  
The control unit enables engine start/stop and generator measuring and protection – no breaker control.
- {1o}**    {1 (breaker) open} Application mode setting "GCB open" - "1 breaker control function"  
The control unit enables engine start/stop and generator measuring and protection – "GCB open" breaker control.
- {1oc}**    {1 (breaker) open/close} Application mode setting "GCB" - "1 breaker control function"  
The control unit enables engine start/stop and generator measuring and protection – full generator breaker control for stand-by power applications with soft generator load transfer.
- {2oc}**    {2 (breaker) open/close} Application mode setting "GCB/MCB" - "2 breaker control function"  
The control unit enables engine start/stop and generator measuring and protection – full generator breaker control for stand-by power applications with soft generator load transfer plus emergency power, open/closed transition, and interchange load transfer applications.

## Abbreviations



The following abbreviations are frequently used throughout this and all other easYgen manuals:

CB	Circuit Breaker
CL	Code Level
CT	Current Transformer
CCW	Counter-Clockwise
CW	Clockwise
DI	Discrete Input
DO	Discrete (Relay) Output
ECU	Engine Control Unit
GCB	Generator Circuit Breaker
IOP	Isolated Operation in Parallel
LDSS	Load-Dependent Start/Stop operation
MCB	Mains Circuit Breaker
MOP	Mains Operation in Parallel
MPU	Magnetic Pickup Unit
N.C.	Normally Closed (break) contact
N.O.	Normally Open (make) contact
PF	Power Factor
PID	Proportional Integral Derivative controller
PLC	Programmable Logic Control
P/N	Part Number
PT	Potential (Voltage) Transformer
S/N	Serial Number

## Chapter 2. Configuration

### Configuration Via The Front Panel



Operation of the unit via the front panel is explained in the operation manual 37225. This manual will familiarize you with the unit, the meanings/functions of the buttons, and the display.

## Configuration Using The PC



### Install ToolKit Configuration and Visualization Software



#### CAUTION

Woodward's ToolKit software (version 2.2 or higher) is required when configuring the unit via a PC.

**ToolKit from 2.2**

If not already installed, download and install the ToolKit software. Please proceed as follows for this:

- Open your web browser and go to <http://www.woodward.com/software/>
- Select ToolKit in the list and click the Go button
- Download and install the file as described on the download page

Minimum system requirements for installing ToolKit:

- Microsoft Windows® XP, 2000, NT 4.0 Service Pack 6a
- Microsoft .NET Framework Ver. 2.0
- 600 MHz Pentium® CPU
- 96 MB of RAM
- Minimum 800 by 600 pixel screen with 256 colors
- Serial Port



#### NOTE

Please note that you must register on the website prior to downloading the software.

Microsoft .NET Framework 2.0 must be installed on your computer to be able to install ToolKit. If not already installed, Microsoft .NET Framework 2.0 will be installed automatically. You must be connected to the internet for this.

### Configure ToolKit

Open ToolKit via Start menu -> Program -> Woodward -> ToolKit 2.x

You may configure the default settings of ToolKit by selecting Tools -> Options from the toolbar. The options window will be displayed where you may select the default COM port and the default path for the configuration files. We recommend configuring a dedicated ToolKit data file directory (e.g. C:\Data\ToolKit) instead of storing the configuration files in the ToolKit installation directory (e.g. C:\Program Files\Woodward\ToolKit). The changes become effective after restarting ToolKit.

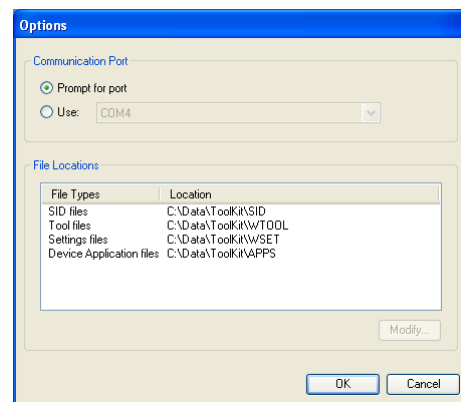


Figure 2-1: ToolKit - Options window



## NOTE

Be sure to have the correct \*.SID and \*.WTOOL files for your unit ready. The SID file must not be renamed!

When installing the \*.SID and \*.WTOOL files on a computer, it is recommended to create a dedicated ToolKit data file external to the ToolKit program. An example of this would be to create a Woodward ToolKit folder in a Data directory to store the \*.SID and \*.WTOOL files. The data files should be kept separate from the program files. Mixing data and program files makes backing up files more difficult and uninstalling the files incomplete.

## ToolKit Files

ToolKit is using the following files:

### \*.WTOOL

File name composition: [P/N1]-[Revision]\_[Language ID]\_[P/N2]-[Revision]\_[# of visualized gens].WTOOL

Example file name: 8440-1831-NEW\_US\_5418-2752-NEW\_32.WTOOL

Content of the file: Display screens and pages for online configuration, which are associated with the respective \*.SID file

### \*.SID

File name composition: [P/N2]-[Revision].SID

Example file name: 5418-2752-NEW.SID

Content of the file: All display and configuration parameters available in ToolKit

### \*.WSET

File name composition: [user defined].WSET

Example file name: easYgen\_settings.WSET

Content of the file: Default settings of the ToolKit configuration parameters provided by the SID file or user-defined settings read out of the unit.

P/N1 = Part number of the unit

P/N2 = Part number of the software in the unit




## NOTE

The P/N2 and revision information in the \*.SID file name is used for identifying the unit and must not be renamed.



When opening a \*.WTOOL file, ToolKit will look for the respective SID file in the SID file location, configured in the Options dialog (refer to Figure 2-1).

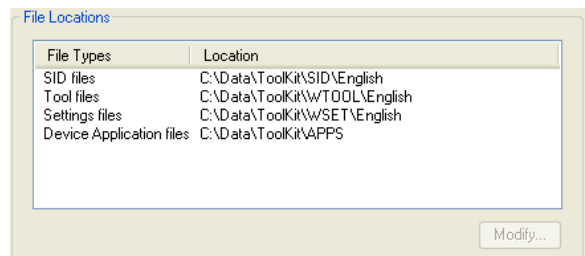For this reason, the file naming of the \*.SID file is language-independent. However, there are language-dependent \*.SID files in the respective language folders delivered with the unit, which have identical names. If it happens that you need to switch between different languages in ToolKit, we recommend to store your \*.SID (and \*.WTOOL & \*.WSET) files in different folders to avoid confusion. In this case you only need to change the path information as described under Configure ToolKit on page 12 to switch the language.



## Connect ToolKit and the easYgen Unit

For configuration of the unit via ToolKit please proceed as follows:

- Connect the null modem communications cable between your laptop/PC and the control unit. Plug the null modem cable into the RS-232 serial port on unit and the other side to a serial COM port of the laptop/PC. If the laptop/PC does not have a serial port to connect the null modem cable to, use a USB to serial adapter.
- Open ToolKit via Start menu -> All Programs -> Woodward -> ToolKit 2.x
- From the main ToolKit window, click File then select Open Tool..., or click the Open Tool icon  on the tool bar.
- Locate and select the desired tool file (\*.WTOOL) in the ToolKit data file directory and click Open.
- From the main ToolKit window, click Device then click Connect, or select the Connect icon  on the toolbar.
- The Connect dialog window will open if the option is enabled.
- Select the COM port that is connected to the communication cable.
- Click the OK button.
- If the Communications window opens, select ToolConfigurator under Tool Device and close the Communications window.
- The identifier of the device that ToolKit is connected to will display in the status bar.
- Now you are able to edit the easYgen parameters. Any changes made are written to the control memory automatically.



### NOTE

A null modem serial cable must be used for communicating with the easYgen-3000 to ensure that the controller functions properly. The connection will not work if you are using a straight cable (a null modem cable has crosslinked transmit and receive lines in contrast to a straight serial cable).



### NOTE

The ServLink protocol (parameter 7901 on page 242) must be enabled and the baud rate (parameter 3163 on page 242) must be configured to 19.2 kBd on the easYgen.



### NOTE

Depending on the computer used and the installed operation system, problems with the communication via an infrared connection may occur.



### NOTE

It is also possible to connect to the unit via CAN bus. If a suitable CAN adapter is used, this may be selected in the Connect window. We recommend to use the IXXAT USB-to-CAN converter using the VCI V3 driver.

Be sure to configure the correct baud rate and timeout in the Properties dialog of the Connect window. The Password for CAN Interface 1 (parameter 10402 on page 24) must be entered before being able to edit the parameters.

## View easYgen Data with ToolKit

The following figure shows a visualization screen of ToolKit:

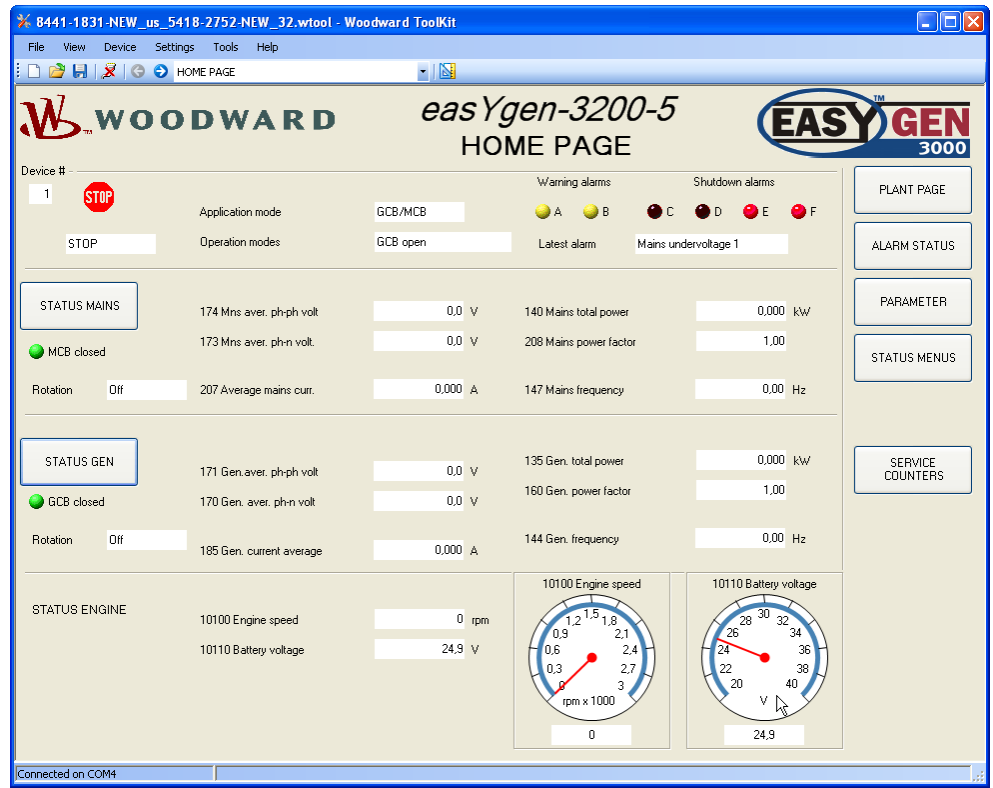


Figure 2-2: ToolKit - visualization screen

Navigation through the various visualization and configuration screens is performed by clicking on the and icons, by selecting a navigation button, or by selecting a screen from the drop-down list to the right of the arrow icons.

It is possible to view a trend chart of up to eight values with the trending tool utility of ToolKit. The following figure shows a trending screen of the measured battery voltage value:

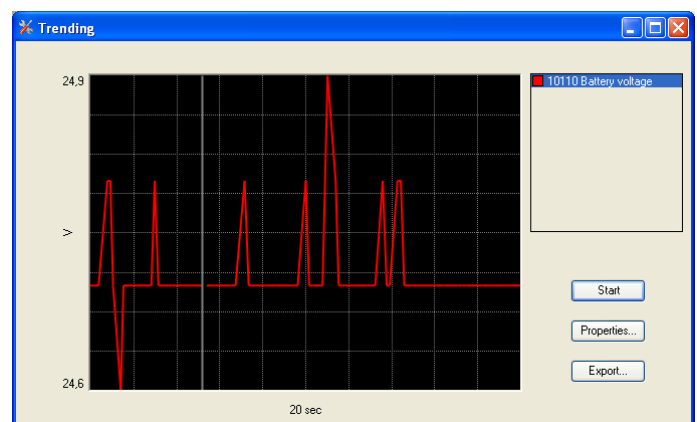


Figure 2-3: ToolKit - analog value trending screen

Each visualization screen provides for trending of monitored values by right-clicking on a value and selecting the "Add to trend" function. Trending is initiated by clicking on the Start button. Clicking the Export... button will save the trend data to a Comma Separated Values (CSV) file for viewing, editing or printing with office software, like Microsoft Excel, etc. The Properties... button is used to define high and low limits of the scale, sample rate, displayed time span and color of the graph. The trend functionality is not available if ToolKit is used utilizing a CAN bus connection to the unit.

## Configure the easYgen with ToolKit

The following figure shows a configuration screen of ToolKit:

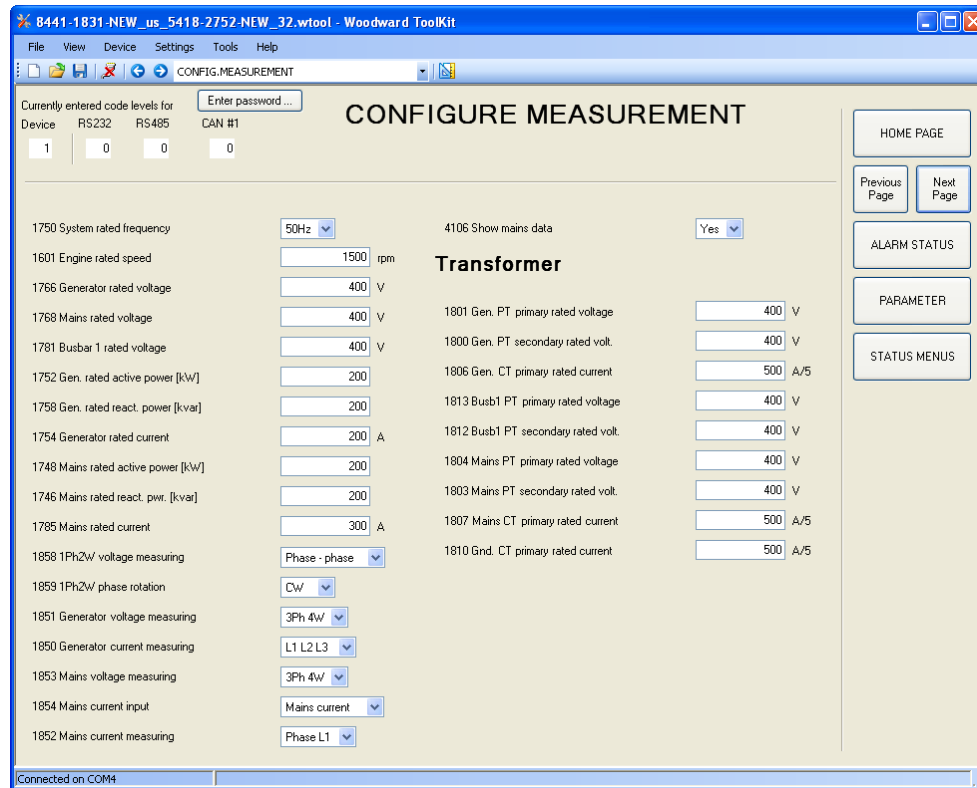




Figure 2-4: ToolKit - configuration screen

Entering a new value or selecting a value from a defined list will change the value in a field. The new value is written to the controller memory by changing to a new field or pressing the Enter key.

Navigation through the various configuration and visualization screens is performed by clicking on the  and  icons, by selecting a navigation button, or by selecting a screen from the drop-down list to the right of the arrow icons.

## The Settings File Function of ToolKit

ToolKit allows you to manage device application settings as well as file based settings.

To create a settings file you can save a devices' settings to a file or create device settings from application (SID) defaults.

After you have a settings file, you can view and edit it, compare it to another settings file, associate it with a different application, or merge it with an application file (OH2 only).

Settings files can be exported to a Hypertext Markup Language (html) file for viewing, editing or printing with office software, like Microsoft Excel, etc.

Refer to the ToolKit Help for a description of working with settings. From the main ToolKit window, click Help then click Help Contents to open the ToolKit Help window.



## Function of the Inputs and Outputs



### Discrete Inputs

The discrete inputs may be grouped into two categories:

- **programmable**

The discrete input has been assigned a default function using either the *LogicsManager* or preconfigured alarms such as "emergency stop". The following text describes how these functions are assigned. It is possible to change the function of the discrete input if required.

The following description of the inputs, labeled with *programmable*, refers to the preconfiguration.

- **fixed**

The discrete input has a specific function that cannot be changed depending upon the configured application mode.

#### Emergency stop {0}, {1o}, {1oc}, or {2oc}

*programmable*, pre-configured for discrete input [DI 1], terminals 66/67

This discrete input is configured as alarm class F and is not delayed by the engine speed.

#### Start in AUTO {0}, {1o}, {1oc}, or {2oc}

*programmable* to discrete input [DI 2], terminals 66/68

Enabled in the AUTOMATIC operation mode

**energized** ..... If the unit is in the AUTOMATIC operation mode (selected with the operating mode selection push button on the front panel) the controlled engine is started automatically.

**de-energized** The engine is stopped.

This discrete input is configured as a Control input in the alarm class and is not delayed by the engine speed.

#### Low oil pressure {0}, {1o}, {1oc}, or {2oc}

*programmable* to discrete input [DI 3], terminals 66/69

This discrete input is configured as alarm class B and is delayed by the engine speed.

#### Coolant temperature {0}, {1o}, {1oc}, or {2oc}

*programmable* to discrete input [DI 4], terminals 66/70

This discrete input is configured as alarm class B and is not delayed by the engine speed.

#### Alarm acknowledgement {0}, {1o}, {1oc}, or {2oc}

*programmable* to discrete input [DI 5], terminals 66/71

This discrete input is used as a remote acknowledgement for alarms. The input is normally de-energized. When an alarm is to be acknowledged the input is energized. The first time an alarm is acknowledged, the centralized alarm/horn is silenced. When the input is energized a second time, all alarms, which are no longer active, will be acknowledged.

This discrete input is configured as a Control input in the alarm class and is not delayed by the engine speed.

#### Enable MCB {2oc}

*programmable* to discrete input [DI 6], terminals 66/72

**energized** ..... The MCB is enabled and closure of the breaker is permitted.

**de-energized** The MCB is not enabled and closure of the breaker is not permitted. This function permits a supervisory control (i.e. a PLC) to allow the closure of the MCB by the easYgen.

This discrete input is configured as a Control input in the alarm class and is not delayed by the engine speed.

**Reply MCB {2oc}***fixed* to discrete input [DI 7], terminals 66/73⇒ **Note: Negative logic function!**

The controller utilizes the CB auxiliary (B) contacts into this discrete input to reflect the state of the MCB. This discrete input must be energized to show when the breaker is open and de-energized to show when the MCB is closed. The status of the MCB is displayed on the screen.

This input is used in other breaker modes to change between frequency/voltage and power/power factor control.

**Reply GCB {1oc} or {2oc}***fixed* to discrete input [DI 8], terminals 66/74⇒ **Note: Negative function logic!**

The controller utilizes the CB auxiliary (B) contacts into this discrete input to reflect the state of the GCB. This discrete input must be energized to show when the breaker is open and de-energized to show when the GCB is closed. The status of the GCB is displayed on the screen.

This input is used in other breaker modes to enable reverse power protection, overload MOP protection, and mains decoupling.

**Alarm inputs {0}, {1o}, {1oc}, or {2oc}**

All discrete inputs, which are not assigned a function, can be used as alarm or control inputs. These discrete inputs can be freely configured as such. Refer to the section "Configure Discrete Inputs" on page 158.

**Discrete Outputs**

The discrete outputs can be grouped into two categories:

- *programmable*

The discrete output has been assigned a default function using the *LogicsManager*. The following text describes how these functions are assigned using the *LogicsManager*. It is possible to change the function of the discrete output if required.

The following description of the outputs, labeled with *programmable*, refers to the preconfiguration.

- *fixed*

The discrete output has a specific function that cannot be changed depending upon the configured application mode. The discrete output cannot be viewed or changed in the *LogicsManager*.

**NOTE**

The discrete outputs can be "*programmable*" or "*fixed*" depending on the application mode (parameter 3401 on page 134). Table 3-60 on page 162 defines the function of the discrete outputs according to the configured application mode.

**Ready for operation OFF {0}, {1o}, {1oc}, or {2oc}***fixed* to relay [R1], terminals 41/42

This discrete output is used to ensure that the internal functions of the controller are operating properly. It is possible to configure additional events, which cause the contacts of this discrete output to open, using the *LogicsManager*.

**CAUTION**

The discrete output "Ready for operation OFF" must be wired in series with an emergency stop function. This means that it must be ensured that the generator circuit breaker is opened and the engine is stopped if this discrete output is de-energized. We recommend to signal this fault independently from the unit if the availability of the plant is important.

**Centralized alarm {0}, {1o}, {1oc}, or {2oc}***programmable* to relay [R2], terminals 43/46

When a centralized alarm is issued, this discrete output is enabled. A horn or a buzzer maybe activated via this discrete output. Pressing the button next to the "✓" symbol will acknowledge the centralized alarm and disable this discrete output. The discrete output will re-enable if a new fault condition resulting in a centralized alarm occurs. The centralized alarm is initiated by class B alarms or higher.

**Starter {0}, {1o}, {1oc}, or {2oc}***programmable* to relay [R3], terminals 44/46

The generator starting circuit is engaged when this discrete output is enabled. This discrete output will disable when firing speed (parameter 12500 on page 175) is reached or the maximum start cycle time (parameter 3306 on page 173) has expired.

**Fuel solenoid / gas valve (Diesel / gas engine) {0}, {1o}, {1oc}, or {2oc}***programmable* to relay [R4], terminals 45/46

Fuel solenoid: The fuel solenoid for the diesel engine is energized when this discrete output is enabled. If the engine is given a stop command or engine speed drops below the configured firing speed, this discrete output is disabled immediately.

Gas valve: The gas valve for the engine is energized when this discrete output is enabled. If the engine is given a stop command or engine speed drops below the configured firing speed, this discrete output is disabled immediately.

**Pre-glow (Diesel engine) {0}, {1o}, {1oc}, or {2oc}***programmable* to relay [R5], terminals 47/48

When this discrete output is enabled, the diesel engine's glow plugs are energized (refer to the Engine: Diesel Engine section on page 167). This function only occurs if the control has been configured for diesel engine start/stop logic.

**Ignition (Gas engine) {0}, {1o}, {1oc}, or {2oc}***programmable* to relay [R5], terminals 47/48

When this discrete output is enabled, the gas engine's ignition is enabled (refer to the Engine: Gas Engine section on page 170). This function only occurs if the control has been configured for gas engine start/stop logic.

**Command: close GCB {1oc} or {2oc}***fixed* to relay [R6], terminals 49/50

The "Command: close GCB" output issues the signal for the GCB to close. This relay may be configured as an impulse or constant output signal depending on parameter 3414 on page 145.

If the output is configured as "Impulse", the discrete output will enable for the time configured in parameter 3416 on page 145). An external holding coil and sealing contacts must be installed into the GCB closing circuit if this discrete output is configured for an impulse output signal.

If the relay is configured as "Constant", the relay will energize and remain enabled as long as the discrete input "Reply GCB" remains de-energized and the generator and busbar voltages are identical. If a class C or higher alarm occurs, this discrete will disable and the GCB will open immediately.

**Command: open GCB {1o}, {1oc}, or {2oc}***fixed* to relay [R7], terminals 51/52

The parameter 3403 on page 144 defines how this relay functions. If this parameter 3403 is configured as "N.O.", the relay contacts close resulting in the GCB opening circuit energizing. If this output is configured as "N.C.", the relay contacts open resulting in the GCB opening circuit de-energizing. If the controller is configured for the breaker application "None", this relay is freely configurable.

{1o}: The open GCB command remains enabled until the GCB is manually closed and the discrete input "Reply GCB" is energized. The open GCB command will be issued when a fault condition or an engine shut down occurs.

{1oc} or {2oc}: The controller enables the open GCB command when the GCB is to be opened for switching operations. If the discrete input "Reply GCB" is energized, the open GCB command will be disabled.

**Command: close MCB {2oc}***fixed* to relay [R8], terminals 53/54

The discrete output "Command: close MCB" is an impulse output signal. This discrete output is enabled for the time configured in parameter 3417 on page 147. An external holding coil and sealing contacts must be utilized with the MCB closing circuit.

**Command: open MCB {2oc}***fixed* to relay [R9], terminals 55/56

The controller enables this discrete output when the MCB is to be opened for switching operations. If the discrete input "Reply MCB" is energized, the discrete output "Command: open MCB" is disabled.

**Auxiliary services {0}, {1o}, {1oc}, or {2oc}***programmable* to relay [R10], terminals 57/60

The auxiliary services output (*LogicsManager* 03.01) will be enabled with the start command (prior to the engine start because of the prerun time) and remains enabled as long as the engine is running. It will be disabled after the engine has stopped and the postrun time has expired (i.e. for operating a cooling pump). Refer to Figure 3-23 on page 177 for this behavior.

The auxiliary services output (*LogicsManager* 03.01) is always enabled in MANUAL operation mode.

**Warning alarm {0}, {1o}, {1oc}, or {2oc}***programmable* to relay [R11], terminals 58/60

This discrete output is enabled when a warning alarm (class A or B alarm; refer to Alarm Classes on page 250 for more information) is issued. After all warning alarms have been acknowledged, this discrete output will disable.

**Stopping alarm {0}, {1o}, {1oc}, or {2oc}***programmable* to relay [R12], terminals 59/60


This discrete output is enabled when a stopping alarm (class C or higher alarm; refer to Alarm Classes on page 250 for more information) is issued. After all stopping alarms have been acknowledged, this discrete output will disable.

***LogicsManager* Relay {0}, {1o}, {1oc}, or {2oc}**

All discrete outputs not assigned a defined function, may be freely configured via the *LogicsManager*.

# Chapter 3. Parameters

All parameters are assigned a unique Parameter Identification Number. The Parameter Identification Number may be used to reference individual parameters listed in this manual. This Parameter Identification Number is also displayed in the ToolKit configuration screens next to the respective parameter.

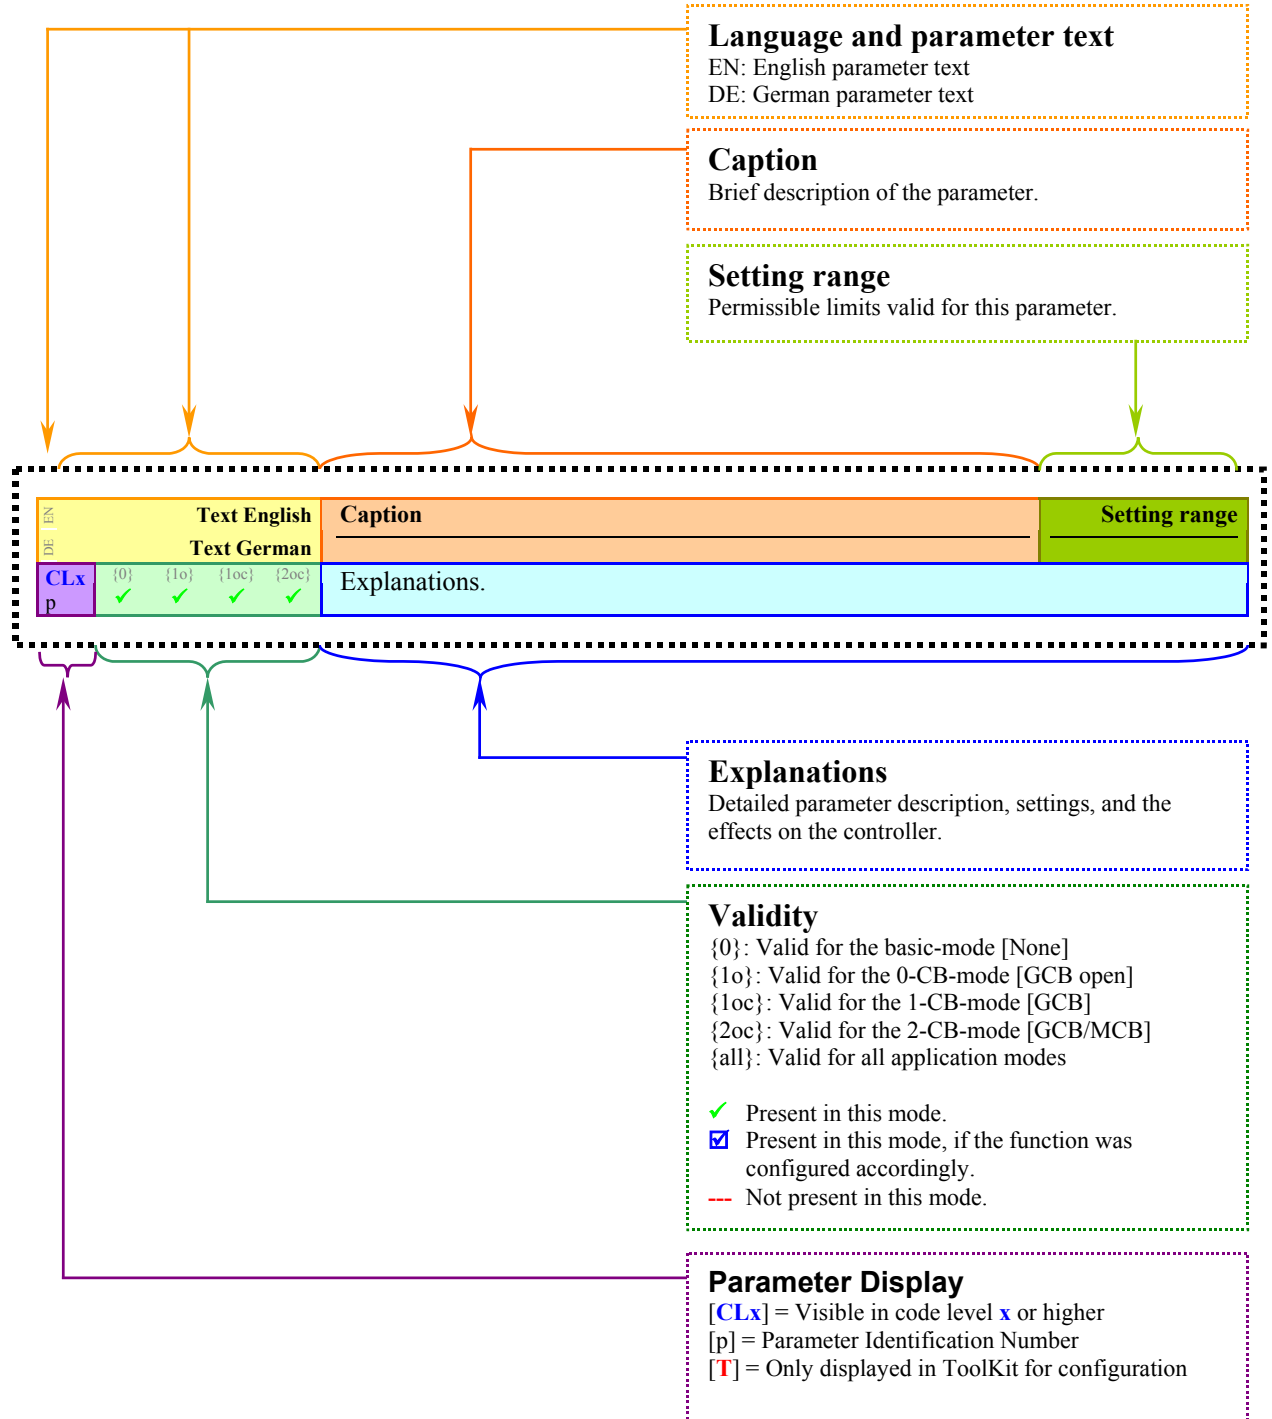


## Configure Language / Clock



The following parameters are used to set the unit language and the current date and time.

Language					Set language	selectable languages
DE	EN	Language				
CL0	{0}	{1o}	{1oc}	{2oc}	The desired language for the unit display text is configured here.	
1700	✓	✓	✓	✓		



**NOTE**  
If an Asian language is configured, some parameter screens may be displayed with an empty space at the bottom of the parameter list, which may be interpreted as an end of the list, although more parameters exist and are displayed when scrolling down.

Hour					Adjust clock: hour	0 to 23 h
DE	EN	Stunden				
CL0	{0}	{1o}	{1oc}	{2oc}	The hour of the clock time is set here. Example: 0 .....0 <sup>th</sup> hour of the day (midnight). 23 .....23 <sup>rd</sup> hour of the day (11 pm).	
1710	✓	✓	✓	✓		

Minute					Adjust clock: minute	0 to 59 min
DE	EN	Minuten				
CL0	{0}	{1o}	{1oc}	{2oc}	The minute of the clock time is set here. Example: 0 .....0 <sup>th</sup> minute of the hour. 59 .....59 <sup>th</sup> minute of the hour.	
1709	✓	✓	✓	✓		

Second					Adjust clock: second	0 to 59 s
DE	EN	Sekunden				
CL0	{0}	{1o}	{1oc}	{2oc}	The second of the clock time is set here. Example: 0 .....0 <sup>th</sup> second of the minute. 59 .....59 <sup>th</sup> second of the minute.	
1708	✓	✓	✓	✓		

Day					Adjust clock: day	1 to 31
DE	EN	Tag				
CL0	{0}	{1o}	{1oc}	{2oc}	The day of the date is set here. Example: 1 .....1 <sup>st</sup> day of the month. 31 .....31 <sup>st</sup> day of the month.	
1711	✓	✓	✓	✓		

Month					Adjust clock: month	1 to 12
DE	EN	Monat				
CL0	{0}	{1o}	{1oc}	{2oc}	The month of the date is set here. Example: 1 .....1 <sup>st</sup> month of the year. 12 .....12 <sup>th</sup> month of the year.	
1712	✓	✓	✓	✓		

Year					Adjust clock: year	0 to 99
DE	EN	Jahr				
CL0	{0}	{1o}	{1oc}	{2oc}	The year of the date is set here. Example: 0 .....Year 2000. 99 .....Year 2099.	
1713	✓	✓	✓	✓		

## Configure Display



The contrast and the brightness of the display may be adjusted using this screen.

## Lamp Test



All lights on the controller may be tested for correct operation with this function.

## Enter Password



The easYgen-3000 utilizes a password protected multi-level configuration access hierarchy. This permits varying degrees of access to the parameters being granted by assigning unique passwords to designated personnel. A distinction is made between the access levels as follows:

### Code level CL0 (*User Level*)

Standard password = none

This code level permits for monitoring of the system and limited access to the parameters. Configuration of the control is not permitted. Only the parameters for setting the language, the date, the time, and the horn reset time are accessible. The unit powers up in this code level.

### Code level CL1 (*Service Level*)

Standard password = "0 0 0 1"

This code level entitles the user to change selected non-critical parameters, such as setting the parameters accessible in CL0 plus Bar/PSI, °C/°F. The user may also change the password for level CL1. Access granted by this password expires two hours after the password has been entered and the user is returned to the CL0 level.

### Code level CL2 (*Temporary Commissioning Level*)

No standard password available

This code level grants temporary access to most of the parameters. The password is calculated from the random number generated when the password is initially accessed. It is designed to grant a user one-time access to a parameter without having to give him a reusable password. The user may also change the password for level CL1. Access granted by this password expires two hours after the password has been entered and the user is returned to the CL0 level. The password for the temporary commissioning level may be obtained from the vendor.

### Code level CL3 (*Commissioning Level*)

Standard password = "0 0 0 3"

This code level grants complete and total access to most of the parameters. In addition, the user may also change the passwords for levels CL1, CL2 and CL3. Access granted by this password expires two hours after the password has been entered and the user is returned to the CL0 level.



### NOTE

Once the code level is entered, access to the configuration menus will be permitted for two hours or until another password is entered into the control. If a user needs to exit a code level then code level, CL0 should be entered. This will block unauthorized configuration of the control. A user may return to CL0 by allowing the entered password to expire after two hours or by changing any one digit on the random number generated on the password screen and entering it into the unit. If the password expires after two hours, the unit returns to the main display screen.

It is possible to disable expiration of the password by entering "0000" after the CL1 or CL3 password has been entered. Access to the entered code level will remain enabled until another password is entered. Otherwise, the code level would expire when loading the standard values (default 0000) via ToolKit.

EN	Password display				<b>Password: Entry via front panel</b>	<b>0000 to 9999</b>
DE	Passwort Display					
CL0	{0}	{1o}	{1oc}	{2oc}	The password for configuring the control via the front panel must be entered here.	
10400	✓	✓	✓	✓		
EN	Code level display				<b>Password system: Code level via display</b>	<b>Info</b>
DE	Codeebene Display					
CL0	{0}	{1o}	{1oc}	{2oc}	This value displays the code level, which is currently enabled for access via the front panel display.	
10405	✓	✓	✓	✓		
EN	Password for CAN interface 1				<b>Password: Entry via CAN interface #1</b>	<b>0000 to 9999</b>
DE	Passwort CAN Schnittstelle 1					
CL0	{0}	{1o}	{1oc}	{2oc}	The password for configuring the control via the CAN interface #1 must be entered here.	
10402	✓	✓	✓	✓		
EN	Code level CAN interface 1				<b>Password system: Code level via CAN interface #1</b>	<b>Info</b>
DE	Codeebene CAN Schnittstelle 1					
CL0	{0}	{1o}	{1oc}	{2oc}	This value displays the code level, which is currently enabled for access via the CAN interface #1s.	
10407	✓	✓	✓	✓		
EN	Password for serial interface1				<b>Password: Entry via serial interface #1</b>	<b>0000 to 9999</b>
DE	Passwort serielle Schnittst. 1					
CL0	{0}	{1o}	{1oc}	{2oc}	The password for configuring the control via the serial interface #1 must be entered here.	
10401	✓	✓	✓	✓		
EN	Code level serial interface 1				<b>Password system: Code level via serial RS-232 interface #1</b>	<b>Info</b>
DE	Codeebene serielle Schnittst. 1					
CL0	{0}	{1o}	{1oc}	{2oc}	This value displays the code level, which is currently enabled for access via RS-232 serial interface #1.	
10406	✓	✓	✓	✓		
EN	Password for serial interface2				<b>Password: Entry via serial interface 2</b>	<b>0000 to 9999</b>
DE	Passwort serielle Schnittst. 2					
CL0	{0}	{1o}	{1oc}	{2oc}	The password for configuring the control via the serial interface #2 must be entered here.	
10430	✓	✓	✓	✓		
EN	Code level serial interface 2				<b>Password system: Code level via serial RS-485 interface #2</b>	<b>Info</b>
DE	Codeebene serielle Schnittst. 2					
CL0	{0}	{1o}	{1oc}	{2oc}	This value displays the code level, which is currently enabled for access via RS-485 serial interface #2.	
10420	✓	✓	✓	✓		



# System Management



EN	Device number			
DE	Gerätenummer			
<b>CL2</b>	{0}	{1o}	{1oc}	{2oc}
1702	✓	✓	✓	✓

## System parameter: Device address

1 to 32

A unique address is assigned to the control through this parameter. This unique address permits the controller to be correctly identified on the CAN bus. The address assigned to the controller may only be used once. All other bus addresses are calculated on the number entered in this parameter. The device number is also important for the device assignment in load sharing and load-dependent start/stop.

EN	Factory default settings			
DE	Werkseinstellung			
<b>CL0</b>	{0}	{1o}	{1oc}	{2oc}
1703	✓	✓	✓	✓

## Factory settings: Restore default values

Yes / No

**Yes** ..... The following three parameters are visible and restoring the configured parameters to factory default values is enabled.

**No** ..... The following three parameters are invisible and restoring the configured parameters to factory default values is not enabled.



## NOTE

The following parameters will only be displayed, if Factory Settings (parameter 1703) has been configured to Yes and the enter button has been pressed.

EN	Reset factory default values			
DE	Standardwerte			
<b>CL0</b>	{0}	{1o}	{1oc}	{2oc}
1701	✓	✓	✓	✓

## Factory settings: Set default values

Yes / No

**Yes** ..... All parameters, which the enabled access code grants privileges to, will be restored to factory default values.

**No** ..... All parameters will remain as currently configured.

EN	Start Bootloader			
DE	Bootloader starten			
<b>CL2</b>	{0}	{1o}	{1oc}	{2oc}
10500	✓	✓	✓	✓

## Factory settings: Start Bootloader

00000

The bootloader is utilized for uploading application software only. The proper enable code must be entered while the control is in access code level CL3 or higher to perform this function.

**Attention:** This function is used for uploading application software and may only be used by authorized Woodward technicians!

EN	Clear eventlog			
DE	Ereignisspeicher löschen			
<b>CL2</b>	{0}	{1o}	{1oc}	{2oc}
1706	✓	✓	✓	✓

## Factory settings: Clear event log

Yes / No

**Yes** ..... The event history will be cleared.

**No** ..... The event history will not be cleared.



## Configuration



The configuration screen is accessed pressing the Configuration softkey on the Parameter screen. The following sub-menus are available to configure the unit:

- Configure Measurement
- Configure Monitoring
- Configure Application
- Configure Interfaces
- Configure *LogicsManager*
- Configure Counters



### NOTE

This controller is available in two different hardware version with either 1A [../1] or 5A [../5] current transformer inputs. Both versions are discussed in this manual. The set points for specific parameters will differ depending upon the hardware version.



### NOTE

It is absolutely essential that correct rated values to be entered when configuring the controller, as many measurement and monitoring functions refer to these values.

## Configure Measurement



### NOTE

If the easYgen is intended to be operated in parallel with the mains, the mains voltage measuring inputs must be connected. If an external mains decoupling is performed, jumpers between busbar and mains voltage measuring inputs may be installed.

EN	Show mains data			
DE	Netzdaten anzeigen			
CL2	{0}	{1o}	{1oc}	{2oc}
4106	✓	✓	✓	✓

#### Display mains data

Yes / No

**Yes** ..... Generator and mains data is displayed on the main operating values screen and the mains data screen is available.

**No** ..... Only generator data is displayed on the main operating values screen. The mains data screen is disabled. This setting may be recommended if the unit operates in an isolated application.

EN	System rated frequency			
DE	Nennfrequenz im System			
CL2	{0}	{1o}	{1oc}	{2oc}
1750	✓	✓	✓	✓

#### System rated frequency

50 / 60 Hz

The rated frequency of the system is used as a reference figure for all frequency related functions, which use a percentage value, like frequency monitoring, breaker operation windows or the Analog Manager.

EN	Engine rated speed			
DE	Nenndrehzahl			
CL2	{0}	{1o}	{1oc}	{2oc}
1601	✓	✓	✓	✓

#### Engine rated speed

500 to 4,000 RPM

Number of revolutions per minute of the engine at rated engine speed. The speed control with an ECU via J1939 CAN bus refers to this value.

EN	Generator rated voltage			
DE	Nennspannung Generator			
CL2	{0}	{1o}	{1oc}	{2oc}
1766	✓	✓	✓	✓

#### Generator rated voltage

50 to 650000 V

① This value refers to the rated voltage of the generator (generator voltage on data plate) and is the voltage measured on the potential transformer primary.

The generator potential transformer primary voltage is entered in this parameter. The generator rated voltage is used as a reference figure for all generator voltage related functions, which use a percentage value, like generator voltage monitoring, breaker operation windows or the Analog Manager.

EN	Mains rated voltage			
DE	Nennspannung Netz			
CL2	{0}	{1o}	{1oc}	{2oc}
1768	---	---	---	✓

#### Mains rated voltage

50 to 650000 V

① This value refers to the rated voltage of the mains and is the voltage measured on the potential transformer primary.

The mains potential transformer primary voltage is entered in this parameter. The mains rated voltage is used as a reference figure for all mains voltage related functions, which use a percentage value, like mains voltage monitoring, breaker operation windows or the Analog Manager.

EN	Busbar 1 rated voltage			
DE	Sammelschiene 1 Nennspannung			
CL2	{0}	{1o}	{1oc}	{2oc}
1781	✓	✓	✓	✓

**Busbar 1 rated voltage****50 to 650000 V**

- ① This value refers to the rated voltage of busbar 1 and is the voltage measured on the potential transformer primary.
- ① If voltage measuring is configured to 1Ph 3W, the WYE voltage ( $V_{LIN}$ ) must be entered here.

The busbar 1 potential transformer primary voltage is entered in this parameter. The busbar rated voltage is used as a reference figure for all busbar voltage related functions, which use a percentage value, like synchronization.

EN	Gen. rated active power [kW]			
DE	Nennwirkleistung [kW]			
CL2	{0}	{1o}	{1oc}	{2oc}
1752	✓	✓	✓	✓

**Generator rated active power****0.5 to 99999.9 kW**

This value specifies the generator real power rating, which is used as a reference figure for related functions. The generator rated active power is the generator apparent power multiplied by the generator power factor (typically ~0.8). These values are indicated in the generator data plate. Refer to Figure 3-1 for more information.

EN	Gen. rated react. power [kvar]			
DE	Nennblindleistung [kvar]			
CL2	{0}	{1o}	{1oc}	{2oc}
1758	✓	✓	✓	✓

**Generator rated reactive power****0.5 to 99999.9 kvar**

This value specifies the generator reactive power rating, which is used as a reference figure for related functions. The generator rated reactive power also depends on the generator values. Refer to Figure 3-1 for more information.

EN	Generator rated current			
DE	Nennstrom Generator			
CL2	{0}	{1o}	{1oc}	{2oc}
1754	✓	✓	✓	✓

**Generator rated current****1 to 32000 A**

This value specifies the generator rated current, which is used as a reference figure for related functions.

EN	Mains rated active power [kW]			
DE	Nennwirkleistung Netz [kW]			
CL2	{0}	{1o}	{1oc}	{2oc}
1748	✓	✓	✓	✓

**Mains rated active power****0.5 to 99999.9 kW**

This value specifies the mains real power rating, which is used as a reference figure for related functions. The mains rated active power is a reference value used by several monitoring and control functions. Refer to Figure 3-1 for more information.

EN	Mains rated react. pwr. [kvar]			
DE	Nennblindleistung Netz [kvar]			
CL2	{0}	{1o}	{1oc}	{2oc}
1746	✓	✓	✓	✓

**Mains rated reactive power****0.5 to 99999.9 kvar**

This value specifies the mains reactive power rating, which is used as a reference figure for related functions. The mains rated reactive power is a reference value used by several monitoring and control functions. Refer to Figure 3-1 for more information.

EN	Mains rated current			
DE	Nennstrom Netz			
CL2	{0}	{1o}	{1oc}	{2oc}
1785	✓	✓	✓	✓

**Mains rated current****1 to 32000 A**

This value specifies the mains rated current, which is used as a reference figure for related functions.

Figure 3-1 shows the AC power triangle to illustrate the dependencies between active power, apparent power, reactive power, and power factor.

PF = Power Factor  
P = Active Power = [kW]  
S = Apparent power [kVA]  
Q = Reactive Power [kvar]

$$PF = \frac{P}{S} = \cos \varphi$$

$$Q = \sqrt{S^2 - P^2}$$

$$S = \sqrt{P^2 + Q^2}$$

$$P = S * PF$$

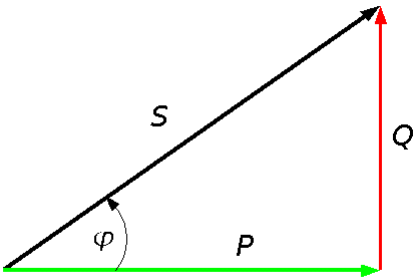


Figure 3-1: AC power triangle

1Ph2W voltage measuring		Measurement principle: 1Ph 2W measuring	Phase - phase / Phase - neutral
EN	Art der 1Ph2W Messung	<div>ⓘ Please refer to the comments on measuring principles in the installation manual (37223).</div>	
DE			
CL3 1858	{0} {1o} {1oc} {2oc}		
	✓ ✓ ✓ ✓		
		<b>Phase - phase</b>	The unit is configured for measuring phase-phase voltages if 1Ph 2W measuring is selected.
		<b>Phase - neutral</b>	The unit is configured for measuring phase-neutral voltages if 1Ph 2W measuring is selected.
1Ph2W phase rotation		Measurement principle: 1Ph 2W phase rotation	CW / CCW
EN	Art der 1Ph2W Drehrichtung	<div>ⓘ Please refer to the comments on measuring principles in the installation manual (37223).</div>	
DE			
CL3 1859	{0} {1o} {1oc} {2oc}		
	✓ ✓ ✓ ✓		
		<b>CW</b>	.....A clockwise rotation field is considered for 1Ph 2W measuring .
		<b>CCW</b>	.....A counter-clockwise rotation field is considered for 1Ph 2W measuring.

EN	Generator voltage measuring			
DE	Gen.Spannungsmessung			
CL2	{0}	{1o}	{1oc}	{2oc}
1851	✓	✓	✓	✓

## Measurement principle: Generator

3Ph 4W / 3Ph 3W / 1Ph 2W / 1Ph 3W

① Please refer to the comments on measuring principles in the installation manual (37223).

- 3Ph 4W** ..... Measurement is performed Line-Neutral (WYE connected system) and Line-Line (Delta connected system). The protection depends on the setting of parameter 1770 on page 38. Phase voltages and the neutral must be connected for proper calculation. Measurement, display and protection are adjusted according to the rules for WYE connected systems. Monitoring refers to the following voltages:
- $V_{L12}$ ,  $V_{L23}$ , and  $V_{L31}$  (parameter 1770 configured to "Phase-phase")
  - $V_{L1N}$ ,  $V_{L2N}$ , and  $V_{L3N}$  (parameter 1770 configured to "Phase-neutral")
- 3Ph 3W** ..... Measurement is performed Line-Line (Delta connected system). Phase voltages must be connected for proper calculation. Measurement, display and protection are adjusted according to the rules for Delta connected systems. Monitoring refers to the following voltages:
- $V_{L12}$ ,  $V_{L23}$ ,  $V_{L31}$
- 1Ph 2W** ..... Measurement is performed Line-Neutral (WYE connected system) if parameter 1858 is configured to "Phase - neutral" and Line-Line (Delta connected system) if parameter 1858 is configured to "Phase - phase". Measurement, display and protection are adjusted according to the rules for phase-phase systems. Monitoring refers to the following voltages:
- $V_{L1N}$ ,  $V_{L12}$
- 1Ph 3W** ..... Measurement is performed Line-Neutral (WYE connected system) and Line-Line (Delta connected system). The protection depends on the setting of parameter 1770 on page 38. Measurement, display, and protection are adjusted according to the rules for single-phase systems. Monitoring refers to the following voltages:
- $V_{L1N}$ ,  $V_{L3N}$  (parameter 1770 configured to "Phase-phase")
  - $V_{L13}$  (parameter 1770 configured to "Phase-neutral")

**NOTE:** If this parameter is configured to 1Ph 3W, the generator and mains rated voltages (parameters 1766 and 1768) must be entered as Line-Line (Delta) and the busbar 1 rated voltage (parameter 1781) must be entered as Line-Neutral (WYE).

EN	Generator current measuring			
DE	Gen.Strommessung			
CL2	{0}	{1o}	{1oc}	{2oc}
1850	✓	✓	✓	✓

## Measurement principle: Generator

L1 L2 L3 / Phase L1 / Phase L2 / Phase L3

① Please refer to the comments on measuring principles in the installation manual (37223). This parameter is only effective if generator voltage measuring (parameter 1851) is configured to "3Ph 4W" or "3Ph 3W".

- L1 L2 L3** ..... All three phases are monitored. Measurement, display and protection are adjusted according to the rules for 3-phase measurement. Monitoring refers to the following currents:
- $I_{L1}$ ,  $I_{L2}$ ,  $I_{L3}$
- Phase L{1/2/3}** Only one phase is monitored. Measurement, display and protection are adjusted according to the rules for single-phase measurement. Monitoring refers to the selected phase.

EN	Mains voltage measuring			
DE	Netzspannungsmessung			
CL2	{0}	{1o}	{1oc}	{2oc}
1853	---	---	---	✓

## Measurement principle: Mains

3Ph 4W / 3Ph 3W / 1Ph 2W / 1Ph 3W

① Please refer to the comments on measuring principles in the installation manual (37223).

- 3Ph 4W** ..... Measurement is performed Line-Neutral (WYE connected system) and Line-Line (Delta connected system). The protection depends on the setting of parameter 1771 on page 73. Phase voltages and the neutral must be connected for proper calculation. Measurement, display and protection are adjusted according to the rules for WYE connected systems. Monitoring refers to the following voltages:
- $V_{L12}$ ,  $V_{L23}$ , and  $V_{L31}$  (parameter 1771 configured to "Phase-phase")
  - $V_{LIN}$ ,  $V_{L2N}$  and  $V_{L3N}$  (parameter 1771 configured to "Phase-neutral")
- 3Ph 3W** ..... Measurement is performed Line-Line (Delta connected system). Phase voltages must be connected for proper calculation. Measurement, display and protection are adjusted according to the rules for Delta connected systems. Monitoring refers to the following voltages:
- $V_{L12}$ ,  $V_{L23}$ ,  $V_{L31}$
- 1Ph 2W** ..... Measurement is performed Line-Neutral (WYE connected system) if parameter 1858 is configured to "Phase - neutral" and Line-Line (Delta connected system) if parameter 1858 is configured to "Phase - phase". Measurement, display and protection are adjusted according to the rules for phase-phase systems. Monitoring refers to the following voltages:
- $V_{LIN}$ ,  $V_{L12}$
- 1Ph 3W** ..... Measurement is performed Line-Neutral (WYE connected system) and Line-Line (Delta connected system). The protection depends on the setting of parameter 1771 on page 73. Measurement, display, and protection are adjusted according to the rules for single-phase systems. Monitoring refers to the following voltages:
- $V_{LIN}$ ,  $V_{L3N}$  (parameter 1771 configured to "Phase-phase")
  - $V_{L13}$  (parameter 1771 configured to "Phase-neutral")

**NOTE:** If this parameter is configured to 1Ph 3W, the generator and mains rated voltages (parameters 1766 and 1768) must be entered as Line-Line (Delta) and the busbar 1 rated voltage (parameter 1781) must be entered as Line-Neutral (WYE).

EN	Mains current input			
DE	Eingang Netzstrom			
CL2				
1854				

## Measurement principle: Mains current input

Off / Mains current / Ground current

This parameter configures whether ground or mains current is measured on terminals 1/2 or the input is disabled.

EN	Mains current measuring			
DE	Netzstrommessung			
CL2	{0}	{1o}	{1oc}	{2oc}
1852	---	---	---	✓

## Measurement principle: Mains

Phase L1 / Phase L2 / Phase L3

① Please refer to the comments on measuring principles in the installation manual (37223). This parameter is only effective if mains voltage measuring (parameter 1853) is configured to "3Ph 4W" or "3Ph 3W".

**Phase L{1/2/3}** Measurement is performed for the selected phase only. The measurement and display refer to the selected phase. The configured phase CT must be connected to perform current measurement.



## Configure Measurement: Configure Transformer

### Generator

EN	Gen. PT primary rated voltage	Generator potential transformer primary voltage rating	50 to 650000 V
DE	Gen.Spg.Wandler primär		
CL2	{0} {1o} {1oc} {2oc}		
1801	✓ ✓ ✓ ✓		

Some generator applications may require the use of potential transformers to facilitate measuring the voltages produced by the generator. The rating of the primary side of the potential transformer must be entered into this parameter.

If the generator application does not require potential transformers (i.e. the generated voltage is 480 V or less), then the generated voltage will be entered into this parameter.

EN	Gen. PT secondary rated volt.	Generator potential transformer secondary voltage rating	50 to 480 V
DE	Gen.Spg.Wandler sekundär		
CL2	{0} {1o} {1oc} {2oc}		
1800	✓ ✓ ✓ ✓		

① The control is equipped with dual voltage measuring inputs. The voltage range of these measurement inputs is dependent upon input terminals are used (see below). This value refers to the secondary voltages of the potential transformers, which are directly connected to the control.

Some generator applications may require the use of potential transformers to facilitate measuring the voltages produced by the generator. The rating of the secondary side of the potential transformer must be entered into this parameter. If the generator application does not require potential transformers (i.e. the generated voltage is 480 V or less), then the generated voltage will be entered into this parameter.

- Rated voltage: 100 Vac (this parameter configured between 50 and 130 V)  
- Generator voltage: Terminals 29/31/33/35
- Rated voltage: 400 Vac (this parameter configured between 131 and 480 V)  
- Generator voltage: Terminals 30/32/34/36

**! WARNING:**  
Only connect the measured voltage to either the 100 Vac or the 400 Vac inputs. Do not connect both sets of inputs to the measured system.



### NOTE

This controller is available in two different hardware version with either 1A [../1] or 5A [../5] current transformer inputs. Both versions are discussed in this manual. The set points for specific parameters will differ depending upon the hardware version, indicated on the data plate.

- [1] easYgen-3xxx-1 = Current transformer with ../1 A rated current
- [5] easYgen-3xxx-5 = Current transformer with ../5 A rated current

EN	Gen. CT primary rated current			
DE	Generator Stromwandler			
CL2	{0}	{1o}	{1oc}	{2oc}
1806	✓	✓	✓	✓

Generator current transformer primary rating 1 to 32000/5 A

① This screen only applies to controls equipped with 5 A CT inputs. This will not be displayed in the controller screen of a unit equipped with 1 A CT inputs.

The input of the current transformer ratio is necessary for the indication and control of the actual monitored value. The current transformers ratio should be selected so that at least 60% of the secondary current rating can be measured when the monitored system is at 100% of operating capacity (i.e. at 100% of system capacity a 5 A CT should output 3 A). If the current transformers are sized so that the percentage of the output is lower, the loss of resolution may cause inaccuracies in the monitoring and control functions and affect the functionality of the control.

EN	Gen. CT primary rated current			
DE	Generator Stromwandler			
CL2	{0}	{1o}	{1oc}	{2oc}
1808	✓	✓	✓	✓

Generator current transformer primary rating 1 to 32000/1 A

① This screen only applies to controls equipped with 1 A CT inputs. This will not be displayed in the controller screen of a unit equipped with 5 A CT inputs.

The input of the current transformer ratio is necessary for the indication and control of the actual monitored value. The current transformers ratio should be selected so at least 60% of the secondary current rating can be measured when the monitored system is at 100% of operating capacity (i.e. at 100% of system capacity a 1 A CT should output 0.6 A). If the current transformers are sized so that the percentage of the output is lower, the loss of resolution may cause inaccuracies in the monitoring and control functions and affect the functionality of the control.

## Busbar

EN	Busb1 PT primary rated voltage				
DE	Sams. 1 Spg. Wandler primär				
CL2	{0}	{1o}	{1oc}	{2oc}	
1813	✓	✓	✓	✓	

### Busbar 1 potential transformer primary voltage rating

50 to 650000 V

Some applications may require the use of potential transformers to facilitate measuring the voltages to be monitored. The rating of the primary side of the potential transformer must be entered into this parameter.

If the application does not require potential transformers (i.e. the measured voltage is 480 V or less), then the measured voltage will be entered into this parameter.

EN	Busb1 PT secondary rated volt.				
DE	Sams. 1 Spg. Wandler sekundär				
CL2	{0}	{1o}	{1oc}	{2oc}	
1812	✓	✓	✓	✓	

### Busbar 1 potential transformer secondary voltage rating

50 to 480 V

① The control is equipped with dual voltage measuring inputs. The voltage range of these measurement inputs is dependent upon input terminals are used (see below). This value refers to the secondary voltages of the potential transformers, which are directly connected to the control.

Some applications may require the use of potential transformers to facilitate measuring the busbar voltages. The rating of the secondary side of the potential transformer must be entered into this parameter.

If the application does not require potential transformers (i.e. the measured voltage is 480 V or less), then the measured voltage will be entered into this parameter.

- Rated voltage: 100 Vac (this parameter configured between 50 and 130 V)  
- Busbar voltage: Terminals 37/39
- Rated voltage: 400 Vac (this parameter configured between 131 and 480 V)  
- Busbar voltage: Terminals 38/40

### ! WARNING:

Only connect the measured voltage to either the 100 Vac or the 400 Vac inputs. Do not connect both sets of inputs to the measured system.

## Mains PT

EN	Mains PT primary rated voltage			
DE	Netz.Spg.Wandler primär			
CL2	{0}	{1o}	{1oc}	{2oc}
1804	---	---	---	✓

### Mains potential transformer primary voltage rating

50 to 650000 V

Some applications may require the use of potential transformers to facilitate measuring the voltages to be monitored. The rating of the primary side of the potential transformer must be entered into this parameter.

If the application does not require potential transformers (i.e. the measured voltage is 480 V or less), then the measured voltage will be entered into this parameter.

EN	Mains PT secondary rated volt.			
DE	Netz.Spg.Wandler sekundär			
CL2	{0}	{1o}	{1oc}	{2oc}
1803	---	---	---	✓

### Mains potential transformer secondary voltage rating

50 to 480 V

① The control is equipped with dual voltage measuring inputs. The voltage range of these measurement inputs is dependent upon input terminals are used (see below). This value refers to the secondary voltages of the potential transformers, which are directly connected to the control.

Some applications may require the use of potential transformers to facilitate measuring the mains voltages. The rating of the secondary side of the potential transformer must be entered into this parameter.

If the application does not require potential transformers (i.e. the measured voltage is 480 V or less), then the measured voltage will be entered into this parameter.

- Rated voltage: 100 Vac (this parameter configured between 50 and 130 V)
  - Mains voltage: Terminals 21/23/25/27
- Rated voltage: 400 Vac (this parameter configured between 131 and 480 V)
  - Mains Voltage: Terminals 22/24/26/28

### ! WARNING:

Only connect the measured voltage to either the 100 Vac or the 400 Vac inputs. Do not connect both sets of inputs to the measured system.

## Mains Current Transformer

EN	Mains CT primary rated current			
DE	Netz.Stromwandler			
CL2	{0}	{1o}	{1oc}	{2oc}
1807	---	---	---	☑

### Mains current transformer primary rating

1 to 32000/5 A

① This screen only applies to controls equipped with 5 A CT inputs. This will not be displayed in the controller screen of a unit equipped with 1 A CT inputs.

This screen is only visible if parameter 1854 is configured as Mains.

The input of the current transformer ratio is necessary for the indication and control of the actual monitored value. The current transformers ratio should be selected so that at least 60% of the secondary current rating can be measured when the monitored system is at 100% of operating capacity (i.e. at 100% of system capacity a 5 A CT should output 3 A). If the current transformers are sized so that the percentage of the output is lower, the loss of resolution may cause inaccuracies in the monitoring and control functions and affect the functionality of the control.

EN	Mains CT primary rated current				Mains current transformer primary rating	1 to 32000/1 A
DE	Netz Stromwandler					
CL2	{0}	{1o}	{1oc}	{2oc}	① This screen only applies to controls equipped with 1 A CT inputs. This will not be displayed in the controller screen of a unit equipped with 5 A CT inputs.	
1809	---	---	---	<input checked="" type="checkbox"/>		

This screen is only visible if parameter 1854 is configured as Mains. The input of the current transformer ratio is necessary for the indication and control of the actual monitored value. The current transformers ratio should be selected so that at least 60% of the secondary current rating can be measured when the monitored system is at 100% of operating capacity (i.e. at 100% of system capacity a 1 A CT should output 0.6 A). If the current transformers are sized so that the percentage of the output is lower, the loss of resolution may cause inaccuracies in the monitoring and control functions and affect the functionality of the control.

## Ground Current Transformer

EN	Gnd. CT primary rated current				Ground current transformer primary rating	1 to 32000/5 A
DE	Erd-Stromwandler					
CL2	{0}	{1o}	{1oc}	{2oc}	① This screen only applies to controls equipped with 5 A CT inputs. This will not be displayed in the controller screen of a unit equipped with 1 A CT inputs.	
1810	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>		

This screen is only visible if parameter 1854 is configured as Ground. The current transformers ratio should be selected so that at least 60% of the secondary current rating can be measured when the monitored system is at 100% of operating capacity (i.e. at 100% of system capacity a 5 A CT should output 3 A). If the current transformers are sized so that the percentage of the output is lower, the loss of resolution may cause inaccuracies in the monitoring and control functions and affect the functionality of the control.

EN	Gnd. CT primary rated current				Ground current transformer primary rating	1 to 32000/1 A
DE	Erd-Stromwandler					
CL2	{0}	{1o}	{1oc}	{2oc}	① This screen only applies to controls equipped with 1 A CT inputs. This will not be displayed in the controller screen of a unit equipped with 5 A CT inputs.	
1811	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>		

This screen is only visible if parameter 1854 is configured as Ground. The current transformers ratio should be selected so that at least 60% of the secondary current rating can be measured when the monitored system is at 100% of operating capacity (i.e. at 100% of system capacity a 1 A CT should output 0.6 A). If the current transformers are sized so that the percentage of the output is lower, the loss of resolution may cause inaccuracies in the monitoring and control functions and affect the functionality of the control.

## Configure Monitoring



### Configure Monitoring: Generator

EN	Generator voltage monitoring
DE	Gen. Spannungsüberwachung
CL2	{0} {1o} {1oc} {2oc}
1770	✓ ✓ ✓ ✓

#### Generator protection: type of monitoring

#### Phase - phase / Phase - neutral

The unit can either monitor the phase-neutral (wye) voltages or the phase-phase (delta) voltages. If the controller is used in a compensated or isolated network, voltage protection monitoring should be configured as phase-neutral to prevent earth-faults resulting in tripping of the voltage protections.

#### ! WARNING:

This parameter defines how the protective functions operate.

**Phase - phase** The phase-phase voltage will be measured and all subsequent parameters concerning voltage monitoring "generator" are referred to this value ( $V_{L-L}$ ).

**Phase - neutral** The phase-neutral voltage will be measured and all subsequent parameters concerning voltage monitoring "generator" are referred to this value ( $V_{L-N}$ ).

### Configure Monitoring: Generator, Operating Voltage / Frequency

EN	Upper voltage limit
DE	Obere Spannungsabw.
CL2	{0} {1o} {1oc} {2oc}
5800	✓ ✓ ✓ ✓

#### Generator maximum operating voltage limit

100 to 150 %

The maximum permissible positive deviation of the generator voltage from the generator rated voltage (parameter 1766 on page 28) is configured here. This value may be used as a voltage limit switch. The conditional state of this switch may be used as a command variable for the *LogicsManager* (02.03).

EN	Lower voltage limit
DE	Untere Spannungsabw.
CL2	{0} {1o} {1oc} {2oc}
5801	✓ ✓ ✓ ✓

#### Generator minimum operating voltage limit

50 to 100 %

The maximum permissible negative deviation of the generator voltage from the generator rated voltage (parameter 1766 on page 28) is configured here. This value may be used as a voltage limit switch. The conditional state of this switch may be used as a command variable for the *LogicsManager* (02.03).

EN	Upper frequency limit
DE	Obere Frequenzabw.
CL2	{0} {1o} {1oc} {2oc}
5802	✓ ✓ ✓ ✓

#### Generator maximum operating frequency limit

100.0 to 150.0 %

The maximum permissible positive deviation of the generator frequency from the rated system frequency (parameter 1750 on page 28) is configured here. This value may be used as a frequency limit switch. The conditional state of this switch may be used as a command variable for the *LogicsManager* (02.04).

EN	Lower frequency limit
DE	Untere Frequenzabw.
CL2	{0} {1o} {1oc} {2oc}
5803	✓ ✓ ✓ ✓

#### Generator minimum operating frequency limit

50.0 to 100.0 %

The maximum permissible negative deviation of the generator frequency from the rated system frequency (parameter 1750 on page 28) is configured here. This value may be used as a frequency limit switch. The conditional state of this switch may be used as a command variable for the *LogicsManager* (02.04).



#### NOTE

The operating voltage/frequency parameters are used to check if the values are in range when performing a dead bus closure and synchronization of the generator. Busbar 1 must be within this ranges to synchronize the generator to the busbar.

## Configure Monitoring: Generator, Overfrequency (Levels 1 & 2) ANSI# 810

This controller provides the user with two alarm levels for generator overfrequency. Both alarms are definite time alarms and are illustrated in the figure below. The figure diagrams a frequency trend and the associated pickup times and length of the alarms. Monitoring for overfrequency faults is performed in two steps.

If this protective function is triggered, the display indicates "**Gen. overfrequency 1**" or "**Gen. overfrequency 2**".

Refer to Appendix E: Triggering Characteristics, Figure 3-36 on page 305 for the triggering characteristic of this monitoring function.

### Parameter table

The parameter limits represented in this table have identical permissible ranges. Each parameter may be configured with different settings to create unique trip characteristics for specific thresholds.

Level	Text	Setting range	Default value
<b>Overfrequency</b> (the hysteresis is 0.05 Hz.)			
Level 1	Monitoring	On / Off	On
	Limit	50.0 to 130.0 %	110.0 %
	Delay	0.02 to 99.99 s	1.50 s
	Alarm class	A/B/C/D/E/F	B
	Self acknowledgment	Yes / No	No
	Delayed by engine speed	Yes / No	No
Level 2	Monitoring	On / Off	On
	Limit	50.0 to 130.0 %	115.0 %
	Delay	0.02 to 99.99 s	0.30 s
	Alarm class	A/B/C/D/E/F	F
	Self acknowledgment	Yes / No	No
	Delayed by engine speed	Yes / No	No

Table 3-1: Monitoring - standard values - generator overfrequency

EN	Monitoring				
DE	Überwachung				
CL2	{0}	{1o}	{1oc}	{2oc}	
1900	✓	✓	✓	✓	
1906					

#### Gen.Overfrequency: Monitoring (Level 1/Level 2)

On / Off

**On** ..... Overfrequency monitoring is carried out according to the following parameters. Monitoring is performed at two levels. Both values may be configured independent from each other (prerequisite: Level 1 limit < limit 2).

**Off** ..... Monitoring is disabled for Level 1 limit and/or Level 2 limit.

EN	Limit				
DE	Grenzwert				
CL2	{0}	{1o}	{1oc}	{2oc}	
1904	✓	✓	✓	✓	
1910					

#### Gen.Overfrequency: Threshold value (Level 1/Level 2)

50.0 to 130.0 %

① This value refers to the System rated frequency (parameter 1750 on page 28).

The percentage values that are to be monitored for each threshold limit are defined here. If this value is reached or exceeded for at least the delay time without interruption, the action specified by the alarm class is initiated.

EN	Delay				
DE	Verzögerung				
CL2	{0}	{1o}	{1oc}	{2oc}	
1905	✓	✓	✓	✓	
1911					

#### Gen.Overfrequency: Delay (Level 1/Level 2)

0.02 to 99.99 s

If the monitored generator frequency value exceeds the threshold value for the delay time configured here, an alarm will be issued. If the monitored generator frequency falls below the threshold (minus the hysteresis) before the delay expires the time will be reset.

EN	Alarm class				
DE	Alarmklasse				
CL2	{0}	{1o}	{1oc}	{2oc}	
1901	✓	✓	✓	✓	
1907					

#### Gen.Overfrequency: Alarm class (Level 1/Level 2)

Class A/B/C/D/E/F

① See chapter "Alarm" on page 250.

Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.

DE	Self acknowledge					Gen. overfrequency: Self acknowledgment (Level 1/Level 2)	Yes / No
	Selbstquittierend						
	CL2	{0}	{1o}	{1oc}	{2oc}		
	✓	✓	✓	✓		<b>Yes</b> .....The control automatically clears the alarm if the fault condition is no longer detected.  <b>No</b> .....The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the <i>LogicsManager</i> output "External acknowledgement" (via a discrete input or via an interface).	
1902							
1908							

EN	Delayed by engine speed					Gen. overfrequency Engine delayed monitoring (Level 1/Level 2)	Yes / No
	Verzögert durch Motordrehzahl						
	CL2	{0}	{1o}	{1oc}	{2oc}		
	✓	✓	✓	✓		<b>Yes</b> .....Monitoring for fault conditions is not performed until engine delayed monitoring is enabled. The engine monitoring delay time (parameter 3315 on page 175) must expire prior to fault monitoring being enabled for parameters assigned this delay.  <b>No</b> .....Monitoring for this fault condition is continuously enabled regardless of engine speed.	
1903							
1909							



## Configure Monitoring: Generator, Underfrequency (Levels 1 & 2) ANSI# 81U

This controller provides the user with two alarm levels for generator underfrequency. Both alarms are definite time alarms and are illustrated in the figure below. The figure diagrams a frequency trend and the associated pickup times and length of the alarms. Monitoring for underfrequency faults is performed in two steps. If this protective function is triggered, the display indicates "**Gen. underfrequency 1**" or "**Gen. underfrequency 2**".

Refer to Appendix E: Triggering Characteristics, Figure 3-37 on page 306 for the triggering characteristic of this monitoring function.

### Parameter table

The parameter limits represented in this table have identical permissible ranges. Each parameter may be configured with different settings to create unique trip characteristics for specific thresholds.

Level	Text	Setting range	Default value
<b>Underfrequency</b> (the hysteresis is 0.05 Hz.)			
Level 1	Monitoring	On / Off	On
	Limit	50.0 to 130.0 %	90.0 %
	Delay	0.02 to 99.99 s	5.00 s
	Alarm class	A/B/C/D/E/F	B
	Self acknowledgment	Yes / No	No
	Delayed by engine speed	Yes / No	Yes
Level 2	Monitoring	On / Off	On
	Limit	50.0 to 130.0 %	84.0 %
	Delay	0.02 to 99.99 s	0.30 s
	Alarm class	A/B/C/D/E/F	F
	Self acknowledgment	Yes / No	No
	Delayed by engine speed	Yes / No	Yes

Table 3-2: Monitoring - standard values - generator underfrequency

EN	Monitoring
DE	Überwachung
CL2	{0} {1o} {1oc} {2oc}
1950	✓ ✓ ✓ ✓
1956	

### Gen. underfrequency: Monitoring (Level 1/Level 2)

On / Off

**On** ..... Underfrequency monitoring is carried out according to the following parameters. Monitoring is performed at two levels. Both values may be configured independent from each other (prerequisite: Level 1 > Level 2).

**Off** ..... Monitoring is disabled for Level 1 limit and/or Level 2 limit.

EN	Limit
DE	Grenzwert
CL2	{0} {1o} {1oc} {2oc}
1954	✓ ✓ ✓ ✓
1960	

### Gen. underfrequency: Threshold value (Level 1/Level 2)

50.0 to 130.0 %

① This value refers to the System rated frequency (parameter 1750 on page 28).

The percentage values that are to be monitored for each threshold limit are defined here. If this value is reached or fallen below for at least the delay time without interruption, the action specified by the alarm class is initiated.

EN	Delay
DE	Verzögerung
CL2	{0} {1o} {1oc} {2oc}
1955	✓ ✓ ✓ ✓
1961	

### Gen. underfrequency: Delay (Level 1/Level 2)

0.02 to 99.99 s

If the monitored generator frequency value falls below the threshold value for the delay time configured here, an alarm will be issued. If the monitored generator frequency exceeds the threshold (plus the hysteresis) again before the delay expires the time will be reset.

EN	Alarm class
DE	Alarmklasse
CL2	{0} {1o} {1oc} {2oc}
1951	✓ ✓ ✓ ✓
1957	

### Gen. underfrequency: Alarm class (Level 1/Level 2)

Class A/B/C/D/E/F

① See chapter "Alarm" on page 250.

Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.

DE	EN	Self acknowledge			
		Selbstquittierend			
CL2		{0}	{1o}	{1oc}	{2oc}
1952		✓	✓	✓	✓
1958					

### Gen. underfrequency: Self acknowledgment (Level 1/Level 2) Yes / No

- Yes**..... The control automatically clears the alarm if the fault condition is no longer detected.
- No**..... The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the *LogicsManager* output "External acknowledgement" (via a discrete input or via an interface).

DE	EN	Delayed by engine speed			
		Verzögert durch Motordrehzahl			
CL2		{0}	{1o}	{1oc}	{2oc}
1953		✓	✓	✓	✓
1959					

### Gen. underfrequency Engine delayed monitoring (Limit 1/Limit 2) Yes / No

- Yes**..... Monitoring for fault conditions is not performed until engine delayed monitoring is enabled. The engine monitoring delay time (parameter 3315 on page 175) must expire prior to fault monitoring being enabled for parameters assigned this delay.
- No**..... Monitoring for this fault condition is continuously enabled regardless of engine speed.



## NOTE

This monitoring function is disabled when the idle mode (see page 178) is active.

## Configure Monitoring: Generator, Overvoltage (Levels 1 & 2) ANSI# 59

Voltage is monitored according to how the parameter "Generator voltage measuring" (parameter 1851 on page 31) is configured. This controller provides the user with two alarm levels for generator overvoltage. Both alarms are definite time alarms and are illustrated in the figure below. The figure diagrams a frequency trend and the associated pickup times and length of the alarms. Monitoring for overvoltage faults is performed in two steps. If this protective function is triggered, the display indicates "**Gen. overvoltage 1**" or "**Gen. overvoltage 2**".

Refer to Appendix E: Triggering Characteristics, Figure 3-36 on page 305 for the triggering characteristic of this monitoring function.

### Parameter table

The parameter limits represented in this table have identical permissible ranges. Each parameter may be configured with different settings to create unique trip characteristics for specific thresholds.

Level	Text	Setting range	Default value
<b>Overvoltage</b> (the hysteresis is 0.7 % of the rated value)			
Level 1	Monitoring	On / Off	On
	Limit	50.0 to 125.0 %	108.0 %
	Delay	0.02 to 99.99 s	5.00 s
	Alarm class	A/B/C/D/E/F	B
	Self acknowledgment	Yes / No	No
	Delayed by engine speed	Yes / No	No
Level 2	Monitoring	On / Off	On
	Limit	50.0 to 125.0 %	112.0 %
	Delay	0.02 to 99.99 s	0.30 s
	Alarm class	A/B/C/D/E/F	F
	Self acknowledgment	Yes / No	No
	Delayed by engine speed	Yes / No	No

Table 3-3: Monitoring - standard values - generator overvoltage

EN	Monitoring
DE	Überwachung
CL2	{0} {1o} {1oc} {2oc}
2000	✓ ✓ ✓ ✓
2006	

### Gen. overvoltage: Monitoring (Level 1/Level 2)

On / Off

**On** ..... Overvoltage monitoring is carried out according to the following parameters. Monitoring is performed at two levels. Both values may be configured independent from each other (prerequisite: Level 1 limit < Level 2 limit).

**Off**..... Monitoring is disabled for Level 1 limit and/or Level 2 limit.

EN	Limit
DE	Grenzwert
CL2	{0} {1o} {1oc} {2oc}
2004	✓ ✓ ✓ ✓
2010	

### Gen. overvoltage: Threshold value (Level 1/Level 2)

50.0 to 125.0 %

① This value refers to the Generator rated voltage (parameter 1766 on page 28).

The percentage values that are to be monitored for each threshold limit are defined here. If this value is reached or exceeded for at least the delay time without interruption, the action specified by the alarm class is initiated.

EN	Delay
DE	Verzögerung
CL2	{0} {1o} {1oc} {2oc}
2005	✓ ✓ ✓ ✓
2011	

### Gen. overvoltage: Delay (Level 1/Level 2)

0.02 to 99.99 s

If the monitored generator voltage exceeds the threshold value for the delay time configured here, an alarm will be issued. If the monitored generator voltage falls below the threshold (minus the hysteresis) before the delay expires the time will be reset.

EN	Alarm class
DE	Alarmklasse
CL2	{0} {1o} {1oc} {2oc}
2001	✓ ✓ ✓ ✓
2007	

### Gen. overvoltage: Alarm class (Level 1/Level 2)

Class A/B/C/D/E/F

① See chapter "Alarm" on page 250.

Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.

DE	EN	Self acknowledge					Gen. overvoltage: Self acknowledgment (Level 1/Level 2)		Yes / No
		Selbstquittierend							
CL2		{0}	{1o}	{1oc}	{2oc}	Yes.....The control automatically clears the alarm if the fault condition is no longer detected.	No .....The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the <i>LogicsManager</i> output "External acknowledgement" (via a discrete input or via an interface).		
2002		✓	✓	✓	✓				
2008									

DE	EN	Delayed by engine speed					Gen. overvoltage: Engine delayed monitoring (Level 1/Level 2)		Yes / No
		Verzögert durch Motordrehzahl							
CL2		{0}	{1o}	{1oc}	{2oc}	Yes.....Monitoring for fault conditions is not performed until engine delayed monitoring is enabled. The engine monitoring delay time (parameter 3315 on page 175) must expire prior to fault monitoring being enabled for parameters assigned this delay.	No .....Monitoring for this fault condition is continuously enabled regardless of engine speed.		
2003		✓	✓	✓	✓				
2009									

## Configure Monitoring: Generator, Undervoltage (Levels 1 & 2) ANSI# 27

Voltage is monitored according to how the parameter "Generator voltage measuring" (parameter 1851 on page 31) is configured. This controller provides the user with two alarm levels for generator overvoltage. Both alarms are definite time alarms and are illustrated in the figure below. The figure diagrams a frequency trend and the associated pickup times and length of the alarms. Monitoring for undervoltage faults is performed in two steps.

If this protective function is triggered, the display indicates "Gen. undervoltage 1" or "Gen. undervoltage 2".

Refer to Appendix E: Triggering Characteristics, Figure 3-37 on page 306 for the triggering characteristic of this monitoring function.

### Parameter table

The parameter limits represented in this table have identical permissible ranges. Each parameter may be configured with different settings to create unique trip characteristics for specific thresholds.

Level	Text	Setting range	Default value
<b>Undervoltage</b> (the hysteresis is 0.7 % of the rated value)			
Level 1	Monitoring	On / Off	On
	Limit	50.0 to 125.0 %	92.0 %
	Delay	0.02 to 99.99 s	5.00 s
	Alarm class	A/B/C/D/E/F	B
	Self acknowledgment	Yes / No	No
	Delayed by engine speed	Yes / No	Yes
Level 2	Monitoring	On / Off	On
	Limit	50.0 to 125.0 %	88.0 %
	Delay	0.02 to 99.99 s	00.30 s
	Alarm class	A/B/C/D/E/F	F
	Self acknowledgment	Yes / No	No
	Delayed by engine speed	Yes / No	Yes

Table 3-4: Monitoring - standard values - generator undervoltage

EN	Monitoring				
DE	Überwachung				
CL2	{0}	{1o}	{1oc}	{2oc}	
2050	✓	✓	✓	✓	
2056					

### Gen. undervoltage: Monitoring (Level 1/Level 2)

On / Off

**On** ..... Undervoltage monitoring is carried out according to the following parameters. Monitoring is performed at two levels. Both values may be configured independent from each other (prerequisite: Level 1 limit < Level 2 limit).

**Off**..... Monitoring is disabled for Level 1 limit and/or Level 2 limit.

EN	Limit				
DE	Grenzwert				
CL2	{0}	{1o}	{1oc}	{2oc}	
2054	✓	✓	✓	✓	
2060					

### Gen. undervoltage: Threshold value (Level 1/Level 2)

50.0 to 125.0 %

① This value refers to the Generator rated voltage (parameter 1766 on page 28).

The percentage values that are to be monitored for each threshold limit are defined here. If this value is reached or fallen below for at least the delay time without interruption, the action specified by the alarm class is initiated.

EN	Delay				
DE	Verzögerung				
CL2	{0}	{1o}	{1oc}	{2oc}	
2055	✓	✓	✓	✓	
2061					

### Gen. undervoltage: Delay (Level 1/Level 2)

0.02 to 99.99 s

If the monitored generator voltage falls below the threshold value for the delay time configured here, an alarm will be issued. If the monitored generator voltage exceeds the threshold (plus the hysteresis) again before the delay expires the time will be reset.

EN	Alarm class			
	Alarmklasse			
CL2	{0}	{1o}	{1oc}	{2oc}
2051	✓	✓	✓	✓
2057				

Gen. undervoltage: Alarm class (Level 1/Level 2)	Class A/B/C/D/E/F
ⓘ See chapter "Alarm" on page 250.	

Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.

EN	Self acknowledge			
	Selbstquittierend			
CL2	{0}	{1o}	{1oc}	{2oc}
2052	✓	✓	✓	✓
2058				

Gen. undervoltage: Self acknowledgment (Level 1/Level 2)	Yes / No
Yes .....	The control automatically clears the alarm if the fault condition is no longer detected.
No .....	The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the <i>LogicsManager</i> output "External acknowledgement" (via a discrete input or via an interface).

EN	Delayed by engine speed			
	Verzögert durch Motordrehzahl			
CL2	{0}	{1o}	{1oc}	{2oc}
2053	✓	✓	✓	✓
2059				

Gen. undervoltage: Delayed engine speed (Level 1/Level 2)	Yes / No
Yes .....	Monitoring for fault conditions is not performed until engine delayed monitoring is enabled. The engine monitoring delay time (parameter 3315 on page 175) must expire prior to fault monitoring being enabled for parameters assigned this delay.
No .....	Monitoring for this fault condition is continuously enabled regardless of engine speed.



**NOTE**

This monitoring function is disabled when the idle mode (see page 178) is active.

### Configure Monitoring: Generator, Time-Overcurrent Monit. (Levels 1, 2 & 3) ANSI# 50/51

Current is monitored according to how the parameter "Generator current measuring" (parameter 1850 on page 31) is configured. This controller provides the user with three definite time alarm levels for generator overcurrent faults and may be setup as illustrated in the figure below. Monitoring of the maximum phase current is performed in three steps. Every step can be provided with a delay time independent of the other steps.

If this protective function is triggered, the display indicates "**Gen. overcurrent 1**",

"**Gen. overcurrent 2**", or "**Gen. overcurrent 3**".

Refer to Appendix E: Triggering Characteristics, Figure 3-35 on page 304 for the triggering characteristic of this monitoring function.

#### Parameter table

The parameter limits represented in this table have identical permissible ranges. Each parameter may be configured with different settings to create unique trip characteristics for specific thresholds.

Level	Text	Setting range	Default value
<b>Overcurrent</b> (the hysteresis is 1 % of the rated value)			
Level 1	Monitoring	On / Off	On
	Limit	50.0 to 300.0 %	110.0 %
	Delay	0.02 to 99.99 s	30.00 s
	Alarm class	A/B/C/D/E/F	E
	Self acknowledgment	Yes / No	No
Level 2	Monitoring	On / Off	On
	Limit	50.0 to 300.0 %	150.0 %
	Delay	0.02 to 99.99 s	1.00 s
	Alarm class	A/B/C/D/E/F	F
	Self acknowledgment	Yes / No	No
Level 3	Monitoring	On / Off	On
	Limit	50.0 to 300.0 %	250.0 %
	Delay	0.02 to 99.99 s	0.40 s
	Alarm class	A/B/C/D/E/F	F
	Self acknowledgment	Yes / No	No

Table 3-5: Monitoring - standard values - generator time-overcurrent

EN	Monitoring
DE	Überwachung
CL2	{0} {1o} {1oc} {2oc}
2200	✓
2206	✓
2212	✓

#### Gen. overcurrent, TOC: Monitoring (Level 1/Level 2/Level 3)

On / Off

**On** ..... Overcurrent monitoring is carried out according to the following parameters. Monitoring is performed at three levels. All three values may be configured independent from each other (prerequisite: Level 1 < Level 2 < Level 3).

**Off** ..... Monitoring is disabled for Level 1 limit, Level 2 limit, and/or Level 3 limit.

EN	Limit
DE	Grenzwert
CL2	{0} {1o} {1oc} {2oc}
2204	✓
2210	✓
2216	✓

#### Gen. overcurrent, TOC: Threshold value (Level 1/Level 2/Level 3)

50.0 to 300.0 %

① This value refers to the Generator rated current (parameter 1754 on page 29).

The percentage values that are to be monitored for each threshold limit are defined here. If this value is reached or exceeded for at least the delay time without interruption, the action specified by the alarm class is initiated.

EN	Delay
DE	Verzögerung
CL2	{0} {1o} {1oc} {2oc}
2205	✓
2211	✓
2217	✓

#### Gen. overcurrent, TOC: Delay (Level 1/Level 2/Level 3)

0.02 to 99.99 s

If the monitored generator current exceeds the threshold value for the delay time configured here, an alarm will be issued. If the monitored generator current falls below the threshold (minus the hysteresis) before the delay expires the time will be reset.

DE	EN	Alarm class			
		Alarmklasse			
CL2		{0}	{1o}	{1oc}	{2oc}
2201		✓	✓	✓	✓
2207					
2213					

Gen. overcurrent, TOC: Alarm class (Level 1/Level 2/Level 3)      Class A/B/C/D/E/F

| ⓘ See chapter "Alarm" on page 250. |

Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.

DE	EN	Self acknowledge			
		Selbstquittierend			
CL2		{0}	{1o}	{1oc}	{2oc}
2202		✓	✓	✓	✓
2208					
2214					

Gen. overcurrent, TOC: Self acknowledgment (Level 1/Level 2/Level 3)      On / Off

**Yes** ..... The control automatically clears the alarm if the fault condition is no longer detected.

**No** ..... The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the *LogicsManager* output "External acknowledgement" (via a discrete input or via an interface).



### Configure Monitoring: Generator, Reverse/Reduced Power (Levels 1 & 2) ANSI# 32R/F

The power produced by the generator is calculated from the voltage and current values measured in accordance with how parameters "Generator voltage measuring" (parameter 1851 on page 31) and "Generator current measuring" (parameter 1850 on page 31) are configured. The generator power limits may be configured for reduced power and/or reverse power depending on the threshold values entered. The note below explains how a reduced or reverse power limit is configured. If the single-phase or three-phase measured real power is below the configured limit of the reduced load or below the configured value of the reverse power, an alarm will be issued. If this protective function is triggered, the display indicates "Gen. rev./red. pwr.1" or "Gen. rev./red. pwr.2".

Refer to Appendix E: Triggering Characteristics, Figure 3-38 on page 307 for the triggering characteristic of this monitoring function.



#### NOTE

##### Definition

- **Reduced power**  
Fault initiated if the monitored real power falls below the configured (positive) limit.
- **Reverse power**  
Fault initiated if the direction of the monitored real power reverses and the configured (negative) limit is exceeded.

The values for reverse /reduced power monitoring can be configured as follows:

- Level 1 limit = **Positive** and  
Level 2 limit = **Positive** (whereas Level 1 limit > Level 2 limit > 0 %):  
⇒ **Both limits are configured for reduced power monitoring.**  
(example: rated power is 100 kW, Level 1 limit = 5 % > Level 2 limit = 3 %; tripping if real power falls below 5 kW (Level 1 limit) or 3 kW (Level 2 limit))
- Level 1 limit = **Negative** and  
Level 2 limit = **Negative** (whereas Level 2 limit < Level 1 limit < 0 %):  
⇒ **Both limits are configured for reverse power monitoring.**  
(example: rated power is 100 kW, Level 1 limit = -3 % > Level 2 limit = -5 %; tripping if real power falls below -3 kW (Level 1 limit) or -5 kW (Level 2 limit))
- Level 1 limit = **Positive** and  
Level 2 limit = **Negative** (whereas Level 1 limit > 0 % > Level 2 limit):  
⇒ **Level 1 is configured for reduced power monitoring and**  
⇒ **Level 2 is configured for reverse power monitoring.**  
(example: rated power is 100 kW, Level 1 limit = 3 % > Level 2 limit = -5 %; tripping if real power falls below 3 kW (Level 1 limit) or -5 kW (Level 2 limit))

#### Parameter table

The parameter limits represented in this table have identical permissible ranges. Each parameter may be configured with different trip characteristics for specific thresholds.

Level	Text	Setting range	Default value
<b>Reverse / reduced power</b> (the hysteresis is 1 % of the rated value)			
<b>Level 1</b>	Monitoring	On / Off	On
<b>Level 1 &gt; 0 %</b> Red. power	Limit	-99.9 to 99.9 %	-3.0 %
	Delay	0.02 to 99.99 s	5.00 s
	Alarm class	A/B/C/D/E/F	B
<b>Level 1 &lt; 0 %</b> Rev. power	Self acknowledgment	Yes / No	No
	Delayed by engine speed	Yes / No	No
<b>Level 2</b>	Monitoring	On / Off	On
<b>Level 2 &gt; 0 %</b> Red. power	Limit	-99.9 to 99.9 %	-5.0 %
	Delay	0.02 to 99.99 s	3.00 s
	Alarm class	A/B/C/D/E/F	E
<b>Level 2 &lt; 0 %</b> Rev. power	Self acknowledgment	Yes / No	No
	Delayed by engine speed	Yes / No	No

Table 3-6: Monitoring - standard values - generator reverse / reduced power

EN	Monitoring			
DE	Überwachung			
CL2	{0}	{1o}	{1oc}	{2oc}
2250	✓	✓	✓	✓
2256				

**Gen. reverse/reduced power: Monitoring (Level 1/Level 2)****On / Off**

**On**.....Reverse/reduced power monitoring is carried out according to the following parameters. Both values may be configured independent from each other (prerequisite for {1oc}, {2oc}: GCB must be closed).

**Off**.....Monitoring is disabled for Level 1 limit and/or Level 2 limit.

EN	Limit			
DE	Grenzwert			
CL2	{0}	{1o}	{1oc}	{2oc}
2254	✓	✓	✓	✓
2260				

**Gen. reverse/reduced power: Threshold value (Level 1/Level 2)****-99.9 to 99.9 %**

① This value refers to the Generator rated active power (parameter 1752 on page 29).

The percentage values that are to be monitored for each threshold limit are defined here. If this value is reached or fallen below for at least the delay time without interruption, the action specified by the alarm class is initiated.

EN	Delay			
DE	Verzögerung			
CL2	{0}	{1o}	{1oc}	{2oc}
2255	✓	✓	✓	✓
2261				

**Gen. reverse/reduced power: Delay (Level 1/Level 2)****0.02 to 99.99 s**

If the monitored generator power falls below the threshold value for the delay time configured here, an alarm will be issued. If the monitored generator power exceeds or falls below the threshold (plus/minus the hysteresis) again before the delay expires the time will be reset.

EN	Alarm class			
DE	Alarmklasse			
CL2	{0}	{1o}	{1oc}	{2oc}
2251	✓	✓	✓	✓
2257				

**Gen. reverse/reduced power: Alarm class (Lim.1/Lim.2)****Class A/B/C/D/E/F**

① See chapter "Alarm" on page 250.

Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.

EN	Self acknowledge			
DE	Selbstquittierend			
CL2	{0}	{1o}	{1oc}	{2oc}
2252	✓	✓	✓	✓
2258				

**Gen. reverse/reduced power: Self acknowledgment (Level 1/Level 2)****Yes / No**

**Yes**.....The control automatically clears the alarm if the fault condition is no longer detected.

**No**.....The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the *LogicsManager* output "External acknowledgement" (via a discrete input or via an interface).

EN	Delayed by engine speed			
DE	Verzögert durch Motordrehzahl			
CL2	{0}	{1o}	{1oc}	{2oc}
2253	✓	✓	✓	✓
2259				

**Gen. reverse/reduced power: Engine delayed monitoring (Level 1/Level 2)****Yes / No**

**Yes**.....Monitoring for fault conditions is not performed until engine delayed monitoring is enabled. The engine monitoring delay time (parameter 3315 on page 175) must expire prior to fault monitoring being enabled for parameters assigned this delay.

**No**.....Monitoring for this fault condition is continuously enabled regardless of engine speed.

## Configure Monitoring: Generator, Overload IOP (Levels 1 & 2) ANSI# 32

(IOP = Isolated Operation in Parallel)

The power produced by the generator is calculated from the voltage and current values measured in accordance with how parameters "Generator voltage measuring" (parameter 1851 on page 31) and "Generator current measuring" (parameter 1850 on page 31) are configured. The controller monitors if the system is in a mains parallel or an isolated operation. When the controller detects that the system is operating isolated from the mains, the Generator Overload MOP (refer to page 53) monitoring is disabled. If the measured generator real power during an isolated operation is above the configured limit an alarm will be issued.

If this protective function is triggered, the display indicates "Gen. Overload IOP 1" or "Gen. Overload IOP 2".

Refer to Appendix E: Triggering Characteristics, Figure 3-36 on page 305 for the triggering characteristic of this monitoring function.

### Parameter table

The parameter limits represented in this table have identical permissible ranges. Each parameter may be configured with different settings to create unique trip characteristics for specific thresholds.

Level	Text	Setting range	Default value
<b>Overload</b> (the hysteresis is 1 % of the rated value)			
<b>Level 1</b>	Monitoring	On / Off	On
	Limit	50.0 to 300.0 %	110.0 %
	Delay	0.02 to 99.99 s	11.00 s
	Alarm class	A/B/C/D/E/F	B
	Self acknowledgment	Yes / No	No
<b>Level 2</b>	Monitoring	On / Off	On
	Limit	50.0 to 300.0 %	120.0 %
	Delay	0.02 to 99.99 s	0.10 s
	Alarm class	A/B/C/D/E/F	E
	Self acknowledgment	Yes / No	No

Table 3-7: Monitoring - standard values - generator overload IOP

EN	Monitoring
DE	Überwachung
<b>CL2</b>	{0} {10} {100} {200}
2300	✓
2306	✓

### Gen. overload IOP: Monitoring (Level 1/Level 2)

On / Off

**On** ..... Overload monitoring is carried out according to the following parameters. Monitoring is performed at two levels. Both values may be configured independent from each other (prerequisite: Level 1 limit < Level 2 limit).

**Off** ..... Monitoring is disabled for Level 1 limit and/or Level 2 limit.

EN	Limit
DE	Grenzwert
<b>CL2</b>	{0} {10} {100} {200}
2304	✓
2310	✓

### Gen. overload IOP: Threshold value (Level 1/Level 2)

50.0 to 300.00 %

① This value refers to the Generator rated active power (parameter 1752 on page 29).

The percentage values that are to be monitored for each threshold limit are defined here. If this value is reached or exceeded for at least the delay time without interruption, the action specified by the alarm class is initiated.

EN	Delay
DE	Verzögerung
<b>CL2</b>	{0} {10} {100} {200}
2305	✓
2311	✓

### Gen. overload IOP: Delayed (Level 1/Level 2)

0.02 to 99.99 s

If the monitored generator load exceeds the threshold value for the delay time configured here, an alarm will be issued. If the monitored generator load falls below the threshold (minus the hysteresis) before the delay expires the time will be reset.

EN	Alarm class
DE	Alarmklasse
<b>CL2</b>	{0} {10} {100} {200}
2301	✓
2307	✓

### Gen. overload IOP: Alarm class (Level 1/Level 2)

Class A/B/C/D/E/F

① See chapter "Alarm" on page 250.

Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.-

DE EN	Self acknowledge Selbstquittierend				Gen. overload IOP: Self acknowledgment (Level 1/Level 2)	Yes / No
	{0}	{1o}	{1oc}	{2oc}		
CL2 2302 2308	✓	✓	✓	✓	<b>Yes</b> ..... The control automatically clears the alarm if the fault condition is no longer detected.	
					<b>No</b> ..... The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the <i>LogicsManager</i> output "External acknowledgement" (via a discrete input or via an interface).	

## Configure Monitoring: Generator, Overload MOP (Levels 1 & 2) ANSI# 32

(MOP = Mains Parallel Operation)

The power produced by the generator is calculated from the voltage and current values measured in accordance with how parameters "Generator voltage measuring" (parameter 1851 on page 31) and "Generator current measuring" (parameter 1850 on page 31) are configured. The controller monitors if the system is in a mains parallel or an isolated operation. When the controller detects that the system is operating parallel with the mains, the Generator Overload IOP (refer to page 51) monitoring is disabled. If the measured generator real power during a mains parallel operation is above the configured limit an alarm will be issued.

If this protective function is triggered, the display indicates "Gen. Overload MOP 1" or "Gen. Overload MOP 2".

Refer to Appendix E: Triggering Characteristics, Figure 3-36 on page 305 for the triggering characteristic of this monitoring function.

### Parameter table

The parameter limits represented in this table have identical permissible ranges. Each parameter may be configured with different settings to create unique trip characteristics for specific thresholds.

Level	Text	Setting range	Default value
<b>Overload</b> (the hysteresis is 1 % of the rated value)			
<b>Level 1</b>	Monitoring	On / Off	On
	Limit	50.0 to 300.0 %	110.0 %
	Delay	0.02 to 99.99 s	11.00 s
	Alarm class	A/B/C/D/E/F	B
	Self acknowledgment	Yes / No	No
<b>Level 2</b>	Monitoring	On / Off	On
	Limit	50.0 to 300.0 %	120.0 %
	Delay	0.02 to 99.99 s	0.10 s
	Alarm class	A/B/C/D/E/F	E
	Self acknowledgment	Yes / No	No

Table 3-8: Monitoring - standard values - generator overload MOP

EN	Monitoring
DE	Überwachung
<b>CL2</b>	{0} {10} {100} {200}
2350	✓
2356	✓

### Gen. overload MOP: Monitoring (Level 1/Level 2)

On / Off

**On** ..... Overload monitoring is carried out according to the following parameters. Monitoring is performed at two levels. Both values may be configured independent from each other (prerequisite: Level 1 limit < Level 2 limit).

**Off** ..... Monitoring is disabled for Level 1 limit and/or Level 2 limit.

EN	Limit
DE	Grenzwert
<b>CL2</b>	{0} {10} {100} {200}
2354	✓
2360	✓

### Gen. overload MOP: Threshold value (Level 1/Level 2)

50.0 to 300.00 %

① This value refers to the Generator rated active power (parameter 1752 on page 29).

The percentage values that are to be monitored for each threshold limit are defined here. If this value is reached or exceeded for at least the delay time without interruption, the action specified by the alarm class is initiated.

EN	Delay
DE	Verzögerung
<b>CL2</b>	{0} {10} {100} {200}
2355	✓
2361	✓

### Gen. overload MOP: Delay (Level 1/Level 2)

0.02 to 99.99 s

If the monitored generator load exceeds the threshold value for the delay time configured here, an alarm will be issued. If the monitored generator load falls below the threshold (minus the hysteresis) before the delay expires the time will be reset.

EN	Alarm class
DE	Alarmklasse
<b>CL2</b>	{0} {10} {100} {200}
2351	✓
2357	✓

### Gen. overload MOP: Alarm class (Level 1/Level 2)

Class A/B/C/D/E/F

① See chapter "Alarm" on page 250.

Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.

DE EN	Self acknowledge			
	Selbstquittierend			
CL2	{0}	{1o}	{1oc}	{2oc}
2352	✓	✓	✓	✓
2358				

Gen. overload MOP: Self acknowledgment (Level 1/Level 2)		Yes / No
Yes .....	The control automatically clears the alarm if the fault condition is no longer detected.	
No .....	The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the <i>LogicsManager</i> output "External acknowledgement" (via a discrete input or via an interface).	

### Configure Monitoring: Generator, Unbalanced Load (Levels 1 & 2) ANSI# 46

Unbalanced load is monitored according to how the parameters "Generator voltage measuring" (parameter 1851 on page 31) and "Generator current measuring" (parameter 1850 on page 31) are configured. The unbalanced load alarm monitors the individual phase currents of the generator. The percentage threshold value is the permissible variation of one phase from the average measured current of all three phases.

If this protective function is triggered, the display indicates "**Unbalanced load 1**" or "**Unbalanced load 2**".

Refer to Appendix E: Triggering Characteristics, Figure 3-39 on page 308 for the triggering characteristic of this monitoring function.

#### Parameter table

The parameter limits represented in this table have identical permissible ranges. Each parameter may be configured with different settings to create unique trip characteristics for specific thresholds.

Level	Text	Setting range	Default value
<b>Unbalanced load</b> (the hysteresis is 1 % of the rated value)			
Level 1	Monitoring	On / Off	On
	Limit	0.0 to 100.0 %	10.0 %
	Delay	0.02 to 99.99 s	10.00 s
	Alarm class	A/B/C/D/E/F	B
	Self acknowledgment	Yes / No	No
	Delayed by engine speed	Yes / No	No
Level 2	Monitoring	On / Off	On
	Limit	0.0 to 100.0 %	15.0 %
	Delay	0.02 to 99.99 s	1.00 s
	Alarm class	A/B/C/D/E/F	E
	Self acknowledgment	Yes / No	No
	Delayed by engine speed	Yes / No	No

Table 3-9: Monitoring - standard values - generator unbalanced load



#### NOTE

This monitoring function is only enabled when Generator voltage measuring (parameter 1851) is configured to "3Ph 4W" or "3Ph 3W" and Generator current measuring (parameter 1850) is configured to "L1 L2 L3".

**Formulas for calculation**

	Phase L1	Phase L2	Phase L3
<b>Exceeding</b>	$I_{L1} \geq \frac{3 \times I_N \times P_A + I_{L2} + I_{L3}}{2}$	$I_{L2} \geq \frac{3 \times I_N \times P_A + I_{L1} + I_{L3}}{2}$	$I_{L3} \geq \frac{3 \times I_N \times P_A + I_{L1} + I_{L2}}{2}$
<b>Falling below</b>	$I_{L1} \leq \frac{I_{L2} + I_{L3} - 3 \times I_N \times P_A}{2}$	$I_{L2} \leq \frac{I_{L1} + I_{L3} - 3 \times I_N \times P_A}{2}$	$I_{L3} \leq \frac{I_{L1} + I_{L2} - 3 \times I_N \times P_A}{2}$

**Example 1 - exceeding a limit value**

Current in phase L1 = current in phase L3

Current in phase L2 has been **exceeded** $P_A$  .....tripping value percentage (example 10 %) $I_N$  .....rated current (example 300 A)

Tripping value for phase L2:

$$I_{L2} \geq \frac{3 \times I_N \times P_A + I_{L1} + I_{L3}}{2} = \frac{3 \times 300A \times 10\% + 300A + 300A}{2} = \frac{\frac{3 \times 300A \times 10}{100} + 300A + 300A}{2} = 345A$$

**Example 2 – falling below a limit value**

Current in phase L2 = current in phase L3

Current in phase L1 has been **undershot** $P_A$  .....tripping value percentage (example 10 %) $I_N$  .....rated current (example 300 A)

Tripping value for phase L1:

$$I_{L1} \leq \frac{I_{L2} + I_{L3} - 3 \times I_N \times P_A}{2} = \frac{300A + 300A - 3 \times 300A \times 10\%}{2} = \frac{300A + 300A - \frac{3 \times 300A \times 10}{100}}{2} = 255A$$



## Parameters

EN	Monitoring				
DE	Überwachung				
CL2	{0}	{1o}	{1oc}	{2oc}	
2400	✓	✓	✓	✓	
2406					

## Gen. unbalanced load: Monitoring (Level 1/Level 2)

On / Off

**On** ..... Unbalanced load monitoring is carried out according to the following parameters. Monitoring is performed at two levels. Both values may be configured independent from each other (condition: Level 1 < Level 2).

**Off**..... No monitoring is carried out for either Level 1 limit or Level 2 limit.

EN	Limit				
DE	Grenzwert				
CL2	{0}	{1o}	{1oc}	{2oc}	
2404	✓	✓	✓	✓	
2410					

## Gen. unbalanced load: Threshold value (Level 1/Level 2)

0.0 to 100.0 %

❗ This value refers to the Generator rated current (parameter 1754 on page 29).

The percentage value that is to be monitored is defined here. If the current in one phase differs from the average value of all three phases by more than this value for at least the delay time without interruption, the action specified by the alarm class is initiated.

EN	Delay				
DE	Verzögerung				
CL2	{0}	{1o}	{1oc}	{2oc}	
2405	✓	✓	✓	✓	
2411					

## Gen. unbalanced load: Delay (Level 1/Level 2)

0.02 to 99.99 s

If the monitored current exceeds the average value of all three phases by more than the threshold value for the delay time configured here, an alarm will be issued. If the monitored current falls below the threshold (minus the hysteresis) before the delay expires the time will be reset.

EN	Alarm class				
DE	Alarmklasse				
CL2	{0}	{1o}	{1oc}	{2oc}	
2401	✓	✓	✓	✓	
2407					

## Gen. unbalanced load: Alarm class (Level 1/Level 2)

Class A/B/C/D/E/F

❗ See chapter "Alarm" on page 250.

Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.

EN	Self acknowledge				
DE	Selbstquittierend				
CL2	{0}	{1o}	{1oc}	{2oc}	
2402	✓	✓	✓	✓	
2408					

## Gen. unbalanced load: Self acknowledgment (Level 1/Level 2)

Yes / No

**Yes** ..... The control automatically clears the alarm if the fault condition is no longer detected.

**No**..... The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the *LogicsManager* output "External acknowledgement" (via a discrete input or via an interface).

EN	Delayed by engine speed				
DE	Verzögert durch Motordrehzahl				
CL2	{0}	{1o}	{1oc}	{2oc}	
2403	✓	✓	✓	✓	
2409					

## Gen. unbalanced load: Engine delayed monitoring (Level 1/Level 2)

Yes / No

**Yes** ..... Monitoring for fault conditions is not performed until engine delayed monitoring is enabled. The engine monitoring delay time (parameter 3315 on page 175) must expire prior to fault monitoring being enabled for parameters assigned this delay.

**No**..... Monitoring for this fault condition is continuously enabled regardless of engine speed.

## Configure Monitoring: Generator, Voltage Asymmetry

The voltage asymmetry alarm monitors the individual three-phase voltages of the generator. Voltage asymmetry monitoring is always performed phase-phase (delta). The percentage threshold value is the permissible variation from the average measured voltage of all three phases. If a measured voltage exceeds a configured permissible asymmetrical voltage deviation from the average voltage value, an alarm is issued.

If this protective function is triggered, the display indicates "**Gen. volt. asymmetry**".

Refer to Appendix E: Triggering Characteristics, Figure 3-40 on page 309 for the triggering characteristic of this monitoring function.

Parameter table

Level	Text	Setting range	Default value
<b>Generator voltage asymmetry</b> (the hysteresis is 0.7 % of the rated value).			
	Monitoring	On / Off	On
	Limit	0.5 to 15.0 %	10.0 %
	Delay	0.02 to 99.99 s	5.00 s
	Alarm class	A/B/C/D/E/F	F
	Self acknowledgment	Yes / No	No
	Delayed by engine speed	Yes / No	Yes

Table 3-10: Monitoring - standard values - generator voltage asymmetry



### NOTE

This monitoring function is only enabled if Generator voltage measuring (parameter 1851) is configured to "3Ph 4W" or "3Ph 3W".

EN	Monitoring				
DE	Überwachung				
CL2	{0}	{1o}	{1oc}	{2oc}	
3900	✓	✓	✓	✓	

Gen. voltage asymmetry: Monitoring

On / Off

**On** ..... Voltage asymmetry monitoring is carried out according to the following parameters.

**Off** ..... No monitoring is carried out.

EN	Limit				
DE	Grenzwert				
CL2	{0}	{1o}	{1oc}	{2oc}	
3903	✓	✓	✓	✓	

Gen. voltage asymmetry: Threshold value

0.5 to 15.0 %

| ⓘ This value refers to Generator rated voltage (parameter 1766 on page 28). |

The percentage value that is to be monitored is defined here. If the voltage in one phase differs from the average value of all three phases by more than this value for at least the delay time without interruption, the action specified by the alarm class is initiated.

EN	Delay				
DE	Verzögerung				
CL2	{0}	{1o}	{1oc}	{2oc}	
3904	✓	✓	✓	✓	

Gen. voltage asymmetry: Delay

0.02 to 99.99 s

If the monitored generator voltage asymmetry exceeds the threshold value for the delay time configured here, an alarm will be issued. If the monitored generator voltage asymmetry falls below the threshold (minus the hysteresis) before the delay expires the time will be reset.

EN	Alarm class				
DE	Alarmlasse				
CL2	{0}	{1o}	{1oc}	{2oc}	
3901	✓	✓	✓	✓	

Gen. voltage asymmetry: Alarm class

Class A/B/C/D/E/F

| ⓘ See chapter "Alarm" on page 250. |

Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.

EN	Self acknowledge				
DE	Selbstquittierend				
CL2	{0}	{1o}	{1oc}	{2oc}	
3902	✓	✓	✓	✓	

Gen. voltage asymmetry: Self acknowledgment	Yes / No
<b>Yes</b> .....	The control automatically clears the alarm if the fault condition is no longer detected.
<b>No</b> .....	The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the <i>LogicsManager</i> output "External acknowledgement" (via a discrete input or via an interface).

EN	Delayed by engine speed				
DE	Verzögert durch Motordrehzahl				
CL2	{0}	{1o}	{1oc}	{2oc}	
3905	✓	✓	✓	✓	

Gen. voltage asymmetry: Engine delayed monitoring	Yes / No
<b>Yes</b> .....	Monitoring for fault conditions is not performed until engine delayed monitoring is enabled. The engine monitoring delay time (parameter 3315 on page 175) must expire prior to fault monitoring being enabled for parameters assigned this delay.
<b>No</b> .....	Monitoring for this fault condition is continuously enabled regardless of engine speed.

## Configure Monitoring: Generator, Ground Fault (Levels 1 & 2)

### Mains Current Input is Configured for Mains Current (Calculated Ground Fault)

(Refer to parameter 1854 on page 32)

The current produced by the generator is monitored depending on how parameter "Generator current measuring" (parameter 1850 on page 31) is configured. The measured three conductor currents  $I_{\text{Gen-L1}}$ ,  $I_{\text{Gen-L2}}$  and  $I_{\text{Gen-L3}}$  are vectorially totaled ( $I_S = I_{\text{Gen-L1}} + I_{\text{Gen-L2}} + I_{\text{Gen-L3}}$ ) and compared with the configured fault limit (the calculated actual value is indicated in the display). If the measured value exceeds the fault threshold limit, a ground fault is present, and an alarm is issued.

If this protective function is triggered, the display indicates "Ground fault 1" or "Ground fault 2".



### NOTE

The ground fault protection zone is determined by the location where the generator current transformer are physically installed.

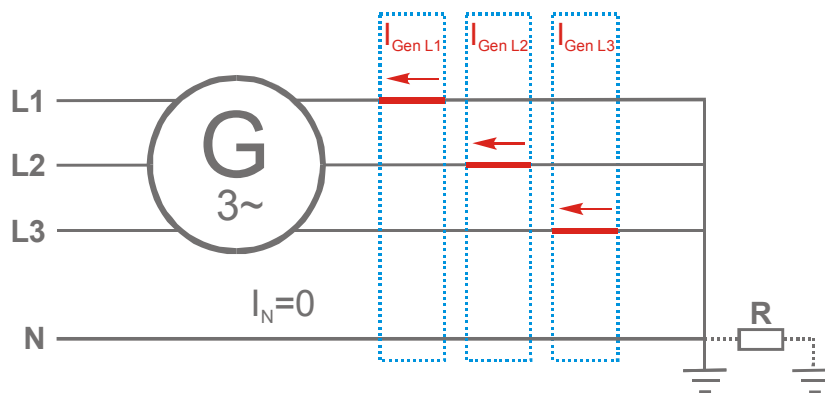


Figure 3-2: Monitoring - calculated generator ground fault

**Test:** Short-circuit one of the three generator current transformers while the generator is at full load. The measured current should read 100% of rated on the two phases that do not have their current transformers short-circuited.

The ground current calculation does not take current on the neutral conductor into consideration. In order for the controller to be able to perform calculated ground fault current protection accurately, the neutral conductor must not conduct current.

The fault threshold value is configured as a percentage. This percentage threshold refers to the generator rated current (parameter 1754). Due to unavoidable load asymmetries, the minimum value for this parameter should be 10% or greater.

## A.....1

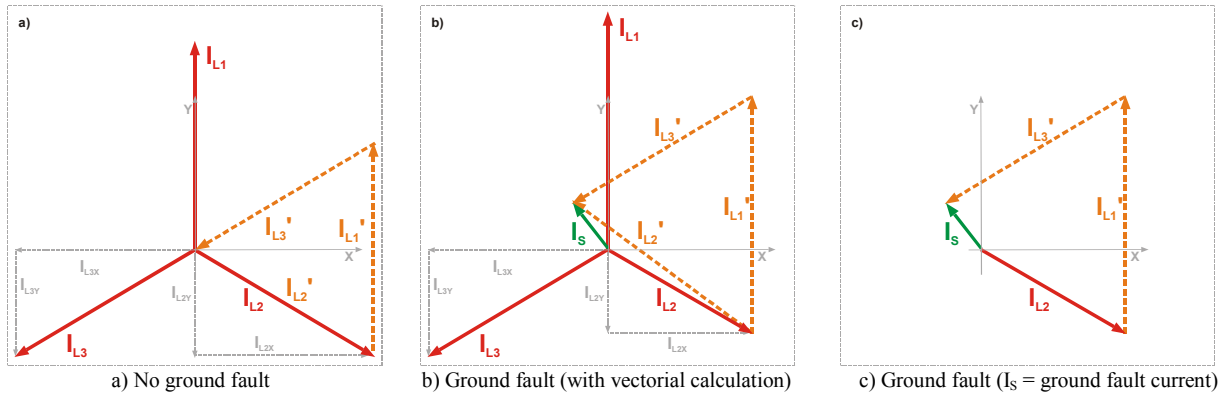
Calculation

Figure 3-3: Monitoring - calculated generator ground current - vector diagram

The **ground current**  $I_s$  is calculated geometrically/vectorially. The pointers for **phase currents**  $I_{L1}$  and  $I_{L2}$  are parallel shifted and lined up as shown in Figure 3-3 a). The pointer between the neutral point and the point of the shifted **pointer**  $I_{L2}'$  results is the **sum current**  $I_s$  as shown in Figure 3-3 b). In order to be able to add the pointers vectorially, these must be divided into their X- and Y-coordinates ( $I_{L2X}$ ,  $I_{L2Y}$ ,  $I_{L3X}$  and  $I_{L3Y}$ ). The ground fault current may be calculated using the following formula:

$$(I_{L1rated} + I_{L2rated} + I_{L3rated}) - (I_{L1measured} + I_{L2measured} + I_{L3measured}) / 1.73 = I_s$$

$$(7A + 7A + 7A) - (7A + 6.5A + 6A) / 1.73 = 0.866A$$

## A.....2

Results of a calculation example:

Phase current  $I_{L1} = I_{Rated} = 7 \text{ A}$

Phase current  $I_{L2} = 6.5 \text{ A}$

Phase current  $I_{L3} = 6 \text{ A}$

Sum current (ground fault current)  $I_s = 0.866A$ .

**Mains Current Input is Configured for Ground Current (Measured Ground Fault)**

(Refer to parameter 1854 on page 32)

Ground fault current is actively measured when the mains current input is configured to monitor for ground current. The ground fault threshold is configured as a percentage of the value entered for parameter "Ground current transformer" (parameters 1810 or 1811 on page 37).

**NOTE**

The ground fault protection zone is determined by the where the generator current transformer are physically installed.

**Parameter table**

The parameter limits represented in this table have identical permissible ranges. Each parameter may be configured with different settings to create unique trip characteristics for specific thresholds.

Level	Text	Setting range	Default value
<b>Generator ground fault</b> (the hysteresis is 0.7 % of the rated value)			
Level 1	Monitoring	On / Off	Off
	Limit	0 to 300 %	10 %
	Delay	0.02 to 99.99 s	0.20 s
	Alarm class	A/B/C/D/E/F	B
	Self acknowledgment	Yes / No	No
	Delayed by engine speed	Yes / No	No
Level 2	Monitoring	On / Off	Off
	Limit	0 to 300 %	30 %
	Delay	0.02 to 99.99 s	0.10 s
	Alarm class	A/B/C/D/E/F	F
	Self acknowledgment	Yes / No	No
	Delayed by engine speed	Yes / No	No

Table 3-11: Monitoring - standard values - generator ground fault

## Parameter

		Gen. ground fault: Monitoring (Level 1/Level 2)					On / Off	
		<b>On</b> .....Ground current monitoring is carried out according to the following parameters. Monitoring is performed at two levels. Both values may be configured independent from each other (prerequisite: Level 1 < Level 2).						
		<b>Off</b> .....Monitoring is disabled for Level 1 limit and/or Level 2 limit.						
		Gen. ground fault: Threshold value (Level 1/Level 2)					0 to 300 %	
		<b>①</b> This value refers to the Generator rated current of the generator (parameter 1754 on page 29), if the ground current is calculated from the generator current values. It refers to the parameter "Ground current transformer" (parameters 1810 or 1811 on page 37), if the ground current is measured directly.						
		The percentage values that are to be monitored for each threshold limit are defined here. If this value is reached or exceeded for at least the delay time without interruption, the action specified by the alarm class is initiated.						
		Gen. ground fault: Delay (Level 1/Level 2)					0.02 to 99.99 s	
		If the monitored ground fault exceeds the threshold value for the delay time configured here, an alarm will be issued. If the monitored ground fault falls below the threshold (minus the hysteresis) before the delay expires the time will be reset.						
		Gen. ground fault: Alarm class (Level 1/Level 2)					Class A/B/C/D/E/F	
		<b>①</b> See chapter "Alarm" on page 250.						
		Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.						
		Gen. ground fault: Self acknowledgment (Level 1/Level 2)					Yes / No	
		<b>Yes</b> .....The control automatically clears the alarm if the fault condition is no longer detected.						
		<b>No</b> .....The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the <i>LogicsManager</i> output "External acknowledgement" (via a discrete input or via an interface).						
		Gen. ground fault: Engine delayed monitoring (Level 1/Level 2)					Yes / No	
		<b>Yes</b> .....Monitoring for fault conditions is not performed until engine delayed monitoring is enabled. The engine monitoring delay time (parameter 3315 on page 175) must expire prior to fault monitoring being enabled for parameters assigned this delay.						
		<b>No</b> .....Monitoring for this fault condition is continuously enabled regardless of engine speed.						

## Configure Monitoring: Generator, Phase Rotation



### CAUTION

Ensure that the control unit is properly connected to phase voltages on both sides of the circuit breaker(s) during installation. Failure to do so may result in damage to the control unit and/or generation equipment due to the breaker closing asynchronously or with mismatched phase rotations. Also ensure that phase rotation monitoring is enabled at all connected components (engine, generator, breakers, cable, busbars, etc.).

This function will block a connection of systems with mismatched phases only under the following conditions:

- The voltages being measured are wired correctly with respect to the phase rotation at the measuring points (i.e. the potential transformers in on both sides of the circuit breaker)
- The voltages being measured are wired so that angular phase shifts or any interruptions from the measuring point to the control unit do not exist
- The voltages being measured are wired to the correct terminals of the control unit (i.e. L1 phase of the generator is connected with the terminal of the control unit which is intended for the generator L1 phase)
- The configured alarm class is of class C, D, E, or F (stopping alarm).

Correct phase rotation of the phase voltages ensures that damage will not occur during a breaker closure to either the mains or the generator. The voltage phase rotation alarm checks the phase rotation of the measured voltages and the configured phase rotation to ensure they are identical. The directions of rotation are differentiated as "clockwise" and "counter clockwise". With a clockwise field the direction of rotation is "L1-L2-L3"; with a counter clockwise field the direction of rotation is "L1-L3-L2". If the control is configured for a clockwise rotation and the measured voltages are monitored as counterclockwise, the alarm will be initiated. The direction of configured rotation being monitored by the control unit is displayed on the screen.

If this protective function is triggered, the display indicates "**Gen.ph.rot. mismatch**".

Parameter table

Level	Text	Setting range	Default value
<b>Generator voltage phase direction fault</b> (the hysteresis is 0.7 % of the rated value)			
	Monitoring	On / Off	On
	Generator phase rotation	CW / CCW	CW
	Alarm class	A/B/C/D/E/F	F
	Self acknowledgment	Yes / No	No
	Delayed by engine speed	Yes / No	Yes

Table 3-12: Monitoring - standard values - generator voltage phase rotation



### NOTE

This monitoring function is only enabled if Generator voltage measuring (parameter 1851) is configured to "3Ph 4W" or "3Ph 3W".

EN	Monitoring			
DE	Überwachung			
CL2	{0}	{1o}	{1oc}	{2oc}
3950	✓	✓	✓	✓

**Gen.voltage phase rotation: Monitoring****On / Off**

**On**.....Phase rotation monitoring is carried out according to the following parameters.

**Off**.....No monitoring is carried out.

EN	Generator phase rotation			
DE	Generatordrehfeld			
CL2	{0}	{1o}	{1oc}	{2oc}
3954	✓	✓	✓	✓

**Gen.voltage phase rotation: Direction****CW / CCW**

**CW** .....The three-phase measured generator voltage is rotating CW (clock-wise; that means the voltage rotates in L1-L2-L3 direction; standard setting).

**CCW** .....The three-phase measured generator voltage is rotating CCW (counter clock-wise; that means the voltage rotates in L1-L3-L2 direction).

EN	Alarm class			
DE	Alarmklasse			
CL2	{0}	{1o}	{1oc}	{2oc}
3951	✓	✓	✓	✓

**Gen.voltage phase rotation: Alarm class****Class A/B/C/D/E/F**

| ⓘ See chapter "Alarm" on page 250. |

Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.

EN	Self acknowledge			
DE	Selbstquittierend			
CL2	{0}	{1o}	{1oc}	{2oc}
3952	✓	✓	✓	✓

**Gen.voltage phase rotation: Self acknowledgment (Level 1/Level 2)****Yes / No**

**Yes**.....The control automatically clears the alarm if the fault condition is no longer detected.

**No** .....The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the *LogicsManager* output "External acknowledgement" (via a discrete input or via an interface).

EN	Delayed by engine speed			
DE	Verzögert durch Motordrehzahl			
CL2	{0}	{1o}	{1oc}	{2oc}
3953	✓	✓	✓	✓

**Gen.voltage phase rotation: Engine delayed monitoring****Yes / No**

**Yes**.....Monitoring for fault conditions is not performed until engine delayed monitoring is enabled. The engine monitoring delay time (parameter 3315 on page 175) must expire prior to fault monitoring being enabled for parameters assigned this delay.

**No** .....Monitoring for this fault condition is continuously enabled regardless of engine speed.



### Configure Monitoring: Generator, Inverse Time-Overcurrent Monitoring ANSI# IEC 255

The current produced by the generator is monitored depending on how parameter "Generator current measuring" (parameter 1850 on page 31) is configured. If an overcurrent condition is detected, the fault recognition time is determined by the configured tripping characteristic curve and the measured current. The tripping time is faster as the measured current increases in magnitude according to a defined curve. According to IEC 255 three different characteristics are available.

If this protective function is triggered, the display indicates "**Inv. time overcurr.**".

"Normal inverse" characteristic: 
$$t = \frac{0.14}{(I/I_p)^{0.02} - 1} * t_p [s]$$

"Highly inverse" characteristic: 
$$t = \frac{13.5}{(I/I_p) - 1} * t_p [s]$$

"Extremely inverse" characteristic: 
$$t = \frac{80}{(I/I_p)^2 - 1} * t_p [s]$$

Variable meanings:	t:	tripping time
	$t_p$	setting value time
	I	measured fault current
	$I_p$	setting value current

Please take into account during configuration:

for  $I_{start}$ :  $I_{start} > I_n$  and  $I_{start} > I_p$   
 for  $I_p$ : the smaller  $I_p$  is, the steeper is the slope of the tripping curve



#### NOTE

The maximum tripping time is 327 s. If a tripping time greater than 327 s is configured, no an overcurrent fault condition will not be recognized.

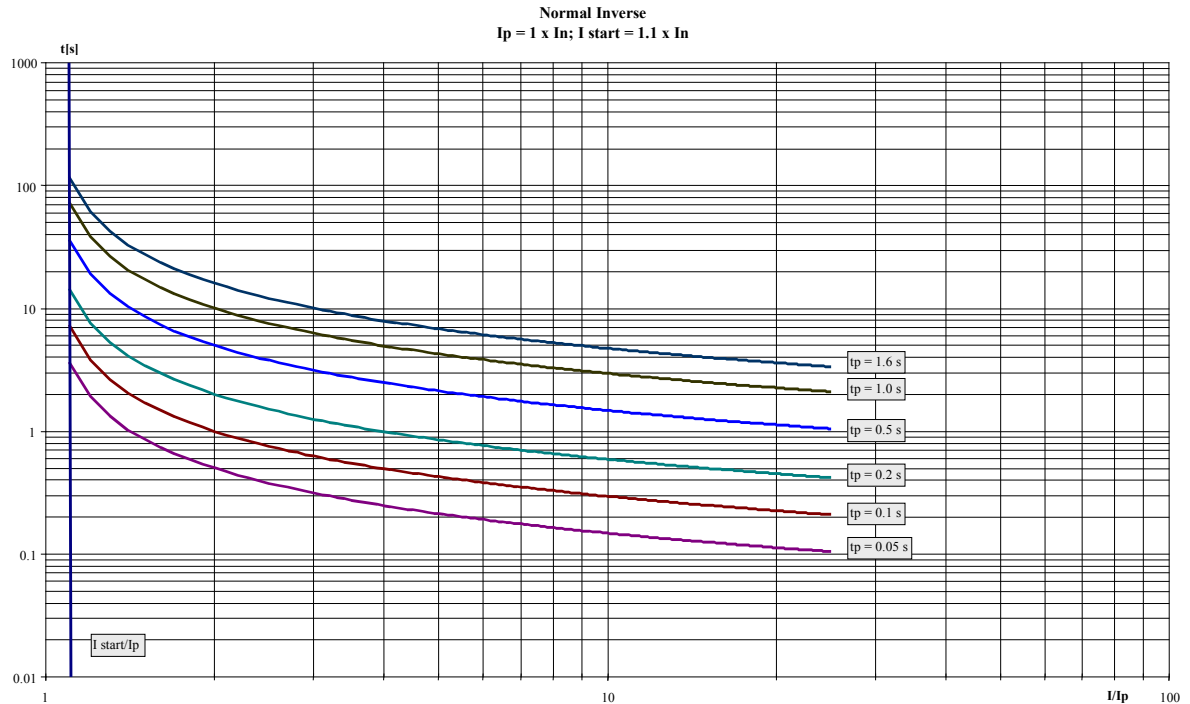


Figure 3-4: Monitoring - generator inverse time-overcurrent - "Normal inverse" characteristic

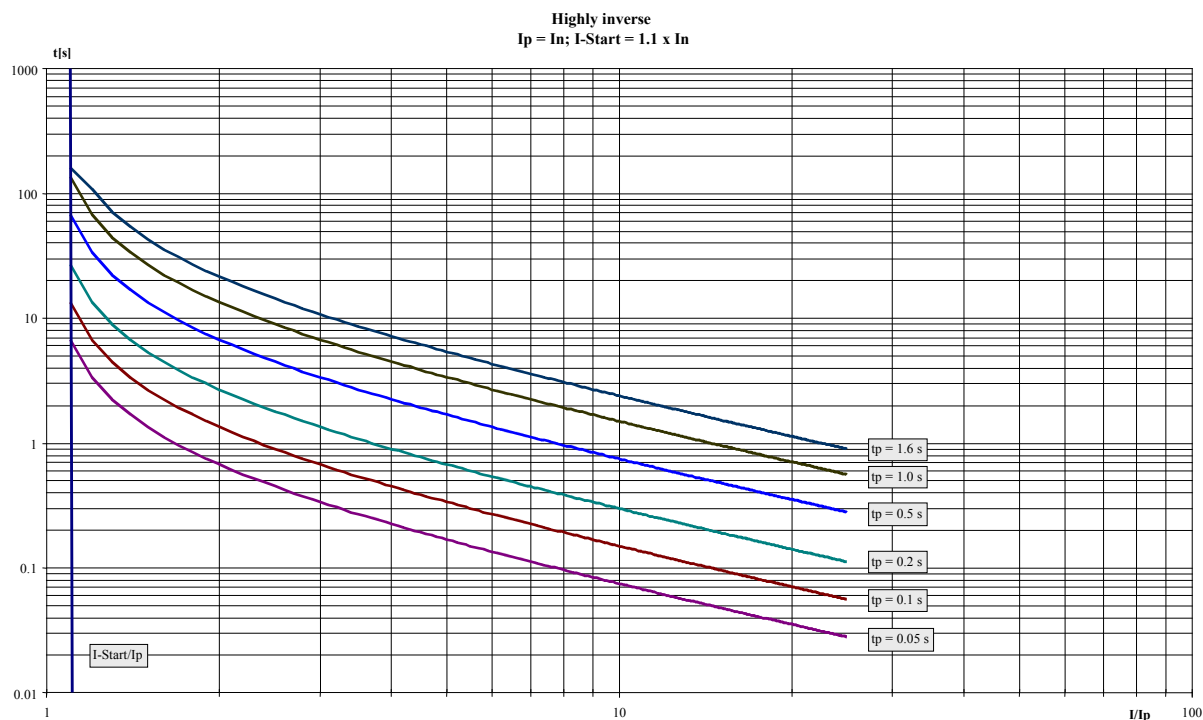


Figure 3-5: Monitoring - generator inverse time-overcurrent - "Highly inverse" characteristic

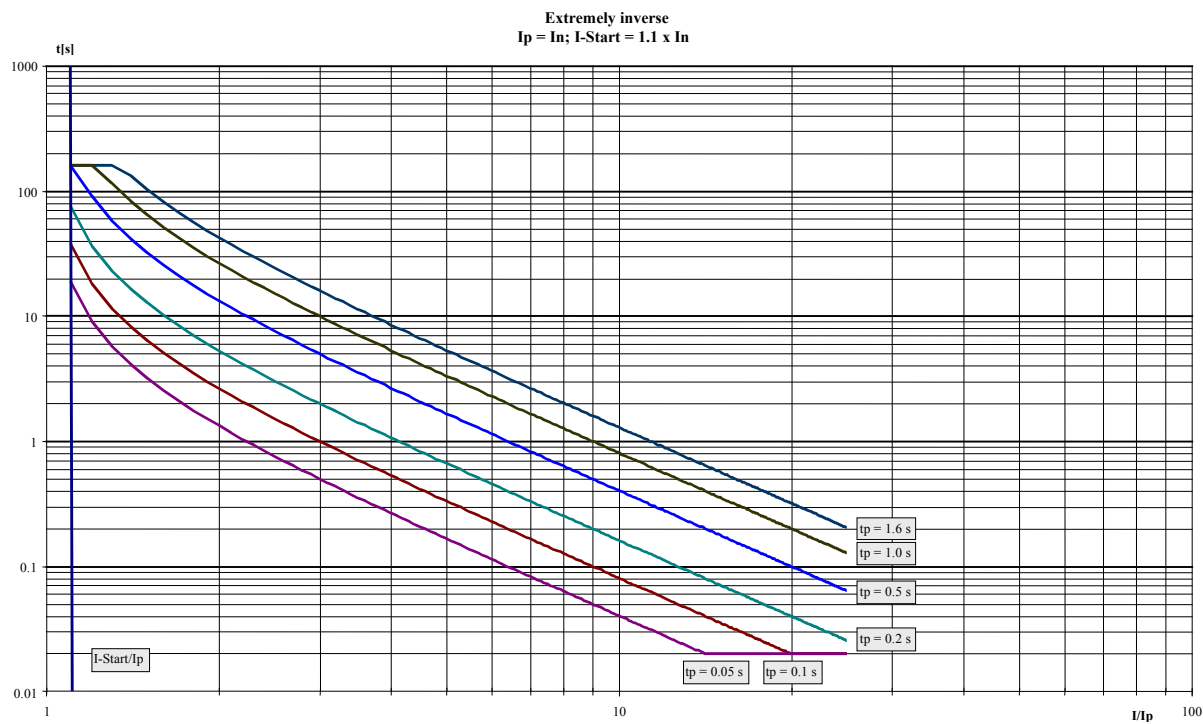


Figure 3-6: Monitoring - generator inverse time-overcurrent - "Extremely inverse" characteristic

## Parameter table

Level	Text	Setting range	Default value
<b>Inverse time-overcurrent</b> (the hysteresis is 1 % of the rated value)			
	Monitoring	On / Off	On
	Inverse time characteristic	Normal / High / Extreme	Normal
	Inverse time overcurrent Tp	0.01 to 1.99 s	0.06 s
	Inverse time overcurrent Ip	10.0 to 300.0 %	100.0 %
	Inv. time overcurrent I start	100.0 to 300.0 %	115.0 %
	Alarm class	A/B/C/D/E/F	F
	Self acknowledgment	Yes / No	No
	Delayed by engine speed	Yes / No	No

Table 3-13: Monitoring - standard values - generator inverse time-overcurrent

EN	Monitoring			
DE	Überwachung			
CL2	{0}	{1o}	{1oc}	{2oc}
4030	✓	✓	✓	✓

## Gen. overcurrent, inverse: Monitoring

On / Off

**On** ..... Overcurrent monitoring is carried out according to the following parameters.

**Off** ..... No monitoring is carried out.

EN	Inverse time characteristic			
DE	Überstrom Charakteristik			
CL2	{0}	{1o}	{1oc}	{2oc}
4034	✓	✓	✓	✓

## Gen. overcurrent, inverse: Tripping characteristic

Normal / High / Extreme

Selection of the used overcurrent characteristic.

**Normal** ..... The "normal inverse" tripping curve will be used

**High** ..... The "highly inverse" tripping curve will be used

**Extreme** ..... The "extremely inverse" tripping curve will be used.

EN	Inverse time overcurrent Tp=			
DE	Überstrom (AMZ) Tp=			
CL2	{0}	{1o}	{1oc}	{2oc}
4035	✓	✓	✓	✓

## Gen. overcurrent, inverse: Time constant Tp

0.01 to 1.99 s

Time constant Tp used to calculate the characteristics.

EN	Inverse time overcurr. Ip=			
DE	Überstrom (AMZ) Ip=			
CL2	{0}	{1o}	{1oc}	{2oc}
4036	✓	✓	✓	✓

## Gen. overcurrent, inverse: Current constant Ip

10.0 to 300.0 %

Current constant Ip used to calculate the characteristics.

EN	Inv time overcurr. I-start=			
DE	Überstrom (AMZ) I-Start=			
CL2	{0}	{1o}	{1oc}	{2oc}
4037	✓	✓	✓	✓

## Gen. overcurrent, inverse: I start

100.0 to 300.0 %

Lower tripping value for inverse time-overcurrent protection. If the monitored current is less than  $I_{start}$ , the inverse time-overcurrent protection does not trip. If  $I_{start}$  is less than  $I_p$ ,  $I_p$  is used as the lower tripping value.

DE	EN	Alarm class			
		Alarmklasse			
CL2		{0}	{1o}	{1oc}	{2oc}
4031		✓	✓	✓	✓

Gen. overcurrent, inverse: Alarm class	Class A/B/C/D/E/F
ⓘ See chapter "Alarm" on page 250.	

Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.

DE	EN	Self acknowledge			
		Selbstquittierend			
CL2		{0}	{1o}	{1oc}	{2oc}
4032		✓	✓	✓	✓

Gen. overcurrent, inverse: Self acknowledgment	Yes / No
<b>Yes</b> .....	The control automatically clears the alarm if the fault condition is no longer detected.
<b>No</b> .....	The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the <i>LogicsManager</i> output "External acknowledgement" (via a discrete input or via an interface).

DE	EN	Delayed by engine speed			
		Verzögert durch Motordrehzahl			
CL2		{0}	{1o}	{1oc}	{2oc}
4033		✓	✓	✓	✓

Gen. overcurrent, inverse: Engine delayed monitoring	Yes / No
<b>Yes</b> .....	Monitoring for fault conditions is not performed until engine delayed monitoring is enabled. The engine monitoring delay time (parameter 3315 on page 175) must expire prior to fault monitoring being enabled for parameters assigned this delay.
<b>No</b> .....	Monitoring for this fault condition is continuously enabled regardless of engine speed.

### Configure Monitoring: Generator, Lagging Power Factor Monitoring (Levels 1 & 2)

The power factor is monitored for becoming more lagging (i.e. inductive) than an adjustable limit. This limit may be a lagging or leading power factor limit. There are two lagging power factor alarm levels available in the control. This monitoring function may be used for monitoring an overexcitation with a warning and a shutdown alarm level. Both alarms are definite time alarms. Refer to the Application Manual 37226 for a detailed description of this monitoring function.

Figure 3-7 shows an example of a leading and a lagging power factor limit and the power factor range, for which the lagging power factor monitoring issues an alarm.

If this protective function is triggered, the display indicates "Gen. PF lagging 1" or "Gen. PF lagging 2".

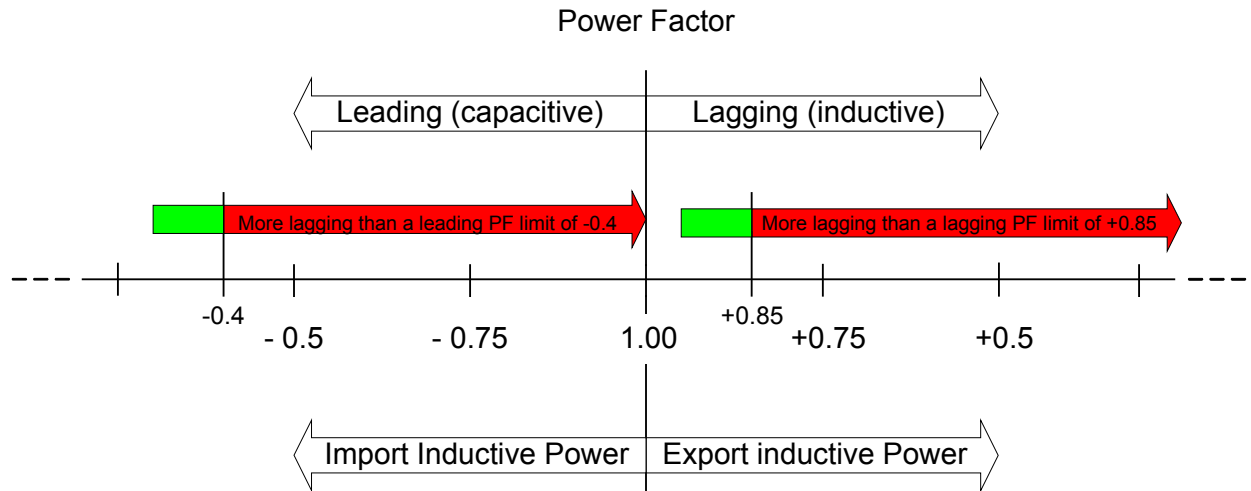


Figure 3-7: Monitoring - generator lagging power factor

#### Parameter table

The parameter limits represented in this table have identical permissible ranges. Each parameter may be configured with different settings to create unique trip characteristics for specific thresholds.

Level	Text	Setting range	Default value
<b>Generator lagging power factor</b>			
Level 1	Monitoring	On / Off	On
	Limit	-0.001 to +0.001	+0.900
	Delay	0.02 to 99.99 s	30.00 s
	Alarm class	A/B/C/D/E/F	B
	Self acknowledgment	Yes / No	No
	Delayed by engine speed	Yes / No	Yes
Level 2	Monitoring	On / Off	On
	Limit	-0.001 to +0.001	+0.700
	Delay	0.02 to 99.99 s	1.00 s
	Alarm class	A/B/C/D/E/F	E
	Self acknowledgment	Yes / No	No
	Delayed by engine speed	Yes / No	Yes

Table 3-14: Monitoring - standard values - generator lagging power factor

DE	EN	Monitoring			
		Überwachung			
CL2		{0}	{1o}	{1oc}	{2oc}
2325		✓	✓	✓	✓
2331					

**Gen. lagging power factor: Monitoring (Level 1/Level 2)****On / Off**

**On**.....Generator lagging power factor monitoring is carried out according to the following parameters. Monitoring is performed at two levels. Both values may be configured independent from each other.

**Off**.....Monitoring is disabled for Level 1 limit and/or Level 2 limit.

DE	EN	Limit			
		Grenzwert			
CL2		{0}	{1o}	{1oc}	{2oc}
2329		✓	✓	✓	✓
2335					

**Gen. lagging power factor: Threshold value (Level 1/Level 2)****-0.001 to +0.001**

The values that are to be monitored for each threshold limit are defined here. If the power factor becomes more lagging (i.e. inductive, refer to Figure 3-7) than a lagging PF value (positive) or a leading PF value (negative) for at least the delay time (parameters 2330 or 2336) without interruption, the action specified by the alarm class is initiated.

DE	EN	Delay			
		Verzögerung			
CL2		{0}	{1o}	{1oc}	{2oc}
2330		✓	✓	✓	✓
2336					

**Gen. lagging power factor: Delay (Level 1/Level 2)****0.02 to 99.99 s**

If the monitored generator power factor is more lagging than the configured limit for the delay time configured here, an alarm will be issued. If the monitored generator power factor returns within the limit before the delay expires the time will be reset.

DE	EN	Alarm class			
		Alarmklasse			
CL2		{0}	{1o}	{1oc}	{2oc}
2326		✓	✓	✓	✓
2332					

**Gen. lagging power factor: Alarm class (Level 1/Level 2)****Class A/B/C/D/E/F**

| ⓘ See chapter "Alarm" on page 250. |

Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.

DE	EN	Self acknowledge			
		Selbstquittierend			
CL2		{0}	{1o}	{1oc}	{2oc}
2327		✓	✓	✓	✓
2333					

**Gen. lagging power factor: Self acknowledgment (Level 1/Level 2)****Yes / No**

**Yes**.....The control automatically clears the alarm if the fault condition is no longer detected.

**No**.....The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the *LogicsManager* output "External acknowledgement" (via a discrete input or via an interface).

DE	EN	Delayed by engine speed			
		Verzögert durch Motordrehzahl			
CL2		{0}	{1o}	{1oc}	{2oc}
2328		✓	✓	✓	✓
2334					

**Gen. lagging power factor: Engine delayed monitoring (Level 1/Level 2)****Yes / No**

**Yes**.....Monitoring for fault conditions is not performed until engine delayed monitoring is enabled. The engine monitoring delay time (parameter 3315 on page 175) must expire prior to fault monitoring being enabled for parameters assigned this delay.

**No**.....Monitoring for this fault condition is continuously enabled regardless of engine speed.

### Configure Monitoring: Generator, Leading Power Factor Monitoring (Levels 1 & 2)

The power factor is monitored for becoming more leading (i.e. capacitive) than an adjustable limit. This limit may be a leading or lagging power factor limit. There are two leading power factor alarm levels available in the control. This monitoring function may be used for monitoring an underexcitation with a warning and a shutdown alarm level. Both alarms are definite time alarms. Refer to the Application Manual 37226 for a detailed description of this monitoring function.

Figure 3-8 shows an example of a leading and a lagging power factor limit and the power factor range, for which the leading power factor monitoring issues an alarm.

If this protective function is triggered, the display indicates "Gen. PF leading 1" or "Gen. PF leading 2".

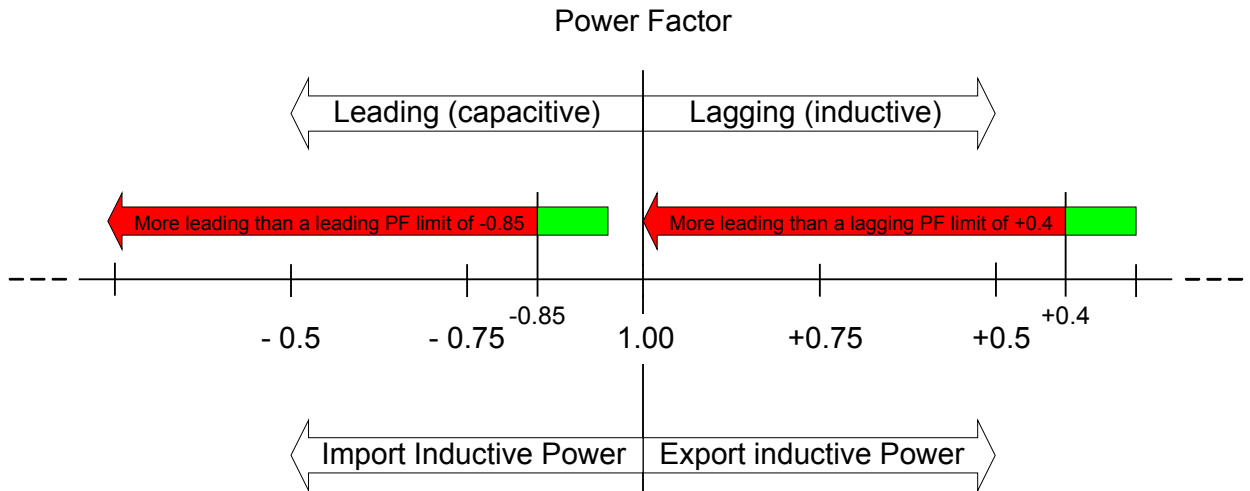


Figure 3-8: Monitoring - generator leading power factor

#### Parameter table

The parameter limits represented in this table have identical permissible ranges. Each parameter may be configured with different settings to create unique trip characteristics for specific thresholds.

Level	Text	Setting range	Default value
<b>Generator leading power factor</b>			
Level 1	Monitoring	On / Off	On
	Limit	-0.001 to +0.001	-0.900
	Delay	0.02 to 99.99 s	30.00 s
	Alarm class	A/B/C/D/E/F	B
	Self acknowledgment	Yes / No	No
	Delayed by engine speed	Yes / No	Yes
Level 2	Monitoring	On / Off	On
	Limit	-0.001 to +0.001	-0.700
	Delay	0.02 to 99.99 s	1.00 s
	Alarm class	A/B/C/D/E/F	E
	Self acknowledgment	Yes / No	No
	Delayed by engine speed	Yes / No	Yes

Table 3-15: Monitoring - standard values - generator leading power factor

EN	Monitoring
DE	Überwachung
CL2	{0} {1o} {1oc} {2oc}
2375	✓ ✓ ✓ ✓
2381	

**Gen. leading power factor: Monitoring (Level 1/Level 2)****On / Off**

**On** ..... Generator leading power factor monitoring is carried out according to the following parameters. Monitoring is performed at two levels. Both values may be configured independent from each other.

**Off** ..... Monitoring is disabled for Level 1 limit and/or Level 2 limit.

EN	Limit
DE	Grenzwert
CL2	{0} {1o} {1oc} {2oc}
2379	✓ ✓ ✓ ✓
2385	

**Gen. leading power factor: Threshold value (Level 1/Level 2)****-0.001 to +0.001**

The values that are to be monitored for each threshold limit are defined here. If the power factor becomes more leading (i.e. capacitive, refer to Figure 3-8) than a leading PF value (negative) or a lagging PF value (positive) for at least the delay time (parameters 2380 or 2386) without interruption, the action specified by the alarm class is initiated.

EN	Delay
DE	Verzögerung
CL2	{0} {1o} {1oc} {2oc}
2380	✓ ✓ ✓ ✓
2386	

**Gen. leading power factor: Delay (Level 1/Level 2)****0.02 to 99.99 s**

If the monitored generator power factor is more leading than the configured limit for the delay time configured here, an alarm will be issued. If the monitored generator power factor returns within the limit before the delay expires the time will be reset.

EN	Alarm class
DE	Alarmklasse
CL2	{0} {1o} {1oc} {2oc}
2376	✓ ✓ ✓ ✓
2382	

**Gen. leading power factor: Alarm class (Level 1/Level 2)****Class A/B/C/D/E/F**

| ⓘ See chapter "Alarm" on page 250. |

Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.

EN	Self acknowledge
DE	Selbstquittierend
CL2	{0} {1o} {1oc} {2oc}
2377	✓ ✓ ✓ ✓
2383	

**Gen. leading power factor: Self acknowledgment (Level 1/Level 2)****Yes / No**

**Yes** ..... The control automatically clears the alarm if the fault condition is no longer detected.

**No** ..... The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the *LogicsManager* output "External acknowledgement" (via a discrete input or via an interface).

EN	Delayed by engine speed
DE	Verzögert durch Motordrehzahl
CL2	{0} {1o} {1oc} {2oc}
2378	✓ ✓ ✓ ✓
2384	

**Gen. leading power factor: Delayed engine speed (Level 1/Level 2)****Yes / No**

**Yes** ..... Monitoring for fault conditions is not performed until engine delayed monitoring is enabled. The engine monitoring delay time (parameter 3315 on page 175) must expire prior to fault monitoring being enabled for parameters assigned this delay.

**No** ..... Monitoring for this fault condition is continuously enabled regardless of engine speed.



## Configure Monitoring: Mains

EN	Mains voltage monitoring				Mains protection: Type of monitoring	Phase - phase / Phase - neutral
DE	Netzspannungsüberwachung					
<b>CL2</b>	{0}	{1o}	{1oc}	{2oc}		
1771	✓	✓	✓	✓		

The unit can either monitor the wye voltages (phase-neutral) or the delta voltages (phase-phase). The monitoring of the wye voltage is above all necessary to avoid earth-faults in a compensated or isolated network resulting in the tripping of the voltage protection.

**! WARNING:**  
This parameter influences the protective functions.

**Phase - phase** The phase-phase voltage will be measured and all subsequent parameters concerning voltage monitoring "mains" are referred to this value ( $V_{L-L}$ ).

**Phase - neutral** The phase-neutral voltage will be measured and all subsequent parameters concerning voltage monitoring "mains" are referred to this value ( $V_{L-N}$ ).

EN	Mains settling time				Breaker: Mains failure: Mains settling time	0 to 9999 s
DE	Netzberuhigungszeit					
<b>CL2</b>	{0}	{1o}	{1oc}	{2oc}		
2801	✓	✓	✓	✓		

To end the emergency operation, the monitored mains must be within the configured operating parameters without interruption for the minimum period of time set with this parameter without interruption. This parameter permits delaying the switching of the load from the generator to the mains. The display indicates "**Mains settling**" during this time.

## Configure Monitoring: Mains, Operating Voltage / Frequency

EN	Upper voltage limit				Operating voltage window, mains, maximum limit	100 to 150 %
DE	Obere Spannungsabw.					
<b>CL2</b>	{0}	{1o}	{1oc}	{2oc}		
5810	✓	✓	✓	✓		

The maximum permissible positive deviation of the mains voltage from the mains rated voltage (parameter 1768 on page 28) is configured here. This value may be used as a voltage limit switch. The conditional state of this switch may be used as a command variable for the *LogicsManager* (02.09).

EN	Hysteresis upper voltage limit			
DE	Hyst. obere Spannungsabw.			
CL2	{0}	{10}	{100}	{200}
5814	✓	✓	✓	✓

Operating voltage window, mains, maximum limit hysteresis **0 to 50 %**

If the mains voltage has exceeded the limit configured in parameter 5810, the voltage must fall below the limit and the value configured here, to be considered as being within the operating limits again.

EN	Lower voltage limit			
DE	Untere Spannungsabw.			
CL2	{0}	{10}	{100}	{200}
5811	✓	✓	✓	✓

Operating voltage window, mains, minimum limit **50 to 100 %**

The maximum permissible negative deviation of the mains voltage from the mains rated voltage (parameter 1768 on page 28) is configured here. This value may be used as a voltage limit switch. The conditional state of this switch may be used as a command variable for the *LogicsManager* (02.09).

EN	Hysteresis lower voltage limit			
DE	Hyst. untere Spannungsabw.			
CL2	{0}	{10}	{100}	{200}
5815	✓	✓	✓	✓

Operating voltage window, mains, minimum limit hysteresis **0 to 50 %**

If the mains voltage has fallen below the limit configured in parameter 5811, the voltage must exceed the limit and the value configured here, to be considered as being within the operating limits again.

EN	Upper frequency limit			
DE	Obere Frequenzabw.			
CL2	{0}	{10}	{100}	{200}
5812	✓	✓	✓	✓

Operating frequency window, mains, maximum limit **100.0 to 150.0 %**

The maximum permissible positive deviation of the mains frequency from the rated system frequency (parameter 1750 on page 28) is configured here. This value may be used as a frequency limit switch. The conditional state of this switch may be used as a command variable for the *LogicsManager* (02.10).

EN	Hyst. upper frequency limit			
DE	Hyst. obere Frequenzabw.			
CL2	{0}	{10}	{100}	{200}
5816	✓	✓	✓	✓

Operating frequency window, mains, maximum limit hysteresis **0.0 to 50.0 %**

If the mains frequency has exceeded the limit configured in parameter 5812, the frequency must fall below the limit and the value configured here, to be considered as being within the operating limits again.

EN	Lower frequency limit			
DE	Untere Frequenzabw.			
CL2	{0}	{10}	{100}	{200}
5813	✓	✓	✓	✓

Operating frequency window, mains, minimum limit **50.0 to 100.0 %**

The maximum permissible negative deviation of the mains frequency from the rated system frequency (parameter 1750 on page 28) is configured here. This value may be used as a frequency limit switch. The conditional state of this switch may be used as a command variable for the *LogicsManager* (02.10).

EN	Hyst. lower frequency limit			
DE	Hyst. untere Frequenzabw.			
CL2	{0}	{10}	{100}	{200}
5817	✓	✓	✓	✓

Operating frequency window, mains, minimum limit hysteresis **0.0 to 50.0 %**

If the mains frequency has fallen below the limit configured in parameter 5813, the frequency must exceed the limit and the value configured here, to be considered as being within the operating limits again.

#### Example:

If the mains rated voltage is 400 V, the upper voltage limit is 110 % (of the mains rated voltage, i.e. 440 V), and the hysteresis for the upper voltage limit is 5 % (of the mains rated voltage, i.e. 20 V), the mains voltage will be considered as being out of the operating limits as soon as it exceeds 440 V and will be considered as being within the operating limits again as soon as it falls below 420 V (440 V – 20 V).

If the rated system frequency is 50 Hz, the lower frequency limit is 90 % (of the rated system frequency, i.e. 45 Hz), and the hysteresis for the lower frequency limit is 5 % (of the rated system frequency, i.e. 2.5 Hz), the mains frequency will be considered as being out of the operating limits as soon as it falls below 45 Hz and will be considered as being within the operating limits again as soon as it exceeds 47.5 Hz (45 Hz + 2.5 Hz).



#### NOTE

The mains operating voltage/frequency parameters are used to trigger mains failure conditions and activate an emergency run. The mains values must be within this ranges to synchronize the mains circuit breaker.

## Configure Monitoring: Mains, Decoupling

The mains decoupling function is intended for use in a mains parallel operation and monitors a series of subordinate mains protection thresholds. If a threshold is exceeded, the easYgen initiates a breaker opening and separates the generator(s) from the mains at the defined breaker.

The following thresholds are monitored:

- Overfrequency level 2 (refer to page 77 for detailed information)
- Underfrequency level 2 (refer to page 79 for detailed information)
- Overvoltage level 2 (refer to page 94 for detailed information)
- Undervoltage level 2 (refer to page 83 for detailed information)
- Mains phase shift (refer to page 85 for detailed information)

If one of these protective functions is triggered, the display indicates "**Mains decoupling**" and the active level 2 alarm.

Parameter table

Level	Text	Setting range	Default value
<b>Mains decoupling</b>			
	Mains decoupling	GCB / GCB->MCB / MCB / MCB->GCB / Off	GCB
	Mains decoupling feedback delay	0.10 to 5.00 s	0.4 s
	Alarm class	A/B/C/D/E/F	B
	Self acknowledgment	Yes / No	No
	Ext. mns. decouple.	<i>LogicsManager</i>	(0 & 1) & 1

Table 3-16: Monitoring - standard values - mains decoupling

EN	Ext. mns. decoupl.				
DE	Ext. Netzentkoppl				
<b>CL2</b>	{0}	{1o}	{1oc}	{2oc}	
12922	✓	✓	✓	✓	

### Mains decoupling: External mains decoupling

*LogicsManager*

The unit may be configured to decouple from the mains when commanded by an external device. Once the conditions of the *LogicsManager* have been fulfilled, an external mains failure is issued. The *LogicsManager* and its default settings are explained on page 252 in Appendix B: "*LogicsManager*".

EN	Mains decoupling				
DE	Netzentkopplung				
<b>CL2</b>	{0}	{1o}	{1oc}	{2oc}	
3110	✓	✓	✓	✓	

### Mains decoupling: Monitoring

**GCB / GCB->MCB / MCB / MCB->GCB / Off**

- GCB** .....Mains decoupling is carried out according to the following parameters. If one of the subordinate monitoring functions is triggered, the GCB will be opened. If the unit is operated in parallel with the mains and the MCB opens, the GCB will be closed again.
- GCB->MCB**.Mains decoupling is carried out according to the following parameters. If one of the subordinate monitoring functions is triggered, the GCB will be opened. If the reply "GCB open" is not present within the delay configured in parameter 3113, the MCB will be opened as well.
- MCB**.....Mains decoupling is carried out according to the following parameters. If one of the subordinate monitoring functions is triggered, the MCB will be opened.
- MCB->GCB**.Mains decoupling is carried out according to the following parameters. If one of the subordinate monitoring functions is triggered, the MCB will be opened. If the reply "MCB open" is not present within the delay configured in parameter 3113, the GCB will be opened as well.
- Off** .....Mains decoupling monitoring is disabled.

EN	Mns. decoupling feedback delay			
DE	Netzentkopplg Rückmeldungszeit			
CL2	{0}	{1o}	{1oc}	{2oc}
3113	✓	✓	✓	✓

**Mains decoupling: Feedback delay****0.10 to 5.00 s**

If the open signal from the respective circuit breaker cannot be detected within the time configured here, the mains decoupling function performs the action as configured in parameter 3110.

EN	Alarm class			
DE	Alarmklasse			
CL2	{0}	{1o}	{1oc}	{2oc}
3111	✓	✓	✓	✓

**Mains decoupling: Alarm class****Class A/B/C/D/E/F**

| ⓘ See chapter "Alarm" on page 250. |

Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.

EN	Self acknowledge			
DE	Selbstquittierend			
CL2	{0}	{1o}	{1oc}	{2oc}
3112	✓	✓	✓	✓

**Mains decoupling: Self acknowledgment****Yes / No**

**Yes** ..... The control automatically clears the alarm if the fault condition is no longer detected.

**No** ..... The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the *LogicsManager* output "External acknowledgement" (via a discrete input or via an interface).

## Configure Monitoring: Mains, Overfrequency (Levels 1 & 2) ANSI# 810

There are two overfrequency alarm levels available in the control. Both alarms are definite time alarms and are illustrated in the figure below. The figure diagrams a frequency trend and the associated pickup times and length of the alarms. Monitoring of the frequency is accomplished in two steps.

If this protective function is triggered, the display indicates "**Mains overfreq. 1**" or "**Mains overfreq. 2**".

Refer to Appendix E: Triggering Characteristics, Figure 3-36 on page 305 for the triggering characteristic of this monitoring function.

### Parameter table

The parameters represented in this table are specified in the following, whereas the description is identical for all limits; the limits may only differ in their setting ranges.

Level	Text	Setting range	Default value
<b>Overfrequency</b> (the hysteresis is 0.05 Hz.)			
Level 1	Monitoring	On / Off	On
	Limit	50.0 to 130.0 %	100.4 %
	Delay	0.02 to 99.99 s	0.06 s
	Alarm class	A/B/C/D/E/F	A
	Self acknowledgment	Yes / No	Yes
	Delayed by engine speed	Yes / No	No
Level 2	Monitoring	On / Off	On
	Limit	50.0 to 130.0 %	1020.0 %
	Delay	0.02 to 99.99 s	0.06 s
	Alarm class	A/B/C/D/E/F	B
	Self acknowledgment	Yes / No	Yes
	Delayed by engine speed	Yes / No	No

Table 3-17: Monitoring - standard values - mains overfrequency

EN	Monitoring
DE	Überwachung
<b>CL2</b>	{0} {1o} {1oc} {2oc}
2850	✓ ✓ ✓ ✓
2856	

### Mains overfrequency: Monitoring (Limit 1/Limit 2)

On / Off

**On** ..... Overfrequency monitoring is carried out according to the following parameters. Monitoring is performed at two levels. Both values may be configured independent from each other (prerequisite: limit 1 < Level 2 limit).

**Off** ..... Monitoring is disabled for limit 1 and/or Level 2 limit.

EN	Limit
DE	Grenzwert
<b>CL2</b>	{0} {1o} {1oc} {2oc}
2854	✓ ✓ ✓ ✓
2860	

### Mains overfrequency: Threshold value (Limit 1/Limit 2)

50.0 to 130.0 %

① This value refers to the System rated frequency (parameter 1750on page 28).

The percentage values that are to be monitored for each threshold limit are defined here. If this value is reached or exceeded for at least the delay time without interruption, the action specified by the alarm class is initiated.

EN	Delay
DE	Verzögerung
<b>CL2</b>	{0} {1o} {1oc} {2oc}
2855	✓ ✓ ✓ ✓
2861	

### Mains overfrequency: Delay (Limit 1/Limit 2)

0.02 to 99.99 s

If the monitored mains frequency value exceeds the threshold value for the delay time configured here, an alarm will be issued. If the monitored mains frequency falls below the threshold (minus the hysteresis) before the delay expires the time will be reset.

EN	Alarm class
DE	Alarmklasse
<b>CL2</b>	{0} {1o} {1oc} {2oc}
2851	✓ ✓ ✓ ✓
2857	

### Mains overfrequency: Alarm class (Limit 1/Limit 2)

Class A/B/C/D/E/F

① See chapter "Alarm" on page 250.

Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.

EN	Self acknowledge			
	Selbstquittierend			
CL2	{0}	{1o}	{1oc}	{2oc}
2852	✓	✓	✓	✓
2858				

### Mains overfrequency: Self acknowledgment (Limit 1/Limit 2) Yes / No

- Yes**..... The control automatically clears the alarm if the fault condition is no longer detected.
- No**..... The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the *LogicsManager* output "External acknowledgement" (via a discrete input or via an interface).

EN	Delayed by engine speed			
	Verzögert durch Motordrehzahl			
CL2	{0}	{1o}	{1oc}	{2oc}
2853	✓	✓	✓	✓
2859				

### Mains overfrequency: Delayed engine speed (Level 1/Level 2) Yes / No

- Yes**..... Monitoring for fault conditions is not performed until engine delayed monitoring is enabled. The engine monitoring delay time (parameter 3315 on page 175) must expire prior to fault monitoring being enabled for parameters assigned this delay.
- No**..... Monitoring for this fault condition is continuously enabled regardless of engine speed.



## NOTE

The mains overfrequency Level 2 limit configuration parameters are located below the mains decoupling function menu on the display.

## Configure Monitoring: Mains, Underfrequency (Levels 1 & 2) ANSI# 81U

There are two underfrequency alarm levels available in the control. Both alarms are definite time alarms and are illustrated in the figure below. The figure diagrams a frequency trend and the associated pickup times and length of the alarms. Monitoring of the frequency is performed in two steps.

If this protective function is triggered, the display indicates "**Mains underfreq. 1**" or "**Mains underfreq. 2**".

Refer to Appendix E: Triggering Characteristics, Figure 3-37 on page 306 for the triggering characteristic of this monitoring function.

### Parameter table

The parameter limits represented in this table have identical permissible ranges. Each parameter may be configured with different trip settings to create unique trip characteristics for specific thresholds.

Level	Text	Setting range	Default value
<b>Underfrequency</b> (the hysteresis is 0.05 Hz.)			
Level 1	Monitoring	On / Off	On
	Limit	50.0 to 130.0 %	99.6 %
	Delay	0.02 to 99.99 s	1.50 s
	Alarm class	A/B/C/D/E/F	A
	Self acknowledgment	Yes / No	Yes
	Delayed by engine speed	Yes / No	No
Level 2	Monitoring	On / Off	On
	Limit	50.0 to 130.0 %	98.0 %
	Delay	0.02 to 99.99 s	0.06 s
	Alarm class	A/B/C/D/E/F	B
	Self acknowledgment	Yes / No	Yes
	Delayed by engine speed	Yes / No	No

Table 3-18: Monitoring - standard values - mains underfrequency

EN	Monitoring
DE	Überwachung
CL2	{0} {1o} {1oc} {2oc}
2900	✓ ✓ ✓ ✓
2906	

### Mains underfrequency: Monitoring (Level 1/Level 2)

On / Off

**On** ..... Underfrequency monitoring is carried out according to the following parameters. Monitoring is performed at two levels. Both values may be configured independent from each other (prerequisite: Level 1 > Level 2).

**Off** ..... Monitoring is disabled for limit 1 and/or Level 2 limit.

EN	Limit
DE	Grenzwert
CL2	{0} {1o} {1oc} {2oc}
2904	✓ ✓ ✓ ✓
2910	

### Mains underfrequency: Threshold value (Level 1/Level 2)

50.0 to 130.0 %

① This value refers to the System rated frequency (parameter 1750on page 28).

The percentage values that are to be monitored for each threshold limit are defined here. If this value is reached or fallen below for at least the delay time without interruption, the action specified by the alarm class is initiated.

EN	Delay
DE	Verzögerung
CL2	{0} {1o} {1oc} {2oc}
2905	✓ ✓ ✓ ✓
2911	

### Mains underfrequency: Delay (Level 1/Level 2)

0.02 to 99.99 s

If the monitored mains frequency value falls below the threshold value for the delay time configured here, an alarm will be issued. If the monitored mains frequency exceeds the threshold (plus the hysteresis) again before the delay expires the time will be reset.

EN	Alarm class
DE	Alarmklasse
CL2	{0} {1o} {1oc} {2oc}
2901	✓ ✓ ✓ ✓
2907	

### Mains underfrequency: Alarm class (Level 1/Level 2)

Class A/B/C/D/E/F

① See chapter "Alarm" on page 250.

Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.

Self acknowledge					Mains underfrequency: Self acknowledgment (Level 1/Level 2)		Yes / No
Selbstquittierend							
EN							
DE							
CL2	{0}	{1o}	{1oc}	{2oc}	<b>Yes</b> .....		The control automatically clears the alarm if the fault condition is no longer detected.
2902	✓	✓	✓	✓	<b>No</b> .....		The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the <i>LogicsManager</i> output "External acknowledgement" (via a discrete input or via an interface).
2908							
Delayed by engine speed					Mains underfrequency Engine delayed monitoring (Level 1/Level 2)		Yes / No
Verzögert durch Motordrehzahl							
EN							
DE							
CL2	{0}	{1o}	{1oc}	{2oc}	<b>Yes</b> .....		Monitoring for fault conditions is not performed until engine delayed monitoring is enabled. The engine monitoring delay time (parameter 3315 on page 175) must expire prior to fault monitoring being enabled for parameters assigned this delay.
2903	✓	✓	✓	✓	<b>No</b> .....		Monitoring for this fault condition is continuously enabled regardless of engine speed.
2909							



**NOTE**

The mains underfrequency Level 2 limit configuration parameters are located below the mains decoupling function menu on the display.



## Configure Monitoring: Mains, Overvoltage (Levels 1 & 2) ANSI# 59

Voltage is monitored depending on parameter "Mains voltage measuring" (parameter 1853 on page 32). There are two overvoltage alarm levels available in the control. Both alarms are definite time alarms and are illustrated in the figure below. The figure diagrams a frequency trend and the associated pickup times and length of the alarms. Monitoring of the voltage is done in two steps.

If this protective function is triggered, the display indicates "**Mains overvoltage 1**" or "**Mains overvoltage 2**".

Refer to Appendix E: Triggering Characteristics, Figure 3-36 on page 305 for the triggering characteristic of this monitoring function.

### Parameter table

The parameter limits represented in this table have identical permissible ranges. Each parameter may be configured with different settings to create unique trip characteristics for specific thresholds.

Level	Text	Setting range	Default value
<b>Overvoltage</b> (the hysteresis is 0.7 % of the rated value)			
Level 1	Monitoring	On / Off	On
	Limit	50.0 to 125.0 %	108.0 %
	Delay	0.02 to 99.99 s	1.50 s
	Alarm class	A/B/C/D/E/F	A
	Self acknowledgment	Yes / No	Yes
	Delayed by engine speed	Yes / No	No
Level 2	Monitoring	On / Off	On
	Limit	50.0 to 125.0 %	110.0 %
	Delay	0.02 to 99.99 s	0.06 s
	Alarm class	A/B/C/D/E/F	B
	Self acknowledgment	Yes / No	Yes
	Delayed by engine speed	Yes / No	No

Table 3-19: Monitoring - standard values - mains overvoltage

EN	Monitoring
DE	Überwachung
CL2	{0} {1o} {1oc} {2oc}
2950	✓ ✓ ✓ ✓
2956	

### Mains overvoltage: Monitoring (Level 1/Level 2)

On / Off

**On** ..... Overvoltage monitoring is carried out according to the following parameters. Monitoring is performed at two levels. Both values may be configured independent from each other (prerequisite: limit 1 < Level 2 limit).

**Off**..... Monitoring is disabled for limit 1 and/or Level 2 limit.

EN	Limit
DE	Grenzwert
CL2	{0} {1o} {1oc} {2oc}
2954	✓ ✓ ✓ ✓
2960	

### Mains overvoltage: Threshold value (Level 1/Level 2)

50.0 to 125.0 %

ⓘ This value refers to the Mains rated voltage (parameter 1768 on page 28).

The percentage values that are to be monitored for each threshold limit are defined here. If this value is reached or exceeded for at least the delay time without interruption, the action specified by the alarm class is initiated.

EN	Delay
DE	Verzögerung
CL2	{0} {1o} {1oc} {2oc}
2955	✓ ✓ ✓ ✓
2961	

### Mains overvoltage: Delay (Level 1/Level 2)

0.02 to 99.99 s

If the monitored mains voltage exceeds the threshold value for the delay time configured here, an alarm will be issued. If the monitored mains voltage falls below the threshold (minus the hysteresis) before the delay expires the time will be reset.

EN	Alarm class
DE	Alarmklasse
CL2	{0} {1o} {1oc} {2oc}
2951	✓ ✓ ✓ ✓
2957	

### Mains overvoltage: Alarm class (Level 1/Level 2)

Class A/B/C/D/E/F

ⓘ See chapter "Alarm" on page 250.

Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.

EN

DE

		Self acknowledge			
		Selbstquittierend			
CL2	{0}	{1o}	{1oc}	{2oc}	<div> <div>Yes.....</div> <div>The control automatically clears the alarm if the fault condition is no longer detected.</div> </div> <div> <div>No .....</div> <div>The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the <i>LogicsManager</i> output "External acknowledgement" (via a discrete input or via an interface).</div> </div>
2952	✓	✓	✓	✓	
2958					

EN

DE

		Delayed by engine speed			
		Verzögert durch Motordrehzahl			
CL2	{0}	{1o}	{1oc}	{2oc}	<div> <div>Yes.....</div> <div>Monitoring for fault conditions is not performed until engine delayed monitoring is enabled. The engine monitoring delay time (parameter 3315 on page 175) must expire prior to fault monitoring being enabled for parameters assigned this delay.</div> </div> <div> <div>No .....</div> <div>Monitoring for this fault condition is continuously enabled regardless of engine speed.</div> </div>
2953	---	✓	✓	✓	
2959					

**NOTE**

The mains overvoltage Level 2 limit configuration parameters are located below the mains decoupling function menu on the display.

## Configure Monitoring: Mains, Undervoltage (Levels 1 & 2) ANSI# 27

Voltage is monitored depending on parameter "Mains voltage measuring" (parameter 1853 on page 32). There are two undervoltage alarm levels available in the control. Both alarms are definite time alarms and are illustrated in the figure below. The figure diagrams a frequency trend and the associated pickup times and length of the alarms. Monitoring of the voltage is done in two steps.

If this protective function is triggered, the display indicates "**Mains undervoltage 1**" or "**Mains undervoltage 2**".

Refer to Appendix E: Triggering Characteristics, Figure 3-37 on page 306 for the triggering characteristic of this monitoring function.

### Parameter table

The parameter limits represented in this table have identical permissible ranges. Each parameter may be configured with different settings to create unique trip characteristics for specific thresholds.

Level	Text	Setting range	Default value
<b>Undervoltage</b> (the hysteresis is 0.7 % of the rated value)			
Level 1	Monitoring	On / Off	On
	Limit	50.0 to 125.0 %	92.0 %
	Delay	0.02 to 99.99 s	1.50 s
	Alarm class	A/B/C/D/E/F	A
	Self acknowledgment	Yes / No	Yes
	Delayed by engine speed	Yes / No	No
Level 2	Monitoring	On / Off	On
	Limit	50.0 to 125.0 %	90.0 %
	Delay	0.02 to 99.99 s	0.06 s
	Alarm class	A/B/C/D/E/F	B
	Self acknowledgment	Yes / No	Yes
	Delayed by engine speed	Yes / No	No

Table 3-20: Monitoring - standard values - mains undervoltage

EN	Monitoring
DE	Überwachung
CL2	{0} {1o} {1oc} {2oc}
3000	✓ ✓ ✓ ✓
3006	

### Mains undervoltage: Monitoring (Level 1/Level 2)

On / Off

**On** ..... Undervoltage monitoring is carried out according to the following parameters. Monitoring is performed at two levels. Both values may be configured independent from each other (prerequisite: Level 1 limit < Level 2 limit).

**Off**..... Monitoring is disabled for Level 1 limit and/or Level 2 limit.

EN	Limit
DE	Grenzwert
CL2	{0} {1o} {1oc} {2oc}
3004	✓ ✓ ✓ ✓
3010	

### Mains undervoltage: Threshold value (Level 1/Level 2)

50.0 to 125.0 %

❗ This value refers to the Mains rated voltage (parameter 1768 on page 28).

The percentage values that are to be monitored for each threshold limit are defined here. If this value is reached or fallen below for at least the delay time without interruption, the action specified by the alarm class is initiated.

EN	Delay
DE	Verzögerung
CL2	{0} {1o} {1oc} {2oc}
3005	✓ ✓ ✓ ✓
3011	

### Mains undervoltage: Delay (Level 1/Level 2)

0.02 to 99.99 s

If the monitored mains voltage falls below the threshold value for the delay time configured here, an alarm will be issued. If the monitored mains voltage exceeds the threshold (plus the hysteresis) again before the delay expires the time will be reset.

EN	Alarm class
DE	Alarmklasse
CL2	{0} {1o} {1oc} {2oc}
3001	✓ ✓ ✓ ✓
3007	

### Mains undervoltage: Alarm class (Level 1/Level 2)

Class A/B/C/D/E/F

❗ See chapter "Alarm" on page 250.

Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.

DE

EN

		Self acknowledge						
		Selbstquittierend						
CL2 3002 3008	{0}	{1o}	{1oc}	{2oc}	<b>Yes</b> .....The control automatically clears the alarm if the fault condition is no longer detected.  <b>No</b> .....The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the <i>LogicsManager</i> output "External acknowledgement" (via a discrete input or via an interface).			
	✓	✓	✓	✓				

DE

EN

		Delayed by engine speed						
		Verzögert durch Motordrehzahl						
CL2 3003 3009	{0}	{1o}	{1oc}	{2oc}	<b>Yes</b> .....Monitoring for fault conditions is not performed until engine delayed monitoring is enabled. The engine monitoring delay time (parameter 3315 on page 175) must expire prior to fault monitoring being enabled for parameters assigned this delay.  <b>No</b> .....Monitoring for this fault condition is continuously enabled regardless of engine speed.			
	✓	✓	✓	✓				

**NOTE**

The mains undervoltage Level 2 limit configuration parameters are located below the mains decoupling function menu on the display.

### Configure Monitoring: Mains, Phase Shift

A vector/phase shift is defined as the sudden variation of the voltage curve which may be caused by a major generator load change. It usually occurs, if the utility opens the MCB, which causes a load change for the genset.

The easYgen measures the duration of a cycle, where a new measurement is started with each voltage passing through zero. The measured cycle duration will be compared with an internal quartz-calibrated reference time to determine the cycle duration difference of the voltage signal. A vector/phase shift as shown in Figure 3-9 causes a premature or delayed zero passage. The determined cycle duration difference corresponds with the occurring phase shift angle.

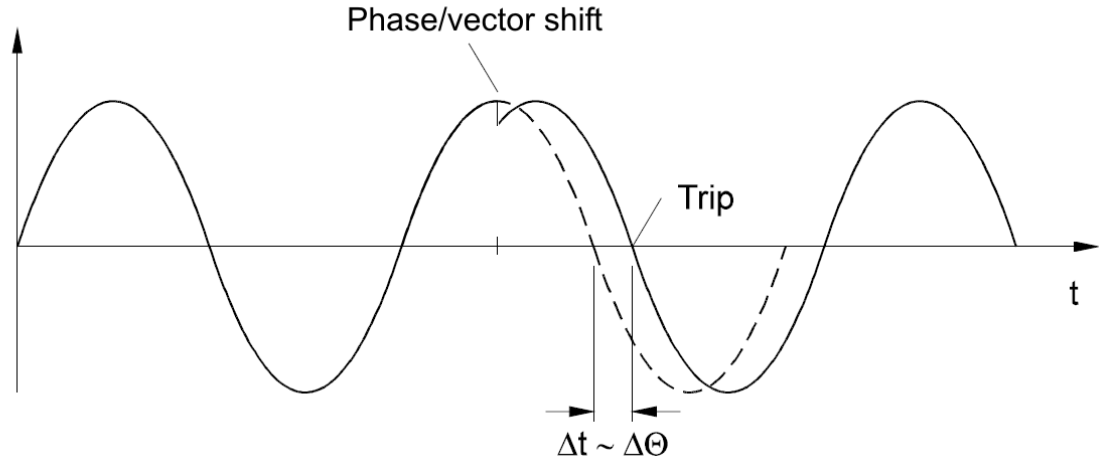


Figure 3-9: Monitoring - phase shift

The monitoring may be carried out three-phased or one/three-phased. Different limits may be configured for one-phase and three-phase monitoring. The vector/phase shift monitor can also be used as an additional method to decouple from the mains. Vector/phase shift monitoring is only enabled after the monitored voltage exceeds 50% of the PT secondary rated voltage.

**Function:** "Voltage cycle duration not within the permissible range" - The voltage cycle duration exceeds the configured limit value for the phase/vector shift. The result is the power circuit breaker that disconnects from the mains is opened and the message "**Mains phase shift**" is displayed. The prerequisite for phase/vector shift monitoring is that the generator is operating in a mains parallel operation (the MCB and GCB are both closed).

Parameter table

Level	Text	Setting range	Default value
<b>Mains phase shift</b>			
	Monitoring	On / Off	On
	Monitoring	1- and 3 phase / 3 phase	1- and 3 phase
	Limit 1 phae	3 to 30 °	20 °
	Limit 3 phase	3 to 30 °	8 °
	Alarm class	A/B/C/D/E/F	B
	Self acknowledgment	Yes / No	Yes
	Delayed by engine speed	Yes / No	No

Table 3-21: Monitoring - standard values - mains phase shift

EN	Monitoring			
	Überwachung			
CL2 3050	{0}	{1o}	{1oc}	{2oc}
	✓	✓	✓	✓

**Mains phase shift: Monitoring****On / Off**

**On**.....Phase shift monitoring is carried out according to the following parameters.

**Off**.....Monitoring is disabled.

EN	Monitoring			
	Überwachung auf			
CL2 3053	{0}	{1o}	{1oc}	{2oc}
	✓	✓	✓	✓

**Mains phase shift: Monitoring****1- and 3 phase / 3 phase**

**1- and 3 phase** During single-phase voltage phase/vector shift monitoring, tripping occurs if the phase/vector shift exceeds the configured threshold value (parameter 3054) in at least one of the three phases. Note: If a phase/vector shift occurs in one or two phases, the single-phase threshold value (parameter 3054) is taken into consideration; if a phase/vector shift occurs in all three phases, the three-phase threshold value (parameter 3055) is taken into consideration. Single phase monitoring is very sensitive and may lead to nuisance tripping if the selected phase angle settings are too small.

**3 phase** .....During three-phase voltage phase/vector shift monitoring, tripping occurs only if the phase/vector shift exceeds the specified threshold value (parameter 3055) in all three phases within 2 cycles.

**NOTE**

**3 phase mains phase shift monitoring is only enabled if Mains voltage measuring (parameter 1853) is configured to "3Ph 4W" or "3Ph 3W".**

EN	Limit 1 phase			
	Grenzwert 1-phasig			
CL2 3054	{0}	{1o}	{1oc}	{2oc}
	✓	✓	✓	✓

**Mains phase shift: Threshold value 1 phase****3 to 30 °**

If the electrical angle of the mains voltage shifts more than this configured value in any single phase, an alarm with the class configured in parameter 3051 is initiated. Depending on the configured mains decoupling procedure (parameter 3110 on page 75), the GCB, MCB, or an external CB will be opened.

EN	Limit 3 phase			
	Grenzwert 3-phasig			
CL2 3055	{0}	{1o}	{1oc}	{2oc}
	✓	✓	✓	✓

**Mains phase shift: Threshold value 3 phase****3 to 30 °**

If the electrical angle of the mains voltage shifts more than this configured value in all three phases, an alarm with the class configured in parameter 3051 is initiated. Depending on the configured mains decoupling procedure (parameter 3110 on page 75), the GCB, MCB, or an external CB will be opened.

EN	Alarm class			
	Alarmklasse			
CL2 3051	{0}	{1o}	{1oc}	{2oc}
	✓	✓	✓	✓

**Mains phase shift: Alarm class****Class A/B/C/D/E/F**

| ⓘ See chapter "Alarm" on page 250. |

Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.

EN		Self acknowledge				Mains phase shift: Self acknowledgment		Yes / No
DE		Selbstquittierend						
CL2	{0}	{1o}	{1oc}	{2oc}		<b>Yes</b> .....		The control automatically clears the alarm if the fault condition is no longer detected.
3052	✓	✓	✓	✓		<b>No</b> .....		The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the <i>LogicsManager</i> output "External acknowledgement" (via a discrete input or via an interface).

EN		Delayed by engine speed				Mains phase shift: Delayed engine speed		Yes / No
DE		Verzögert durch Motordrehzahl						
CL2	{0}	{1o}	{1oc}	{2oc}		<b>Yes</b> .....		Monitoring for fault conditions is not performed until engine delayed monitoring is enabled. The engine monitoring delay time (parameter 3315 on page 175) must expire prior to fault monitoring being enabled for parameters assigned this delay.
3056	✓	✓	✓	✓		<b>No</b> .....		Monitoring for this fault condition is continuously enabled regardless of engine speed.



**NOTE**  
The mains phase shift configuration parameters are located below the mains decoupling function menu on the display.

## Configure Monitoring: Mains, Voltage Phase Rotation - {2oc}



### CAUTION

Please ensure during installation that all voltages applied to this unit are wired correctly to both sides of the circuit breaker. Failure to do so may result in damage to the control unit and/or generation equipment due to closing the breaker asynchronous or with mismatched phase rotations and phase rotation monitoring enabled at all connected components (engine, generator, breakers, cable, busbars, etc.).

This function may block a connection of systems with mismatched phases systems only under the following conditions:

- The voltages being measured are wired correctly with respect to the phase rotation at the measuring points (i.e. the voltage transformer in front and behind the circuit breaker)
- The measuring voltages are wired without angular phase shift or interruption from the measuring point to the control unit
- The measuring voltages are wired to the correct terminals of the control unit (i.e. L1 of the generator is connected with the terminal of the control unit which is intended for the L1 of the generator)
- The **LogicsManager** function "Enable MCB" (refer to parameter 12923 on page 148) is false in case of a incorrect rotation field

Correct phase rotation of the phase voltages ensures that damage will not occur during a breaker closure to either the mains or the generator. The voltage phase rotation alarm checks the phase rotation of the voltages and the configured phase rotation to ensure they are identical. The directions of rotation are differentiated as "clockwise" and "counter clockwise". With a clockwise field the direction of rotation is "L1-L2-L3"; with a counter clockwise field the direction of rotation is "L1-L3-L2". If the control is configured for a clockwise rotation and the voltages into the unit are calculated as counterclockwise the alarm will be initiated. The direction of configured rotation being monitored by the control unit is displayed on the screen.

If this protective function is triggered, the display indicates "**Mns.ph.rot. mismatch**".

Parameter table

Level	Text	Setting range	Default value
<b>Mains voltage phase direction fault</b> (the hysteresis is 0.7 % of the rated value)			
	Monitoring	On / Off	On
	Mains phase rotation	CW / CCW	CW
	Alarm class	A/B	B
	Self acknowledgment	Yes / No	No
	Delayed by engine speed	Yes / No	No

Table 3-22: Monitoring - standard values - mains voltage phase rotation



### NOTE

This monitoring function is only enabled if Mains voltage measuring (parameter 1853) is configured to "3Ph 4W" or "3Ph 3W".



EN	Monitoring				
DE	Überwachung				
<b>CL2</b>	{0}	{1o}	{1oc}	{2oc}	
3970	✓	✓	✓	✓	

**Mains voltage phase rotation: Monitoring****On / Off**

**On** ..... Phase rotation monitoring is carried out according to the following parameters

**Off** ..... No monitoring is carried out.

EN	Mains phase rotation				
DE	Netzdrehfeld				
<b>CL2</b>	{0}	{1o}	{1oc}	{2oc}	
3974	✓	✓	✓	✓	

**Mains voltage phase rotation: Direction****CW / CCW**

**CW** ..... The three-phase measured mains voltage is rotating CW (clock-wise; that means the voltage rotates in L1-L2-L3 direction; standard setting).

**CCW** ..... The three-phase measured mains voltage is rotating CCW (counter clock-wise; that means the voltage rotates in L1-L3-L2 direction).

EN	Alarm class				
DE	Alarmklasse				
<b>CL2</b>	{0}	{1o}	{1oc}	{2oc}	
3971	✓	✓	✓	✓	

**Mains voltage phase rotation: Alarm class****Class A/B/C/D/E/F****→ CAUTION:**

If an alarm class that leads to an engine shutdown (alarm class C or higher) is configured into this parameter, a main phase rotation alarm may lead to a genset shutdown due to an alarm of class C or higher.

① See chapter "Alarm" on page 250.

Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.

EN	Self acknowledge				
DE	Selbstquittierend				
<b>CL2</b>	{0}	{1o}	{1oc}	{2oc}	
3972	✓	✓	✓	✓	

**Mains voltage phase rotation: Self acknowledgment****Yes / No**

**Yes** ..... The control automatically clears the alarm if the fault condition is no longer detected.

**No** ..... The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the *LogicsManager* output "External acknowledgement" (via a discrete input or via an interface).

EN	Delayed by engine speed				
DE	Verzögert durch Motordrehzahl				
<b>CL2</b>	{0}	{1o}	{1oc}	{2oc}	
3973	✓	✓	✓	✓	

**Mains voltage phase rotation: Engine delayed monitoring****Yes / No**

**Yes** ..... Monitoring for fault conditions is not performed until engine delayed monitoring is enabled. The engine monitoring delay time (parameter 3315 on page 175) must expire prior to fault monitoring being enabled for parameters assigned this delay.

**No** ..... Monitoring for this fault condition is continuously enabled regardless of engine speed.

## Configure Monitoring: Mains, Import Power (Levels 1 & 2)

It is possible to monitor two independently configurable mains import power limit values. This function makes it possible to initiate external load shedding.

If this protective function is triggered, the display indicates "Mains import power 1" or "Mains import power 2".

### Parameter table

The parameter limits represented in this table have identical permissible ranges. Each parameter may be configured with different settings to create unique trip characteristics for specific thresholds.

Level	Text	Setting range	Default value
<b>Mains import power</b>			
Level 1	Monitoring	On / Off	Off
	Limit	0 to +150.00 %	80 %
	Hysteresis	0 to 99.99 %	0.01 %
	Delay	0.02 to 99.99 s	1.00 s
	Alarm class	A/B/C/D/E/F	A
	Self acknowledgment	Yes / No	Yes
	Delayed by engine speed	Yes / No	No
	Monitoring at	Overrun/Underrun	Overrun
Level 2	Monitoring	On / Off	Off
	Limit	0 to +150.00 %	100 %
	Hysteresis	0 to 99.99 %	0.01 %
	Delay	0.02 to 99.99 s	1.00 s
	Alarm class	A/B/C/D/E/F	B
	Self acknowledgment	Yes / No	No
	Delayed by engine speed	Yes / No	No
	Monitoring at	Overrun/Underrun	Overrun

Table 3-23: Monitoring - standard values - mains import power

EN	Monitoring
DE	Überwachung
CL2	{0} {1o} {1oc} {2oc}
3200	✓
3206	✓

### Mains import power: Monitoring (Level 1/Level 2)

On / Off

**On**.....Mains import power monitoring is carried out according to the following parameters. Monitoring is performed at two levels. Both values may be configured independent from each other (prerequisite: Level 1 limit < Level 2 limit).

**Off**.....Monitoring is disabled for Level 1 limit and/or Level 2 limit.

EN	Limit
DE	Grenzwert
CL2	{0} {1o} {1oc} {2oc}
3204	✓
3210	✓

### Mains import power: Threshold value (Level 1/Level 2)

0 to +150.00 %

① This value refers to the Mains rated active power (parameter 1748 on page 29).

If this threshold value has been exceeded or fallen below (depending on the setting of parameter 3215 or 3216) for at least the delay time (parameter 3205 or 3211), the action specified by the alarm class is initiated.

EN	Hysteresis
DE	Hysterese
CL2	{0} {1o} {1oc} {2oc}
3213	✓
3214	✓

### Mains import power: Hysteresis (Level 1/Level 2)

0 to 99.99 %

The monitored mains power level must return within the limits configured in parameter 3204 or 3210 plus or minus (depending on the setting of parameter 3215 or 3216) the value configured here, to reset the alarm.

EN	Delay
DE	Verzögerung
CL2	{0} {1o} {1oc} {2oc}
3205	✓
3211	✓

### Mains import power: Delayed (Level 1/Level 2)

0.02 to 99.99 s

If the monitored mains import power falls below or exceeds (depending on the setting of parameter 3215 or 3216) the threshold value for the delay time configured here, an alarm will be issued. If the monitored mains import power exceeds or falls below the threshold (plus or minus the hysteresis configured in parameter 3213 or 3214) before the delay expires the time will be reset.

EN	Alarm class			
DE	Alarmklasse			
<b>CL2</b>	{0}	{1o}	{1oc}	{2oc}
3201	✓	✓	✓	✓
3207				

**Mains import power: Alarm class (Level 1/Level 2)**

Class A/B/C/D/E/F

① See chapter "Alarm" on page 250.

Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.-

EN	Self acknowledge			
DE	Selbstquittierend			
<b>CL2</b>	{0}	{1o}	{1oc}	{2oc}
3202	✓	✓	✓	✓
3208				

**Mains import power: Self acknowledgment (Level 1/Level 2)**

Yes / No

**Yes** ..... The control automatically clears the alarm if the fault condition is no longer detected.

**No**..... The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the *LogicsManager* output "External acknowledgement" (via a discrete input or via an interface).

EN	Delayed by engine speed			
DE	Verzögert durch Motordrehzahl			
<b>CL2</b>	{0}	{1o}	{1oc}	{2oc}
3203	✓	✓	✓	✓
3209				

**Mains import power: Delayed engine speed (Level 1/Level 2)**

Yes / No

**Yes** ..... Monitoring for fault conditions is not performed until engine delayed monitoring is enabled. The engine monitoring delay time (parameter 3315 on page 175) must expire prior to fault monitoring being enabled for parameters assigned this delay.

**No**..... Monitoring for this fault condition is continuously enabled regardless of engine speed.

EN	Monitoring at			
DE	Überwachung auf			
<b>CL2</b>	{0}	{1o}	{1oc}	{2oc}
3215	✓	✓	✓	✓
3216				

**Mains import power: Monitoring at (Level 1/Level 2)**

Overrun / Underrun

**Overrun**..... The monitored value must exceed the limit to be considered as out of limits.

**Underrun**..... The monitored value must fall below the limit to be considered as out of limits.

## Configure Monitoring: Mains, Export Power (Levels 1 & 2)

It is possible to monitor two independently configurable mains export power limit values. This function makes it possible to initiate external load shedding.

If this protective function is triggered, the display indicates "**Mains export power 1**" or "**Mains export power 2**".

### Parameter table

The parameter limits represented in this table have identical permissible ranges. Each parameter may be configured with different settings to create unique trip characteristics for specific thresholds.

Level	Text	Setting range	Default value
<b>Mains export power</b>			
Level 1	Monitoring	On / Off	Off
	Limit	0 to +150.00 %	80 %
	Hysteresis	0 to 99.99 %	0.01 %
	Delay	0.02 to 99.99 s	1.00 s
	Alarm class	A/B/C/D/E/F	A
	Self acknowledgment	Yes / No	Yes
	Delayed by engine speed	Yes / No	No
	Monitoring at	Overrun/Underrun	Overrun
Level 2	Monitoring	On / Off	Off
	Limit	0 to +150.00 %	100 %
	Hysteresis	0 to 99.99 %	0.01 %
	Delay	0.02 to 99.99 s	1.00 s
	Alarm class	A/B/C/D/E/F	B
	Self acknowledgment	Yes / No	No
	Delayed by engine speed	Yes / No	No
	Monitoring at	Overrun/Underrun	Overrun

Table 3-24: Monitoring - standard values - mains export power

EN	Monitoring
DE	Überwachung
CL2	{0} {1o} {1oc} {2oc}
3225	✓
3233	✓

### Mains export power: Monitoring (Level 1/Level 2)

On / Off

**On**.....Mains export power monitoring is carried out according to the following parameters. Monitoring is performed at two levels. Both values may be configured independent from each other (prerequisite: Level 1 limit < Level 2 limit).

**Off**.....Monitoring is disabled for Level 1 limit and/or Level 2 limit.

EN	Limit
DE	Grenzwert
CL2	{0} {1o} {1oc} {2oc}
3229	✓
3237	✓

### Mains export power: Threshold value (Level 1/Level 2)

0 to +150.00 %

① This value refers to the Mains rated active power (parameter 1748 on page 29).

If this threshold value has been exceeded or fallen below (depending on the setting of parameter 3232 or 3240) for at least the delay time (parameter 3230 or 3238), the action specified by the alarm class is initiated.

EN	Hysteresis
DE	Hysterese
CL2	{0} {1o} {1oc} {2oc}
3231	✓
3239	✓

### Mains export power: Hysteresis (Level 1/Level 2)

0 to 99.99 %

The monitored mains power level must return within the limits configured in parameter 3229 or 3237 plus or minus (depending on the setting of parameter 3232 or 3240) the value configured here, to reset the alarm.

EN	Delay
DE	Verzögerung
CL2	{0} {1o} {1oc} {2oc}
3230	✓
3238	✓

### Mains export power: Delayed (Level 1/Level 2)

0.02 to 99.99 s

If the monitored mains export power falls below or exceeds (depending on the setting of parameter 3232 or 3240) the threshold value for the delay time configured here, an alarm will be issued. If the monitored mains import power exceeds or falls below the threshold (plus or minus the hysteresis configured in parameter 3231 or 3239) before the delay expires the time will be reset.

EN	Alarm class				
DE	Alarmklasse				
	CL2	{0}	{1o}	{1oc}	{2oc}
	3226	✓	✓	✓	✓
	3234				

**Mains export power: Alarm class (Level 1/Level 2)****Class A/B/C/D/E/F**

① See chapter "Alarm" on page 250.

Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.-

EN	Self acknowledge				
DE	Selbstquittierend				
	CL2	{0}	{1o}	{1oc}	{2oc}
	3227	✓	✓	✓	✓
	3235				

**Mains export power: Self acknowledgment (Level 1/Level 2)****Yes / No**

**Yes** ..... The control automatically clears the alarm if the fault condition is no longer detected.

**No** ..... The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the *LogicsManager* output "External acknowledgement" (via a discrete input or via an interface).

EN	Delayed by engine speed				
DE	Verzögert durch Motordrehzahl				
	CL2	{0}	{1o}	{1oc}	{2oc}
	3228	✓	✓	✓	✓
	3236				

**Mains export power: Delayed engine speed (Level 1/Level 2)****Yes / No**

**Yes** ..... Monitoring for fault conditions is not performed until engine delayed monitoring is enabled. The engine monitoring delay time (parameter 3315 on page 175) must expire prior to fault monitoring being enabled for parameters assigned this delay.

**No** ..... Monitoring for this fault condition is continuously enabled regardless of engine speed.

EN	Monitoring at				
DE	Überwachung auf				
	CL2	{0}	{1o}	{1oc}	{2oc}
	3232	✓	✓	✓	✓
	3240				

**Mains export power: Monitoring at (Level 1/Level 2)****Overrun / Underrun**

**Overrun** ..... The monitored value must exceed the limit to be considered as out of limits.

**Underrun** .... The monitored value must fall below the limit to be considered as out of limits.

### Configure Monitoring: Mains, Lagging Power Factor Monitoring (Levels 1 & 2)

The power factor is monitored for becoming more lagging (i.e. inductive) than an adjustable limit. This limit may be a lagging or leading power factor limit. There are two lagging power factor alarm levels available in the control. This monitoring function may be used for monitoring or controlling the power factor compensation. Both alarms are definite time alarms.

Figure 3-10 shows an example of a leading and a lagging power factor limit and the power factor range, for which the lagging power factor monitoring issues an alarm.

If this protective function is triggered, the display indicates **"Mains PF lagging 1"** or **"Mains PF lagging 2"** and the logical command variables 07.17 (level 1) or 07.18 (level 2) are enabled.

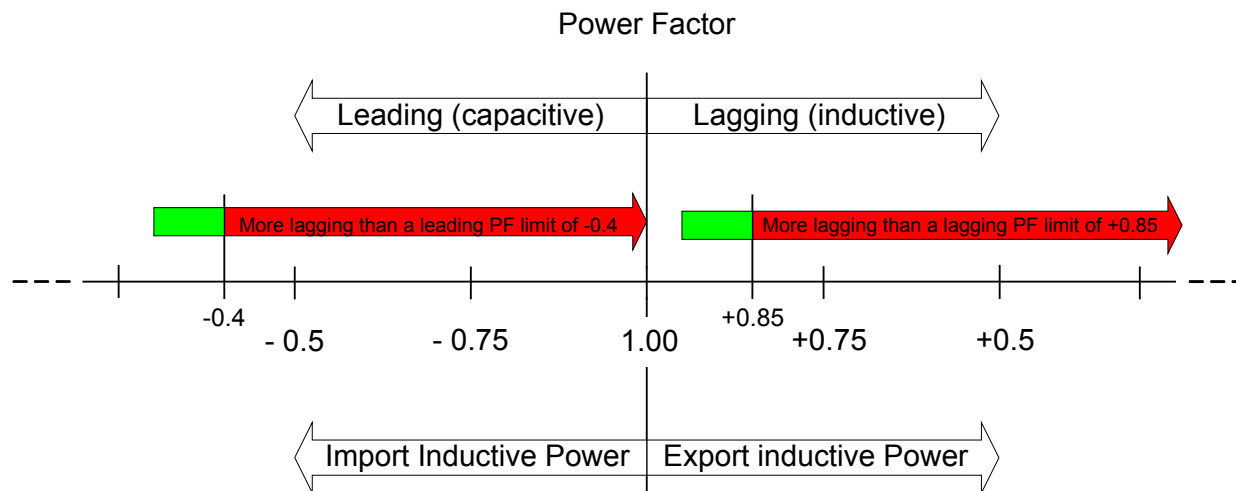


Figure 3-10: Monitoring - mains lagging power factor

#### Parameter table

The parameter limits represented in this table have identical permissible ranges. Each parameter may be configured with different settings to create unique trip characteristics for specific thresholds.

Level	Text	Setting range	Default value
<b>Mains lagging power factor</b>			
Level 1	Monitoring	On / Off	Off
	Limit	-0.001 to +0.001	+0.900
	Hysteresis	0 to 0.99	0.02
	Delay	0.02 to 99.99 s	30.00 s
	Alarm class	A/B/C/D/E/F	B
	Self acknowledgment	Yes / No	No
	Delayed by engine speed	Yes / No	No
Level 2	Monitoring	On / Off	Off
	Limit	-0.001 to +0.001	+0.800
	Hysteresis	0 to 0.99	0.02
	Delay	0.02 to 99.99 s	1.00 s
	Alarm class	A/B/C/D/E/F	B
	Self acknowledgment	Yes / No	No
	Delayed by engine speed	Yes / No	No

Table 3-25: Monitoring - standard values - mains lagging power factor

EN	Monitoring				
DE	Überwachung				
<b>CL2</b>	{0}	{1o}	{1oc}	{2oc}	
2975	✓	✓	✓	✓	
2980					

**Mains lagging power factor: Monitoring (Level 1/Level 2)****On / Off**

**On** ..... Mains lagging power factor monitoring is carried out according to the following parameters. Monitoring is performed at two levels. Both values may be configured independent from each other.

**Off** ..... Monitoring is disabled for Level 1 limit and/or Level 2 limit.

EN	Limit				
DE	Grenzwert				
<b>CL2</b>	{0}	{1o}	{1oc}	{2oc}	
2978	✓	✓	✓	✓	
2983					

**Mains lagging power factor: Threshold value (Level 1/Level 2)****-0.001 to +0.001**

The values that are to be monitored for each threshold limit are defined here. If the power factor becomes more lagging (i.e. inductive, refer to Figure 3-10) than a lagging PF value (pos.) or a leading PF value (neg.) for at least the delay time (parameters 2979 or 2984) without interruption, the logical command variables 07.17 (level 1) or 07.18 (level 2) are enabled and the action specified by the alarm class is initiated.

EN	Hysteresis				
DE	Hysterese				
<b>CL2</b>	{0}	{1o}	{1oc}	{2oc}	
2989	✓	✓	✓	✓	
2990					

**Mains lagging power factor: Hysteresis (Level 1/Level 2)****0.0 to 0.99**

The monitored power factor must return within the limits configured in parameter 2978 or 2983 minus the value configured here, to reset the alarm.

EN	Delay				
DE	Verzögerung				
<b>CL2</b>	{0}	{1o}	{1oc}	{2oc}	
2979	✓	✓	✓	✓	
2984					

**Mains lagging power factor: Delay (Level 1/Level 2)****0.02 to 99.99 s**

If the monitored generator power factor is more lagging than the configured limit for the delay time configured here, an alarm will be issued. If the monitored generator power factor returns within the limit (minus the Hysteresis configured in parameter 2989 or 2990) before the delay expires the time will be reset.

EN	Alarm class				
DE	Alarmlasse				
<b>CL2</b>	{0}	{1o}	{1oc}	{2oc}	
2987	✓	✓	✓	✓	
2988					

**Mains lagging power factor: Alarm class (Level 1/Level 2)****Class A/B/C/D/E/F**

① See chapter "Alarm" on page 250.

Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.

EN	Self acknowledge				
DE	Selbstquittierend				
<b>CL2</b>	{0}	{1o}	{1oc}	{2oc}	
2976	✓	✓	✓	✓	
2981					

**Mains lagging power factor: Self acknowledgment (Level 1/Level 2)****Yes / No**

**Yes** ..... The control automatically clears the alarm if the fault condition is no longer detected.

**No** ..... The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the *LogicsManager* output "External acknowledgement" (via a discrete input or via an interface).

EN	Delayed by engine speed				
DE	Verzögert durch Motordrehzahl				
<b>CL2</b>	{0}	{1o}	{1oc}	{2oc}	
2977	✓	✓	✓	✓	
2982					

**Mains lagging power factor: Engine delayed monitoring (Level 1/Level 2)****Yes / No**

**Yes** ..... Monitoring for fault conditions is not performed until engine delayed monitoring is enabled. The engine monitoring delay time (parameter 3315 on page 175) must expire prior to fault monitoring being enabled for parameters assigned this delay.

**No** ..... Monitoring for this fault condition is continuously enabled regardless of engine speed.

### Configure Monitoring: Mains, Leading Power Factor Monitoring (Levels 1 & 2)

The power factor is monitored for becoming more leading (i.e. capacitive) than an adjustable limit. This limit may be a leading or lagging power factor limit. There are two leading power factor alarm levels available in the control. This monitoring function may be used for monitoring or controlling the power factor compensation. Both alarms are definite time alarms.

Figure 3-11 shows an example of a leading and a lagging power factor limit and the power factor range, for which the leading power factor monitoring issues an alarm.

If this protective function is triggered, the display indicates "**Mains PF leading 1**" or "**Mains PF leading 2**" and the logical command variables 07.19 (level 1) or 07.20 (level 2) are enabled.

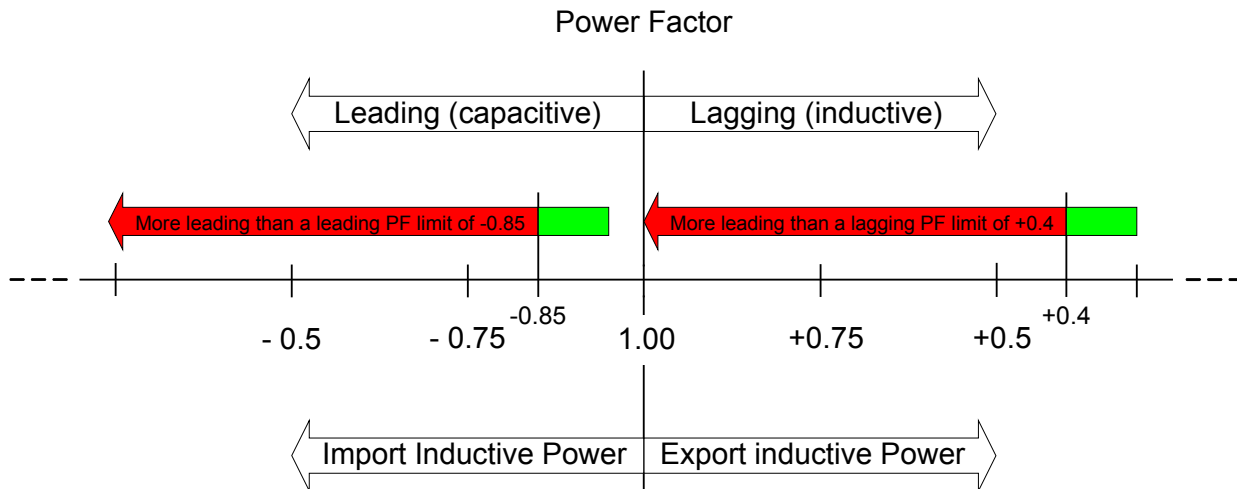


Figure 3-11: Monitoring - mains leading power factor

#### Parameter table

The parameter limits represented in this table have identical permissible ranges. Each parameter may be configured with different settings to create unique trip characteristics for specific thresholds.

Level	Text	Setting range	Default value
<b>Mains leading power factor</b>			
Level 1	Monitoring	On / Off	Off
	Limit	-0.001 to +0.001	-0.900
	Hysteresis	0 to 0.99	0.02
	Delay	0.02 to 99.99 s	10.00 s
	Alarm class	A/B/C/D/E/F	B
	Self acknowledgment	Yes / No	No
	Delayed by engine speed	Yes / No	No
Level 2	Monitoring	On / Off	Off
	Limit	-0.001 to +0.001	-0.800
	Hysteresis	0 to 0.99	0.02
	Delay	0.02 to 99.99 s	1.00 s
	Alarm class	A/B/C/D/E/F	B
	Self acknowledgment	Yes / No	No
	Delayed by engine speed	Yes / No	No

Table 3-26: Monitoring - standard values - mains leading power factor



EN	Monitoring				
DE	Überwachung				
CL2	{0}	{1o}	{1oc}	{2oc}	
3025	✓	✓	✓	✓	
3030					

**Mains leading power factor: Monitoring (Level 1/Level 2)****On / Off**

**On** ..... Mains leading power factor monitoring is carried out according to the following parameters. Monitoring is performed at two levels. Both values may be configured independent from each other.

**Off** ..... Monitoring is disabled for Level 1 limit and/or Level 2 limit.

EN	Limit				
DE	Grenzwert				
CL2	{0}	{1o}	{1oc}	{2oc}	
3028	✓	✓	✓	✓	
3033					

**Mains leading power factor: Threshold value (Level 1/Level 2)****-0.001 to +0.001**

The values that are to be monitored for each threshold limit are defined here. If the power factor becomes more leading (i.e. capacitive, refer to Figure 3-11) than a leading PF value (negative) or a lagging PF value (positive) for at least the delay time (parameters 3029 or 3034) without interruption, the logical command variables 07.19 (level 1) or 07.20 (level 2) are enabled and the action specified by the alarm class is initiated.

EN	Hysteresis				
DE	Hysterese				
CL2	{0}	{1o}	{1oc}	{2oc}	
3039	✓	✓	✓	✓	
3040					

**Mains leading power factor: Hysteresis (Level 1/Level 2)****0.0 to 0.99**

The monitored power factor must return within the limits configured in parameter 3028 or 3033 plus the value configured here, to reset the alarm.

EN	Delay				
DE	Verzögerung				
CL2	{0}	{1o}	{1oc}	{2oc}	
3029	✓	✓	✓	✓	
3034					

**Mains leading power factor: Delay (Level 1/Level 2)****0.02 to 99.99 s**

If the monitored generator power factor is more leading than the configured limit for the delay time configured here, an alarm will be issued. If the monitored generator power factor returns within the limit (plus the hysteresis configured in parameter 3039 or 3040) before the delay expires the time will be reset.

EN	Alarm class				
DE	Alarmlasse				
CL2	{0}	{1o}	{1oc}	{2oc}	
3035	✓	✓	✓	✓	
3036					

**Mains leading power factor: Alarm class (Level 1/Level 2)****Class A/B/C/D/E/F**

① See chapter "Alarm" on page 250.

Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.

EN	Self acknowledge				
DE	Selbstquittierend				
CL2	{0}	{1o}	{1oc}	{2oc}	
3026	✓	✓	✓	✓	
3031					

**Mains leading power factor: Self acknowledgment (Level 1/Level 2)****Yes / No**

**Yes** ..... The control automatically clears the alarm if the fault condition is no longer detected.

**No** ..... The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the *LogicsManager* output "External acknowledgement" (via a discrete input or via an interface).

EN	Delayed by engine speed				
DE	Verzögert durch Motordrehzahl				
CL2	{0}	{1o}	{1oc}	{2oc}	
3027	✓	✓	✓	✓	
3032					

**Mains leading power factor: Delayed engine speed (Level 1/Level 2)****Yes / No**

**Yes** ..... Monitoring for fault conditions is not performed until engine delayed monitoring is enabled. The engine monitoring delay time (parameter 3315 on page 175) must expire prior to fault monitoring being enabled for parameters assigned this delay.

**No** ..... Monitoring for this fault condition is continuously enabled regardless of engine speed.

## Configure Monitoring: Engine

### Configure Monitoring: Engine, Overspeed (Levels 1 & 2) ANSI# 12

The speed measured by the magnetic pickup unit (MPU) is monitored for overspeed. If the MPU is disabled, the speed may only be monitored using the generator overfrequency monitoring. If the MPU speed exceeds the overspeed limits the configured alarms will be initiated.

If this protective function is triggered, the display indicates "**Overspeed 1**" or "**Overspeed 2**".

Refer to Appendix E: Triggering Characteristics, Figure 3-36 on page 305 for the triggering characteristic of this monitoring function.

#### Parameter table

The parameter limits represented in this table have identical permissible ranges. Each parameter may be configured with different settings to create unique trip characteristics for specific thresholds.

Level	Text	Setting range	Default value
<b>Engine overspeed</b> (the hysteresis is 50 min <sup>-1</sup> ).			
Level 1	Monitoring	On / Off	On
	Limit	0 to 9,999 RPM	1,850 RPM
	Delay	0.02 to 99.99 s	1.00 s
	Alarm class	A/B/C/D/E/F	B
	Self acknowledgment	Yes / No	No
	Delayed by engine speed	Yes / No	No
Level 2	Monitoring	On / Off	On
	Limit	0 to 9,999 RPM	1,900 RPM
	Delay	0.02 to 99.99 s	0.10 s
	Alarm class	A/B/C/D/E/F	F
	Self acknowledgment	Yes / No	No
	Delayed by engine speed	Yes / No	No

Table 3-27: Monitoring - standard values - engine overspeed

EN	Monitoring			
DE	Überwachung			
CL2	{0}	{1o}	{1oc}	{2oc}
2100	✓	✓	✓	✓
2106				

#### Engine overspeed: Monitoring (Level 1/Level 2)

On / Off

**On** ..... Overspeed monitoring is carried out according to the following parameters. Monitoring is performed at two levels. Both values may be configured independent from each other (prerequisite: Level 1 > Level 2).

**Off** ..... Monitoring is disabled for Level 1 limit and/or Level 2 limit.

EN	Limit			
DE	Grenzwert			
CL2	{0}	{1o}	{1oc}	{2oc}
2104	✓	✓	✓	✓
2110				

#### Engine overspeed: Threshold value (Level 1/Level 2)

0 to 9,999 RPM

The threshold values that are to be monitored are defined here. If the monitored engine speed reaches or exceeds this value for at least the delay time without interruption, the action specified by the alarm class is initiated.

EN	Delay			
DE	Verzögerung			
CL2	{0}	{1o}	{1oc}	{2oc}
2105	✓	✓	✓	✓
2111				

#### Engine overspeed: Delay (Level 1/Level 2)

0.02 to 99.99 s

If the monitored engine speed exceeds the threshold value for the delay time configured here, an alarm will be issued. If the monitored engine speed falls below the threshold (minus the hysteresis) before the delay expires the time will be reset.

EN	Alarm class			
DE	Alarmlasse			
CL2	{0}	{1o}	{1oc}	{2oc}
2101	✓	✓	✓	✓
2107				

#### Engine overspeed: Alarm class (Level 1/Level 2)

Class A/B/C/D/E/F

① See chapter "Alarm" on page 250.

Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.

EN	Self acknowledge				
DE	Selbstquittierend				
CL2	{0}	{1o}	{1oc}	{2oc}	
2102	✓	✓	✓	✓	
2108					

Engine overspeed: Self acknowledgment (Level 1/Level 2)	Yes / No
<b>Yes</b> .....	The control automatically clears the alarm if the fault condition is no longer detected.
<b>No</b> .....	The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the <i>LogicsManager</i> output "External acknowledgement" (via a discrete input or via an interface).

EN	Delayed by engine speed				
DE	Verzögert durch Motordrehzahl				
CL2	{0}	{1o}	{1oc}	{2oc}	
2103	✓	✓	✓	✓	
2109					

Engine overspeed: Engine delayed monitoring (Level 1/Level 2)	Yes / No
<b>Yes</b> .....	Monitoring for fault conditions is not performed until engine delayed monitoring is enabled. The engine monitoring delay time (parameter 3315 on page 175) must expire prior to fault monitoring being enabled for parameters assigned this delay.
<b>No</b> .....	Monitoring for this fault condition is continuously enabled regardless of engine speed.

## Configure Monitoring: Engine, Underspeed (Levels 1 & 2)

The speed measured by the magnetic pickup unit (MPU) is monitored for underspeed. If the MPU is disabled, the speed may only be monitored using the generator underfrequency monitoring. If the MPU speed falls below the underspeed limits the configured alarms will be initiated.

If this protective function is triggered, the display indicates "**Underspeed 1**" or "**Underspeed 2**".

Refer to Appendix E: Triggering Characteristics, Figure 3-37 on page 306 for the triggering characteristic of this monitoring function.

### Parameter table

The parameter limits represented in this table have identical permissible ranges. Each parameter may be configured with different settings to create unique trip characteristics for specific thresholds.

Level	Text	Setting range	Default value
<b>Engine underspeed</b> (the hysteresis is 50 min <sup>-1</sup> )			
Level 1	Monitoring	On / Off	On
	Limit	0 to 9,999 RPM	1,300 RPM
	Delay	0.02 to 99.99 s	1.00 s
	Alarm class	A/B/C/D/E/F	B
	Self acknowledgment	Yes / No	No
	Delayed by engine speed	Yes / No	Yes
Level 2	Monitoring	On / Off	On
	Limit	0 to 9,999 RPM	1,250 RPM
	Delay	0.02 to 99.99 s	0.10 s
	Alarm class	A/B/C/D/E/F	F
	Self acknowledgment	Yes / No	No
	Delayed by engine speed	Yes / No	Yes

Table 3-28: Monitoring - standard values - engine underspeed

Monitoring				
Überwachung				
CL2	{0}	{1o}	{1oc}	{2oc}
2150	✓	✓	✓	✓
2156				

### Engine underspeed: Monitoring (Level 1/Level 2)

On / Off

**On** ..... Underspeed monitoring is carried out according to the following parameters. Monitoring is performed at two levels. Both values may be configured independent from each other (prerequisite: Level 1 > Level 2).

**Off** ..... Monitoring is disabled for Level 1 limit and/or Level 2 limit.

Limit				
Grenzwert				
CL2	{0}	{1o}	{1oc}	{2oc}
2154	✓	✓	✓	✓
2160				

### Engine underspeed: Threshold value (Level 1/Level 2)

0 to 9,999 RPM

The threshold values that are to be monitored are defined here. If the monitored engine speed reaches or falls below this value for at least the delay time without interruption, the action specified by the alarm class is initiated.

Delay				
Verzögerung				
CL2	{0}	{1o}	{1oc}	{2oc}
2155	✓	✓	✓	✓
2161				

### Engine underspeed: Delay (Level 1/Level 2)

0.02 to 99.99 s

If the monitored engine speed falls below the threshold value for the delay time configured here, an alarm will be issued. If the monitored engine speed exceeds the threshold (plus the hysteresis) again before the delay expires the time will be reset.

Alarm class				
Alarmklasse				
CL2	{0}	{1o}	{1oc}	{2oc}
2151	✓	✓	✓	✓
2157				

### Engine underspeed: Alarm class (Level 1/Level 2)

Class A/B/C/D/E/F

| ⓘ See chapter "Alarm" on page 250. |

Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.

EN	Self acknowledge				
DE	Selbstquittierend				
CL2	{0}	{1o}	{1oc}	{2oc}	
2152	✓	✓	✓	✓	
2158					

Engine underspeed: Self acknowledgment (Level 1/Level 2)		Yes / No
Yes .....	The control automatically clears the alarm if the fault condition is no longer detected.	
No .....	The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the <i>LogicsManager</i> output "External acknowledgement" (via a discrete input or via an interface).	

EN	Delayed by engine speed				
DE	Verzögert durch Motordrehzahl				
CL2	{0}	{1o}	{1oc}	{2oc}	
2153	✓	✓	✓	✓	
2159					

Engine underspeed: Engine delayed monitoring (Level 1/Level 2)		Yes / No
Yes .....	Monitoring for fault conditions is not performed until engine delayed monitoring is enabled. The engine monitoring delay time (parameter 3315 on page 175) must expire prior to fault monitoring being enabled for parameters assigned this delay.	
No .....	Monitoring for this fault condition is continuously enabled regardless of engine speed.	

### Configure Monitoring: Engine/Generator, Speed Detection (Speed/Frequency Mismatch)

Speed detection checks if the generator voltage frequency  $f$  (determined from the measured generator voltage) differs from the measured engine speed  $n$  (determined from the Pickup signal) and determines a difference ( $\Delta f-n$ ). If the two frequencies are not identical ( $\Delta f-n \neq 0$ ) and the monitored frequency mismatch reaches or exceeds the threshold, an alarm is output. Additionally the *LogicsManager* output "Firing speed" is checked upon its logical status with respect to the measuring values "generator frequency" and "Pickup speed". If this protective function is triggered, the display indicates "Speed/freq. mismatch".



#### NOTE

Speed/frequency mismatch (n/f mismatch) is carried out only if an MPU is connected to the control and parameter "Speed pickup" (parameter 1600 on page 178), is configured On. The following is valid:

- The measurement via Pickup is enabled (On):  
 ⇒ Mismatch monitoring is carried out using the engine speed from the Pickup and the generator frequency. If the speed/frequency mismatch or the *LogicsManager* is enabled and the frequency is outside of the configured limit, an alarm will be issued.
- The measurement via Pickup is disabled (Off):  
 ⇒ Mismatch monitoring is carried out using the generator frequency and the *LogicsManager*. If the *LogicsManager* output is enabled and the frequency is outside of the configured limit, an alarm will be issued.

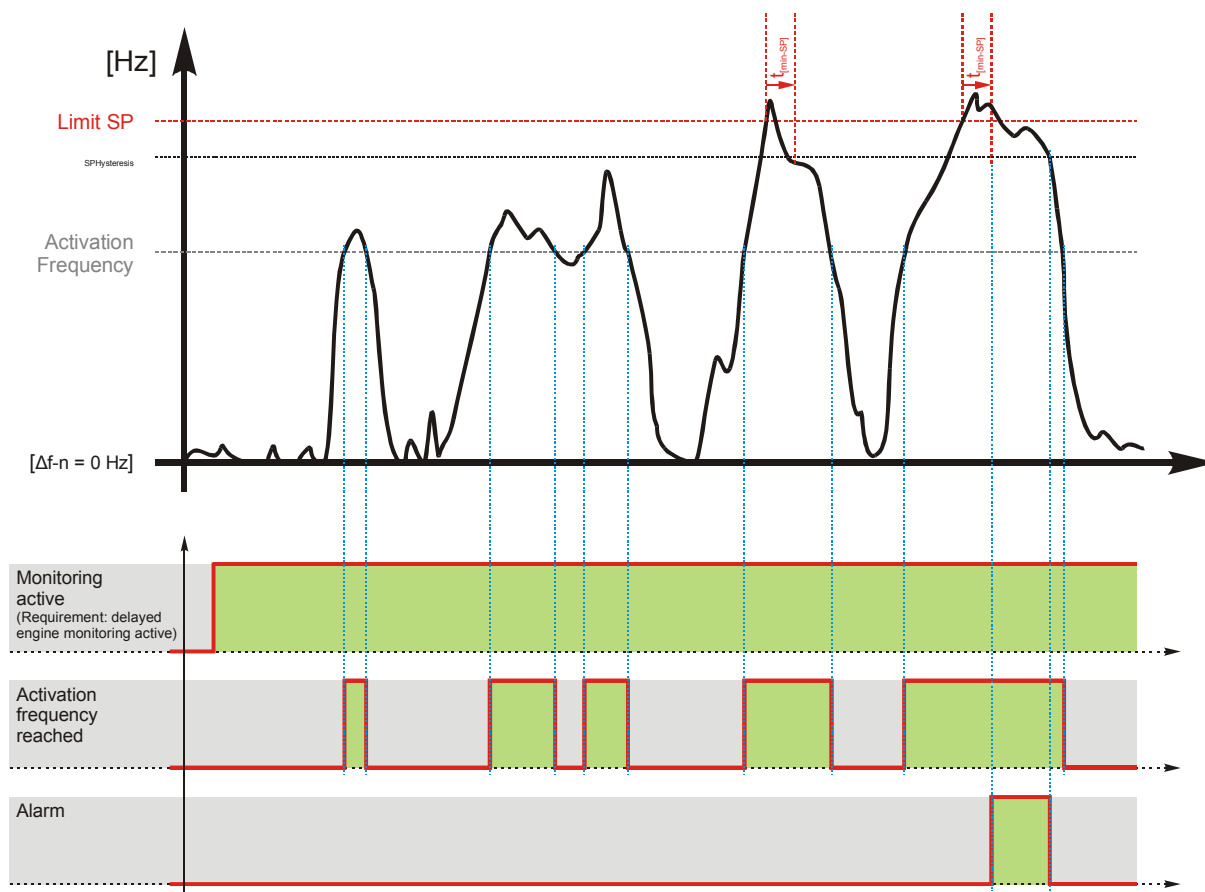


Figure 3-12: Monitoring - plausibility check n/f

## Parameter table

Level	Text	Setting range	Default value
<b>Speed detection (speed/frequency mismatch)</b> (the hysteresis is 50 RPM).			
	Monitoring	On / Off	On
	Speed/frequency mismatch limit	1.5 to 8.5 Hz	5.0 Hz
	Delay	0.02 to 99.99 s	2.00 s
	Activation frequency	15 to 85 Hz	20 Hz
	Alarm class	A/B/C/D/E/F	E
	Self acknowledgment	Yes / No	No

Table 3-29: Monitoring - standard values - plausibility control n/f

EN	<b>Monitoring</b>				<b>n/f/LogicsManager mismatch: Monitoring</b>	<b>On / Off</b>
DE	<b>Überwachung</b>					
CL2	{0}	{1o}	{1oc}	{2oc}	On.....Monitoring of the speed/frequency/LogicsManager mismatch (n/f/LM mismatch) is carried out according to the following parameters. Off.....Monitoring is disabled.	
2450	✓	✓	✓	✓		
EN	<b>Speed/frequency mismatch limit</b>				<b>n/f/LogicsManager mismatch: Threshold value</b>	<b>1.5 to 8.5 Hz</b>
DE	<b>Zulässige Differenz</b>				The frequency mismatch that is to be monitored is defined here. If the monitored frequency mismatch reaches or exceeds this value for at least the delay time without interruption, the action specified by the alarm class is initiated.  The LogicsManager is monitored with respect to his status.	
CL2	{0}	{1o}	{1oc}	{2oc}		
2454	✓	✓	✓	✓		
EN	<b>Delay</b>				<b>n/f/LogicsManager mismatch: Delay</b>	<b>0.02 to 99.99 s</b>
DE	<b>Verzögerung</b>				If the monitored frequency mismatch exceeds the threshold value for the delay time configured here, an alarm will be issued. If the monitored frequency mismatch falls below the threshold (minus the hysteresis) before the delay expires the time will be reset.	
CL2	{0}	{1o}	{1oc}	{2oc}		
2455	✓	✓	✓	✓		
EN	<b>Activation frequency</b>				<b>n/f/LogicsManager mismatch: Start-up frequency</b>	<b>15 to 85 Hz</b>
DE	<b>Überwachung ab</b>				The speed/frequency mismatch monitoring is enabled at this generator frequency.	
CL2	{0}	{1o}	{1oc}	{2oc}		
2453	✓	✓	✓	✓		
EN	<b>Alarm class</b>				<b>n/f/LogicsManager mismatch: Alarm class</b>	<b>Class A/B/C/D/E/F</b>
DE	<b>Alarmklasse</b>				ⓘ See chapter "Alarm" on page 250.	
CL2	{0}	{1o}	{1oc}	{2oc}		
2451	✓	✓	✓	✓		
EN	<b>Self acknowledge</b>				<b>n/f/LogicsManager mismatch: Self acknowledgment</b>	<b>Yes / No</b>
DE	<b>Selbstquittierend</b>				Yes.....The control automatically clears the alarm if the fault condition is no longer detected. No.....The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the LogicsManager output "External acknowledgement" (via a discrete input or via an interface).	
CL2	{0}	{1o}	{1oc}	{2oc}		
2452	✓	✓	✓	✓		

## Configure Monitoring: Engine, Generator Active Power Mismatch

If enabled, this monitoring function becomes only active if generator power control is enabled (refer to Configure Application: Controller, Load Control on page 210 for more information). If the measured generator power deviates from the power set point by a value exceeding the limit configured in parameter 2925 for a time exceeding the delay configured in parameter 2923, an alarm will be issued.

If this protective function is triggered, the display indicates "**Gen act.pwr mismatch**".

Parameter table

Level	Text	Setting range	Default value
<b>Generator active power mismatch</b>			
	Monitoring	On / Off	On
	Limit	0.0 to 30.0%	5.0 %
	Delay	3 to 65000 s	30 s
	Alarm class	A/B/C/D/E/F	B
	Self acknowledgment	Yes / No	No

Table 3-30: Monitoring - standard values - generator active power mismatch

EN	Monitoring
DE	Überwachung
CL2 2920	{0} {1o} {1oc} {2oc}
	✓ ✓ ✓ ✓

### Generator active power mismatch: Monitoring

On / Off

**On**.....Monitoring of the generator active power mismatch is carried out according to the following parameters.

**Off**.....Monitoring is disabled.

EN	Limit
DE	Grenzwert
CL2 2925	{0} {1o} {1oc} {2oc}
	✓ ✓ ✓ ✓

### Generator active power mismatch: Threshold value

0.0 to 30.0 %

① This value refers to the generator rated active power (parameter 1752on page 29).

If the difference between the measured generator power and the power set point exceeds this value for at least the delay time (parameter 2923) without interruption, the action specified by the alarm class is initiated.

EN	Delay
DE	Verzögerung
CL2 2923	{0} {1o} {1oc} {2oc}
	✓ ✓ ✓ ✓

### Generator active power mismatch: Delay

3 to 65000 s

If the monitored active power mismatch exceeds the threshold value configured in parameter 2925 for the delay time configured here, an alarm will be issued. If the monitored active power mismatch falls below the threshold (minus the hysteresis) before the delay expires the time will be reset.

EN	Alarm class
DE	Alarmklasse
CL2 2921	{0} {1o} {1oc} {2oc}
	✓ ✓ ✓ ✓

### Generator active power mismatch: Alarm class

Class A/B/C/D/E/F

① See chapter "Alarm" on page 250.

Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.

EN	Self acknowledge
DE	Selbstquittierend
CL2 2922	{0} {1o} {1oc} {2oc}
	✓ ✓ ✓ ✓

### Generator active power mismatch: Self acknowledge

Yes / No

**Yes**.....The control automatically clears the alarm if the fault condition is no longer detected.

**No**.....The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the *LogicsManager* output "External acknowledgement" (via a discrete input or via an interface).



## Configure Monitoring: Engine, Mains Active Power Mismatch

If enabled, this monitoring function becomes only active if generator power control is enabled and the active power set point is configured to "Import" or "Export" (refer to Configure Application: Controller, Load Control on page 210 for more information). If the measured import or export power deviates from the power set point by a value exceeding the limit configured in parameter 2935 for a time exceeding the delay configured in parameter 2933, an alarm will be issued.

If this protective function is triggered, the display indicates "**Mns act.pwr mismatch**".

Parameter table

Level	Text	Setting range	Default value
<b>Mains active power mismatch</b>			
	Monitoring	On / Off	On
	Limit	1.0 to 99.9%	5.0 %
	Delay	3 to 65000 s	30 s
	Alarm class	A/B/C/D/E/F	B
	Self acknowledgment	Yes / No	No

Table 3-31: Monitoring - standard values - mains active power mismatch

DE	EN	Monitoring				Mains active power mismatch: Monitoring		On / Off
		Überwachung						
CL2		{0}	{1o}	{1oc}	{2oc}	On .....	Monitoring of the mains active power mismatch is carried out according to the following parameters.	
2930		✓	✓	✓	✓	Off.....	Monitoring is disabled.	
DE	EN	Limit				Mains active power mismatch: Threshold value		1.0 to 99.9 %
		Grenzwert						
CL2		{0}	{1o}	{1oc}	{2oc}	ⓘ This value refers to the mains rated active power (parameter 1748on page 29).		
2935		✓	✓	✓	✓			
If the difference between the measured import or export power and the power set point exceeds this value for at least the delay time (parameter 2933) without interruption, the action specified by the alarm class is initiated.								
DE	EN	Delay				Mains active power mismatch: Delay		3 to 65000 s
		Verzögerung						
CL2		{0}	{1o}	{1oc}	{2oc}	If the monitored active power mismatch exceeds the threshold value configured in parameter 2935 for the delay time configured here, an alarm will be issued. If the monitored active power mismatch falls below the threshold (minus the hysteresis) before the delay expires the time will be reset.		
2933		✓	✓	✓	✓			
DE	EN	Alarm class				Mains active power mismatch: Alarm class		Class A/B/C/D/E/F
		Alarmklasse						
CL2		{0}	{1o}	{1oc}	{2oc}	ⓘ See chapter "Alarm" on page 250.		
2931		✓	✓	✓	✓			
Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.								
DE	EN	Self acknowledge				Mains active power mismatch: Self acknowledge		Yes / No
		Selbstquittierend						
CL2		{0}	{1o}	{1oc}	{2oc}	Yes .....	The control automatically clears the alarm if the fault condition is no longer detected.	
2932		✓	✓	✓	✓	No.....	The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the <i>LogicsManager</i> output "External acknowledgement" (via a discrete input or via an interface).	

## Configure Monitoring: Engine, Generator Unloading Mismatch

This monitoring function is always enabled and becomes active when a stop command is issued. Following a stop command, the controller tries to reduce the power before opening the GCB. If the power falls below the unload limit (parameter 3125) before the delay (parameter 3123) expires, a "GCB open" command will be issued. If the controller fails to reduce the power to fall below the unload limit (parameter 3125) before the delay (parameter 3123) expires, a "GCB open" command will be issued together with an alarm.

If this protective function is triggered, the display indicates **"Gen. unloading fault"**.

Parameter table

Level	Text	Setting range	Default value
<b>Generator unloading mismatch</b>			
	Unload Limit	0.5 to 99.9%	3.0 %
	Delay	2 to 9999 s	60 s
	Alarm class	A/B/C/D/E/F	B
	Self acknowledgment	Yes / No	No

Table 3-32: Monitoring - standard values - generator unloading mismatch

EN	Unload Limit			
DE	Abschaltleistung			
CL2 3125	{0} ✓	{10} ✓	{100} ✓	{200} ✓

### Generator unloading mismatch: Threshold value

0.5 to 99.9 %

① This value refers to the generator rated active power (parameter 1752 on page 29).

If the monitored generator power falls below this value, a "GCB open" command will be issued.

EN	Delay			
DE	Verzögerung			
CL2 3123	{0} ✓	{10} ✓	{100} ✓	{200} ✓

### Generator unloading mismatch: Delay

2 to 9999 s

If the monitored generator power does not fall below the limit configured in parameter 3125 before the time configured here expires, a "GCB open" command will be issued together with an alarm.

EN	Alarm class			
DE	Alarmklasse			
CL2 3121	{0} ✓	{10} ✓	{100} ✓	{200} ✓

### Generator unloading mismatch: Alarm class

Class A/B/C/D/E/F

① See chapter "Alarm" on page 250.

Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.

EN	Self acknowledge			
DE	Selbstquittierend			
CL2 3122	{0} ✓	{10} ✓	{100} ✓	{200} ✓

### Generator unloading mismatch: Self acknowledge

Yes / No

**Yes** ..... The control automatically clears the alarm if the fault condition is no longer detected.

**No** ..... The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the *LogicsManager* output "External acknowledgement" (via a discrete input or via an interface).

Configure Monitoring: Engine, Start Failure

If it is not possible to start the engine within a configured number of start attempts (refer to Configure Application: Configure Engine, Start/Stop on page 173), an alarm will be initiated.  
If this protective function is triggered, the display indicates "**Start fail**".

Parameter table

Level	Text	Setting range	Default value
Engine start failure			
	Monitoring	On / Off	On
	Alarm class	A/B/C/D/E/F	F
	Self acknowledgment	Yes / No	No

Table 3-33: Monitoring - standard values - engine start failure

EN	Monitoring				
DE	Überwachung				
CL2	{0}	{1o}	{1oc}	{2oc}	
3303	✓	✓	✓	✓	

Start failure: Monitoring On / Off

**On** ..... Monitoring of the start sequence is carried out according to the following parameters.  
**Off** ..... Monitoring is disabled.

EN	Alarm class				
DE	Alarmklasse				
CL2	{0}	{1o}	{1oc}	{2oc}	
3304	✓	✓	✓	✓	

Startup failure: Alarm class Class A/B/C/D/E/F

| ⓘ See chapter "Alarm" on page 250. |

Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.

EN	Self acknowledge				
DE	Selbstquittierend				
CL2	{0}	{1o}	{1oc}	{2oc}	
3305	✓	✓	✓	✓	

Start failure: Self acknowledgment Yes / No

**Yes** ..... The control automatically clears the alarm if the fault condition is no longer detected.  
**No** ..... The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the *LogicsManager* output "External acknowledgement" (via a discrete input or via an interface).

## Configure Monitoring: Engine, Shutdown Malfunction

If it is not possible to stop the engine within a configured time, an alarm will be initiated.

If this protective function is triggered, the display indicates "**Eng. stop malfunct.**".

### Parameter table

Level	Text	Setting range	Default value
<b>Engine shutdown malfunction</b>			
	Monitoring	On / Off	On
	Maximal stop delay	3 to 999 s	30 s
	Alarm class	A/B/C/D/E/F	F
	Self acknowledgment	Yes / No	No

Table 3-34: Monitoring - standard values - engine shutdown malfunction

EN	Monitoring			
DE	Überwachung			
CL2	{0}	{1o}	{1oc}	{2oc}
2500	✓	✓	✓	✓

### Stop failure: Monitoring

On / Off

**On**.....Monitoring of the stop sequence is carried out according to the following parameters.

**Off**.....Monitoring is disabled.

EN	Maximal stop delay			
DE	Verzögerung Abstellstörung			
CL2	{0}	{1o}	{1oc}	{2oc}
2503	✓	✓	✓	✓

### Stop failure: Delay

3 to 999 s

The maximum permissible time between the output of a stop command and the reply that the engine is stopped successfully is defined here. If the engine cannot be stopped within this time (this means speed via the Pickup, frequency via the generator voltage, or the *LogicsManager* is detected) the action specified by the alarm class is initiated.

EN	Alarm class			
DE	Alarmklasse			
CL2	{0}	{1o}	{1oc}	{2oc}
2501	✓	✓	✓	✓

### Stop failure: Alarm class

Class A/B/C/D/E/F

| ⓘ See chapter "Alarm" on page 250. |

Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.

EN	Self acknowledge			
DE	Selbstquittierend			
CL2	{0}	{1o}	{1oc}	{2oc}
2502	✓	✓	✓	✓

### Stop failure: Self acknowledgment

Yes / No

**Yes**.....The control automatically clears the alarm if the fault condition is no longer detected.

**No**.....The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the *LogicsManager* output "External acknowledgement" (via a discrete input or via an interface).



## NOTE

We recommend to assign this monitoring function to a discrete output to be able to shutdown the engine with an external device to provide a shutdown redundancy.

Configure Monitoring: Engine, Unintended Stop

If an engine stop has been detected without a stop command being issued, an alarm will be initiated.  
If this protective function is triggered, the display indicates "**Unintended stop**".

Parameter table

Level	Text	Setting range	Default value
Engine unintended stop			
	Monitoring	On / Off	On
	Alarm class	A/B/C/D/E/F	F
	Self acknowledgment	Yes / No	No

Table 3-35: Monitoring - standard values - engine unintended stop

EN	Monitoring				
DE	Überwachung				
CL2	{0}	{1o}	{1oc}	{2oc}	
2650	✓	✓	✓	✓	

Unintended stop: Monitoring On / Off

**On** ..... Monitoring of an unintended stop is carried out according to the following parameters.  
**Off** ..... Monitoring is disabled.

EN	Alarm class				
DE	Alarmklasse				
CL2	{0}	{1o}	{1oc}	{2oc}	
2651	✓	✓	✓	✓	

Unintended stop: Alarm class Class A/B/C/D/E/F

| ⓘ See chapter "Alarm" on page 250. |

Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.

EN	Self acknowledge				
DE	Selbstquittierend				
CL2	{0}	{1o}	{1oc}	{2oc}	
2657	✓	✓	✓	✓	

Unintended stop: Self acknowledge Yes / No

**Yes** ..... The control automatically clears the alarm if the fault condition is no longer detected.  
**No** ..... The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the *LogicsManager* output "External acknowledgement" (via a discrete input or via an interface).

## Configure Monitoring: Engine, Operating Range Failure

The operating range failure monitoring issues an alarm if one of the following conditions is fulfilled:

- The easYgen tries to close the GCB, but the generator is not within its operating range (parameters 5800, 5801, 5802, or 5803 on page 38)
- The easYgen tries to synchronize the GCB, but the busbar is not within the generator operating range (parameters 5800, 5801, 5802, or 5803 on page 38)
- The easYgen tries to close the GCB to the dead busbar, but the busbar voltage is NOT below the dead bus detection limit (parameter 5820 on page 143)

No alarm will be issued in idle mode.

If this protective function is triggered, the display indicates "**Operat. range failed**".

Parameter table

Level	Text	Setting range	Default value
<b>Operating range failure</b>			
	Monitoring	On / Off	On
	Delay	1 to 999 s	30 s
	Alarm class	A/B/C/D/E/F	B
	Self acknowledgment	Yes / No	No

Table 3-36: Monitoring - standard values - engine dead bus operation

EN	Monitoring
DE	Überwachung
CL2	{0} {1o} {1oc} {2oc}
2660	✓ ✓ ✓ ✓

### Operating range failure: Monitoring

On / Off

**On** .....Monitoring of the operating range is carried out according to the following parameters.

**Off** .....Monitoring is disabled.

EN	Delay
DE	Verzögerung
CL2	{0} {1o} {1oc} {2oc}
2663	✓ ✓ ✓ ✓

### Operating range failure: Delay

1 to 999 s

If one of the above mentioned conditions for an operating range failure is fulfilled, an alarm will be issued. If the respective condition is not fulfilled anymore before the delay time expires, the delay time will be reset.

EN	Alarm class
DE	Alarmklasse
CL2	{0} {1o} {1oc} {2oc}
2661	✓ ✓ ✓ ✓

### Operating range failure: Alarm class

Class A/B/C/D/E/F

❗ See chapter "Alarm" on page 250.

Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.

EN	Self acknowledge
DE	Selbstquittierend
CL2	{0} {1o} {1oc} {2oc}
2662	✓ ✓ ✓ ✓

### Operating range failure: Self acknowledge

Yes / No

**Yes** .....The control automatically clears the alarm if the fault condition is no longer detected.

**No** .....The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the *LogicsManager* output "External acknowledgement" (via a discrete input or via an interface).



## CAUTION

If load-dependent start/stop (refer to **Configure Application: Automatic, Load-Dependent Start/Stop** on page 183) is enabled, this monitoring function must be configured with a shutdown alarm class (C, D, E, or F) or disable load-dependent start/stop if triggered to ensure that the next engine will be started.

## Configure Monitoring: Engine, Charge Alternator (D+)

The charge alternator monitoring issues an alarm if the voltage measured at the auxiliary excitation input D+ (terminal 65) falls below a fix limit. The fix limit depends on the power supply voltage. If a power supply voltage exceeding 16 V is detected, the unit assumes a 24 V system and uses a limit of 20 V. If a power supply voltage below 16 V is detected, the unit assumes a 12 V system and uses a limit of 9 V.

If this protective function is triggered, the display indicates "**Charge alt. low volt**".

Parameter table

Level	Text	Setting range	Default value
<b>Engine charge alternator</b>			
	Monitoring	On / Off	Off
	Delay	2 to 9999 s	10 s
	Alarm class	A/B/C/D/E/F	B
	Self acknowledgment	Yes / No	No
	Delayed by engine speed	Yes / No	Yes

Table 3-37: Monitoring - standard values - engine charge alternator failure

DE	EN	Monitoring					Charge alternator failure: Monitoring	On / Off
		Überwachung						
CL2		{0}	{1o}	{1oc}	{2oc}	On .....	Monitoring of the charge alternator is carried out according to the following parameters.	
4050		✓	✓	✓	✓	Off.....	Monitoring is disabled.	
DE	EN	Delay					Charge alternator failure: Delay	2 to 9999 s
		Verzögerung						
CL2		{0}	{1o}	{1oc}	{2oc}	If the voltage measured at the auxiliary excitation input D+ falls below a fixed limit for the time defined here, an alarm will be issued. If the voltage returns within the limit before the delay time expires, the delay time will be reset.		
4055		✓	✓	✓	✓			
DE	EN	Alarm class					Charge alternator failure: Alarm class	Class A/B/C/D/E/F
		Alarmklasse						
CL2		{0}	{1o}	{1oc}	{2oc}	ⓘ See chapter "Alarm" on page 250.		
4051		✓	✓	✓	✓			
Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.								
DE	EN	Self acknowledge					Charge alternator failure: Self acknowledge	Yes / No
		Selbstquittierend						
CL2		{0}	{1o}	{1oc}	{2oc}	Yes .....	The control automatically clears the alarm if the fault condition is no longer detected.	
4052		✓	✓	✓	✓	No.....	The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the <i>LogicsManager</i> output "External acknowledgement" (via a discrete input or via an interface).	
DE	EN	Delayed by engine speed					Charge alternator failure: Engine delayed monitoring (Level 1/Level 2)	Yes / No
		Verzögert durch Motordrehz.						
CL2		{0}	{1o}	{1oc}	{2oc}	Yes .....	Monitoring for fault conditions is not performed until engine delayed monitoring is enabled. The engine monitoring delay time (parameter 3315 on page 175) must expire prior to fault monitoring being enabled for parameters assigned this delay.	
4053		✓	✓	✓	✓	No.....	Monitoring for this fault condition is continuously enabled regardless of engine speed.	

## Configure Monitoring: Breaker Monitoring

### Configure GCB

Circuit breaker monitoring contains two alarms: A breaker reclose alarm and a breaker open alarm.

**Reclose Alarm:** If the control initiates a close of the breaker and the breaker fails to close after the configured number of attempts the monitoring CB alarm will be initiated (refer to parameter "GCB maximum closing attempts", parameter 3418 on page 112).

If this protective function is triggered, the display indicates "**GCB fail to close**".

**Breaker Open Alarm:** If the control is attempting to open the circuit breaker and it fails to see that the CB is open within the configured time in seconds after issuing the breaker open command then the monitoring CB alarm will be initiated (refer to parameter "GCB open monitoring", parameter 3420 on page 112).

If this protective function is triggered, the display indicates "**GCB fail to open**".

Parameter table

Level	Text	Setting range	Default value
<b>Breaker monitoring - GCB</b>			
	Monitoring	On / Off	On
	GCB alarm class	A/B/C/D/E/F	C
	GCB maximum closing attempts	1 to 10	5
	GCB open monitoring	0.10 to 5.00 s	2 s

Table 3-38: Monitoring - standard values - breaker monitoring - GCB

EN	DE	CL	GLS Überwachung
		2600	{0} {1o} {1oc} {2oc}
			--- ✓ ✓ ✓

#### Circuit breaker monitoring GCB: Monitoring

On / Off

**On** ..... Monitoring of the GCB is carried out according to the following parameters.

**Off**..... Monitoring is disabled.

EN	DE	CL	GLS Alarmklasse
		2601	{0} {1o} {1oc} {2oc}
			--- ✓ ✓ ✓

#### Circuit breaker monitoring GCB: Alarm class

Class A/B/C/D/E/F

| ⓘ See chapter "Alarm" on page 250. |

Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.

EN	DE	CL	GLS ZU max. Schaltversuche
		3418	{0} {1o} {1oc} {2oc}
			--- --- ✓ ✓

#### Breaker monitoring GCB: Max. "GCB close" attempts

1 to 10

The maximum number of breaker closing attempts is configured in this parameter (relay output "Command: close GCB"). When the breaker reaches the configured number of attempts, a GCB failure alarm is issued. The counter for the closure attempts will be reset as soon as the "Reply GCB" is de-energized for at least 5 seconds to signal a closed GCB.

EN	DE	CL	GLS AUF Überwachung
		3420	{0} {1o} {1oc} {2oc}
			--- ✓ ✓ ✓

#### Breaker monitoring GCB: Max. time until reply "GCB open"

0.10 to 5.00 s

If the "Reply GCB" is not detected as energized once this timer expires, a GCB failure alarm is issued. This timer initiates as soon as the "open breaker" sequence begins. The alarm configured in parameter 2601 is issued.



### CAUTION

If load-dependent start/stop (refer to Configure Application: Automatic, Load-Dependent Start/Stop on page 183) is enabled, this monitoring function must be configured with a shutdown alarm class (C, D, E, or F) or disable load-dependent start/stop if triggered to ensure that the next engine will be started.



## Configure Synchronization GCB

Parameter table

Level	Text	Setting range	Default value
<b>Breaker monitoring - GCB synchronization</b>			
	Monitoring	On / Off	On
	Timeout	3 to 999 s	60 s
	Alarm class	A/B/C/D/E/F	B
	Self acknowledgment	Yes / No	No

Table 3-39: Monitoring - standard values - breaker monitoring - GCB synchronization

EN	Monitoring
DE	Überwachung
CL2	{0} {1o} {1oc} {2oc}
3060	✓ ✓ ✓ ✓

### Synchronization GCB: Monitoring

On / Off

**On** ..... Monitoring of the GCB synchronization is carried out according to the following parameters.

**Off** ..... Monitoring is disabled.

EN	Timeout
DE	Mindestzeit
CL2	{0} {1o} {1oc} {2oc}
3063	✓ ✓ ✓ ✓

### Synchronization GCB: Timeout

3 to 999 s

If it was not possible to synchronize the GCB within the time configured here, an alarm will be issued.

EN	Alarm class
DE	Alarmklasse
CL2	{0} {1o} {1oc} {2oc}
3061	✓ ✓ ✓ ✓

### Synchronization GCB: Alarm class

Class A/B/C/D/E/F

④ See chapter "Alarm" on page 250.

Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.

EN	Self acknowledge
DE	Selbstquittierend
CL2	{0} {1o} {1oc} {2oc}
3062	✓ ✓ ✓ ✓

### Synchronization GCB: Self acknowledge

Yes / No

**Yes** ..... The control automatically clears the alarm if the fault condition is no longer detected.

**No** ..... The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the *LogicsManager* output "External acknowledgement" (via a discrete input or via an interface).



## CAUTION

If load-dependent start/stop (refer to **Configure Application: Automatic, Load-Dependent Start/Stop** on page 183) is enabled, this monitoring function must be configured with a shutdown alarm class (C, D, E, or F) or disable load-dependent start/stop if triggered to ensure that the next engine will be started.

## Configure MCB {2oc}



### NOTE

If an alarm is detected when attempting to close the MCB, an emergency power operation will be carried out if the "Emergency start with MCB failure" is On.

If an alarm class higher than 'B' class has been selected it will not be possible to start the engine with the setting "Emergency start with MCB failure" (parameter 3408 on page 181) = configured as On in an emergency power condition.

Circuit breaker monitoring contains two alarms: A breaker reclose alarm and a breaker open alarm.

**Reclose Alarm:** If the control initiates a close of the breaker and the breaker fails to close after the configured number of attempts the monitoring CB alarm will be initiated.

(Refer to parameter "MCB maximum closing attempts", parameter 3419 on page 115).

If this protective function is triggered, the display indicates "**MCB fail to close**".

**Breaker Open Alarm:** If the control is attempting to open the circuit breaker and it fails to see that the CB is open within the configured time in seconds after issuing the breaker open command then the monitoring CB alarm will be initiated.

(Refer to parameter "MCB open monitoring", parameter 3421 on page 115).

If this protective function is triggered, the display indicates "**MCB fail to open**".

The alarm classes have the following influence to the function of the unit.

#### Fault at 'closing the MCB'

Alarm classes A & B:

- Parameter 2802 on page 181 "Emergency run" = Off  
If the MCB cannot be closed, the busbar remains without voltage, until the MCB breaker fault is acknowledged. The control continues attempting to close the MCB.
- Parameter 2802 on page 181 "Emergency run" = On, parameter 3408 on page 181 "Emergency start with MCB failure" = Off  
If the MCB cannot be closed, the busbar remains without voltage, until the MCB breaker fault is acknowledged. The control continues attempting to close the MCB.
- Parameter 2802 on page 181 "Emergency run" = On, parameter 3408 on page 181 "Emergency start with MCB failure" = On  
If the MCB cannot be closed, an emergency power operation is initiated (the engine is started and the GCB is closed; the busbar is supplied by the generator). If the alarm is acknowledged and if the MCB can be closed, the load is switched to mains supply and the emergency power operation terminates.

#### Fault at 'opening the MCB'

This fault is processed according to the action described within the alarm classes. As long as the reply is present that the MCB is still closed, the GCB cannot be closed.

Parameter table

Level	Text	Setting range	Default value
<b>Breaker monitoring - MCB</b>			
	Monitoring	On / Off	On
	MCB alarm class	A/B/C/D/E/F	B
	MCB maximum closing attempts	1 to 10	5
	MCB open monitoring	0.10 to 5.00 s	2 s

Table 3-40: Monitoring - standard values - breaker monitoring - MCB

N	MCB monitoring			
DE	NLS Überwachung			
CL2	{0}	{1o}	{1oc}	{2oc}
2620	---	---	---	✓

Circuit breaker monitoring MCB: Monitoring	On / Off
On.....	Monitoring of the MCB is carried out according to the following parameters.
Off .....	Monitoring is disabled.

EN	MCB alarm class			
DE	NLS Alarmklasse			
CL2	{0}	{1o}	{1oc}	{2oc}
2621	---	---	---	✓

Circuit breaker monitoring MCB: Alarm class	Class A/B
ⓘ See chapter "Alarm" on page 250.	

Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.

EN	MCB maximum closing attempts			
DE	NLS ZU max. Schaltversuche			
CL2	{0}	{1o}	{1oc}	{2oc}
3419	---	---	---	✓

Breaker monitoring MCB: Max. "MCB close" attempts	1 to 10
The maximum number of breaker closing attempts is configured in this parameter (relay output "Command: close MCB"). When the breaker reaches the configured number of attempts, a MCB failure alarm is issued. The counter for the closure attempts will be reset as soon as the "Reply MCB" is de-energized for at least 5 seconds to signal a closed MCB.	

EN	MCB open monitoring			
DE	NLS AUF Überwachung			
CL2	{0}	{1o}	{1oc}	{2oc}
3421	---	---	---	✓

Breaker monitoring MCB: Max. time until reply "MCB open"	0.10 to 5.00 s
If the "Reply MCB" is not detected as energized once this timer expires, a MCB failure alarm is issued. This timer initiates as soon as the "open breaker" sequence begins. The alarm configured in parameter 2621 is issued.	

## Configure Synchronization MCB

Parameter table

Level	Text	Setting range	Default value
<b>Breaker monitoring - MCB synchronization</b>			
	Monitoring	On / Off	On
	Timeout	3 to 999 s	60 s
	Alarm class	A/B/C/D/E/F	B
	Self acknowledgment	Yes / No	No

Table 3-41: Monitoring - standard values - breaker monitoring - MCB synchronization

EN	Monitoring			
DE	Überwachung			
CL2	{0}	{1o}	{1oc}	{2oc}
3070	✓	✓	✓	✓

### Synchronization MCB: Monitoring

On / Off

**On**.....Monitoring of the MCB synchronization is carried out according to the following parameters.

**Off**.....Monitoring is disabled.

EN	Timeout			
DE	Mindestzeit			
CL2	{0}	{1o}	{1oc}	{2oc}
3073	✓	✓	✓	✓

### Synchronization MCB: Timeout

3 to 999 s

If it was not possible to synchronize the MCB within the time configured here, an alarm will be issued.

EN	Alarm class			
DE	Alarmklasse			
CL2	{0}	{1o}	{1oc}	{2oc}
3071	✓	✓	✓	✓

### Synchronization MCB: Alarm class

Class A/B/C/D/E/F

❶ See chapter "Alarm" on page 250.

Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.

EN	Self acknowledge			
DE	Selbstquittierend			
CL2	{0}	{1o}	{1oc}	{2oc}
3072	✓	✓	✓	✓

### Synchronization MCB: Self acknowledge

Yes / No

**Yes**.....The control automatically clears the alarm if the fault condition is no longer detected.

**No**.....The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the *LogicsManager* output "External acknowledgement" (via a discrete input or via an interface).

## Configure Monitoring: Breakers, Generator / Busbar / Mains Phase Rotation - {2oc}

Correct phase rotation of the phase voltages ensures that damage will not occur during a breaker closure to either the mains or the generator. The voltage phase rotation alarm checks, if the phase rotation of the measured voltage systems are identical. If the control detects different phase rotations of mains and generator, the alarm will be initiated and a breaker synchronization is inhibited. However, this alarm will not prevent a dead busbar closure, i.e. a dead bus start.

If this protective function is triggered, the display indicates "**Ph.rotation mismatch**".

Parameter table

Level	Text	Setting range	Default value
<b>Phase rotation fault</b> (the hysteresis is 0.7 % of the rated value)			
	Monitoring	On / Off	On
	Alarm class	A/B	B
	Self acknowledgment	Yes / No	Yes

Table 3-42: Monitoring - standard values - mains voltage phase rotation



### NOTE

This monitoring function is only enabled if Generator voltage measuring (parameter 1851) and Mains voltage measuring (parameter 1853) are configured to "3Ph 4W" or "3Ph 3W".

EN	Monitoring				
DE	Überwachung				
<b>CL2</b>	{0}	{1o}	{1oc}	{2oc}	
2940	---	---	---	✓	

#### Generator /Busbar / Mains phase rotation: Monitoring

On / Off

**On** ..... Phase rotation monitoring is carried out according to the following parameters

**Off** ..... No monitoring is carried out.

EN	Alarm class				
DE	Alarmklasse				
<b>CL2</b>	{0}	{1o}	{1oc}	{2oc}	
2941	---	---	---	✓	

#### Generator /Busbar / Mains phase rotation: Alarm class

Class A/B/C/D/E/F

| ① See chapter "Alarm" on page 250. |

Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.

EN	Self acknowledge				
DE	Selbstquittierend				
<b>CL2</b>	{0}	{1o}	{1oc}	{2oc}	
2942	---	---	---	✓	

#### Generator /Busbar / Mains phase rotation: Self acknowledgment

Yes / No

**Yes** ..... The control automatically clears the alarm if the fault condition is no longer detected.

**No** ..... The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the *LogicsManager* output "External acknowledgement" (via a discrete input or via an interface).

## Configure Monitoring: Flexible Limits



### CAUTION

Flexible Limits must not be used for protective functions, because the monitoring function is not guaranteed beyond an exceeding of 320 %.



### CAUTION

It is not possible to monitor temperature values in Degree Fahrenheit and pressure values in psi. Even if the parameters 3631 or 3630 on page 150 are configured to a value display in °F or psi, flexible limit monitoring always refers to the value in Degree Celsius or bar.

This control offers 40 flexible limits. They may be used for "limit switch" functions of all measured analog values. It is possible to choose between alarm (warning and shutdown) and control operation via the [LogicsManager](#).

If an alarm class is triggered, the display indicates "**Flexible limit {x}**", where {x} indicates the analog inputs 1 to 40, or the text configured using ToolKit.

The following parameter description refers to flexible limit 1. The flexible limits 2 through 40 are configured accordingly. The parameter IDs of the flexible limits 2 through 40 are listed in Table 3-46 on page 121.



### NOTE

The flexible limits 33 through 40 are disabled during idle mode operation (refer to Configure Application: Configure Engine, Idle Mode on page 179).

Parameter table

Level	Text	Setting range	Default value
<b>Flexible limits monitoring</b>			
	Description	user-defined	Flex. limit {x}
	Monitoring	On / Off	Off
	Monitored data source	[data source]	
	Monitoring at	Overrun / Underrun	Overrun
	Limit	-32000 to 32000	100
	Hysteresis	0 to 999	1
	Delay	0.02 to 99.99 s	1 s
	Alarm class	A/B/C/D/E/F/Control	B
	Self acknowledgment	Yes / No	No
	Delayed by engine speed	Yes / No	No

Table 3-43: Monitoring - standard values - flexible limits

The flexible limits must be used to monitor analog inputs like oil pressure or coolant temperature for example. We recommend to change the flexible limit description accordingly. Refer to Table 3-44 for configuration examples. Naturally, the analog inputs must be configured accordingly.

Configuration example

Parameter	example for low oil pressure monitoring	example for high coolant temperature monitoring
Description	Oil pressure	Coolant temp.
Monitoring	On	On
Monitored data source	06.01 Analog input 1	06.02 Analog input 2
Monitoring at	Underrun	Overrun
Limit	200 (2.00 bar)	80 (80 °C)
Hysteresis	10	2
Delay	0.50 s	3 s
Alarm class	F	B
Self acknowledgment	No	No
Delayed by engine speed	Yes	No

Table 3-44: Monitoring - flexible limit examples

EN	Description			
DE	Beschreibung			
T	{0}	{1o}	{1oc}	{2oc}
4208	✓	✓	✓	✓

**FlexLimit {x} [x = 1 to 40]: Description** user-defined

A description for the respective flexible limit may be entered here. The description may have 4 through 16 characters and is displayed instead of the default text if this limit is exceeded.

**Note:** This parameter may only be configured using ToolKit configuration software

EN	Monitoring			
DE	Überwachung			
CL2	{0}	{1o}	{1oc}	{2oc}
4200	✓	✓	✓	✓

**FlexLimit {x} [x = 1 to 40]: Monitoring** On / Off

**On** ..... Monitoring of the limit {x} is carried out according to the following parameters.

**Off**..... Monitoring is disabled.

EN	Monitored data source			
DE	Überwachte Datenquelle			
CL2	{0}	{1o}	{1oc}	{2oc}
4206	✓	✓	✓	✓

**FlexLimit {x} [x = 1 to 40]: Monitored data source** [data source]

Any possible data source may be selected. Use the + and – softkeys to scroll through the list of variables and confirm your selection with the Enter softkey. Refer to Appendix C: Data Sources on page 289 for a list of all data sources. These are for example:

- 00.05 Analog input D+
- 01.24 Generator total power
- 02.14 Mains current L1
- 06.01 Analog input 1

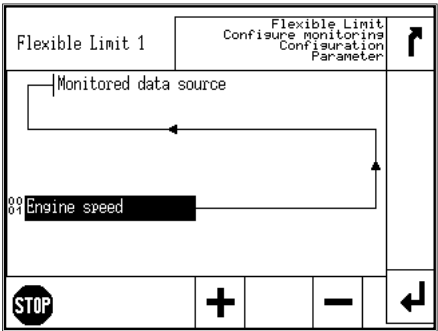


Figure 3-13: Monitoring - flexible limits - data source selection

EN	Monitoring at			
DE	Überwachung auf			
CL2	{0}	{1o}	{1oc}	{2oc}
4204	✓	✓	✓	✓

**FlexLimit {x} [x = 1 to 40]: Monitoring for** Overrun / Underrun

**Overrun**..... The monitored value must exceed the threshold limit for a fault to be recognized.

**Underrun**..... The monitored value must fall below the threshold limit for a fault to be recognized.

EN	Limit			
	Grenzwert			
CL2 4205	{0}	{1o}	{1oc}	{2oc}
	✓	✓	✓	✓

**FlexLimit {x} [x = 1 to 40]: Threshold****-32000 to 32000**

The threshold limit of the value to be monitored is defined by this parameter. If this value is reached or exceeded / fallen below (dependent on parameter 4204) for at least the delay time configured in parameter 4207 the action specified by the alarm class is initiated after the configured delay expires.

The entry format of the threshold depends on the respective analog value.

If the monitored analog value has a reference value (refer to Appendix C:

Reference Values on page 292), the threshold is expressed as a percentage of this reference value (-320.00 % to 320.00 %). If an analog input is monitored, the threshold refers to the display value format (refer to Appendix C: Display Value Format on page 299 for more information).

Refer to Table 3-45 for examples of how to configure the limit.

Example value	Desired limit	Reference value / display value	Limit entry format
01.24 Total generator real power	160 kW	Generator rated real power (parameter 1752) = 200 kW	8000 (= 80.00 %)
01.09 Generator frequency	51.5 Hz	Rated frequency (parameter 1750) = 50 Hz	10300 (= 103.00 %)
00.01 Engine speed	1256 rpm	Rated speed (parameter 1601) = 1500 rpm	06373 (= 63.73 %)
06.03 Analog input 3 (configured to VDO 5 bar)	4.25 bar	Display in 0.01 bar	00425 (= 4.25 bar)
06.02 Analog input 2 (configured to VDO 150°C)	123 °C	Display in °C	00123 (= 123°C)
06.03. Analog input 3 (configured to Linear, Value at 0% = 0, Value at 100% = 1000)	10 mm	Display in 0.000 m (parameter 1035 on page 157 configured to 0.000m)	00010 (= 0.010 mm)

Table 3-45: Monitoring - flexible limits - analog value examples

EN	Hysteresis			
	Hysterese			
CL2 4216	{0}	{1o}	{1oc}	{2oc}
	✓	✓	✓	✓

**FlexLimit {x} [x = 1 to 40]: Hysteresis****0 to 999**

During monitoring, the actual value must exceed or fall below one of the limits defined in parameter 4205 to be recognized as out of permissible limits. For a value to register as having returned to the permissible limits, the monitored value must rise above or fall below this value for the hysteresis. The format for entering the hysteresis depends on the monitored analog input and corresponds with the one of the threshold listed in parameter 4205.

EN	Delay			
	Verzögerung			
CL2 4207	{0}	{1o}	{1oc}	{2oc}
	✓	✓	✓	✓

**FlexLimit {x} [x = 1 to 40]: Delay****00.02 to 99.99 s**

If the monitored value exceeds or falls below the threshold value for the delay time configured here, an alarm will be issued. If the monitored value falls below the threshold (plus/minus the hysteresis, dependent on parameter 4204) before the delay expires the time will be reset.

EN	Alarm class			
	Alarmklasse			
CL2 4201	{0}	{1o}	{1oc}	{2oc}
	✓	✓	✓	✓

**FlexLimit {x} [x = 1 to 40]: Alarm class****Class A/B/C/D/E/F/Control**

| ⓘ See chapter "Alarm" on page 250. |

Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.



EN	Self acknowledge					FlexLimit {x} [x = 1 to 40]: Self acknowledge	Yes / No
DE	Selbstquittierend						
CL2 4202	{0}	{1o}	{1oc}	{2oc}	<b>Yes</b> ..... The control automatically clears the alarm if the fault condition is no longer detected.	<b>No</b> ..... The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons, by energizing the appropriate discrete input or via interface.	
	✓	✓	✓	✓			

EN	Delayed by engine speed					FlexLimit {x} [x = 1 to 40]: Engine speed delay	Yes / No
DE	Verzögert durch Motordrehzahl						
CL2 4203	{0}	{1o}	{1oc}	{2oc}	<b>Yes</b> ..... Monitoring for fault conditions is not performed until engine delayed monitoring is enabled. The engine monitoring delay time (parameter 3315 on page 175) must expire prior to fault monitoring being enabled for parameters assigned this delay.	<b>No</b> ..... Monitoring for this fault condition is continuously enabled regardless of engine speed.	
	✓	✓	✓	✓			

Table 3-46 shows a complete list of the parameter IDs for the flexible limits 1 through 40.

Flexible limit #	Description	Monitoring	Monitored analog input	Monitoring at	Limit	Hysteresis	Delay	Alarm class	Self acknowledge	Delayed by engine speed
1	4208	4200	4206	4204	4205	4216	4207	4201	4202	4203
2	4225	4217	4223	4221	4222	4233	4224	4218	4219	4220
3	4242	4234	4240	4238	4239	4250	4241	4235	4236	4237
4	4259	4251	4257	4255	4256	4267	4258	4252	4253	4254
5	7108	4270	4276	4274	4275	4278	4277	4271	4272	4273
6	7116	4280	4286	4284	4285	4288	4287	4281	4282	4283
7	7124	4290	4296	4294	4295	4298	4297	4291	4292	4293
8	7132	6000	6006	6004	6005	6008	6007	6001	6002	6003
9	7140	6010	6016	6014	6015	6018	6017	6011	6012	6013
10	7148	6020	6026	6024	6025	6028	6027	6021	6022	6023
11	7156	6030	6036	6034	6035	6038	6037	6031	6032	6033
12	7164	6040	6046	6044	6045	6048	6047	6041	6042	6043
13	7172	6050	6056	6054	6055	6058	6057	6051	6052	6053
14	7180	6060	6066	6064	6065	6068	6067	6061	6062	6063
15	7188	6070	6076	6074	6075	6078	6077	6071	6072	6073
16	7196	6080	6086	6084	6085	6088	6087	6081	6082	6083
17	7204	6090	6096	6094	6095	6098	6097	6091	6092	6093
18	7212	6100	6106	6104	6105	6108	6107	6101	6102	6103
19	7220	6110	6116	6114	6115	6118	6117	6111	6112	6113
20	7228	6120	6126	6124	6125	6128	6127	6121	6122	6123
21	7236	6130	6136	6134	6135	6138	6137	6131	6132	6133
22	7244	6140	6146	6144	6145	6148	6147	6141	6142	6143
23	7252	6150	6156	6154	6155	6158	6157	6151	6152	6153
24	7260	6160	6166	6164	6165	6168	6167	6161	6162	6163
25	7268	6170	6176	6174	6175	6178	6177	6171	6172	6173
26	7276	6180	6186	6184	6185	6188	6187	6181	6182	6183
27	7284	6190	6196	6194	6195	6198	6197	6191	6192	6193
28	7292	6200	6206	6204	6205	6208	6207	6201	6202	6203
29	7300	6210	6216	6214	6215	6218	6217	6211	6212	6213
30	7308	6220	6226	6224	6225	6228	6227	6221	6222	6223
31	7316	6230	6236	6234	6235	6238	6237	6231	6232	6233
32	7324	6240	6246	6244	6245	6248	6247	6241	6242	6243
33	7332	6250	6256	6254	6255	6258	6257	6251	6252	6253
34	7340	6260	6266	6264	6265	6268	6267	6261	6262	6263
35	7348	6270	6276	6274	6275	6278	6277	6271	6272	6273
36	7356	6280	6286	6284	6285	6288	6287	6281	6282	6283
37	7364	6290	6296	6294	6295	6298	6297	6291	6292	6293
38	7372	6300	6306	6304	6305	6308	6307	6301	6302	6303
39	7380	6310	6316	6314	6315	6318	6317	6311	6312	6313
40	7388	6320	6326	6324	6325	6328	6327	6321	6322	6323

Table 3-46: Monitoring - flexible limits - parameter IDs

## Configure Monitoring: Miscellaneous

### Configure Monitoring: Miscellaneous, Alarm Acknowledgement

DE	EN	Time until horn reset				Self acknowledgment of the centralized alarm (horn)	0 to 1,000 s
		Zeit Hupenreset					
CL0		{0}	{1o}	{1oc}	{2oc}	<p>After each alarm of alarm class B through F occurs, the alarm LED flashes and the horn (command variable 03.05) is enabled. After the delay time 'time until horn reset' has expired, the flashing LED changes into a steady light and the horn (command variable 03.05) is disabled. The alarm LED flashes until the alarm has been acknowledged either via the push button, the <i>LogicsManager</i>, or the interface.</p> <p><b>Note:</b> If this parameter is configured to 0, the horn will remain active until it will be acknowledged.</p>	
1756		✓	✓	✓	✓		

DE	EN	Ext. acknowledge					Protection: External acknowledgment of alarms	<i>LogicsManager</i>
		Ext. Quittierung						
CL2 12490	{0}	{1o}	{1oc}	{2oc}	It is possible to acknowledge all alarms simultaneously from remote, e.g. with a discrete input. The logical output of the <i>LogicsManager</i> has to become TRUE twice. The first time is for acknowledging the horn, the second for all alarm messages. The On-delay time is the minimum time the input signals have to be "1". The Off-delay time is the time how long the input conditions have to be "0" before the next high signal is accepted. Once the conditions of the <i>LogicsManager</i> have been fulfilled the alarms will be acknowledged.			
	✓	✓	✓	✓				

① The first high signal into the discrete input acknowledges the command variable 03.05 (horn). The second high signal acknowledges all inactive alarm messages.

The *LogicsManager* and its default settings are explained on page 252 in Appendix B: "*LogicsManager*".

## Configure Monitoring: Miscellaneous, Configure CAN Interface 1

The CANopen interface is monitored. If the interface does not receive a CANopen protocol message before the delay expires, an alarm will be initiated. The CANopen interface 1 can be monitored for the Receive PDOs 1, 2, and 3.

If this protective function is triggered, the display indicates "**CAN1 CANopen RPDO{x}**" (x = 1, 2, or 3).

Parameter table

Level	Text	Setting range	Default value
<b>CANopen interface 1 monitoring</b>			
	Monitoring	On / Off	Off
	Maximum receiving break	1 to 65000 s	10 s
	Alarm class	A/B/C/D/E/F	B
	Self acknowledgment	Yes / No	Yes
	Delayed by eng. speed	Yes / No	No

Table 3-47: Monitoring - standard values - CANopen interface 1

EN	<b>Monitoring</b>			
DE	<b>Überwachung</b>			
CL2	{0}	{1o}	{1oc}	{2oc}
16161	✓	✓	✓	✓
16166				
16171				

### CANopen Interface 1: Monitoring

On / Off

**On** ..... Monitoring of the CANopen interface is carried out according to the following parameters.

**Off**..... Monitoring is disabled.

EN	<b>Maximum receiving break</b>			
DE	<b>Maximale Empfangspause</b>			
CL2	{0}	{1o}	{1oc}	{2oc}
16160	✓	✓	✓	✓
16165				
16170				

### CANopen Interface 1: Maximum receiving break

1 to 65000 s

The maximum receiving break is configured with this parameter. If the interface does not receive one CANopen protocol message within this time, the action specified by the alarm class is initiated. The delay timer is re-initialized after every message is received.

EN	<b>Alarm class</b>			
DE	<b>Alarmklasse</b>			
CL2	{0}	{1o}	{1oc}	{2oc}
16162	✓	✓	✓	✓
16167				
16172				

### CANopen Interface 1: Alarm class

Class A/B/C/D/E/F/Control

| ⓘ See chapter "Alarm" on page 250. |

Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.

EN	<b>Self acknowledge</b>			
DE	<b>Selbstquittierend</b>			
CL2	{0}	{1o}	{1oc}	{2oc}
16164	✓	✓	✓	✓
16169				
16174				

### CANopen Interface 1: Self acknowledgment

Yes / No

**Yes** ..... The control automatically clears the alarm if the fault condition is no longer detected.

**No**..... The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the *LogicsManager* output "External acknowledgement" (via a discrete input or via an interface).

EN	<b>Delayed by eng. speed</b>			
DE	<b>Verzögert durch Motordrehzahl</b>			
CL2	{0}	{1o}	{1oc}	{2oc}
16163	✓	✓	✓	✓
16168				
16173				

### CANopen Interface 1: Engine delayed

Yes / No

**Yes** ..... Monitoring for fault conditions is not performed until engine delayed monitoring is enabled. The engine monitoring delay time (parameter 3315 on page 175) must expire prior to fault monitoring being enabled for parameters assigned this delay.

**No**..... Monitoring for this fault condition is continuously enabled regardless of engine speed.

## Configure Monitoring: Miscellaneous, Configure CAN Interface 2

The CANopen interface is monitored. If the interface does not receive a CANopen protocol message before the delay expires, an alarm will be initiated. The CANopen interface 2 can be monitored for the Receive PDOs 1 (expansion board 1) and 2 (expansion board 2).

If this protective function is triggered, the display indicates "**CAN2 ExpansionBoard{x}**" ({x} = 1 or 2).

Parameter table

Level	Text	Setting range	Default value
<b>CANopen interface 2 monitoring</b>			
	Monitoring	On / Off	Off
	Maximum receiving break	1 to 65000 s	10 s
	Alarm class	A/B/C/D/E/F	B
	Self acknowledgment	Yes / No	Yes
	Delayed by eng. speed	Yes / No	No

Table 3-48: Monitoring - standard values - CANopen interface 2

EN	Monitoring
DE	Überwachung
<b>CL2</b>	{0} {1o} {1oc} {2oc}
16176	✓ ✓ ✓ ✓
16181	

### CANopen Interface 2: Monitoring

On / Off

**On**.....Monitoring of the CANopen interface is carried out according to the following parameters.

**Off**.....Monitoring is disabled.

EN	Maximum receiving break
DE	Maximale Empfangspause
<b>CL2</b>	{0} {1o} {1oc} {2oc}
16175	✓ ✓ ✓ ✓
16180	

### CANopen Interface 2: Maximum receiving break

1 to 65000 s

The maximum receiving break is configured with this parameter. If the interface does not receive one CANopen protocol message within this time, the action specified by the alarm class is initiated. The delay timer is re-initialized after every message is received.

EN	Alarm class
DE	Alarmklasse
<b>CL2</b>	{0} {1o} {1oc} {2oc}
16177	✓ ✓ ✓ ✓
16182	

### CANopen Interface 2: Alarm class

Class A/B/C/D/E/F/Control

| ⓘ See chapter "Alarm" on page 250. |

Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.

EN	Self acknowledge
DE	Selbstquittierend
<b>CL2</b>	{0} {1o} {1oc} {2oc}
16179	✓ ✓ ✓ ✓
16184	

### CANopen Interface 2: Self acknowledgment

Yes / No

**Yes**.....The control automatically clears the alarm if the fault condition is no longer detected.

**No**.....The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the *LogicsManager* output "External acknowledgement" (via a discrete input or via an interface).

EN	Delayed by eng. speed
DE	Verzögert durch Motordrehzahl
<b>CL2</b>	{0} {1o} {1oc} {2oc}
16178	✓ ✓ ✓ ✓
16183	

### CANopen Interface 2: Engine delayed

Yes / No

**Yes**.....Monitoring for fault conditions is not performed until engine delayed monitoring is enabled. The engine monitoring delay time (parameter 3315 on page 175) must expire prior to fault monitoring being enabled for parameters assigned this delay.

**No**.....Monitoring for this fault condition is continuously enabled regardless of engine speed.

**Configure Monitoring: Miscellaneous, Configure CAN Interface 2, J1939 Interface**

This watchdog triggers if the easYgen is configured to receive J1939 data from an ECU (parameter 15102) connected to the CAN bus to evaluate these data, and no data is received from the ECU.

If this protective function is triggered, the display indicates "**CAN fault J1939**".

**Parameter table**

Level	Text	Setting range	Default value
<b>J1939 interface monitoring</b>			
	Monitoring	On / Off	Off
	Delay	2 to 6500 s	10 s
	Alarm class	A/B/C/D/E/F	B
	Self acknowledgment	Yes / No	Yes
	Delayed by eng. speed	Yes / No	No

Table 3-49: Monitoring - standard values - J1939 interface

EN	Monitoring				
DE	Überwachung				
<b>CL2</b>	{0}	{1o}	{1oc}	{2oc}	
15110	✓	✓	✓	✓	

**J1939 Interface: Monitoring****On / Off**

**On** ..... Monitoring of the J1939 interface is carried out according to the following parameters.

**Off** ..... Monitoring is disabled.

EN	Delay				
DE	Verzögerung				
<b>CL2</b>	{0}	{1o}	{1oc}	{2oc}	
15114	✓	✓	✓	✓	

**J1939 Interface: Delay****2 to 6500 s**

The delay is configured with this parameter. If the interface does not receive a CAN SAE J1939 protocol message before the delay expires, the action specified by the alarm class is initiated. The delay timer is re-initialized after every message is received.

EN	Alarm class				
DE	Alarmklasse				
<b>CL2</b>	{0}	{1o}	{1oc}	{2oc}	
15111	✓	✓	✓	✓	

**J1939 Interface: Alarm class****Class A/B/C/D/E/F**

① See chapter "Alarm" on page 250.

Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.

EN	Self acknowledge				
DE	Selbstquittierend				
<b>CL2</b>	{0}	{1o}	{1oc}	{2oc}	
15112	✓	✓	✓	✓	

**J1939 Interface: Self acknowledgment****Yes / No**

**Yes** ..... The control automatically clears the alarm if the fault condition is no longer detected.

**No** ..... The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the *LogicsManager* output "External acknowledgement" (via a discrete input or via an interface).

EN	Delayed by engine speed				
DE	Verzögert durch Motordrehzahl				
<b>CL2</b>	{0}	{1o}	{1oc}	{2oc}	
15113	✓	✓	✓	✓	

**J1939 Interface: Engine delayed****Yes / No**

**Yes** ..... Monitoring for fault conditions is not performed until engine delayed monitoring is enabled. The engine monitoring delay time (parameter 3315 on page 175) must expire prior to fault monitoring being enabled for parameters assigned this delay.

**No** ..... Monitoring for this fault condition is continuously enabled regardless of engine speed.

### Configure Monitoring: J1939 Interface, Configure CAN Interface 2, Red Stop Alarm

This watchdogs monitors, whether a specific alarm bit is received from the CAN J1939 interface. This enables to configure the easYgen in a way that a reaction is caused by this bit (e.g. warning, shutdown).

If this protective function is triggered, the display indicates "Red stop lamp".

Parameter table

Level	Text	Setting range	Default value
<b>J1939 interface red stop lamp monitoring</b>			
	Monitoring	On / Off	Off
	Delay	0 to 999 s	2 s
	Alarm class	A/B/C/D/E/F	A
	Self acknowledgment	Yes / No	Yes
	Delayed by eng. speed	Yes / No	No

Table 3-50: Monitoring - standard values - J1939 interface red stop lamp

EN	Monitoring
DE	Überwachung
CL2	{0} {1o} {1oc} {2oc}
15115	✓ ✓ ✓ ✓

#### J1939 Interface: Red stop lamp DM1: Monitoring

On / Off

**On**.....Monitoring of the Red Stop Lamp message from the ECU is carried out according to the following parameters.

**Off**.....Monitoring is disabled.

EN	Delay
DE	Verzögerung
CL2	{0} {1o} {1oc} {2oc}
15119	✓ ✓ ✓ ✓

#### J1939 Interface: Red stop lamp DM1: Delay

0 to 999 s

The red stop lamp delay is configured with this parameter. If the ECU sends the Red Stop Lamp On message, the action specified by the alarm class is initiated after the delay configured here expires.

EN	Alarm class
DE	Alarmklasse
CL2	{0} {1o} {1oc} {2oc}
15116	✓ ✓ ✓ ✓

#### J1939 Interface: Red stop lamp DM1: Alarm class

Class A/B/C/D/E/F/Control

| ⓘ See chapter "Alarm" on page 250. |

Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.

EN	Self acknowledge
DE	Selbstquittierend
CL2	{0} {1o} {1oc} {2oc}
15117	✓ ✓ ✓ ✓

#### J1939 Interface: Red stop lamp DM1: Self acknowledgment

Yes / No

**Yes**.....The control automatically clears the alarm if the fault condition is no longer detected.

**No**.....The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the *LogicsManager* output "External acknowledgement" (via a discrete input or via an interface).

EN	Delayed by engine speed
DE	Verzögert durch Motordrehzahl
CL2	{0} {1o} {1oc} {2oc}
15118	✓ ✓ ✓ ✓

#### J1939 Interface: Red stop lamp DM1: Engine delayed

Yes / No

**Yes**.....Monitoring for fault conditions is not performed until engine delayed monitoring is enabled. The engine monitoring delay time (parameter 3315 on page 175) must expire prior to fault monitoring being enabled for parameters assigned this delay.

**No**.....Monitoring for this fault condition is continuously enabled regardless of engine speed.

**Configure Monitoring: J1939 Interface, Configure CAN Interface 2, Amber Warning Alarm**

This watchdogs monitors, whether a specific alarm bit is received from the CAN J1939 interface. This enables to configure the easYgen in a way that a reaction is caused by this bit (e.g. warning, shutdown).

If this protective function is triggered, the display indicates "**Amber warning lamp**".

**Parameter table**

Level	Text	Setting range	Default value
<b>J1939 interface amber warning lamp monitoring</b>			
	Monitoring	On / Off	Off
	Delay	0 to 999 s	2 s
	Alarm class	A/B/C/D/E/F	A
	Self acknowledgment	Yes / No	Yes
	Delayed by engine speed	Yes / No	No

Table 3-51: Monitoring - standard values - J1939 interface amber warning lamp

EN	Monitoring				
DE	Überwachung				
<b>CL2</b>	{0}	{1o}	{1oc}	{2oc}	
15120	✓	✓	✓	✓	

**J1939 Interface: Amber warning lamp DM1: Monitoring****On / Off**

**On** ..... Monitoring of the Amber Warning Lamp message from the ECU is carried out according to the following parameters.

**Off** ..... Monitoring is disabled.

EN	Delay				
DE	Verzögerung				
<b>CL2</b>	{0}	{1o}	{1oc}	{2oc}	
15124	✓	✓	✓	✓	

**J1939 Interface: Amber warning lamp DM1: Delay****0 to 999 s**

The amber warning lamp delay is configured with this parameter. If the ECU sends the Amber Warning Lamp On message, the action specified by the alarm class is initiated after the delay configured here expires.

EN	Alarm class				
DE	Alarmklasse				
<b>CL2</b>	{0}	{1o}	{1oc}	{2oc}	
15121	✓	✓	✓	✓	

**J1939 Interface: Amber warning lamp DM1: Alarm class Class A/B/C/D/E/F/Control**

❗ See chapter "Alarm" on page 250.

Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.

EN	Self acknowledge				
DE	Selbstquittierend				
<b>CL2</b>	{0}	{1o}	{1oc}	{2oc}	
15122	✓	✓	✓	✓	

**J1939 Interface: Amber warning lamp DM1: Self acknowledgment****Yes / No**

**Yes** ..... The control automatically clears the alarm if the fault condition is no longer detected.

**No** ..... The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the *LogicsManager* output "External acknowledgement" (via a discrete input or via an interface).

EN	Delayed by engine speed				
DE	Verzögert durch Motordrehzahl				
<b>CL2</b>	{0}	{1o}	{1oc}	{2oc}	
15123	✓	✓	✓	✓	

**J1939 Interface: Amber warning lamp DM1: Engine delayed****Yes / No**

**Yes** ..... Monitoring for fault conditions is not performed until engine delayed monitoring is enabled. The engine monitoring delay time (parameter 3315 on page 175) must expire prior to fault monitoring being enabled for parameters assigned this delay.

**No** ..... Monitoring for this fault condition is continuously enabled regardless of engine speed.

## Configure Monitoring: Miscellaneous, Battery, Overvoltage (Levels 1 & 2)

There are two battery overvoltage alarm levels available in the control. Both alarms are definite time alarms and are illustrated in the figure below. The figure diagrams a frequency trend and the associated pickup times and length of the alarms. Monitoring of the voltage is done in two steps.

If this protective function is triggered, the display indicates "**Bat. overvoltage 1**" or "**Bat. overvoltage 2**".

Refer to Appendix E: Triggering Characteristics, Figure 3-36 on page 305 for the triggering characteristic of this monitoring function.

### Parameter table

The parameter limits represented in this table have identical permissible ranges. Each parameter may be configured with different trip characteristics for specific thresholds.

Level	Text	Setting range	Default value
<b>Battery overvoltage</b> (the hysteresis is 0,7 % of the rated value.)			
Level 1	Monitoring	On / Off	On
	Limit	8.0 to 42.0 V	32.0 V
	Delay	0.02 to 99.99 s	5.00 s
	Alarm class	A/B/C/D/E/F/Control	B
	Self acknowledgment	Yes / No	No
	Delayed by engine speed	Yes / No	No
Level 2	Monitoring	On / Off	Off
	Limit	8.0 to 42.0 V	35.0 V
	Delay	0.02 to 99.99 s	1.00 s
	Alarm class	A/B/C/D/E/F/Control	B
	Self acknowledgment	Yes / No	No
	Delayed by engine speed	Yes / No	No

Table 3-52: Monitoring - standard values - battery overvoltage

EN	Monitoring
DE	Überwachung
CL2	{0} {1o} {1oc} {2oc}
3450	✓ ✓ ✓ ✓
3456	

**Battery overvoltage: Monitoring (Level 1/Level 2)** **On / Off**

**On** ..... Overvoltage monitoring of the battery voltage is carried out according to the following parameters. Both values may be configured independent from each other (prerequisite: Level 1 > Level 2).

**Off** ..... Monitoring is disabled for Level 1 limit and/or Level 2 limit.

EN	Limit
DE	Grenzwert
CL2	{0} {1o} {1oc} {2oc}
3454	✓ ✓ ✓ ✓
3460	

**Battery overvoltage: Threshold value (Level 1/Level 2)** **8.0 to 42.0 V**

The threshold values that are to be monitored are defined here. If the monitored battery voltage reaches or exceeds this value for at least the delay time without interruption, the action specified by the alarm class is initiated.

EN	Delay
DE	Verzögerung
CL2	{0} {1o} {1oc} {2oc}
3455	✓ ✓ ✓ ✓
3461	

**Battery overvoltage: Delay time (Level 1/Level 2)** **0.02 to 99.99 s**

If the monitored battery voltage exceeds the threshold value for the delay time configured here, an alarm will be issued. If the monitored battery voltage falls below the threshold (minus the hysteresis) before the delay expires the time will be reset.

EN	Alarm class
DE	Alarmklasse
CL2	{0} {1o} {1oc} {2oc}
3451	✓ ✓ ✓ ✓
3457	

**Battery overvoltage: Alarm class (Level 1/Level 2)** **Class A/B/C/D/E/F/Control**

| ⓘ See chapter "Alarm" on page 250. |

Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.



EN	Self acknowledge				
DE	Selbstquittierend				
CL2	{0}	{1o}	{1oc}	{2oc}	
3452	✓	✓	✓	✓	
3458					

Battery overvoltage: Self acknowledgment (Level 1/Level 2)		Yes / No
Yes .....	The control automatically clears the alarm if the fault condition is no longer detected.	
No .....	The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the <i>LogicsManager</i> output "External acknowledgement" (via a discrete input or via an interface).	

EN	Delayed by engine speed				
DE	Verzögert durch Motordrehzahl				
CL2	{0}	{1o}	{1oc}	{2oc}	
3453	✓	✓	✓	✓	
3459					

Battery overvoltage: Engine delayed monitoring (Level 1/Level 2)		Yes / No
Yes .....	Monitoring for fault conditions is not performed until engine delayed monitoring is enabled. The engine monitoring delay time (parameter 3315 on page 175) must expire prior to fault monitoring being enabled for parameters assigned this delay.	
No .....	Monitoring for this fault condition is continuously enabled regardless of engine speed.	

## Configure Monitoring: Miscellaneous, Battery, Undervoltage (Levels 1 & 2)

There are two battery undervoltage alarm levels available in the control. Both alarms are definite time alarms and are illustrated in the figure below. The figure diagrams a frequency trend and the associated pickup times and length of the alarms. Monitoring of the voltage is done in two steps.

If this protective function is triggered, the display indicates "**Bat. undervoltage 1**" or "**Bat. undervoltage 2**".

Refer to Appendix E: Triggering Characteristics, Figure 3-37 on page 306 for the triggering characteristic of this monitoring function.

### Parameter table

The parameter limits represented in this table have identical permissible ranges. Each parameter may be configured with different trip characteristics for specific thresholds.

Level	Text	Setting range	Default value
<b>Battery undervoltage</b> (the hysteresis is 0,7 % of the rated value).			
Level 1	Monitoring	On / Off	On
	Limit	8.0 to 42.0 V	24.0 V
	Delay	0.02 to 99.99 s	60.00 s
	Alarm class	A/B/C/D/E/F/Control	B
	Self acknowledgment	Yes / No	No
	Delayed by engine speed	Yes / No	No
Level 2	Monitoring	On / Off	On
	Limit	8.0 to 42.0 V	20.0 V
	Delay	0.02 to 99.99 s	10.00 s
	Alarm class	A/B/C/D/E/F/Control	B
	Self acknowledgment	Yes / No	No
	Delayed by engine speed	Yes / No	No

Table 3-53: Monitoring - standard values - battery undervoltage

EN	Monitoring
DE	Überwachung
CL2	{0} {1o} {1oc} {2oc}
3500	✓
3506	✓

### Battery undervoltage: Monitoring (Level 1/Level 2)

On / Off

**On**.....Undervoltage monitoring of the battery voltage is carried out according to the following parameters. Both values may be configured independent from each other (prerequisite: Level 1 > Level 2).

**Off**.....Monitoring is disabled for Level 1 limit and/or Level 2 limit.

EN	Limit
DE	Grenzwert
CL2	{0} {1o} {1oc} {2oc}
3504	✓
3510	✓

### Battery undervoltage: Threshold value (Level 1/Level 2)

8.0 to 42.0 V

The threshold values that are to be monitored are defined here. If the monitored battery voltage reaches or falls below this value for at least the delay time without interruption, the action specified by the alarm class is initiated.

### Note

The default monitoring limit for battery undervoltage is 24 Vdc after 60 seconds. This is because in normal operation the terminal voltage is approximately 26 Vdc (alternator charged battery).

EN	Delay
DE	Verzögerung
CL2	{0} {1o} {1oc} {2oc}
3505	✓
3511	✓

### Battery undervoltage: Delay time (Level 1/Level 2)

0.02 to 99.99 s

If the battery voltage falls below the threshold value for the delay time configured here, an alarm will be issued. If the battery voltage exceeds the threshold (plus the hysteresis) again before the delay expires the time will be reset.

EN	Alarm class
DE	Alarmklasse
CL2	{0} {1o} {1oc} {2oc}
3501	✓
3507	✓

### Battery undervoltage: Alarm class (Level 1/Level 2)

Class A/B/C/D/E/F/Control

| ⓘ See chapter "Alarm" on page 250. |

Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.

EN	Self acknowledge				
DE	Selbstquittierend				
CL2	{0}	{1o}	{1oc}	{2oc}	
3502	✓	✓	✓	✓	
3508					

Battery undervoltage: Self acknowledgment (Level 1/Level 2)	Yes / No
<b>Yes</b> .....	The control automatically clears the alarm if the fault condition is no longer detected.
<b>No</b> .....	The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the <i>LogicsManager</i> output "External acknowledgement" (via a discrete input or via an interface).

EN	Delayed by engine speed				
DE	Verzögert durch Motordrehzahl				
CL2	{0}	{1o}	{1oc}	{2oc}	
3503	✓	✓	✓	✓	
3509					

Battery undervoltage: Engine delayed monitoring (Level 1/Level 2)	Yes / No
<b>Yes</b> .....	Monitoring for fault conditions is not performed until engine delayed monitoring is enabled. The engine monitoring delay time (parameter 3315 on page 175) must expire prior to fault monitoring being enabled for parameters assigned this delay.
<b>No</b> .....	Monitoring for this fault condition is continuously enabled regardless of engine speed.

## Configure Monitoring: Miscellaneous, Multi-Unit Configuration Check

The multi-unit configuration check functionality requires that the relevant parameters are all configured identically at all participating units.

If at least one of these parameters is configured different in at least one of the units, the display indicates "**Parameter alignment**" on all units.

This alarm is always self-acknowledging, i.e. the control automatically clears the alarm if it is no longer valid.

The setting of the following parameters will be monitored:

- Start stop mode (parameter 5752 on page 186)
- Fit size of engine (parameter 5754 on page 187)
- Fit service hours (parameter 5755 on page 187)
- Changes of engines (parameter 5756 on page 188)
- IOP Reserve power (parameter 5760 on page 190)
- IOP Hysteresis (parameter 5761 on page 190)
- IOP Max. generator load (parameter 5762 on page 190)
- IOP Min. generator load (parameter 5763 on page 190)
- IOP Dynamic (parameter 5757 on page 191)
- IOP Add on delay (parameter 5764 on page 192)
- IOP Add on delay at rated load (parameter 5765 on page 192)
- IOP Add off delay (parameter 5766 on page 192)
- MOP Minimum load (parameter 5767 on page 193)
- MOP Reserve power (parameter 5768 on page 193)
- MOP Hysteresis (parameter 5769 on page 193)
- MOP Max. generator load (parameter 5770 on page 193)
- MOP Min. generator load (parameter 5771 on page 193)
- MOP Dynamic (parameter 5758 on page 194)
- MOP Add on delay (parameter 5772 on page 195)
- MOP Add on delay at rated load (parameter 5773 on page 195)
- MOP Add off delay (parameter 5774 on page 195)
- Transfer rate LS fast message (parameter 9921 on page 241)

Parameter table

Level	Text	Setting range	Default value
<b>Multi-unit configuration check monitoring</b>			
	Multi-unit config. check	On / Off	On
	Alarm class	A/B/C/D/E/F	B

Table 3-54: Monitoring - standard values - multi-unit configuration check monitoring

EN	Multi-unit config. check	Multi-unit configuration check: Enable	On / Off
DE	Mehrfachanl. Parameterabgleich		
CL2	{0} {1o} {1oc} {2oc}	On.....Multi-unit configuration check is carried out.	
4070	✓ ✓ ✓ ✓	Off.....Monitoring is disabled.	
EN	Alarm class	Multi-unit configuration check: Alarm class	Class A/B/C/D/E/F
DE	Alarmklasse		
CL2	{0} {1o} {1oc} {2oc}	ⓘ See chapter "Alarm" on page 250.	
4071	✓ ✓ ✓ ✓		

This function may be assigned an independent alarm class that specifies what action should be taken when this function triggers an alarm.

## Configure Monitoring: Miscellaneous, Multi-Unit Communication Monitoring

The multi-unit communication monitoring function checks whether all participating units are available (sending data on the load share line).

If the number of available units is less than the number of members configured in parameter 4063 for at least 1 second, the display indicates "**Missing members**".

Parameter table

Level	Text	Setting range	Default value
<b>Multi-unit communication monitoring</b>			
	Multi-unit comm.. monitoring	On / Off	Off
	Number of gens communicating	0 to 64	2
	Alarm class	A/B/C/D/E/F	B
	Self acknowledgment	Yes / No	No


Table 3-55: Monitoring - standard values - multi-unit communication monitoring

EN	Multi-unit comm.. monitoring				Multi-unit communication monitoring: Enable		On / Off
DE	Mehrfachanl. Teiln.Überwachung						
CL2	{0}	{1o}	{1oc}	{2oc}	On ..... Multi-unit communication monitoring is carried out.		
4060	✓	✓	✓	✓	Off ..... Monitoring is disabled.		
EN	Number of gens communicating				Multi-unit communication monitoring: Number of participants		0 to 64
DE	Anzahl Teilnehmer						
CL2	{0}	{1o}	{1oc}	{2oc}	The number of units participating in load sharing is configured here.		
4063	✓	✓	✓	✓			
EN	Alarm class				Multi-unit communication monitoring: Alarm class		Class A/B/C/D/E/F
DE	Alarmklasse						
CL2	{0}	{1o}	{1oc}	{2oc}	ⓘ See chapter "Alarm" on page 250.		
4061	✓	✓	✓	✓	This function may be assigned an independent alarm class that specifies what action should be taken when this function triggers an alarm.		
EN	Self acknowledge				Multi-unit communication monitoring: Self acknowledgment		Yes / No
DE	Selbstquittierend						
CL2	{0}	{1o}	{1oc}	{2oc}	Yes ..... The control automatically clears the alarm if the fault condition is no longer detected.		
4062	✓	✓	✓	✓	No ..... The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the <i>LogicsManager</i> output "External acknowledgement" (via a discrete input or via an interface).		

# Configure Application




## Configure Application: Configure Breakers




**NOTE**

The assignment of the defined relays to defined functions occurs by selection of the application mode (i.e. function "Command: Close GCB" on relay [R 6], this relay can no longer be operated via the [LogicsManager](#)). The same way some relays are designated to specific functions, others may be assigned to different functions. These are listed as "programmed" relays. If a relay is "programmable" the function may be assigned to other relays via the [LogicsManager](#) by configuration. Refer to Table 3-60 on page 162 for more information.



**NOTE**

If the easYgen is intended to be operated in parallel with the mains, the mains voltage measuring inputs must be connected. If an external mains decoupling is performed, jumpers between busbar and mains voltage measuring inputs may be installed.



**NOTE**

Changing the application mode will not change other configured values in the parameters. The application mode parameter is the only one.

DE

EN

CL2

3401

Application mode

Betriebsmodus

{0}

{1o}

{1oc}

{2oc}

✓

✓

✓

✓

Application modes

"None" / "GCB open" / "GCB" / "GCB/MCB"

The unit may be configured for four different application modes. The discrete inputs and relay outputs are pre-defined dependent upon the selected application mode. Only the screens and functions that pertain to the application mode selected are displayed. The single line diagram in the main screen will change. Refer to the Operation manual 37225 for additional information.

None .....

Application mode {0} "Engine Control" [start/stop]

The control unit will function as an engine start/stop control with generator and engine protection. All necessary inputs and outputs are assigned and pre-defined.

GCB open ....

Application mode {1o} "Protection" [open GCB]

The control unit will function as an engine start/stop control with generator and engine protection. The control unit can only open the GCB. All necessary inputs and outputs are assigned and pre-defined.

GCB .....

Application mode {1oc} "1-CB control" [open/close GCB]

The control unit will function as a 1 CB unit. The control unit performs full control like synchronizing, opening and closing the GCB with generator and engine protection. All necessary inputs and outputs are assigned and pre-defined.

GCB/MCB ...

Application mode {2oc} "2 CB control" [open/close GCB/MCB]

The control unit will function as a 2 CB unit. The control unit performs full control like synchronizing, opening and closing the GCB and the MCB with generator and engine protection. The GCB/MCB perform also full load transfer via open/closed transition, interchange and parallel mode. All necessary inputs and outputs are assigned and pre-defined.

### Operation Of The Circuit Breakers

The configuration of pulse switching takes place in the following screen and has the described effect on the signal sequence (the MCB cannot be controlled by the continuous pulse for security reasons, because otherwise, the MCB would be opened in case of a failure/exchange of the easYgen). The parameter "Enable MCB" allows/prevents the closing of the MCB. A closed MCB will not be opened.

#### **Dead bus closing GCB {1oc} or {2oc}**

The unit closes the GCB, if the following conditions are met. The display indicates "GCB dead bus cls".

#### **Automatic operation**

- The operating mode AUTOMATIC has been selected
- No class C alarm or higher is present
- The engine is running
- The engine delayed monitoring (parameter 3315 on page 175) as well as the generator stable time (parameter 3415 on page 146) have been expired or the *LogicsManager* function "Undelay close GCB" (parameter 12210 on page 147) is enabled
- The generator voltage and frequency are within the configured operating range (refer to Configure Monitoring: Generator, Operating Voltage / Frequency on page 38)
- The MCB has been opened for at least the time configured in "Transfer time GCB↔MCB" (parameter 3400 on page 143) ({2oc} with open transition mode only)
- The busbar voltage is below the dead bus detection limit (parameter 5820 on page 143)

#### **Manual operation**

- The operating mode MANUAL has been selected.
- No class C alarm or higher is present
- The engine is running
- The engine delayed monitoring (parameter 3315 on page 175) as well as the generator stable time (parameter 3415 on page 146) have been expired
- The generator voltage and frequency are within the configured operating range (refer to Configure Monitoring: Generator, Operating Voltage / Frequency on page 38)
- The button "Close GCB" has been pressed
- The MCB has been open for at least the time configured in "Transfer time GCB↔MCB" (parameter 3400 on page 143) ({2oc} with open transition mode only)
- The busbar voltage is below the dead bus detection limit (parameter 5820 on page 143)

**Synchronization GCB/MCB {10c} or {20c}**

The synchronization is active, if the following conditions are met simultaneously. The display indicates **"Synchronization GCB"** or **"Synchronization MCB"**.

**Automatic operation**

- The operating mode AUTOMATIC has been selected
- The mains voltage is available and within the configured operating range (refer to Configure Monitoring: Mains, Operating Voltage / Frequency on page 73)
- The generator and busbar voltage are available and within the configured operating range (refer to Configure Monitoring: Generator, Operating Voltage / Frequency on page 38)
- The differential frequency/voltage is within the configured operating range

Synchronizing the MCB

- The GCB is closed (or at least one GCB is closed in a multiple genset application)
- The busbar voltage is within the configured operating range
- The "Enable MCB" (parameter 12923 on page 148) signal is present, for example discrete input 6 is energized if configured as DI 6

Synchronizing the GCB

- The MCB is closed
- The busbar voltage is within the configured operating range
- Engine delayed monitoring (parameter 3315 on page 175) and generator stable time (parameter 3415 on page 146) have expired or "Undelay close GCB" (parameter 12210 on page 147) is enabled

**Manual operation**

- Operating mode MANUAL has been selected
- The mains voltage is available and within the configured operating range (refer to Configure Monitoring: Mains, Operating Voltage / Frequency on page 73)
- The generator and busbar voltage is available and within the configured operating range (refer to Configure Monitoring: Generator, Operating Voltage / Frequency on page 38)
- The differential frequency/voltage is within the configured operating range

Synchronizing the MCB

- The GCB is closed (or at least one GCB is closed in a multiple genset application)
- The busbar voltage is within the configured operating range
- The "Enable MCB" (parameter 12923 on page 148) signal is present, for example discrete input 6 is energized if configured as DI 6
- The button "Close MCB" has been pressed

Synchronizing the GCB

- The MCB is closed
- The busbar voltage is within the configured operating range
- Engine delayed monitoring (parameter 3315 on page 175) and generator stable time (parameter 3415 on page 146) have expired or "Undelay close GCB" (parameter 12210 on page 147) is enabled
- The button "Close GCB" has been pressed

**Dead bus start MCB {20c}**

The unit closes the MCB, if the following conditions are met simultaneously. The display indicates **"MCB dead bus cls"**.

**Automatic operation**

- The operating mode AUTOMATIC has been selected
- The parameter "Dead busbar closure MCB" (parameter 3431 on page 148) is configured On
- The mains voltage is available and within the configured operating range (refer to Configure Monitoring: Mains, Operating Voltage / Frequency on page 73)
- The GCB is open or has been opened for at least the "Transfer time GCB $\leftrightarrow$ MCB" (parameter 3400 on page 143) (open transition mode only)
- The "Enable MCB" (parameter 12923 on page 148) signal is present, for example discrete input 6 is energized if configured as DI 6
- The busbar voltage is below the dead bus detection limit (parameter 5820 on page 143)



**Manual operation**

- Operating mode MANUAL has been selected
- The parameter "Dead busbar closure MCB" (parameter 3431 on page 148) is configured On
- The mains voltage is available and within the configured operating range (refer to Configure Monitoring: Mains, Operating Voltage / Frequency on page 73)
- The GCB is open or has been opened for at least the "Transfer time GCB $\leftarrow$  $\rightarrow$ MCB" (parameter 3400 on page 143) (open transition mode only)
- The "Enable MCB" (parameter 12923 on page 148) signal is present, for example discrete input 6 is energized if configured so
- The button "Close MCB" has been pressed
- The busbar voltage is below the dead bus detection limit (parameter 5820 on page 143)

**Open GCB {1o} or {1oc} or {2oc}**

The GCB will be opened when the "Command GCB open" is issued. The behavior of the GCB open relay depends on the setting of parameter 3403 on page 144. If this parameter is configured as "N.O.", the relay energizes to open the GCB, if it is configured as "N.C.", the relay de-energizes to open the GCB. The GCB will be opened under the following conditions.

- In STOP operating mode after unloading the generator
- In case of a class C alarm or higher
- By pressing the "GCB" or "MCB" softkey (depending on the CB logic which has been set) in MANUAL operating mode
- By pressing the button "stop engine" in MANUAL operating mode
- In the event of an automatic stopping in the AUTOMATIC operating mode (the start request has been terminated or a stop request has been initiated)
- By pressing the "MCB" softkey (depending on the CB logic which has been set) in MANUAL operating mode

Above conditions are only valid if the GCB is closed, whereas the following conditions are valid regardless of the GCB is open or closed.

- Prior to the MCB closing onto the dead busbar (depending on the CB logic which has been set)
- Fehler! Verweisquelle konnte nicht gefunden werden.** • In case of an alarm of class D or F

**Open MCB {2oc}**

The MCB will be opened when the relay "Command: MCB open" is energized. The MCB will be opened under the following conditions if the MCB is closed.

- If an emergency power operation is initiated (mains failure) once the generator voltage is within the permissible limits
- Prior to the closure of the GCB (depending on the CB logic which has been set)
- Upon pressing the "MCB" or "GCB" softkey (dependent upon the configured CB logic) in MANUAL operating mode

## Transition Mode

DE EN	Breaker transition mode					Breaker: Transition mode	Parallel / Interchange / Closed T. / Open T. / External			
	Betriebsmodus									
CL2	{0}	{1o}	{1oc}	{2oc}		The control unit automatically controls the two breakers (MCB and GCB). Up to five (5) breaker logic modes may be selected. These are:				
3411	---	---	---	✓						

A detailed explanation for each mode may be found in the following text.

### **Alternative Transition Modes**

The unit provides two alternative transition modes, which may be activated temporarily via the *LogicsManager* and override the transition mode configured in parameter 3411.



## NOTE

Alternative transition mode 1 has priority over alternative transition mode 2, i.e. if both *LogicsManager* functions (parameters 12931 & 12932) are TRUE, breaker transition mode 1 (parameter 3412) will be used.

[illegible]

A detailed explanation for each mode may be found in the following text.

Transition mode 1		Breaker: Transition mode 1				<i>LogicsManager</i>
LS-Modus Alternat. 1						
CL2	{0}	{1o}	{1oc}	{2oc}		
12931	---	---	---	✓	Once the conditions of the <i>LogicsManager</i> have been fulfilled, the transition mode configured in parameter 3412 will be used instead of the standard transition mode configured in parameter 3411. The <i>LogicsManager</i> and its default settings are explained on page 252 in Appendix B: " <i>LogicsManager</i> ".	

EN	Breaker transition mode 2			
DE	Schaltermodus Alternative 2			
CL2	{0}	{1o}	{1oc}	{2oc}
3413	---	---	---	✓

**Breaker: Transition mode 2**

Parallel / Interchange / Closed T. / Open T. / External

The control unit automatically controls the two breakers (MCB and GCB). Up to five (5) breaker logic modes may be selected. These are:

<b>{1oc}</b>	<b>{2oc}</b>
---	EXTERNAL
PARALLEL	PARALLEL
---	OPEN TRANSITION
---	CLOSED TRANSITION
---	INTERCHANGE

A detailed explanation for each mode may be found in the following text.

EN	Transition mode 2			
DE	LS-Modus Alternat. 2			
CL2	{0}	{1o}	{1oc}	{2oc}
12932	---	---	---	✓

**Breaker: Transition mode 2***LogicsManager*

Once the conditions of the *LogicsManager* have been fulfilled, the transition mode configured in parameter 3413 will be used instead of the standard transition mode configured in parameter 3411. The *LogicsManager* and its default settings are explained on page 252 in Appendix B: "*LogicsManager*".

**Breaker Logic "PARALLEL"**

Parallel operation is enabled by configuring parameter 3411 to "PARALLEL".

**NOTE**

Parallel breaker logic must be selected for the following operation modes:

- Isolated operation
- Mains parallel operation

In the event of an engine start request the following occurs:

- The GCB is synchronized and closed
- The generator assumes load and the adjusted real power or reactive power set points are controlled

Following the stop request the following occurs:

- The generator sheds load until real power has reached the "Unload limit" (parameter 3125)
- The generator power factor is controlled to "1.00" (unity)
- The GCB is opened
- The engine is shut down following the configured cool down period

**NOTE**

When a stop command is issued to the engine, soft loading (power reduction) is carried out before opening the GCB, except an alarm of class D or F is present.

**Breaker Logic "INTERCHANGE" {2oc}**

Mains interchange (import/export) real power control is enabled by configuring parameter 3411 to "INTERCHANGE".

**NOTE**

For this breaker logic to function correctly, the mains power measurement must be connected properly. The following applies for the power display:

- **Positive mains power = export power**
- **Negative mains power = import power**

In the event of a start request, a change is made from mains to generator supply. The following occurs:

- The GCB is synchronized and closed
- The generator assumes load until the imported mains interchange real power has reached 3 % of the "Generator rated active power" (parameter 1752)
- The MCB is opened

When a stop request has been issued, a change is made from generator to mains supply. The following occurs:

- The MCB is synchronized and closed
- The generator sheds load until real power has reached the "Unload limit" (parameter 3125)
- The generator power factor is controlled to "1.00" (unity)
- The GCB is opened

**Breaker Logic "CLOSED TRANSIT." {2oc}**

Closed transition (make-before-break/overlap synchronization) is enabled by configuring parameter 3411 to "CLOSED TRANSITION".

**NOTE**

The circuit breakers are opened irrespective of the power.

In the event of an engine start request, a change is made from mains to generator supply. The following occurs:

- The GCB is synchronized and closed
- The MCB is opened and the generator assumes all loads

After the engine stop request has been issued, a change is made from generator to mains supply. The following occurs:

- The MCB is synchronized and closed
- The GCB is opened and the mains assume all loads

**NOTE**

The maximum time between the reply from the CB and the CB open command is 500 ms.

**Breaker Logic "OPEN TRANSIT." {2oc}**

Open transition (break-before-make/change over logic) is enabled via configuration of parameter 3411 to "OPEN TRANSITION".

In the event of an engine start request, a change is made from mains to generator supply. The following occurs:

- The MCB is opened
- The GCB is closed after the time configured in "Transfer time GCB<->MCB" (parameter 3400 on page 143) has expired

After the engine stop request has been issued, a change is made from generator to mains supply. The following occurs:

- The GCB is opened
- The MCB is closed after the time configured in "Transfer time GCB<->MCB" parameter 3400 on page 143 has expired

**Breaker Logic "EXTERNAL"**

External breaker logic is enabled via configuration of parameter 3411 to "EXTERNAL".

All breaker control must be carried out via master controller (e.g. a PLC). The easYgen controller always issues the breaker open command under fault conditions and in the breaker unloading states (Unloading GCB) if the stop request is active.

**Overview {2oc}**

STOP	MANUAL	AUTOMATIC
------	--------	-----------

**EXTERNAL:** Breaker logic "External"

In a mains parallel operation, decoupling from the mains is carried out via the MCB or the GCB in the event of a mains failure. The breakers will not automatically close in emergency power operation. Emergency power operation in accordance with European Community Specification DIN VDE 0108 is not possible in this power circuit breaker logic.

The GCB is opened.	The MCB and the GCB may be manually opened. The circuit breakers are opened for decoupling from the mains.	The GCB is opened if the genset is stopped or if decoupling from the mains, but will not close if the engine is started. The MCB is opened only if decoupling from the mains, and is never closed.
--------------------	--	--

**PARALLEL:** Breaker logic "Mains parallel operation"

The MCB and GCB are synchronized to permit continuous mains parallel operation in this breaker logic mode.

The GCB is opened; the MCB is operated depending on the setting of "Enable MCB" (parameter 12923).	Mains parallel operation can be initiated by pressing the "GCB On" or "MCB On" push-button.	The GCB is synchronized via an add-on request and a mains parallel operation is performed. When a shed-off request is issued, the generator sheds load and opens the GCB and the engine is shut down following the configured cool down period.  <u>Emergency power:</u> The emergency power operation is terminated following the expiration of the mains settling time. The MCB is synchronized and closed, putting the system back into a mains parallel operation.
--	---	--

**OPEN TRANSIT.:** Breaker logic "Open transition / change-over / brake-before-make"

The MCB and GCB are never synchronized in this breaker logic mode.

The GCB is opened; the MCB is operated depending on the setting of "Enable MCB" (parameter 12923).	A change can be made to either generator or mains operation by pressing either the "GCB On" or "MCB On" push-button. The "STOP" push-button opens the GCB and simultaneously stops the engine.	A change is made to generator operation through an add-on request. Once the add-on request is terminated, the system changes back to mains operation. The MCB is closed when the busbar is dead, even if there has not been an add-on request. Emergency power operations are terminated following the expiration of the mains settling timer. The GCB opens and the MCB closes, transferring all loads to the mains.
--	--	---

**CLOSED TRANSIT.:** Breaker logic "Closed transition / make-before-brake / overlap synchronization"

The MCB and the GCB are synchronized, in order to avoid a dead busbar in this breaker logic mode. Immediately after the synchronization of one breaker, the other is opened. Continuous mains parallel operation is not possible.

The GCB is opened; the MCB is operated depending on the setting of "Enable MCB" (parameter 12923).	Synchronization of either the generator or the mains can be initiated by pressing the "GCB On" or "MCB On" push-button.	The GCB is synchronized via an add-on request. After the GCB closes the MCB is opened. Following the shed-off request being issued, the MCB is synchronized and closed. After the MCB has closed the GCB is opened.  <u>Emergency power:</u> The emergency power operation is terminated following the expiration of the mains settling time and the MCB synchronizing to the generator. The MCB closes and the GCB opens immediately afterwards.
--	---	---

**Overview {2oc} (continued)**

STOP	MANUAL	AUTOMATIC
<b>INTERCHANGE:</b> Breaker logic "Soft loading / interchange synchronization" The MCB and the GCB are synchronized, in order to avoid a dead busbar in this breaker logic mode. The operation of a breaker under load is avoided by utilizing the ability to soft load. Continuous mains parallel operation is not possible with this breaker logic. Following the shed-off request, the MCB synchronizes and closes, the generator soft unloads to the mains and the GCB opens. After the GCB is open the engine is stopped following the expiration of the configured cool down period.		
The GCB is opened; the MCB is operated depending on the setting of "Enable MCB" (parameter 12923).	Synchronization of either the generator or the mains can be initiated by pressing the "GCB On" or "MCB On" push-button.	Via an engine request, the GCB is synchronized and the generator power is increased. The MCB is then opened. Following the disabling of the engine request, the MCB is reverse synchronized and the GCB is then opened.  <u>Emergency power:</u> The emergency power operation is terminated following the expiration of the mains settling time. The MCB closes, the load is transferred, and the GCB opens.

**Overview {1oc}**

STOP	MANUAL	AUTOMATIC
<b>PARALLEL:</b> Breaker logic "Mains parallel" This operation mode may be used both in the case of an isolated system, an isolated parallel system, and a system that is operated in mains parallel.		
The GCB is opened.	Mains parallel operation can be performed via the "GCB On" push-button.	The GCB is synchronized via an add-on request and mains parallel operation is performed. When a shed-off request is issued, the generator sheds load, the GCB is opened, and the engine is shut down following the configured cool down period.

EN	Transfer time GCB↔MCB			
DE	Pausenzeit GLS↔NLS			
CL2	{0}	{1o}	{1oc}	{2oc}
3400	---	---	---	✓

**Breaker: Transfer time GCB ↔ MCB****0.10 to 99.99 s**

Switching from generator supply to mains supply or from mains supply to generator supply occurs automatically if the operating conditions have been met. The time between the reply "power circuit breaker is open" and a close pulse is set by this parameter. This time applies for both directions. During this time the consumers are de-energized.

**Note:** This is only valid, if parameter 3411 on page 138 is configured to OPEN TRANSITION

**Configure Application: Configure Breakers, Dead Bus Detection Limit**

EN	Dead bus detection max. volt.			
DE	Max. Spannung für SamS schwarz			
CL2	{0}	{1o}	{1oc}	{2oc}
5820	✓	✓	✓	✓

**Operating values, maximum voltage for dead bus detection****0 to 30 %**

If the busbar voltage falls below this percentage of the busbar 1 rated voltage (parameter 1781 on page 29), a dead bus condition is detected and the logical command variable 02.21 (Busbar 1 is dead) becomes TRUE.

Configure Application: Configure Breakers, GCB



NOTE

**Normally Open Contacts (NO):** If a voltage is applied to the discrete input terminals, the discrete input is enabled (i.e. in the operating state). The controller only recognizes a fault condition or control operation via the discrete input when the discrete input terminals are energized. If fault monitoring is performed via Normally Open contacts, the state of the system should be monitored by the state of the discrete input.

**Normally Closed Contacts (NC):** If a voltage is applied to the discrete input terminals, the discrete input is not enabled (i.e. in the idle state). The controller only recognizes a fault condition or control operation via the discrete input when the discrete input terminals are de-energized.

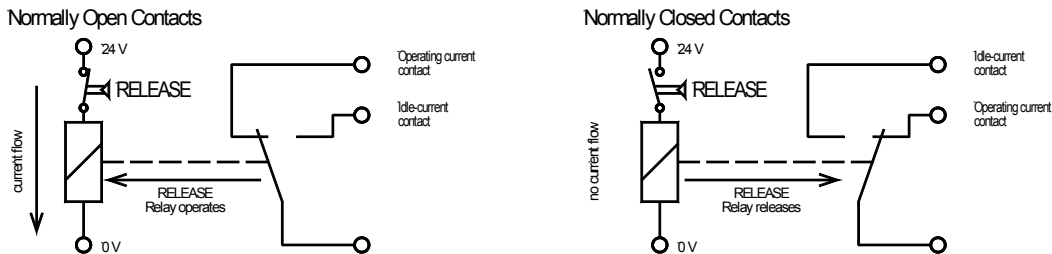


Figure 3-14: Normally Open / Normally Closed contacts

EN	GCB open relay			
	GLS Öffnen-Kontakt			
	CL2	{0}	{1o}	{1oc}
3403	---	✓	✓	✓

Breaker: "Command: GCB open" relay	N.O. / N.C. / Not used
<b>N.O. (normally open)</b> ....The relay "command: GCB open" will be energized to open the GCB and will be de-energized again after the discrete input "Reply GCB" is energized to signal the control that the GCB is open.	
<b>N.C. (normally closed)</b> ..The relay "command: GCB open" will be de-energized to open the GCB and will be energized again after the discrete input "Reply GCB" is energized to signal the control that the GCB is open.	
<b>Not used</b> .....A GCB open relay is not used and relay R7 (Command: open GCB) is freely programmable. In this case, parameter 3414 must be configured to "Constant" to open the breaker.	



DE	EN	GCB close command				Breaker: "Command: GCB close"	Constant / Impulse
		GLS Schließen-Befehl					
CL2		{0}	{1o}	{1oc}	{2oc}	<b>Impulse</b> ..... The relay "Command: GCB close" issues an add-on pulse. If the relay is configured in this manner a holding coil and sealing contacts must be installed externally to the control unit. The DI "Reply GCB" is used to identify closed contacts.	<b>Constant</b> ..... The relay "Command: close GCB" may be wired directly into the holding circuit for the power circuit breaker. If this method is utilized it is recommended that isolation relays are used. After the connect pulse has been issued and the reply of the power circuit breaker has been received, the relay "Command: close GCB" remains energized. If a class C alarm or higher occurs or a GCB open command is issued, this relay de-energizes.
3414		---	---	✓	✓		

In both cases the relay "Command: GCB open" energizes to open the GCB if parameter 3403 is not configured as "Not used".

EN

DE

GCB time pulse				
GLS Impulsdauer				
CL2 3416	{0}	{1o}	{1oc}	{2oc}
	---	✓	✓	✓

Breaker: Pulse duration to close the GCB

0.10 to 0.50 s

The time of the pulse output may be adjusted to the breaker being utilized.

EN

DE

Synchronization GCB				
Synchronisierung GLS				
CL2 5729	{0}	{1o}	{1oc}	{2oc}
	---	---	---	✓

Breaker: Synchronization frequency GCB

Slip frequency / Phase matching

**Slip frequency**..... The frequency controller adjusts the frequency in a way, that the frequency of the source (generator) is marginal greater than the target (busbar). When the synchronizing conditions are reached, a close command will be issued. The slipping frequency depends on the setting of "Slip frequency offset" (parameter 5502 on page 209).

**Phase matching** .. The frequency controller adjusts the phase angle of the source (generator) to that of the target (busbar), in view of turning the phase difference to zero.

		Voltage differential GCB				0.50 to 20.00 %	
		Max. Spg. Differenz GLS					
CL2	{0}	{1o}	{1oc}	{2oc}	① This value refers to the generator rated voltage (parameter 1766 on page 28).		
5700	---	---	✓	✓			

The maximum permissible voltage differential for closing the generator circuit breaker is configured here.

If the difference between generator and busbar voltage does not exceed the value configured here and the generator voltage is within the operating voltage window (parameters 5800/5801 on page 38), the "Command: GCB close" may be issued.

		Pos. freq. differential GCB				0.02 to 0.49 Hz	
		Max. positiver Schlupf GLS					
CL2	{0}	{1o}	{1oc}	{2oc}	① This parameter is only displayed, if parameter 5729 is configured to "Slip frequency".		
5701	---	---	✓	✓			

EN	Neg. freq. differential GCB	Breaker: Negative frequency differential GCB	-0.49 to 0.00 Hz
DE	Max. negativer Schlupf GLS		
CL2	{0} {1o} {1oc} {2oc}	<p>① This parameter is only displayed, if parameter 5729 is configured to "Slip frequency".</p> <p>The prerequisite for a close command being issued for the GCB is that the differential frequency is above the configured differential frequency. This value specifies the lower frequency limit (negative value corresponds to negative slip → generator frequency is less than the busbar frequency).</p>	
5702	--- --- ✓ ✓		
EN	Max positive phase angle GCB	Breaker: Max. permissible positive phase angle GCB	0.0 to 60.0 °
DE	Max. pos. Winkeldifferenz GLS		
CL2	{0} {1o} {1oc} {2oc}	<p>① This parameter is only displayed, if parameter 5729 is configured to "Phase matching".</p> <p>The prerequisite for a close command being issued for the GCB is that the leading phase angle between generator and busbar is below the configured maximum permissible angle.</p>	
5703	--- --- ✓ ✓		
EN	Max negative phase angle GCB	Breaker: Max. permissible negative phase angle GCB	-60.0 to 0.0 °
DE	Max. neg. Winkeldifferenz GLS		
CL2	{0} {1o} {1oc} {2oc}	<p>① This parameter is only displayed, if parameter 5729 is configured to "Phase matching".</p> <p>The prerequisite for a close command being issued for the GCB is that the lagging phase angle between generator and busbar is above the configured minimum permissible angle.</p>	
5704	--- --- ✓ ✓		
EN	Phase matching GCB dwell time	Breaker: Phase matching dwell time of GCB	0.0 to 60.0 s
DE	Verweildauer GLS		
CL2	{0} {1o} {1oc} {2oc}	<p>① This parameter is only displayed, if parameter 5729 is configured to "Phase matching".</p> <p>This is the minimum time that the generator voltage, frequency, and phase angle must be within the configured limits before the breaker will be closed.</p>	
5707	--- --- ✓ ✓		
EN	Dead bus closure GCB	Breaker: Dead busbar closure GCB	On / Off
DE	Schwarz schließen GLS		
CL2	{0} {1o} {1oc} {2oc}	<p><b>On</b> ..... A dead busbar closure is allowed if the required conditions are met.</p> <p><b>Off</b> ..... A GCB close command to a dead busbar is prevented. A synchronization is still possible.</p>	
3432	--- --- ✓ ✓		
EN	Generator stable time	Breaker: "Command: GCB close": Breaker delay	0 to 99 s
DE	Wartezeit vor GLS schließen		
CL2	{0} {1o} {1oc} {2oc}	<p>The time configured here begins to count down once the engine monitoring delay timer has expired. This permits for an additional delay time before the breaker is closed in order to ensure that none of the engine delayed watchdogs trips. It is possible to bypass this delay time through the <i>LogicsManager</i> (parameter 12210 on page 147) in the event an emergency operation condition (mains failure) occurs.</p> <p>Unnecessary CB switching operations and voltage interruptions should be avoided by utilizing this parameter.</p>	
3415	--- ✓ ✓ ✓		
EN	Closing time GCB	Inherent delay of GCB for synchronization	40 to 300 ms
DE	Schaltereigenzeit GLS		
CL2	{0} {1o} {1oc} {2oc}	<p>The inherent closing time of the GCB corresponds to the lead-time of the close command. The close command will be issued independent of the differential frequency at the entered time before the synchronous point.</p>	
5705	--- --- ✓ ✓		
EN	Undelay close GCB	Breaker: Undelay closing of the GCB	<i>LogicsManager</i>
DE	GLS unverzögert		
CL2	{0} {1o} {1oc} {2oc}		

12210    ---    ---    ✓    ✓

Once the conditions of the *LogicsManager* have been fulfilled the GCB will be closed immediately (without waiting for engine speed delay and generator stable timer to expire). When using the standard setting, the GCB will be closed without delay in emergency power operation. The *LogicsManager* and its default settings are explained on page 252 in Appendix B: "*LogicsManager*".

## Configure Application: Configure Breakers, MCB

EN	MCB time pulse			
DE	NLS Impulsdauer			
CL2	{0}	{1o}	{1oc}	{2oc}
3417	---	---	---	✓

**Breaker: Pulse duration to close the MCB**

**0.10 to 0.50 s**

The time of the pulse output may be adjusted to the breaker being utilized.

EN	Synchronization MCB			
DE	Synchronisierung NLS			
CL2	{0}	{1o}	{1oc}	{2oc}
5730	---	---	---	✓

**Breaker: Synchronization frequency MCB**

**Slip frequency / Phase matching**

**Slip frequency** The frequency controller adjusts the frequency in a way, that the frequency of the source (busbar) is marginal greater than the target (mains). When the synchronizing conditions are reached, a close command will be issued. The slipping frequency is positive to avoid reverse power.

**Phase matching** The frequency controller adjusts the phase angle of the source (busbar) to that of the target (mains), in view of turning the phase difference to zero.

EN	Voltage differential MCB			
DE	Max. Spg. Differenz NLS			
CL2	{0}	{1o}	{1oc}	{2oc}
5710	---	---	---	✓

**Breaker: Voltage differential MCB**

**0.50 to 20.00 %**

① This value refers to the mains rated voltage (parameter 1768 on page 28).

The maximum permissible voltage differential for closing the mains circuit breaker is configured here.

If the difference between mains and busbar voltage does not exceed the value configured here and the mains voltage is within the operating voltage window (parameters 5810/5811 on page 74), the "Command: MCB close" may be issued.

EN	Pos. freq. differential MCB			
DE	Max. positiver Schlupf NLS			
CL2	{0}	{1o}	{1oc}	{2oc}
5711	---	---	---	✓

**Breaker: Positive frequency differential MCB**

**0.02 to 0.49 Hz**

① This parameter is only displayed, if parameter 5730 is configured to "Slip frequency".

The prerequisite for a connect command being issued for the MCB is that the differential frequency is below the configured differential frequency. This value specifies the upper frequency (positive value corresponds to positive slip → busbar frequency is higher than the mains frequency).

EN	Neg. freq. differential MCB			
DE	Max. negativer Schlupf NLS			
CL2	{0}	{1o}	{1oc}	{2oc}
5712	---	---	---	✓

**Breaker: Negative frequency differential MCB****-0.49 to 0.00 Hz**

① This parameter is only displayed, if parameter 5730 is configured to "Slip frequency".

The prerequisite for a connect command being issued for the MCB is that the differential frequency is above the configured differential frequency. This value specifies the lower frequency limit (negative value corresponds to negative slip → busbar frequency is less than the mains frequency).

EN	Max positive phase angle MCB			
DE	Max. positive Winkeldiff. NLS			
CL2	{0}	{1o}	{1oc}	{2oc}
5713	---	---	---	✓

**Breaker: Max. permissible positive phase angle MCB****0.0 to 60.0 °**

① This parameter is only displayed, if parameter 5730 is configured to "Phase matching".

The prerequisite for a connect command being issued for the MCB is that the leading phase angle between busbar and mains is below the configured maximum permissible angle.

EN	Max negative phase angle MCB			
DE	Max. negative Winkeldiff. NLS			
CL2	{0}	{1o}	{1oc}	{2oc}
5714	---	---	---	✓

**Breaker: Max. permissible negative phase angle MCB****-60.0 to 0.0 °**

① This parameter is only displayed, if parameter 5730 is configured to "Phase matching".

The prerequisite for a connect command being issued for the MCB is that the lagging phase angle between busbar and mains is above the configured minimum permissible angle.

EN	Phase matching MCB dwell time			
DE	Verweildauer NLS			
CL2	{0}	{1o}	{1oc}	{2oc}
5717	---	---	---	✓

**Breaker: Phase matching dwell time of MCB****0.0 to 60.0 s**

① This parameter is only displayed, if parameter 5730 is configured to "Phase matching".

This is the minimum time that the generator voltage, frequency, and phase angle must be within the configured limits before the breaker will be closed.

EN	Dead bus closure MCB			
DE	Schwarz schließen MCB			
CL2	{0}	{1o}	{1oc}	{2oc}
3431	---	---	---	✓

**Breaker: Dead busbar closure MCB****On / Off**

**On** ..... A dead busbar closure is allowed if the required conditions are met.

**Off** ..... An MCB close command to a dead busbar is prevented. A synchronization is still possible.

EN	Enable MCB			
DE	Freigabe NLS			
CL2	{0}	{1o}	{1oc}	{2oc}
12923	---	---	---	✓

**Breaker: Enable MCB****LogicsManager**

Once the conditions of the *LogicsManager* have been fulfilled the MCB will be enabled. The *LogicsManager* and its default settings are explained on page 252 in Appendix B: "*LogicsManager*".

DI 6 is pre-assigned by default to this function, but may be configured freely.

EN	Closing time MCB			
DE	Schaltzeigenzeit NLS			
CL2	{0}	{1o}	{1oc}	{2oc}
5715	---	---	---	✓

**Breaker: Synchronization: Inherent delay of MCB for synchronization 40 to 300 ms**

The inherent closing time of the MCB corresponds to the lead-time of the close command. The close command will be issued independent of the differential frequency at the entered time before the synchronous point.

## Configure Application: Configure Breakers, Synchronization

		Synchronization mode				Breaker: Synchronization mode	Off / Permissive / Check / Run / Controlled by LM
EN	DE	Synchronisiermodus					
CL2	{0}	{1o}	{1oc}	{2oc}		Off	The synchronization is disabled, the frequency and voltage adaptation for synchronization is not active.
5728	---	---	---	✓		Permissive	The unit acts as a synch check device. The unit will not issue speed or voltage bias commands to achieve a synchronization, but if synchronization conditions are matched (frequency, phase, voltage and phase angle), the control will issue a breaker close command.
						Check	Used for checking a synchronizer prior to commissioning. The control actively synchronizes generator(s) by issuing speed and voltage bias commands, but <b>does not issue a breaker closure command</b> .
						Run	Normal operating mode. The control actively synchronizes and issues breaker closure commands.
						Controlled by LM	The synchronization mode may be selected by enabling one of the respective <i>LogicsManager</i> functions (parameters 12907, 12906, or 12908). If none of these parameters is enabled, the synchronization is disabled. If more than one of these parameters is enabled, the following priority is valid: 1. PERMISSIVE 2. CHECK 3. RUN.

		Syn. mode PERMISS.				Breaker: Synchronization mode PERMISSIVE	<i>LogicsManager</i>
EN	DE	Syn.modus PERMISS.					
CL2	{0}	{1o}	{1oc}	{2oc}		Once the conditions of the <i>LogicsManager</i> have been fulfilled the PERMISSIVE synchronization mode will be enabled. The <i>LogicsManager</i> and its default settings are explained on page 252 in Appendix B: " <i>LogicsManager</i> ".	
12907	---	---	✓	✓			

		Syn. mode CHECK				Breaker: Synchronization mode CHECK	<i>LogicsManager</i>
EN	DE	Syn.modus CHECK					
CL2	{0}	{1o}	{1oc}	{2oc}		Once the conditions of the <i>LogicsManager</i> have been fulfilled the CHECK synchronization mode will be enabled. The <i>LogicsManager</i> and its default settings are explained on page 252 in Appendix B: " <i>LogicsManager</i> ".	
12906	---	---	✓	✓			

		Syn. mode RUN				Breaker: Synchronization mode RUN	<i>LogicsManager</i>
EN	DE	Syn.modus RUN					
CL2	{0}	{1o}	{1oc}	{2oc}		Once the conditions of the <i>LogicsManager</i> have been fulfilled the RUN synchronization mode will be enabled. The <i>LogicsManager</i> and its default settings are explained on page 252 in Appendix B: " <i>LogicsManager</i> ".	
12908	---	---	✓	✓			

## Configure Application: Configure Inputs and Outputs

### Configure Analog Inputs (*FlexIn*)

EN	Display temperature in	Temperature display in	°C / °F
DE	Temperaturanzeige in		
CL1	{0} {1o} {1oc} {2oc}	°C..... The temperature is displayed in °C (Celsius).	
3631	✓ ✓ ✓ ✓	°F..... The temperature is displayed in °F (Fahrenheit).	

EN	Display pressure in	Pressure display in	bar / psi
DE	Druckanzeige in		
CL1	{0} {1o} {1oc} {2oc}	bar..... The pressure is displayed in Bar.	
3630	✓ ✓ ✓ ✓	psi..... The pressure is displayed in psi.	



### NOTE

Refer to the Application Manual 37226 for a detailed configuration example of an analog input.

### Analog Inputs: Characteristics "Table A" And "Table B" (9 Point Scaling)

The characteristic curves of "Table A" and "Table B" (freely configurable over 9 defined percentage points) are independently configurable for all analog inputs. Each percentage point may be scaled to related values measured from the analog input (0 to 500 Ohm or 0 to 20 mA), so that the actual display reflects the measured values (i.e. - 100 to 100 kW). The so developed characteristic curve can be used for visualization and monitoring via the configuration to "Table A" (for Table A) as well as "Table B" (for Table B).

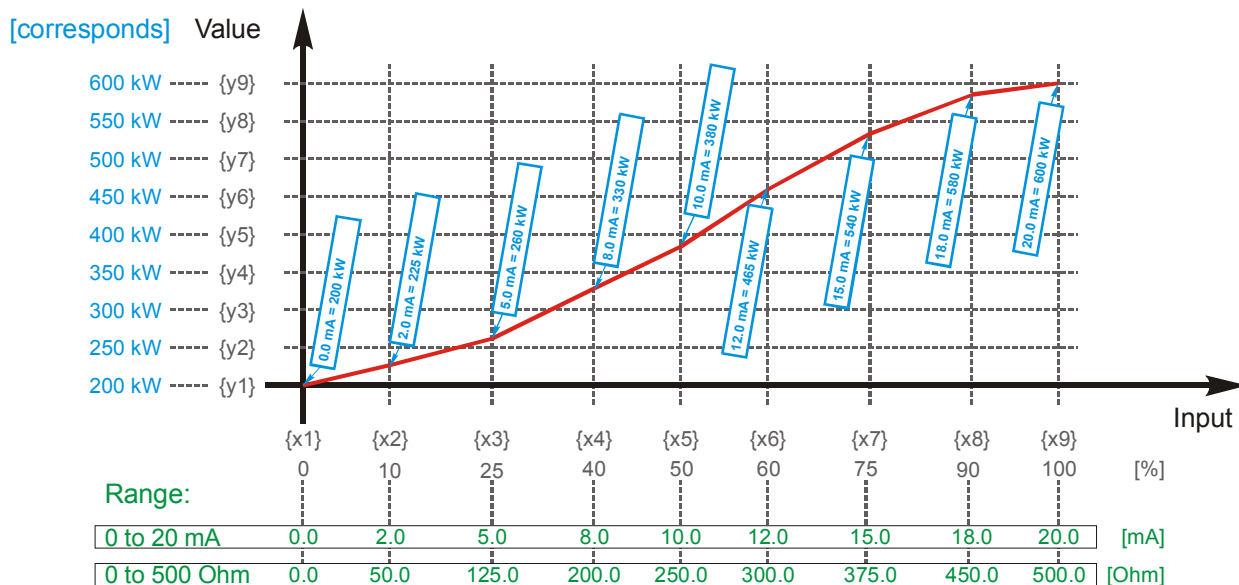


Figure 3-15: Analog input scaling - table (example)

**NOTE**

The X and Y junction may be moved within the range of values (the junctions don't have to be equidistant).

When configuring the X coordinates, ensure the coordinates always increase in scale continuously. In the following example the first set of x/y coordinates are correct and the second set of x/y coordinates are wrong:

- **correct** X-coord. 0 % 10 % 20 % 40 % 50 % 60 % 80 % 90 % 100 %  
Y-coordinate -100 -95 -500 -10 +3 +17 +18 +100 +2000
- **wrong** X-coord. 0 % 10 % 20 % 60 % 20 % 30 % 80 % 40 % 100 %  
Y-coordinate -100 -50 -95 +18 +17 +3 -10 +2000 +100

If the first X coordinate is >0%, all values smaller than the first X value will be output with the first Y value. If the last Y value is <100%, all higher values will be output with the value of Y9.

The following parameters are used to configure the characteristic curve. Refer to Table 3-56 for the parameter IDs of the individual parameters for all scaling points of tables A and B.

EN	X-value {a}				Table {x} [x = A/B]: X-coordinate {a} [a = 1 to 9]	0 to 100 %
DE	X-Wert {a}					
<b>CL2</b> 3560	{0}	{10}	{100}	{200}	The analog input is assigned to a curve. This parameter defines the actual percentage assigned to each of the nine points along the X-axis of the total range of the selected hardware for analog input. For example: If a 0 to 20 mA input is configured and the X1-coordinate = 0%, then the value configured for Y1 is output for an input of 0 mA.	
	✓	✓	✓	✓		
EN	Y-value {b}				Table {x} [x = A/B]: Y-coordinate {b} [b = 1 to 9]	-9999 to 9999
DE	Y-Wert {b}					
<b>CL2</b> 3550	{0}	{10}	{100}	{200}	This parameter defines the Y-coordinate (the displayed and monitored value) at the corresponding X-coordinate. For example: If a 0 to 20mA input is configured and the X2-coordinate = 10%, then the value configured for the Y2-coordinate is output for an input of 2 mA.	
	✓	✓	✓	✓		

Table 3-56 shows a complete list of the parameter IDs for the table scaling points.

Scaling point No.	1	2	3	4	5	6	7	8	9
Table A - X value	3560	3561	3562	3563	3564	3565	3566	3567	3568
Table A - Y value	3550	3551	3552	3553	3554	3555	3556	3557	3558
Table B - X value	3610	3611	3612	3613	3614	3615	3616	3617	3618
Table B - Y value	3600	3601	3602	3603	3604	3605	3606	3607	3608

Table 3-56: Analog inputs - table characteristics - parameter IDs

**Analog Inputs: Inputs 1 to 3****NOTE**

Monitoring of the analog inputs (overrun/underrun) must be configured manually to the flexible limits (refer to Configure Monitoring: Flexible Limits on page 118).

		Description				Analog input {x} [x = 1 to 3]: Message text	user-defined
DE	EN	Beschreibung					
T		{0}	{1o}	{1oc}	{2oc}	The event history will store this text message and it is also displayed on the visualization screen. If the programmed limit value of the analog input has been reached or exceeded this text is displayed in the control unit screen. The text may	
1025		✓					
1075		✓					
1125							

The event history will store this text message and it is also displayed on the visualization screen. If the programmed limit value of the analog input has been reached or exceeded this text is displayed in the control unit screen. The text may have 4 through 16 characters.

**Note:** This parameter may only be configured using ToolKit.

DE	EN	Type					Analog input {x} [x = 1 to 3]: Type	Off / VDO 5bar / VDO 10bar / VDO 150°C / VDO 120°C / Pt100 / Linear / Table A / Table B
		Typ						
CL2		{0}	{1o}	{1oc}	{2oc}			
1000		✓		✓		✓		
1050								
1100								

① The characteristic curves of the inputs can be found in Appendix F (page 310).

① The characteristic curves of the inputs can be found in Appendix F (page 310).

According to the following parameters different measuring ranges are possible at the analog inputs. The selectable ranges are:

- Off** ..... The analog input is switched off.
- VDO 5bar** ..... The value of the analog input is interpreted with the VDO characteristics 0 to 5 bar.
- VDO 10bar** ..... The value of the analog input is interpreted with the VDO characteristics 0 to 10 bar.
- VDO 150°C** ..... The value of the analog input is interpreted with the VDO characteristics 50 to 150 °C.
- VDO 120°C** ..... The value of the analog input is interpreted with the VDO characteristics 40 to 120 °C.
- Pt100** ..... The value of the analog input is interpreted with a Pt100 characteristic.
- Linear** ..... Each analog input may be assigned to a linear characteristic curve, which can be only used for the respective defined input [T{x}] (x = 1 to 2). The minimum (0 %) and maximum (100 %) value refers to the total measuring range of the analog input (i.e. 0 to 500 Ohm or 0 to 20 mA). Both benchmark limits of the linear characteristic curves must be defined only in case they are used.
- Table A / B** ..... The analog input is assigned to a characteristic curve which is defined over 9 points (stored in a table). Two independent tables (table A and table B) may be allocated to the analog inputs. Note that if these tables are to be used with the analog inputs, the defined points of these tables must be programmed into the control unit.

**NOTE**

Please note that it is not only possible to use 0 to 500 Ohm or 0 to 20 mA senders, if "Linear" is configured as "Type". It is also possible to use 4 to 20 mA senders for example, because the input range is fully scalable between 0 to 500 Ohm or 0 to 20 mA.



**NOTE**

The following parameters "User defined min display value" and "User defined max display value" are only visible if the previous parameter "Type" is configured to "Linear".

EN	User defined min display value	Analogue input {x} [x = 1 to 3]: User defined minimum display value	-9999 to 9999
DE	Frei definierbare min Anzeige		
CL2	{0} {10} {100} {200}	The value to be displayed for the minimum of the input range must be entered here.	
1001	✓		
1051	✓		
1101	✓		
EN	User defined max display value	Analogue input {x} [x = 1 to 3]: User defined maximum display value	-9999 to 9999
DE	Frei definierbare max Anzeige		
CL2	{0} {10} {100} {200}	The value to be displayed for the maximum of the input range must be entered here.	
1002	✓		
1052	✓		
1102	✓		

**NOTE**

The following parameters "Sender value at display min" and "Sender value at display max" are only visible if the previous parameter "Type" is configured to "Linear", "Table A", or "Table B".

DE

EN

Sender value at display min.		Analog input {x} [x = 1 to 3]: Source value at display minimum		0.00 to 100.00 %
Quellwert bei min Anzeige				
CL2	{0}	{10}	{100}	{200}
1039	✓	✓	✓	✓
1089				
1139				

The value of the configured input range, which shall correspond with the minimum value configured for the display, must be entered here. This specifies the lower limit of the hardware range to be measured.

Example: If the input range is 0 to 20 mA where 0 mA corresponds with 0 % and 20 mA corresponds with 100 %, and the value configured here is 20 %, an analog input value of 4 mA would correspond with the minimum value configured for the display.

DE

EN

Sender value at display max.		Analog input {x} [x = 1 to 3]: Source value at display maximum		0.00 to 100.00 %
Quellwert bei max Anzeige				
CL2	{0}	{10}	{100}	{200}
1040	✓	✓	✓	✓
1090				
1140				

The value of the configured input range, which shall correspond with the maximum value configured for the display, must be entered here. This specifies the upper limit of the hardware range to be measured.

Example: If the input range is 0 to 500 Ohm where 0 Ohm corresponds with 0 % and 500 Ohm corresponds with 100 %, and the value configured here is 36 %, an analog input value of 180 Ohm would correspond with the maximum value configured for the display.

**NOTE**

The following parameter "Sender type" must be configured to "0 to 500 Ohm", if "Type" (parameter 1000, 1050, or 1100) is configured to "VDO xx" or "Pt100".

EN	Sender type	Analogue input {x} [x = 1 to 3]: Hardware	0 to 500 Ohm / 0 to 20 mA
DE	Auswahl Hardware		
CL2	{0} {10} {100} {200}	The software in the control unit may be configured for various types of sensors. The configurable ranges apply to the linear analog input. Configurable ranges are: <b>0 to 500 Ohm</b> The measuring range of the analog input is 0- to 500 Ohm. 0 Ohm = 0 %, 500 Ohm = 100 %. <b>0 to 20 mA</b> ... The measuring range of the analog input is 0 to 20 mA. 0 mA = 0 %, 20 mA = 100 %.	
1020	✓		
1070	✓		
1120	✓		

**NOTE**

The following parameters "Offset" and "Sender connection type" are only visible if the previous parameter "Sender type" is configured to "0 to 500 Ohm".

EN	Offset			
	Offset			
CL2	{0}	{1o}	{1oc}	{2oc}
1046	✓	✓	✓	✓
1096				
1146				

**Analog input {x} [x = 1 to 3]: Offset****-20.0 to 20.0 Ohm**

The resistive input (the "0 to 500Ohm" analog input) may be calculated with a permanent offset to adjust for inaccuracies. If the offset feature is utilized, the value configured in this parameter will be added to/subtracted from the measured resistive value. This has the following effect to the measured values (please note tables starting on page 310):

**-20.0 to 0.1 Ohm**

VDO temperature: The displayed value will decrease.

VDO pressure: The displayed value will increase.

**+0.1 to 20.0 Ohm**

VDO temperature: The displayed value will increase.

VDO pressure: The displayed value will decrease.

EN	Sender connection type			
	Anschluß Typ			
CL2	{0}	{1o}	{1oc}	{2oc}
1041	✓	✓	✓	✓
1091				
1141				

**Analog input {x} [x = 1 to 3]: Connection type****Two-pole / Single-pole**

This parameter defines the type of the used sender. Refer to the Installation Manual 37223 for wiring details.

**Two-pole** .....A two-wire sender is connected to the easYgen. The unit measures the sender values between the dedicated terminals.

**Single-pole** ...A one-wire sender is connected to the easYgen. The unit measures the sender values between the terminal of the analog input and the engine ground terminal.

The respective analog input is monitored for wire break.

If this protective function is triggered, the display indicates "Wb: {Text of Parameter

[Description]} " (parameter 1025/1075/1125 on page 152).

EN	Monitoring wire break			
	Drahtbruchüberw.			
CL2	{0}	{1o}	{1oc}	{2oc}
1003	✓	✓	✓	✓
1053				
1103				

**Analog input {x} [x = 1 to 3] wire break monitoring****Off / High / Low / High/Low**

The analog input can be monitored for a wire break. The following configurations are used to monitor for a wire break:

**Off** .....No wire break monitoring is performed.

**High**.....If the actual value rises over the maximum value (overshoot), this is identified as a wire break.

**Low**.....If the actual value falls below the minimum value (undershoot), this is identified as a wire break.

**High/Low** ....If the actual value rises over the maximum value (overshoot) or falls below the minimum value (undershoot), this is identified as a wire break.

**NOTE**

Monitoring of the analog inputs (overrun/underrun) must be configured manually to the flexible limits (refer to Configure Monitoring: Flexible Limits on page 118).

If the control unit detects that the measuring range for an analog input has been exceeded and an alarm is issued, the limit value monitoring of this analog input is disabled and an error message is displayed.

The measuring range is recognized as being exceeded and an alarm is issued:

- 0 to 20 mA
  - Minimum value .....2 mA.....Undershooting
  - Maximum value.....20.5 mA.....Overshooting
- 0 to 500 Ohm
  - Minimum value .....5 Ohm .....Undershooting (Offset = 0 Ohm)
  - Maximum value.....515 Ohm .....Overshooting (Offset = 0 Ohm)

**Note:** Depending on what was configured for the offset value (parameter 1046/1096/1146 on page 154) the displayed value may be shifted. This may result in a broken wire being recognized early or later than the actual value being measured. (An offset of +20ohms will recognize a wire break at 25ohms instead of 5ohms.)

**NOTE**

A wire break is indicated in ToolKit by displaying an analog input value of 3276.6.

**NOTE**

The following two parameters are only visible, if wire break monitoring (parameter 1003/1053/1103 on page 154) is not configured Off.

EN	Wire break alarm class	Analog in. {x} [x = 1 to 3]: Alarm class wire break monit.	Class A/B/C/D/E/F/Control
DE	Drahtbruch Alarmklasse		
CL2	{0} {1o} {1oc} {2oc}	ⓘ See chapter "Alarm" on page 250.	
1004	✓		
1054	✓		
1104	✓		
Each limit may be assigned an independent alarm class that specifies what action should be taken when the limit is surpassed.			
EN	Self acknowledge wire break	Analog input {x} [x = 1 to 3]: Self acknowledged	Yes / No
DE	Drahtbruch selbstquitt.		
CL2	{0} {1o} {1oc} {2oc}	Yes .....	The control automatically clears the alarm if the fault condition is no longer detected.
1005	✓	No .....	The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the <i>LogicsManager</i> output "External acknowledgement" (via a discrete input or via an interface).
1055	✓		
1105	✓		

EN	Filter time constant			
DE	Filter			
CL2	{0}	{1o}	{1oc}	{2oc}
10113	✓	✓	✓	✓
10114				
10116				

Analog input {x} [x = 1 to 3]: Filter time constant

Off / 1 / 2 / 3 / 4 / 5

A filter time constant may be used to reduce the fluctuation of an analog input reading. This filter time constant assesses the average of the signal according to the following formula:

$$\text{Cut-off frequency} = \frac{1}{20ms \times 2 \times \pi \times 2^{N-1}}$$
, whereby "N" is the parameter.

- Off .....The analog input is displayed without filtering.
- 1 .....Cut-off-frequency = 7.96 Hz (filter time constant = 0.02 s)
- 2 .....Cut-off-frequency = 3.98 Hz (filter time constant = 0.04 s)
- 3 .....Cut-off-frequency = 1.99 Hz (filter time constant = 0.08 s)
- 4 .....Cut-off-frequency = 0.99 Hz (filter time constant = 0.16 s)
- 5 .....Cut-off-frequency = 0.50 Hz (filter time constant = 0.32 s)

EN	Bargraph minimum			
DE	Bargraph Minimum			
CL2	{0}	{1o}	{1oc}	{2oc}
3632	✓	✓	✓	✓
3634				
3636				

Analog input {x} [x = 1 to 3]: Bar graph minimum value

-9999 to 9999

The start value for the bar graph display of the analog input is defined here. The value must be entered according to the display format, which refers to the analog input type (parameter 1000 on page 152).

**Note:** This parameter is only effective if parameter 1000 is configured to Linear or Table A/B.

EN	Bargraph maximum			
DE	Bargraph Maximum			
CL2	{0}	{1o}	{1oc}	{2oc}
3633	✓	✓	✓	✓
3635				
3637				

Analog input {x} [x = 1 to 3]: Bar graph maximum value

-9999 to 9999

The end value for the bar graph display of the analog input is defined here. The value must be entered according to the display format, which refers to the analog input type (parameter 1000 on page 152).

**Note:** This parameter is only effective if parameter 1000 is configured to Linear or Table A/B.

	Value format			
	Zahlenformat			
T	{0}	{1o}	{1oc}	{2oc}
1035	✓	✓	✓	✓
1085				
1135				

## Analog input {x} [x = 1 to 3]: Value format

user-defined

- ① If a sign to denote a negative measured value (i.e. -10) is required, then the first "0" of the numeric display is utilized for this symbol.

To display the measuring value of the analog input for the analog input types linear as well as Table A and Table B (parameter 1000 on page 152) correctly this parameter is to be used to define the format. The zeros in the numeric display are used for the measuring values and are configurable. The placeholders for the digits may have symbols (i.e. commas).

**Note**

- This parameter may only be configured using ToolKit.
- This parameter only applies to the linear and the user defined Table A and Table B (parameter 1000 on page 152) analog input types.
- The displayed value should be configured with the same number of digits as the desired value to be measured.
- The measured value will be displayed from right to left. If the measured value is larger than the number of digits in the display, only a portion of the measured value will be shown. An example of this would be a display of three digits is configured when four digits will be needed. Instead of the number "1234" being displayed only "234" will be shown.

**Examples**

Fuel level

- value at 0 %.....0
- value at 100 %.....1000
- desired display .....up to 1,000mm
- this parameter.....**0,000mm**

Angle

- value at 0 %.....-1799
- value at 100 %.....1800
- desired display .....-179.9° to 180.0°
- this parameter.....**0000.0°**

Pressure

- value at 0 %.....0
- value at 100 %.....100
- desired display .....up to 10.0bar
- this parameter.....**00.0bar**

**Note**

- If the analog input type (parameter 1000 on page 152) is configured to VDO or Pt100, the following formats apply:
 

VDO 5 bar	display in 0.01 bar	– example: 5.0 bar > ToolKit display: 500
VDO 10 bar	display in 0.01 bar	– example: 6.6 bar > ToolKit display: 660
VDO 120°C	display in °C	– example: 69°C > ToolKit display: 69
VDO 150°C	display in °C	– example: 73°C > ToolKit display: 73
Pt100	display in °C	– example: 103°C > ToolKit display: 103

Configure Discrete Inputs

Number	Terminal	Application mode			
		{0}	{1o}	{1oc}	{2oc}
Internal discrete inputs, board #1					
[DI1]	67	Alarm input ( <i>LogicsManager</i> ); pre-assigned with 'Emergency stop'			
[DI2]	68	Control input ( <i>LogicsManager</i> ); pre-assigned with 'Start in AUTO'			
[DI3]	69	Alarm input ( <i>LogicsManager</i> ); pre-assigned with 'Low oil pressure'			
[DI4]	70	Alarm input ( <i>LogicsManager</i> ); pre-assigned with 'Coolant temperature'			
[DI5]	71	Control input ( <i>LogicsManager</i> ); pre-assigned with 'Alarm acknowledgement'			
[DI6]	72	Control input ( <i>LogicsManager</i> ); pre-assigned with 'Enable MCB'			
[DI7]	73	Reply MCB			
[DI8]	74	Reply GCB			
[DI9]	75	Alarm input ( <i>LogicsManager</i> )			
[DI10]	76	Alarm input ( <i>LogicsManager</i> )			
[DI11]	77	Alarm input ( <i>LogicsManager</i> )			
[DI12]	78	Alarm input ( <i>LogicsManager</i> )			

Table 3-57: Discrete inputs - terminal assignment



**NOTE**

Alarm inputs may also be configured as control inputs and then be used as command variables in the *LogicsManager*.

Discrete inputs may be configured to normally open (N.O.) or normally closed (N.C.) states. In the state N.O., no potential is present during normal operation; if an alarm is issued or control operation is performed, the input is energized. In the state N.C., a potential is continuously present during normal operation; if an alarm is issued or control operation is performed, the input is de-energized.

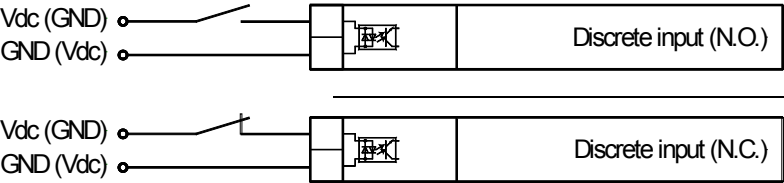



Figure 3-16: Discrete inputs - alarm/control inputs - operation logic



**NOTE**

All reply messages from breakers are evaluated as N.C.



**NOTE**

The DIs 1 to 5 are pre-configured to various functions and differ in their default values. However, they may still be configured freely. The DIs 7 & 8 are always used for the circuit breaker replies and cannot be configured.

EN	DI {x} Text				Discrete input: Message text	user-defined
DE	DI {x} Text					
<b>T</b>	{0}	{1o}	{1oc}	{2oc}	If the discrete input is enabled with alarm class, this text is displayed on the control unit screen. The event history will store this text message as well. The text may have 4 through 16 characters.	
1400	✓	✓	✓	✓		

**Note:** This parameter may only be configured using ToolKit.

**Note:** If the DI is used as control input with the alarm class "Control", you may enter here its function (e.g. external acknowledgement) for a better overview within the configuration.

EN	DI {x} Operation				Discrete input: Operation	N.O. / N.C.
DE	DI {x} Funktion					
<b>CL2</b>	{0}	{1o}	{1oc}	{2oc}	The discrete inputs may be operated by an normally open (N.O.) or normally closed (N.C.) contact. The idle circuit current input can be used to monitor for a wire break. A positive or negative voltage polarity referred to the reference point of the DI may be applied.	
1201	✓	✓	✓	✓		
<b>N.O.</b> ..... The discrete input is analyzed as "enabled" by energizing the input (normally open).						
<b>N.C.</b> ..... The discrete input is analyzed as "enabled" by de-energizing the input (normally closed).						

EN	DI {x} Delay				Discrete input: Delay	0.08 to 650.00 s
DE	DI {x} Verzögerung					
<b>CL2</b>	{0}	{1o}	{1oc}	{2oc}	A delay time in seconds can be assigned to each alarm or control input. The discrete input must be enabled without interruption for the delay time before the unit reacts. If the discrete input is used within the <i>LogicsManager</i> this delay is taken into account as well.	
1200	✓	✓	✓	✓		

EN	DI {x} Alarm class				Discrete input: Alarm class	Class A/B/C/D/E/F/Control
DE	DI {x} Alarmlasse					
<b>CL2</b>	{0}	{1o}	{1oc}	{2oc}	① see chapter "Alarm Classes" on page 250.	
1202	✓	✓	✓	✓		

An alarm class may be assigned to the discrete input. The alarm class is executed when the discrete input is enabled.

If "control" has been configured, there will be no entry in the event history and a function out of the *LogicsManager* (description at page 251) can be assigned to the discrete input.

EN	DI {x} Delayed by engine speed				Discrete input: Engine delayed monitoring	Yes / No
DE	DI {x} Verzögert durch Motordr.					
<b>CL2</b>	{0}	{1o}	{1oc}	{2oc}	<b>Yes</b> ..... Monitoring for fault conditions is not performed until engine delayed monitoring is enabled. The engine monitoring delay time (parameter 3315 on page 175) must expire prior to fault monitoring being enabled for parameters assigned this delay.	
1203	✓	✓	✓	✓		
<b>No</b> ..... Monitoring for this fault condition is continuously enabled regardless of engine speed.						

EN	DI {x} Self acknowledge			
DE	DI {x} Selbstquittierend			
CL2	{0}	{1o}	{1oc}	{2oc}
1204	✓	✓	✓	✓

**Discrete input: Self acknowledgment**

Yes / No

- Yes**.....The control automatically clears the alarm if the fault condition is no longer detected.
- No**.....The control does not automatically reset the alarm when the fault condition is no longer detected. The alarm must be acknowledged and reset by manually pressing the appropriate buttons or by activating the *LogicsManager* output "External acknowledgement" (via a discrete input or via an interface).

If the DI is configured with the alarm class "Control", self acknowledgement is always active.

**NOTE**

If a discrete input has been configured with a shut-down alarm that has been enabled to self-acknowledge, and has been configured as engine delayed the following scenario may happen:

- The discrete input shuts down the engine because of its alarm class.
- Due to the engine stopping, all engine delayed alarms are ignored.
- The alarm class is acknowledged automatically.
- The alarm will self-acknowledge and clear the fault message that shut the engine down. This prevents the fault from being analyzed. After a short delay, the engine will restart.
- After the engine monitoring delay expires, the fault that originally shut down the engine will do so again. This cycle will continue to repeat until corrected.

The preceding parameters are used to configure the discrete inputs 1 through 12. The parameter IDs refer to DI 1. Refer to Table 3-58 for the parameter IDs of the parameters DI 2 through DI 12.

	DI 1	DI 2	DI 3	DI 4	DI 5	DI 6	DI 9	DI 10	DI 11	DI 12
Text	1400	1410	1420	1430	1440	1450	1480	1488	1496	1504
Operation	1201	1221	1241	1261	1281	1301	1361	1381	1206	1226
Delay	1200	1220	1240	1260	1280	1300	1360	1380	1205	1225
Alarm class	1202	1222	1242	1262	1282	1302	1362	1382	1207	1227
Delayed by engine speed	1203	1223	1243	1263	1283	1303	1363	1383	1208	1228
Self acknowledged	1204	1224	1244	1264	1284	1304	1364	1384	1209	1229

Table 3-58: Discrete inputs - parameter IDs

**NOTE**

The DIs 7 & 8 are always used for the circuit breaker replies and cannot be configured.



### Configure External Discrete Inputs

If a Woodward IKD 1 or other external expansion board (Phoenix BK 16DiDo/Co 16DiDo) is connected to the easYgen via the CAN bus, it is possible to use 16 additional discrete inputs.

The configuration of these external DIs is performed in a similar way like for the internal DIs. Refer to Table 3-59 for the parameter IDs of the parameters for external DIs 1 through 16.

External	DI 1	DI 2	DI 3	DI 4	DI 5	DI 6	DI 7	DI 8
Text	16200	16210	16220	16230	16240	16250	16260	16270
Operation	16001	16011	16021	16031	16041	16051	16061	16071
Delay	16000	16010	16020	16030	16040	16050	16060	16070
Alarm class	16002	16012	16022	16032	16042	16052	16062	16072
Delayed by engine speed	16003	16013	16023	16033	16043	16053	16063	16073
Self acknowledged	16004	16014	16024	16034	16044	16054	16064	16074
External	DI 9	DI 10	DI 11	DI 12	DI 13	DI 14	DI 15	DI 16
Text	16280	16290	16300	16310	16320	16330	16340	16350
Operation	16081	16091	16101	16111	16121	16131	16141	16151
Delay	16080	16090	16100	16110	16120	16130	16140	16150
Alarm class	16082	16092	16102	16112	16122	16132	16142	16152
Delayed by engine speed	16083	16093	16103	16113	16123	16133	16143	16153
Self acknowledged	16084	16094	16104	16114	16124	16134	16144	16154

Table 3-59: External discrete inputs - parameter IDs

## Discrete Outputs (*LogicsManager*)

The discrete outputs are controlled via the *LogicsManager*.

⇒ Please note the description of the *LogicsManager* starting on page 252.

Some outputs are assigned a function according to the application mode (see following table).

Relay Number	Term.	Application mode			
		None {0}	GCB open {1o}	GCB open/close {1oc}	GCB/MCB open/close {2oc}
Internal relay outputs, board #1					
[R1]	41/42	LogicsManager; pre-assigned with 'Ready for operation OFF'			
[R2]	43/46	LogicsManager; pre-assigned with 'Centralized alarm (horn)'			
[R3]	44/46	LogicsManager; pre-assigned with 'Starter'			
[R4]	45/46	LogicsManager; pre-assigned with 'Diesel: Fuel solenoid, Gas: Gas valve'			
[R5]	47/48	LogicsManager; pre-assigned with 'Preglow'			
[R6]	49/50	LogicsManager	Command: close GCB		
[R7]	51/52	LogicsManager	Command: open GCB		
[R8]	53/54	LogicsManager			Command: close MCB
[R9]	55/56	LogicsManager			Command: open MCB
[R10]	57/60	LogicsManager; pre-assigned with 'Auxiliary services'			
[R11]	58/60	LogicsManager; pre-assigned with 'Alarm class A, B active'			
[R12]	59/60	LogicsManager; pre-assigned with 'Alarm class C, D, E, F active'			

Table 3-60: Relay outputs - assignment

EN	Ready for op. Off			
DE	Betriebsbe abgef.			
CL2	{0}	{1o}	{1oc}	{2oc}
12580	✓	✓	✓	✓

### Digital outputs: *LogicsManager* for Ready for operation OFF

*LogicsManager*

The "Ready for operation OFF" relay is energized by default if the power supply exceeds 8 V. Once the conditions of the *LogicsManager* have been fulfilled, the relay will be de-energized. This *LogicsManager* output may be configured with additional conditions, which may signal a PLC an "out of operation" condition by de-energizing the relay on terminals 41/42, like "stopping alarm" or No "AUTO mode" present. The *LogicsManager* and its default settings are explained on page 252 in Appendix B: "*LogicsManager*".



## CAUTION

The discrete output "Ready for operation OFF" must be wired in series with an emergency stop function. This means that it must be ensured that the generator circuit breaker is opened and the engine is stopped if this discrete output is de-energized. We recommend to signal this fault independently from the unit if the availability of the plant is important.

EN	Relay {x}			
DE	Relais {x}			
CL2	{0}	{1o}	{1oc}	{2oc}
12110	✓	✓	✓	✓

### Digital outputs: *LogicsManager* for relay {x}

*LogicsManager*

Once the conditions of the *LogicsManager* have been fulfilled, the relay will be energized. The *LogicsManager* and its default settings are explained on page 252 in Appendix B: "*LogicsManager*".

Above parameter IDs refers to R 2. Refer to Table 3-61 for the parameter IDs of the parameters for R 3 to R 12.

	R 1	R 2	R 3	R 4	R 5	R 6	R 7	R 8	R 9	R 10	R 11	R 12
Parameter ID	12580	12110	12310	12320	12130	12140	12150	12160	12170	12180	12560	12590

Table 3-61: Discrete outputs - parameter IDs

## External Discrete Outputs (*LogicsManager*)

If a Woodward IKD 1 or other external expansion board (Phoenix BK 16DiDo/Co 16DiDo) is connected to the easYgen via the CAN bus, it is possible to use 16 additional discrete outputs.

The configuration of these external DOs is performed in a similar way like for the internal DOs. Refer to Table 3-62 for the parameter IDs of the parameters for external DOs 1 through 16.

	DO 1	DO 2	DO 3	DO 4	DO 5	DO 6	DO 7	DO 8
Parameter ID	12330	12340	12350	12360	12370	12380	12390	12400
	DO 9	DO 10	DO 11	DO 12	DO 13	DO 14	DO 15	DO 16
Parameter ID	12410	12420	12430	12440	12450	12460	12470	12480

Table 3-62: External discrete outputs - parameter IDs

## Configure Analog Outputs

### Configure Analog Outputs 1/2

The analog outputs 1 and 2 may either be configured as analog or PWM outputs. The analog outputs are prepared for speed and voltage bias signal for a speed controller and voltage regulator with an output signal of 0 to 20 mA / 0 to 10 V by default. Table 3-63 shows the default values for the analog outputs 1 and 2 as well as two configuration examples. Example 1 is for a generator active power output with a range of -20 kW to 220 kW via a 4 to 20 mA signal (generator rated power = 200 kW). Example 2 is for a speed bias output via a PWM signal.

	ID	Analog Output 1 default values	ID	Analog Output 2 default values	Example 1	Example 2
Data source	5200	00.03 Speed bias	5214	00.02 Voltage bias	01.24 Gen. total power	00.03 Speed bias
Source value at minimal output	5204	0	5218	0	-1000 (-20 kW)	0
Source value at maximal output	5206	10000	5220	10000	11000 (220 kW)	10000
Filter time constant	5203	Off	5217	Off	3	Off
Selected hardware type	5201	0-20mA / 0-10V	5215	0-20mA / 0-10V	User defined	User defined
User defined min. output value	5208	---	5222	---	60.00 % (4 mA)	0.00 %
User defined max. output value	5209	---	5223	---	100.00 % (20 mA)	100.00 %
PWM signal	5202	Off	5216	Off	Off	On
PWM output value	5210	---	5224	---	---	6 V

Table 3-63: Analog outputs - parameter table

EN	Data source			
	Datenquelle			
CL2	{0}	{1o}	{1oc}	{2oc}
5200	✓	✓	✓	✓
5214				

**Analog output {x} [x = 1 to 2]: Data source** refer to text below

The data source may be selected from the available data sources. Use the "+" and "-" softkeys to scroll through the list of sources and confirm your selection with the Enter softkey. Refer to Appendix C on page 289 for a list of all data sources.

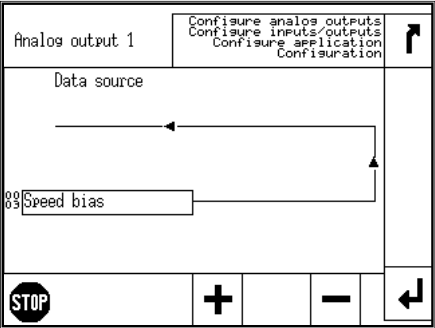


Figure 3-17: Monitoring - analog outputs - data source selection

EN	Source value at minimal output			
	Quellwert bei Min-Ausgabe			
CL2	{0}	{1o}	{1oc}	{2oc}
5204	✓	✓	✓	✓
5218				

**Analog output {x} [x = 1 to 2]: Source value at minimal output** -32000 to 32000

The value from the data source must exceed the value configured here to raise the output signal above 0 %. Negative percentage values may be used to change the sign, e.g. for power.

The entry format of the value depends on the selected data source. If the monitored analog value has a reference value (refer to Appendix C: Reference Values on page 292), the threshold is expressed as a percentage of this reference value (-320.00 % to 320.00 %). If an analog input is monitored, the threshold refers to the display value format (refer to Appendix C: Display Value Format on page 299 for more information).

EN	Source value at maximal output			
	Quellwert bei Max-Ausgabe			
CL2	{0}	{1o}	{1oc}	{2oc}
5206	✓	✓	✓	✓
5220				

**Analog output {x} [x = 1 to 2]: Source value at maximal output** -32000 to 32000

If the value from the data source reaches the value configured here, the output signal will reach 100 %. Negative percentage values may be used to change the sign, e.g. for power.

The entry format of the value depends on the selected data source. If the monitored analog value has a reference value (refer to Appendix C: Reference Values on page 292), the threshold is expressed as a percentage of this reference value (-320.00 % to 320.00 %). If an analog input is monitored, the threshold refers to the display value format (refer to Appendix C: Display Value Format on page 299 for more information).

EN	Filter time constant			
	Filter			
CL2	{0}	{1o}	{1oc}	{2oc}
5203	✓	✓	✓	✓
5217				

## Analog output {x} [x = 1 to 2]: Filter time constant

Off / 1 / 2 / 3 / 4 / 5

A filter time constant may be used to reduce the fluctuation of an analog output reading. This filter time constant assesses the average of the signal according to the following formula:

$$\text{Cut-off frequency} = \frac{1}{20\text{ms} \times 2 \times \pi \times 2^{N-1}}, \text{ whereby "N" is the parameter.}$$

**Off** .....The analog output is displayed without filtering.

**1** .....Cut-off-frequency = 7.96 Hz (filter time constant = 0.02 s)

**2** .....Cut-off-frequency = 3.98 Hz (filter time constant = 0.04 s)

**3** .....Cut-off-frequency = 1.99 Hz (filter time constant = 0.08 s)

**4** .....Cut-off-frequency = 0.99 Hz (filter time constant = 0.16 s)

**5** .....Cut-off-frequency = 0.50 Hz (filter time constant = 0.32 s)

EN	Selected hardware type			
	Ausgangstyp			
CL2	{0}	{1o}	{1oc}	{2oc}
5201	✓	✓	✓	✓
5215				

## Analog output {x} [x = 1 to 2]: Selected hardware type

select from list below

This parameter is used to configure the appropriate type of analog controller signal. The range of the analog output is configured here. The available ranges are listed below. It is possible to configure the following settings:

**Off** .....No analog output signal will be issued.

**user defined** A maximum range of +/-20 mA / +/-10 V may be limited using the parameters 5208 and 5209 on page 166 to obtain a user defined range.

Type	Setting in above configuration screen	Jumper necessary	Range	Lower level	Upper level
Current	+/-20mA (+/-10V)	no	+/-20mA	-20 mA	+20 mA
	+/-10mA (+/-5V)		+/-10mA	-10 mA	+20 mA
	0 to 10mA (0 to 5V)		0-10mA	0 mA	10 mA
	0 to 20mA (0 to 10V)		0-20mA	0 mA	20 mA
	4 to 20mA		4-20mA	4 mA	20 mA
	10 to 0mA (5 to 0V)		10-0mA	10 mA	0 mA
	20 to 0mA (10 to 0V)		20-0mA	20 mA	0 mA
	20 to 4mA		20-4mA	20 mA	4 mA
Voltage	+/-20mA (+/-10V)	yes	+/-10V	-10 Vdc	+10 Vdc
	+/-10mA (+/-5V)		+/-5V	-5 Vdc	+5 Vdc
	+/-3V		+/-3V	-3 Vdc	+3 Vdc
	+/-2.5V		+/-2.5V	-2.5Vdc	+2.5 Vdc
	+/-1V		+/-1V	-1 Vdc	+1 Vdc
	0 to 10mA (0 to 5V)		0 to 5V	0 Vdc	5 Vdc
	0.5V to 4.5V		0.5 to 4.5V	0.5 Vdc	4.5 Vdc
	0 to 20mA (0 to 10V)		0 to 10V	0 Vdc	10 Vdc
	10 to 0mA (5 to 0V)		5 to 0V	5 Vdc	0 Vdc
	4.5V to 0.5V		4.5 to 0.5V	4.5 Vdc	0.5 Vdc
	20 to 0mA (10 to 0V)		10 to 0V	10 Vdc	0 Vdc

Table 3-64: Analog outputs - signal type selection

EN	User defined min. output value			
	Frei definierbares Min-Signal			
CL2	{0}	{1o}	{1oc}	{2oc}
5208	✓	✓	✓	✓
5222				

## Analog output {x} [x = 1 to 2]: User defined minimum output value

0 to 100 %

The minimum output value, which shall correspond with the minimum value of the output range, must be entered here. This parameter is only active, if parameter 5201 on page 165 is configured to "user defined".

Example: If the value configured here is 25 %, the maximum output range of +/- 20 mA / +/-10 V has a lower limit of -10 mA / -5 V.

EN	User defined max. output value			
DE	Frei definierbares Max-Signal			
CL2	{0}	{10}	{100}	{200}
5209	✓	✓	✓	✓
5223				

Analog output {x} [x = 1 to 2]: User defined maximum output value **0 to 100 %**

The maximum output value, which shall correspond with the maximum value of the output range, must be entered here. This parameter is only active, if parameter 5201 on page 165 is configured to "user defined".

Example: If the value configured here is 75 %, the maximum output range of +/- 20 mA / +/-10 V has a upper limit of 10 mA / 5 V.

EN	PWM signal			
DE	PWM Signal			
CL2	{0}	{10}	{100}	{200}
5202	✓	✓	✓	✓
5216				

Analog output {x} [x = 1 to 2]: PWM signal **On / Off**

**On** ..... A PWM signal will be output on the respective analog output. The amplitude of the PWM signal to be utilized is configured in "PWM output level" (parameter 5210 on page 166). If a PWM signal is used, a jumper must be installed (refer to the wiring diagram in manual 37223). The PWM signal will also be limited by parameter 5201 on page 165 or parameters 5208 and 5209 on page 166 if parameter 5201 is user defined.

**Off**..... An analog signal will be output on the respective analog output.

EN	PWM output level			
DE	PWM Ausgangslevel			
CL2	{0}	{10}	{100}	{200}
5210	✓	✓	✓	✓
5224				

Analog output {x} [x = 1 to 2]: PWM output level **0.00 to 10.00 V**

If PWM has been enabled in parameter 5203 on page 165, the level of the PWM signal may be adjusted here.

# Configure Application: Configure Engine

## Configure Application: Configure Engine, Engine Type



### NOTE

All functions which are described in the following text, may be assigned by the *LogicsManager* to any relay that is available via the *LogicsManager* and not assigned to another function.

EN	Start/Stop mode logic					Engine: Type of engine	Diesel / Gas / External
	Start/Stop Modus						
DE		{0}	{1o}	{1oc}	{2oc}		
CL2	✓	✓	✓	✓	✓	Diesel or gas engine start/stop logic must be selected. The starting sequences are described in the following sections. If this parameter is configured to "External" the start/stop sequence must be done externally.	
3321							

### Engine: Diesel Engine

#### Start sequence

The relay "Preglow" will be energized for the preheating time period ("**Preglow**" is displayed). Following preheating, the fuel solenoid is first energized and then the starter is engaged ("**Start**" is displayed). When the configured firing speed is exceeded, the starter is disengaged and the fuel solenoid remains energized via the firing speed. "**Ramp to rated**" is displayed until the engine monitoring delay timer expires and the start sequence has finished.

If the engine fails to start, a start pause is initiated ("**Start - Pause**" is displayed). If the number of unsuccessful start attempts reaches the configured value, an alarm message will be issued ("**Start fail**" is displayed).

#### Stop sequence

After opening the GCB, the coasting time starts and the engine runs without load ("**Cool down**" is displayed). On termination of the coasting time, the fuel solenoid is de-energized, and the engine is stopped ("**Stop engine**" is displayed). If the engine cannot be stopped via the fuel solenoid, the alarm message "**Eng. stop malfunct.**" is displayed.

#### Start/stop diagram

The formula signs and indices mean:

t <sub>PRE</sub> .....	Auxiliary services prerun.....	[s]
t <sub>PH</sub> .....	Preheating time.....	[s]
t <sub>ST</sub> .....	Starter time.....	[s]
t <sub>SP</sub> .....	Start pause.....	[s]
t <sub>ED</sub> .....	Engine delayed monitoring.....	[s]
t <sub>POST</sub> .....	Auxiliary services postrun.....	[s]
t <sub>CD</sub> .....	Cool down time.....	[s]
t <sub>GS</sub> .....	Generator stable time.....	[s]

DE	EN	Preglow time			
		Vorglühzeit			
CL2		{0}	{1o}	{1oc}	{2oc}
3308		✓	✓	✓	✓

**Diesel engine: Preglow time [t<sub>PH</sub>]** 0 to 999 s

Prior to each start, the diesel engine is preheated for this time (if a "0" has been configured here the engine will be started without preglow). The display indicates "**Preglow**".

DE	EN	Preglow mode			
		Vorglühmodus			
CL2		{0}	{1o}	{1oc}	{2oc}
3347		✓	✓	✓	✓

**Diesel engine: Preglow mode** Off / Always / Analog

This parameter dictates if and under what conditions a diesel engine is preheated.

**Off** .....The diesel engine is never preheated before a start attempt.

**Always** .....Before a start attempt the "Preheating" relay is always energized for the preglow time (parameter 3308). After that a start attempt is initiated.

**Analog** .....A preglow sequence is initiated if the monitored analog input temperature (coolant temperature) is below the configured threshold (parameter 3309). The preglow sequence is enabled for the configured preglow time (parameter 3308). After that a start attempt is initiated.

DE	EN	Preglow criterium			
		Vorglühlen Kriterium			
CL2		{0}	{1o}	{1oc}	{2oc}
3346		✓	✓	✓	✓

**Diesel engine: Preglow criterion** refer to text below

The preglow criterion may be selected from the available data sources. Use the "+" and "-" softkeys to scroll through the list of variables and confirm your selection with the Enter softkey. Refer to Appendix C on page 289 for a list of all data sources. Usually, a temperature measuring is selected here, which is measured via a sensor.

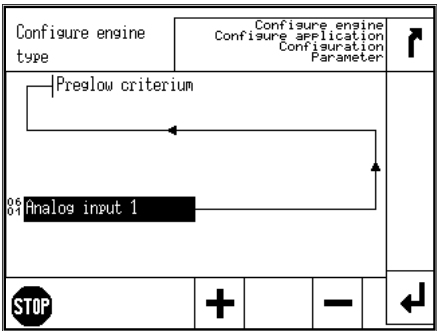


Figure 3-18: Configure application - engine - preglow criterion selection

DE	EN	Preglow temperature threshold			
		Vorglühlen wenn Temperatur			
CL2		{0}	{1o}	{1oc}	{2oc}
3309		✓	✓	✓	✓

**Diesel engine: Preglow temperature threshold** -10 to 250 °C

This is the temperature threshold, which must be exceeded to prevent a preheating process, if parameter 3347 has been configured to "Analog".



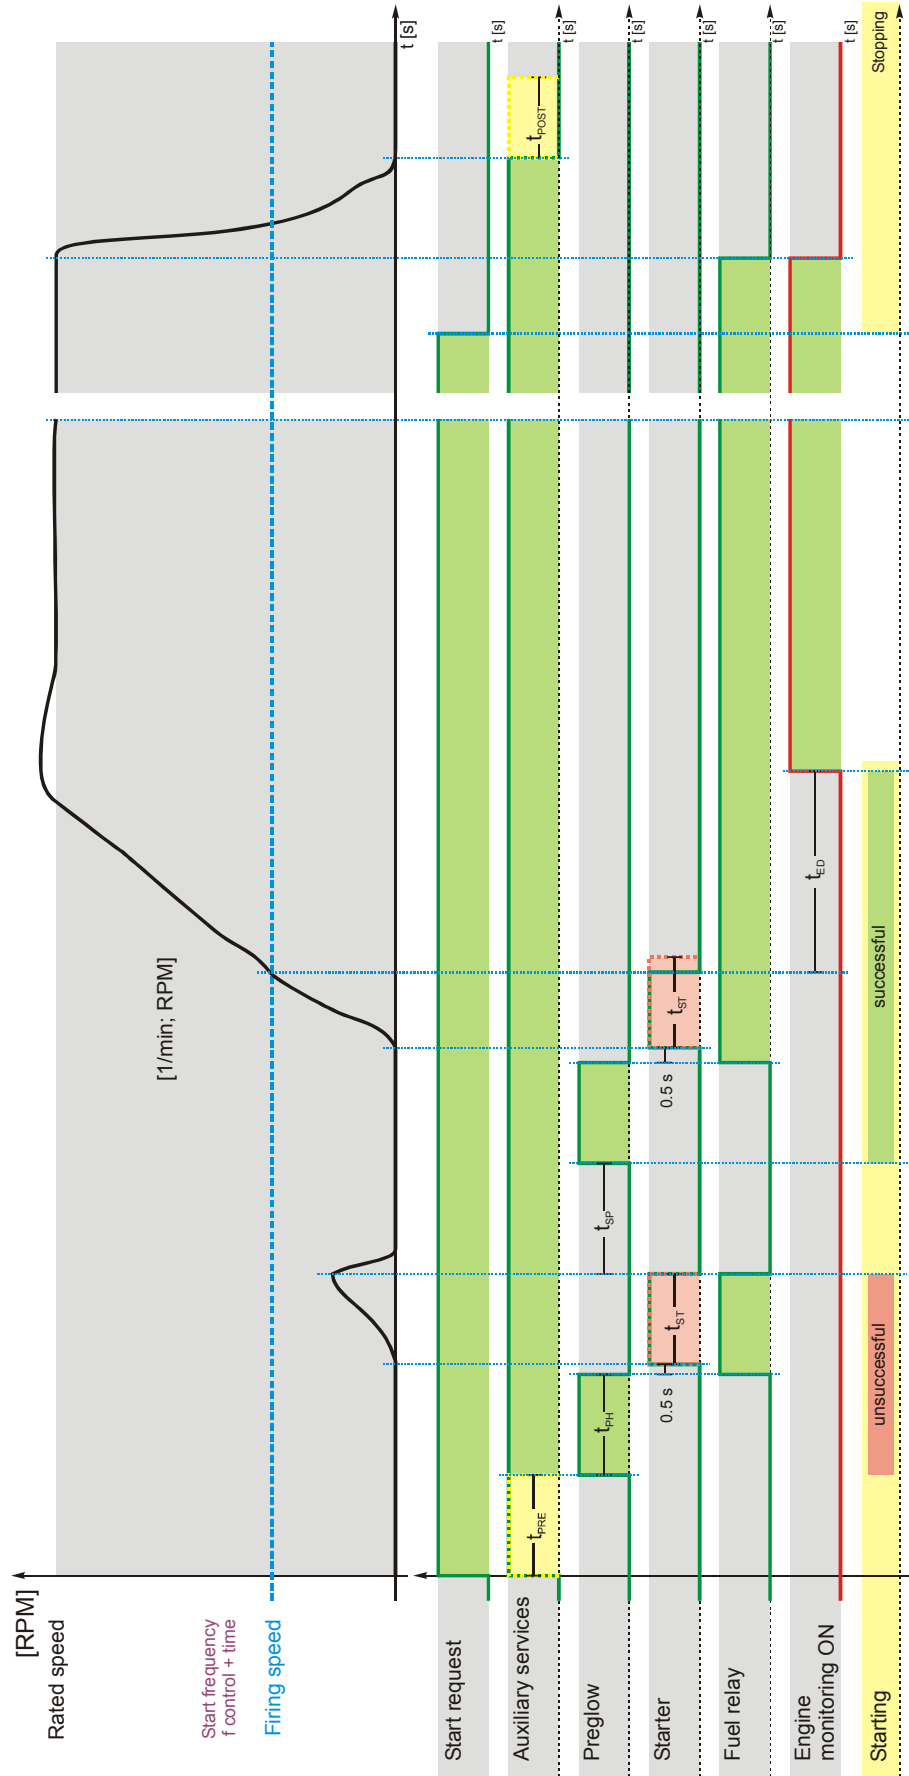


Figure 3-19: Start /stop sequence - diesel engine

## Engine: Gas Engine

### Start sequence

**Function:** The starter is engaged ("**Turning**" is displayed). Following the expiration of the firing delay time and if the engine is rotating with at least the configured "minimum speed for ignition", the ignition is switched on ("**Ignition**" is displayed). Following the expiration of the gas valve delay, the gas valve is then enabled ("**Start**" is displayed). If the configured firing speed is exceeded, the starter is disengaged. The gas valve and the ignition remain enabled via the firing speed. "**Ramp to rated**" is displayed until the engine monitoring delay timer expires and the start sequence has finished.

If the configured "minimum speed for ignition" is not reached, a start pause is initiated ("**Start - Pause**" is displayed) before the next start attempt.

### Stop sequence

**Function:** After opening the GCB, the coasting time starts and the engine runs without load ("**Cool down**" is displayed). On termination of the coasting time, the gas valve is closed or de-energized, and the engine is stopped ("**Stop engine**" is displayed). If the engine cannot be stopped, the alarm message "**Eng. stop malfunction.**" is displayed. If no speed is detected anymore, the ignition remains active for 5 seconds so that the remaining gas is able to combust.



## CAUTION

It is imperative to connect an emergency stop circuit to discrete input DI 1 to be able to perform an emergency stop by disabling the ignition in case the gas valve fails to close.

### Start/stop diagram

The formula signs and indices mean:

t <sub>PRE</sub> .....	Auxiliary services prerun .....	[s]
t <sub>ST</sub> .....	Starter time .....	[s]
t <sub>SP</sub> .....	Start pause .....	[s]
t <sub>ID</sub> .....	Ignition delay .....	[s]
t <sub>GD</sub> .....	Gas delay .....	[s]
t <sub>ED</sub> .....	Engine delayed monitoring .....	[s]
t <sub>POST</sub> .....	Auxiliary services postrun .....	[s]
t <sub>CD</sub> .....	Cool down time .....	[s]
t <sub>IC</sub> .....	Ignition coasting ("post burning") ..	[s]
t <sub>GS</sub> .....	Generator stable time .....	[s]

EN	Ignition delay			
DE	Zündverzögerung			
CL2	{0}	{10}	{100}	{200}
3310	✓	✓	✓	✓

### Gas engine: Ignition delay [t<sub>ID</sub>]

0 to 999 s

With gas engines often a purging operation is desired before starting. With the engaging of the starter the ignition delay is started. The display indicates "**Turning**". If the "Minimum speed for ignition" is reached after the expiration of this time, the ignition is energized.

EN	Gas valve delay			
DE	Gasverzögerung			
CL2	{0}	{10}	{100}	{200}
3311	✓	✓	✓	✓

### Gas engine: Gas valve delay [t<sub>GD</sub>]

0 to 999 s

By energizing the ignition relay the gas valve delay is started ("**Ignition**" is displayed). After the time set here has expired, and as long as the speed is higher than the minimum speed for ignition, the gas valve is enabled for the time configured in parameter 3306 "Starter time" ("**Start**" is displayed). Once the ignition speed has been reached, the gas valve remains opened. If the speed falls below ignition speed, the gas valve will be closed and the "Ignition" relay is de-energized 5 seconds later.

EN	Minimum speed for ignition			
DE	Mindestdrehz. für Zündung			
CL2	{0}	{10}	{100}	{200}
3312	✓	✓	✓	✓

### Gas engine: Minimum speed for ignition

10 to 1.800 RPM

After expiration of the ignition delay the number of revolutions set here must be reached, so the "Ignition" relay will be energized.

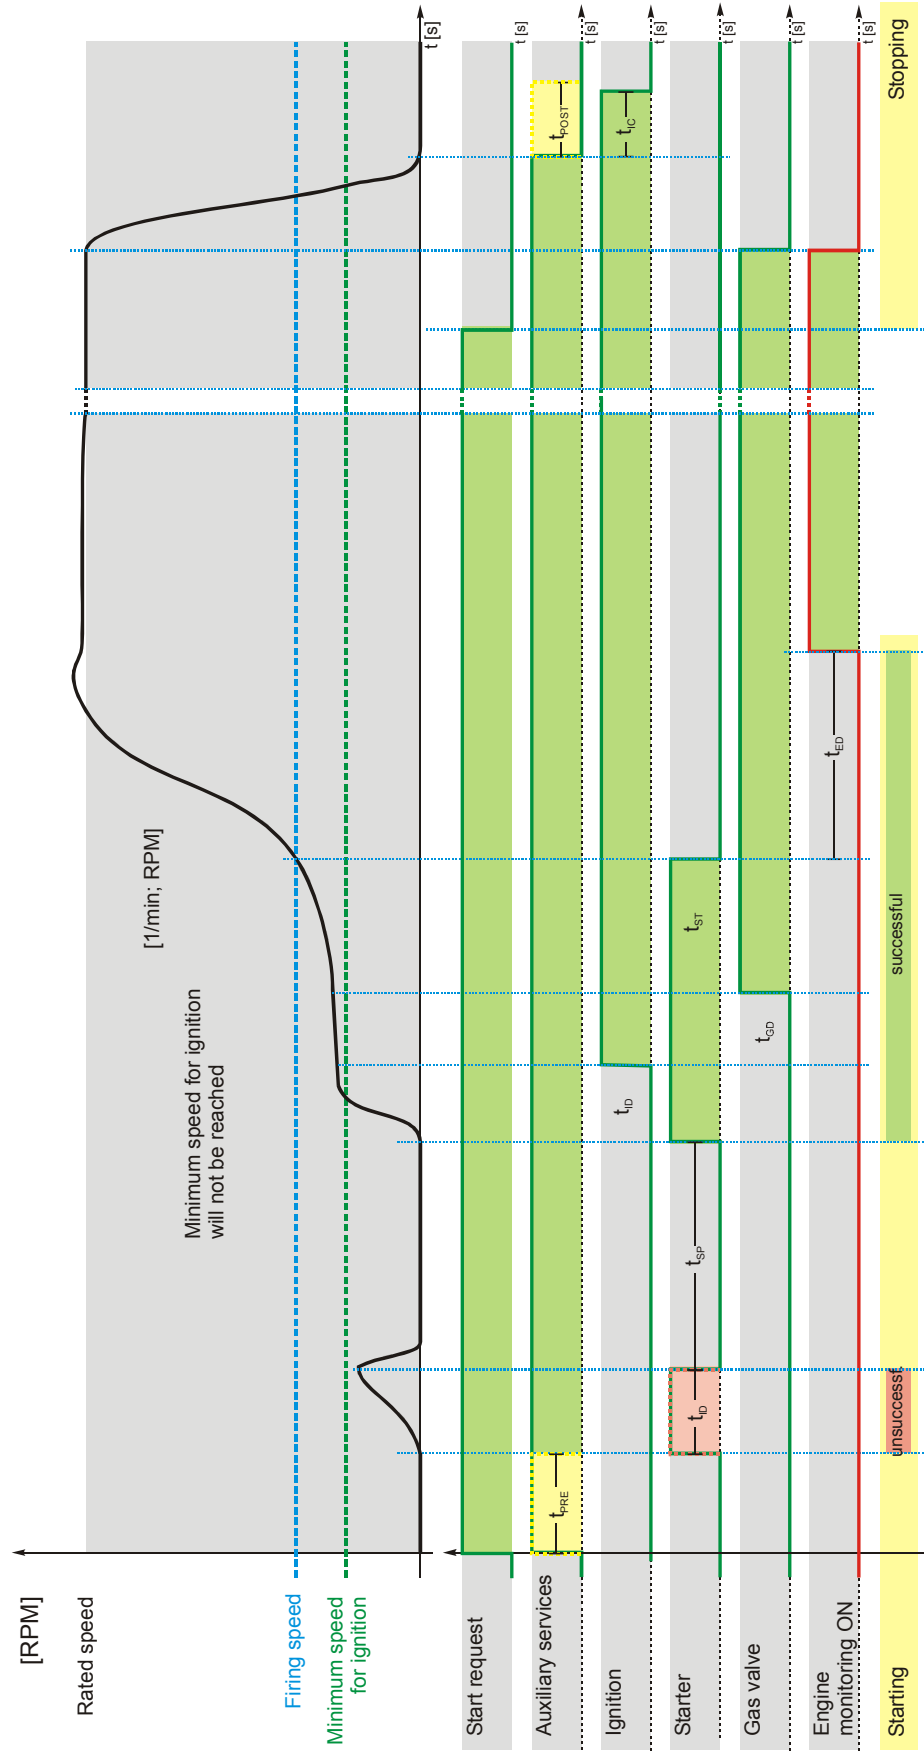


Figure 3-20: Start/stop sequence - gas engine - successful

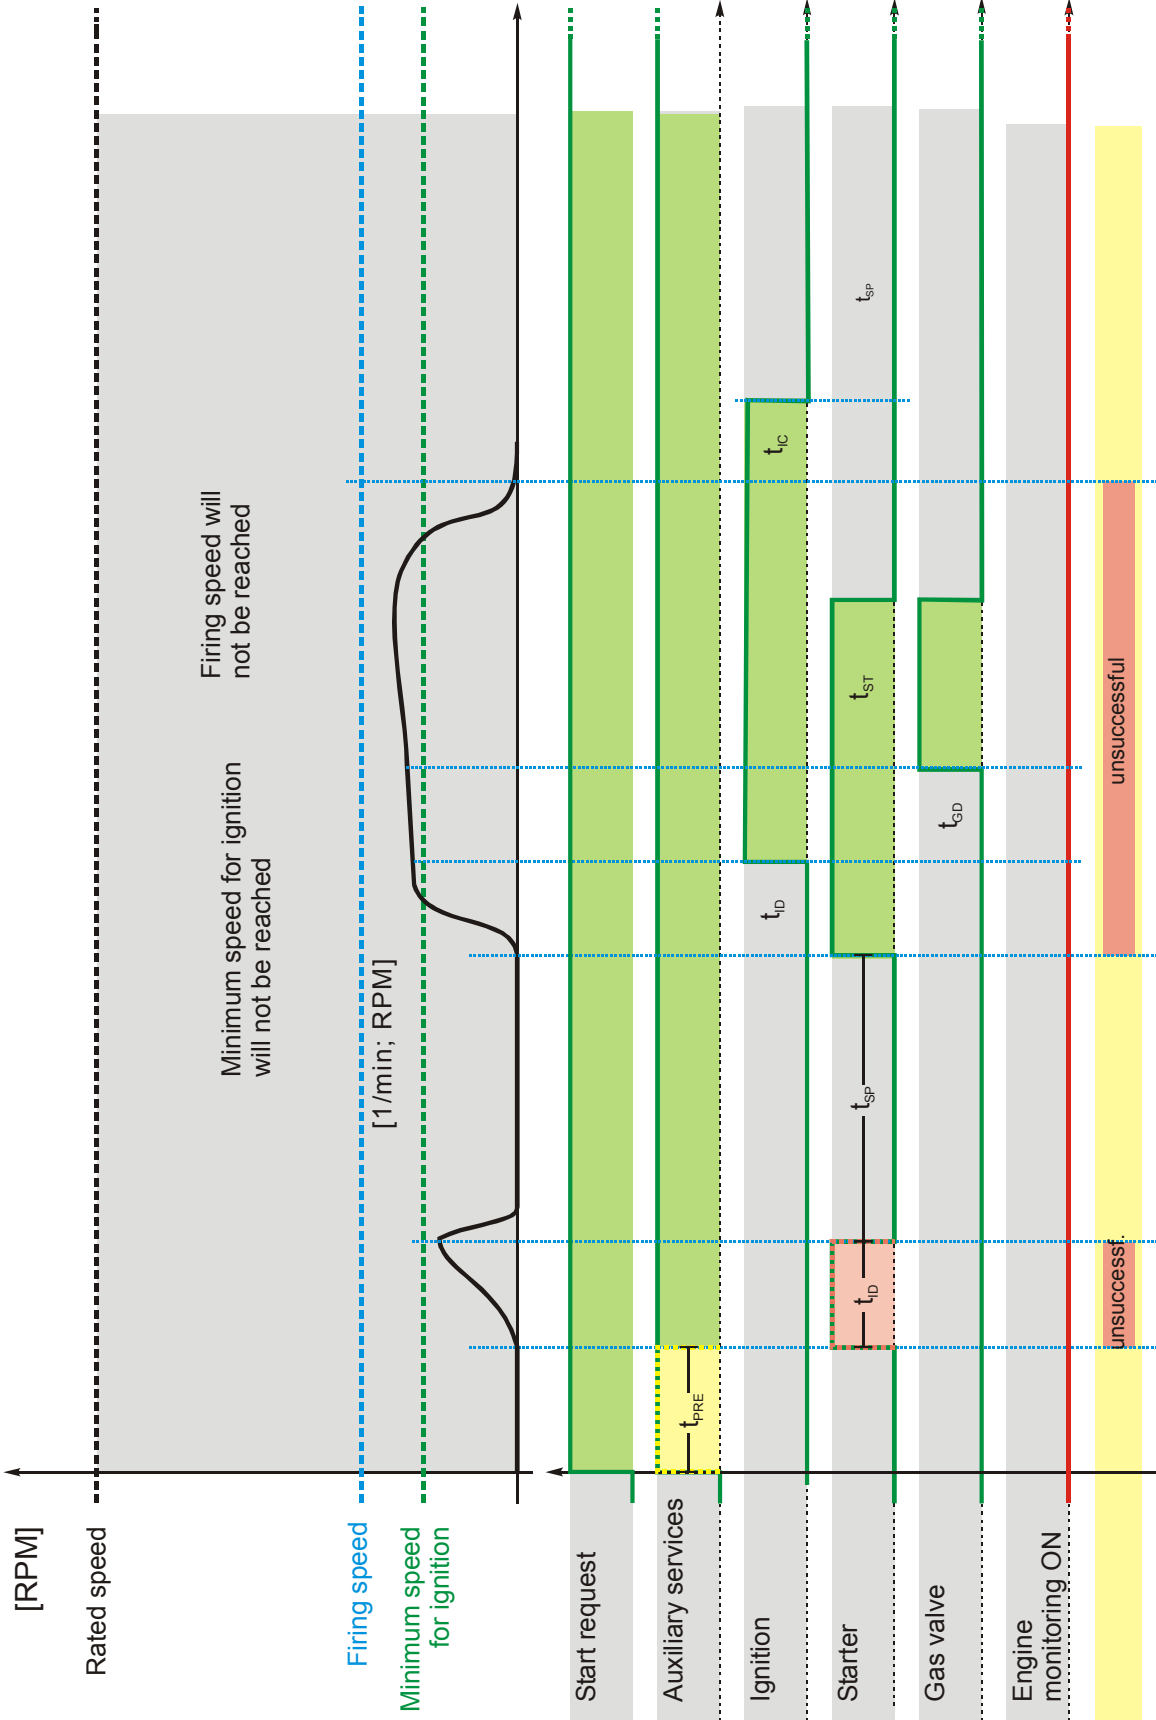


Figure 3-21: Start /stop sequence - gas engine - unsuccessful

## Configure Application: Configure Engine, Start/Stop

EN	Start attempts			
DE	Anzahl Startversuche			
CL2	{0}	{1o}	{1oc}	{2oc}
3302	✓	✓	✓	✓

### Start alarm: Number of starting attempts

1 to 20

The control will attempt to start the engine with this number of start attempts. If the engine fails to start after the configured number of attempts, an alarm will be initiated. An engine has been successfully started if the ignition speed reaches the configured firing speed and the delayed engine monitoring has expired.

EN	Start attempts critical mode			
DE	Anzahl Startversuche Sprinkler			
CL2	{0}	{1o}	{1oc}	{2oc}
4102	✓	✓	✓	✓

### Start alarm: Number of starting attempts in critical mode

1 to 20

If a critical operation mode (refer to Configure Application: Automatic, Critical Mode (Sprinkler Operation, *LogicsManager*) on page 197) is initiated, the engine will continue to attempt to start for the number of starts configured here. An engine has been successfully started if the ignition speed reaches the configured firing speed and the delayed engine monitoring has expired.

EN	Starter time			
DE	Einrückzeit Anlasser			
CL2	{0}	{1o}	{1oc}	{2oc}
3306	✓	✓	✓	✓

### Engine: Maximum starter delay [t<sub>st</sub>]

1 to 99 s

This is the maximum time that the starter relay will remain energized ("**Start**" display). If the *LogicsManager* output "Ignition speed reached" = TRUE, the speed/frequency have reached firing speed, or the time has expired, the relay will be de-energized.

EN	Start pause time			
DE	Startpausenzeit			
CL2	{0}	{1o}	{1oc}	{2oc}
3307	✓	✓	✓	✓

### Engine: Start pause time [t<sub>sp</sub>]

1 to 99 s

This is the delay time between the individual starting attempts. This time is also used to protect the starter relay. The message "**Start - Pause**" is displayed.

EN	Stop time of engine			
DE	Zeit für Motorstop			
CL2	{0}	{1o}	{1oc}	{2oc}
3326	✓	✓	✓	✓

### Engine: Engine blocking

0 to 99 s

During this time a restart of the engine is blocked. This time should be configured so that the engine is total shutdown to protect the starting circuit. Once speed from the engine is no longer detected the time configured in this parameter is initiated. The message "**Stop engine**" is displayed. The *LogicsManager* command variable "Stop solenoid" (03.27) becomes TRUE as soon as the stop signal has been issued and remains true until this timer has expired.

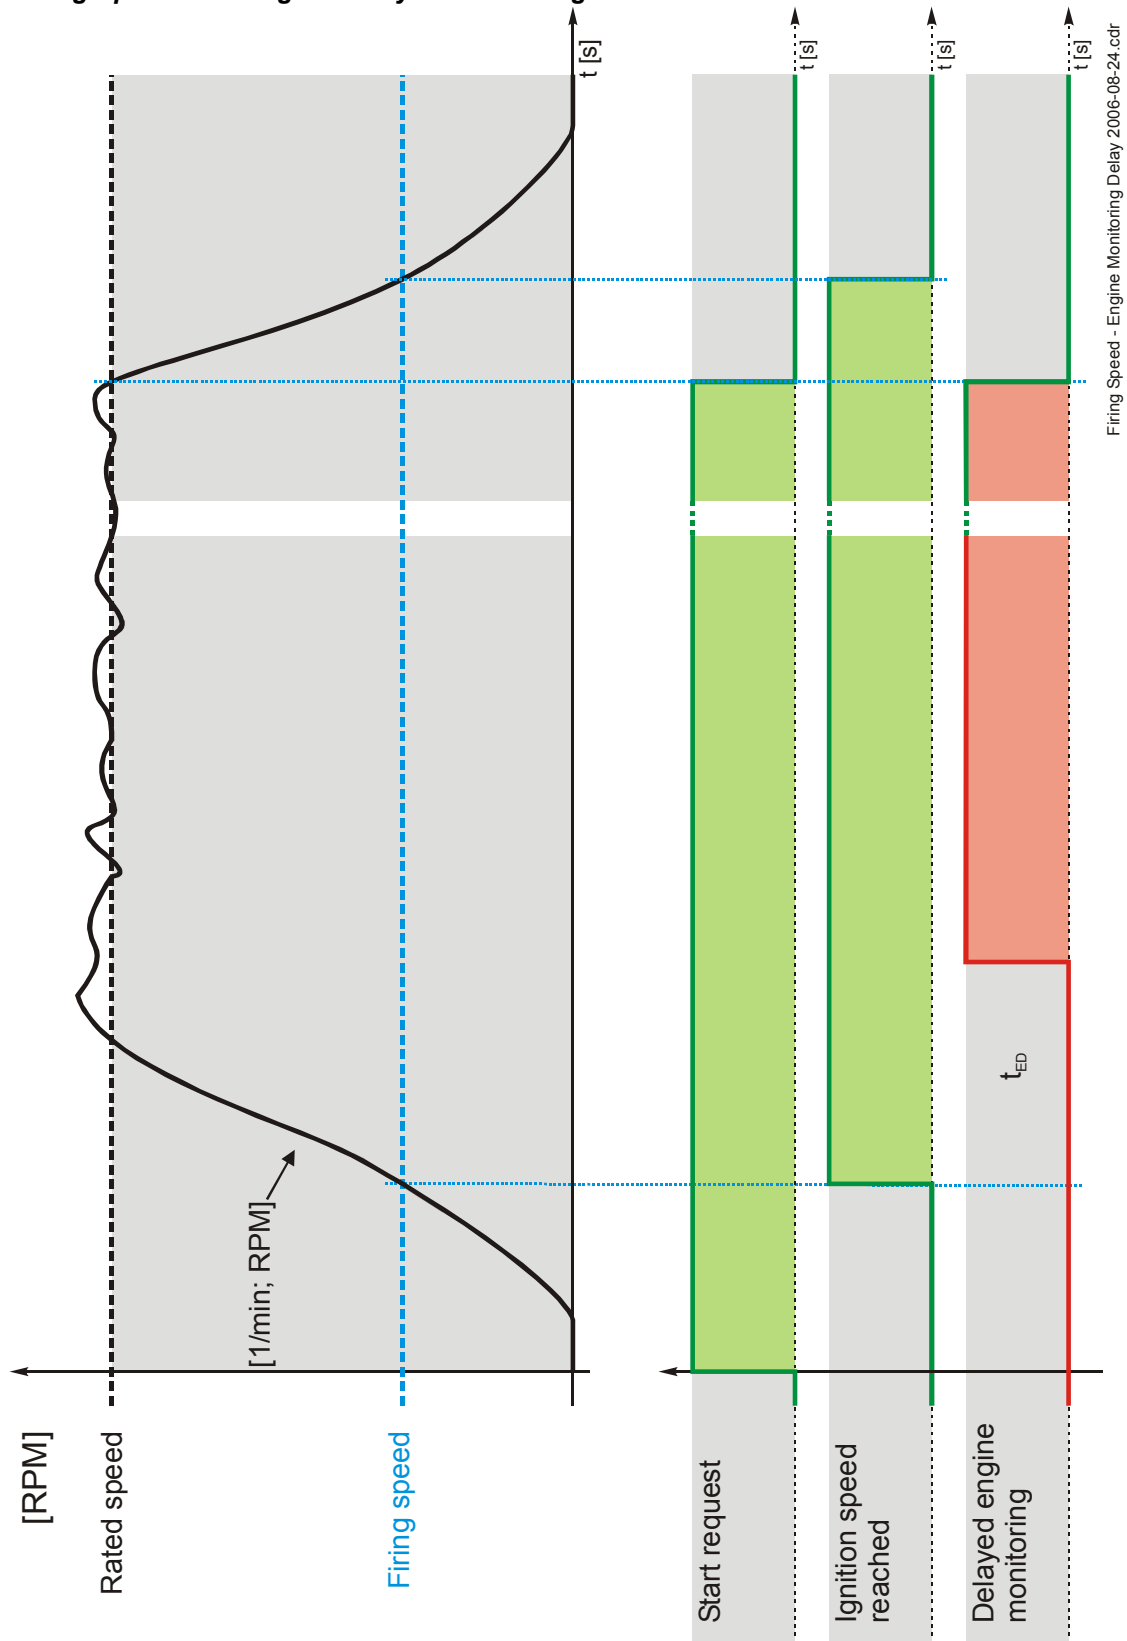
**Engine: Firing Speed And Engine Delayed Monitoring**

Figure 3-22: Engine - firing speed and engine delayed monitoring

**NOTE**

When the ignition speed is reached, the starter is disengaged under one of the following conditions:

- The measurement via **MPU is enabled** (On):
  - ⇒ Ignition speed is detected
  - ⇒ Ignition speed (measured via the generator voltage) is detected
  - ⇒ Conditions for "Ignition speed" (see *LogicsManager*) equal true.
- The measurement via **MPU is disabled** (Off):
  - ⇒ Ignition speed (measured via the generator voltage) is detected
  - ⇒ Conditions for "Ignition speed" (see *LogicsManager*) equal true.

Pickup	Generator frequency	Engine speed	<i>LogicsManager</i>
Off	Yes	No	Yes (if programmed)
On	Yes	Yes	Yes (if programmed)

EN	Firing speed	Engine: Firing speed	5 to 60 Hz
DE	Zünddrehzahl		
CL2	{0} {1o} {1oc} {2oc}	After firing speed has been reached, the starter is disengaged and the time counter for the engine delayed monitoring is activated. The firing speed is to be configured low enough that it is always exceeded during regular generator operation.	
3313	✓ ✓ ✓ ✓		

**Note:** Frequency measurement via the generator voltage input is possible beginning with 15 Hz or higher. If the MPU measurement is enabled, values down to 5 Hz can be measured.

EN	LogicsManager for firing speed	Engine: Firing speed via <i>LogicsManager</i>	Yes / No
DE	Logikm. für Zünddrehzahl		
CL2	{0} {1o} {1oc} {2oc}	Yes ..... The engine firing speed is additionally monitored by the <i>LogicsManager</i> . No ..... The firing speed is measured by the speed/frequency input (MPU), not via the <i>LogicsManager</i> .	
3324	✓ ✓ ✓ ✓		

EN	Firing speed	Engine: Firing speed reached via <i>LogicsManager</i>	<i>LogicsManager</i>
DE	Zünddrehzahl		
CL2	{0} {1o} {1oc} {2oc}	This screen is only visible if parameter 3324 is configured to Yes. Once the conditions of the <i>LogicsManager</i> have been fulfilled the ignition speed will be recognized as above minimum limit (e.g. via an oil pressure switch). The <i>LogicsManager</i> and its default settings are explained on page 252 in Appendix B: " <i>LogicsManager</i> ".	
12500	✓ ✓ ✓ ✓		

After reaching the firing speed, the engine delayed monitoring timer is started. Upon expiration of this timer all "engine delayed monitoring" configured alarms and discrete inputs will be enabled.

EN	Engine monitoring delay time	Engine: Engine delayed monitoring [t <sub>ED</sub> ]	0 to 99 s
DE	Verzög. Motorüberwach.		
CL2	{0} {1o} {1oc} {2oc}	Delay between reaching the firing speed and activation of the monitoring of engine speed delayed alarms (i.e. underspeed).	
3315	✓ ✓ ✓ ✓		

This timer should be configured in such a manner that it corresponds to the starting time of the engine plus any possible startup transients. A GCB closure may take place after the expiration of this timer. Note: The GCB closure can be initiated prior to engine delayed monitoring by configuring the *LogicsManager* "Undelay close GCB" (parameter 12210 on page 147).

**Engine: Cool Down**

EN	Cool down time			
DE	Motor Nachlaufzeit			
CL2	{0}	{1o}	{1oc}	{2oc}
3316	✓	✓	✓	✓

**Engine: Cool down time [t<sub>cd</sub>]****1 to 999 s**

**Regular stop:** If the engine performs a normal stop (start request is disabled or change into STOP operating mode) or a stop caused by an alarm of alarm class C/D, a cool down with an opened GCB is carried out. This time is programmable. The message "**Cool down**" is displayed and the *LogicsManager* command variable 04.10 becomes TRUE.

**Stop by a class 'C' or 'D' alarm:** If the engine is stopped by an alarm of this alarm class, a cool down is carried out with an opened GCB. This time is programmable.

**Stop by a class 'E' or 'F' alarm:** If the engine is stopped by an alarm of this alarm class, the engine is shutdown without a cool down immediately.

**NOTE**

If a critical operation mode (refer to **Configure Application: Automatic, Critical Mode (Sprinkler Operation, *LogicsManager*)** on page 197) is initiated, the time configured in critical mode postrun (parameter 4109) will be used instead of the cool down time.

EN	Cool down in STOP mode			
DE	Nachlauf Betriebsart STOP			
CL2	{0}	{1o}	{1oc}	{2oc}
3319	✓	✓	✓	✓

**Engine: Cool down time in STOP mode****Yes / No**

**Yes** ..... A cool down will be performed if the genset is changed to STOP operation mode.

**No** ..... No cool down will be performed if the genset is changed to STOP operation mode.

EN	Cool down without breaker			
DE	Nachlauf ohne LS			
CL2	{0}	{1o}	{1oc}	{2oc}
3322	✓	✓	---	---

**Engine: Cool down without breaker****Yes / No**

This parameter may be used to perform a cool down if the application mode (parameter 3401 on page 134) is configured to "None" or "GCB open".

**Yes** ..... A cool down will be performed if a start signal is disabled or a stop signal is enabled.

**No** ..... No cool down will be performed if a start signal is disabled or a stop signal is enabled.



Engine: Auxiliary Operations

The auxiliary operations start, as soon as the engine is to be started or a running engine is detected. At the same time, the discrete output for the auxiliary services (*LogicsManager* 03.01) will be enabled. This discrete output remains enabled as long as speed is detected or if the controller is in the MANUAL mode.

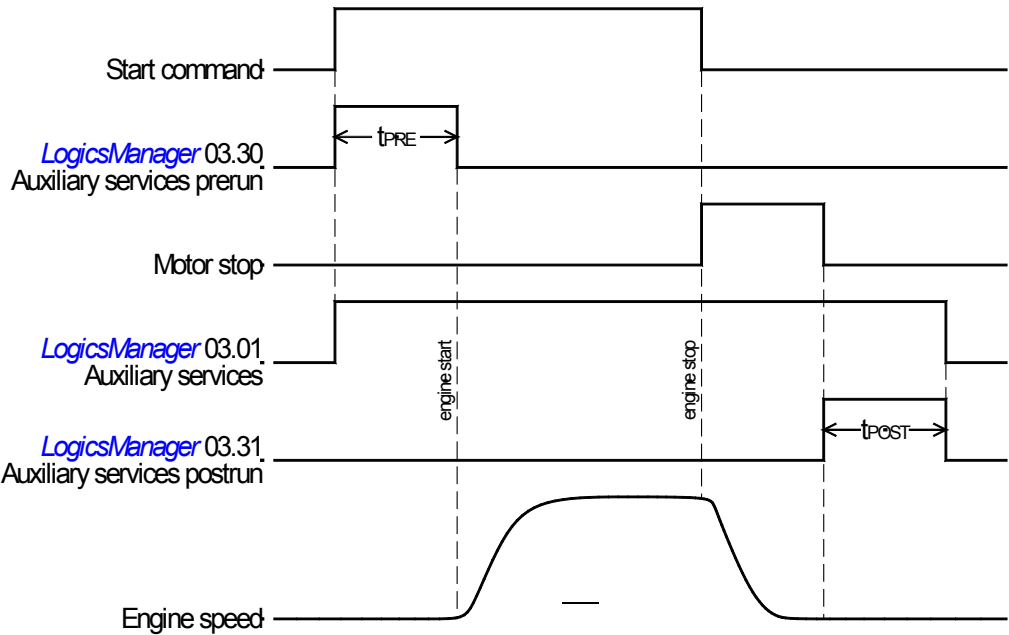


Figure 3-23: Engine - Auxiliary services timing

EN	Auxiliary services prerun				
DE	Hilfsbetriebe Vorlauf				
CL2	{0}	{1o}	{1oc}	{2oc}	
3300	✓	✓	✓	✓	

Engine: Prerun auxiliary operation (start preparation) [ $t_{PRE}$ ] 0 to 999 s

**! CAUTION:**  
During an emergency start this delay time "auxiliary prerun" is not initialized. The engine will be started immediately.

Prior to a start sequence being initiated, the discrete output for the auxiliary services prerun (*LogicsManager* 03.30) remains enabled for the configured amount of time to permit engine related operations (i.e. open louvers) to be performed. While this discrete output is enabled the control screen will display the message "**Aux.serv.prerun**" for the configured time. The auxiliary services discrete output disables when the operation mode is changed from the MANUAL operation mode or, if engine speed is no longer detected, when the discrete output for the auxiliary services postrun (*LogicsManager* 03.31) is disabled.

EN	Auxiliary services postrun				
DE	Hilfsbetriebe Nachlauf				
CL2	{0}	{1o}	{1oc}	{2oc}	
3301	✓	✓	✓	✓	

Engine: Coasting auxiliary operation (post operation) [ $t_{POST}$ ] 0 to 999 s

After each engine stop (the engine stop timer has expired), the discrete output for the auxiliary services postrun (*LogicsManager* 03.31) remains energized for an adjustable time (i.e. operate a cooling pump). If the operating mode is changed from MANUAL to STOP or AUTOMATIC without a start command the relay remains energized for this period of time. The message "**Aux.serv.postrun**" will be displayed on the control unit screen. In the "MANUAL" operating mode this relay output is not used.

## Configure Application: Configure Engine, MPU

To configure the MPU input, the following values must be configured:

- Number of teeth on the flywheel detected by the magnetic pick up (MPU) or the number of pickup pulses per revolution of the engine.

DE EN	MPU input				Pickup	On / Off
	Pickup					
CL2 1600	{0}	{1o}	{1oc}	{2oc}	On.....	Speed monitoring of the engine is carried out by the MPU.
	✓	✓	✓	✓	Off .....	Speed/frequency monitoring of the generator set (the engine) is performed by measuring the frequency of the generator. There is no MPU wired to this unit.

DE EN	Fly wheel teeth				Number of flywheel teeth	2 to 260
	Anzahl Pickup-Zähne					
CL2 1602	{0}	{1o}	{1oc}	{2oc}	Number of pulse per revolution/teeth on the flywheel.	
	✓	✓	✓	✓		

Table 3-65 shows the speed measuring range for various flywheel teeth numbers (parameter 1602) and rated speeds (parameter 1601 on page 28) for a minimum signal voltage of 2 V.

Fly wheel teeth	Rated speed [rpm]	Minimum voltage [V]	Speed measuring range [rpm]
5	1500	2	700 to 10000
5	1800	2	700 to 10000
5	3000	2	700 to 10000
5	3600	2	700 to 10000
10	750	2	350 to 10000
10	1500	2	350 to 10000
10	1800	2	350 to 10000
10	3000	2	350 to 10000
10	3600	2	350 to 10000
25	750	2	135 to 10000
25	1500	2	135 to 10000
25	1800	2	135 to 10000
25	3000	2	135 to 10000
25	3600	2	135 to 10000
50	750	2	65 to 10000
50	1500	2	65 to 10000
50	1800	2	65 to 10000
50	3000	2	65 to 10000
50	3600	2	65 to 10000
100	750	2	35 to 5000
100	1500	2	35 to 5000
100	1800	2	35 to 5000
100	3000	2	50 to 5000
100	3600	2	50 to 5000
150	750	2	25 to 5000
150	1500	2	35 to 5000
150	1800	2	35 to 5000
150	3000	2	35 to 5000
150	3600	2	35 to 5000
200	750	2	20 to 3850
200	1500	2	25 to 3850
200	1800	2	25 to 3850
200	3000	2	25 to 3850
200	3600	2	25 to 3850
260	750	2	15 to 2885
260	1500	2	22 to 2885
260	1800	2	22 to 2885

Table 3-65: MPU input - typical configurations

## Configure Application: Configure Engine, Idle Mode

When the engine is operated at idle speed, undervoltage, underfrequency, and underspeed monitoring as well as the monitoring of the flexible limits 33 through 40 are not performed. This function allows for a controlled operation of an engine without alarm messages at a lower speed (below the configured underspeed monitoring values) for e.g. a warm-up operation with low emission. The frequency controller output does not control the idle speed; it will remain in initial state position. The GCB cannot be closed in idle mode. A message may be output to a relay here using the *LogicsManager* (Idle mode is active, command variable 04.15), e.g. as a signal for a speed controller. The display indicates "**Idle run active**" during idle mode.

EN	Auto idle mode				Engine: <i>LogicsManager</i> automatic idle mode	<i>LogicsManager</i>
DE	Automatic Idle Modus				Once the conditions of the <i>LogicsManager</i> have been fulfilled the engine will be operated in idle mode automatically for the configured time during start-up. Monitoring is limited as described above. This function may always be configured to "1" for example. The <i>LogicsManager</i> and its default settings are explained on page 252 in Appendix B: " <i>LogicsManager</i> ".	
CL2	{0}	{1o}	{1oc}	{2oc}		
12570	✓	✓	✓	✓		
EN	Constant idle run				Engine: <i>LogicsManager</i> continuous idle mode	<i>LogicsManager</i>
DE	Dauernd Idle Modus				As long as the conditions of the <i>LogicsManager</i> have been fulfilled the engine will be continuously operated in idle mode. Monitoring is limited as described above. A key switch via a DI may be configured here for example. The <i>LogicsManager</i> and its default settings are explained on page 252 in Appendix B: " <i>LogicsManager</i> ".	
CL2	{0}	{1o}	{1oc}	{2oc}		
12550	✓	✓	✓	✓		
EN	Automatic idle time				Engine: Time for automatic idle mode	1 to 9999 s
DE	Zeit für Automatic Idle Modus				The automatic idle mode is active for the time configured here. Monitoring is limited as described above during this time.	
CL2	{0}	{1o}	{1oc}	{2oc}		
3328	✓	✓	✓	✓		
EN	During emergency / critical				Engine: Idle mode possible during emergency / critical operation	Yes / No
DE	Während Notstrom/Sprinkler				<b>Yes</b> ..... If an emergency or critical operation is enabled, the engine will go to rated speed only after completing the configured idle mode. <b>No</b> ..... If an emergency or critical operation is enabled, no idle run will be performed the engine will go directly to rated speed.	
CL2	{0}	{1o}	{1oc}	{2oc}		
3329	✓	✓	✓	✓		



### NOTE

The normal operation monitoring limits will be enabled again, if one of the following conditions is fulfilled:


- Idle mode has ended and generator frequency and voltage are within the operating range of the generator (refer to
- Configure Monitoring: Generator, Operating Voltage / Frequency on page 38).
- Idle mode has ended and engine delayed monitoring (parameter 3315 on page 175) has expired.



### NOTE

The flexible limits 33 through 40 are disabled during idle mode operation (refer to Configure Monitoring: Flexible Limits on page 117).

## Configure Application: Configure Emergency Run

 **NOTE**  
The emergency power operation is possible only in application mode {20c} (2 power circuit breakers). If the *LogicsManager* outputs 'Stop request in AUTO' or 'Inhibit emergency run' are TRUE, an emergency power operation may be prevented or interrupted from an external source.

**Prerequisite:** The emergency power function can only be activated for synchronous generators with parameter 2802. Emergency power is carried out in operating mode AUTOMATIC regardless of the status of the *LogicsManager* output 'Start request in AUTO' (*LogicsManager*).

The display indicates "**Emergency run**" during emergency power operation.

The following principles are observed in case of an emergency power operation:

- If an emergency power operation is initiated, the engine is started automatically, unless the start sequence is interrupted via an alarm or prevented via the *LogicsManager* or the operating mode is changed.
- The GCB can be closed regardless of the engine delay time if the generator frequency and voltage are within the configured operating limits (refer to Configure Monitoring: Generator, Operating Voltage / Frequency on page 38) if the parameter "Undelay close GCB" (parameter 12210 on page 147) has been set accordingly (default setting).
- If the mains return during an emergency power operation (GCB is closed), the mains settling time (parameter 2801 on page 73) must expire before the load is transferred from the generator to mains operation.

**Activation of emergency power:** If the mains are not within the configured frequency and voltage operating limits (refer to Configure Monitoring: Mains, Operating Voltage / Frequency on page 73) for at least the time configured in the parameter "Mains fail delay time" (parameter 2800), an emergency power operation is activated.

**MCB malfunction:** An emergency power operation will be performed, if the control is not able to close or recluse the MCB and the alarm "Fail to close MCB" occurs.

**Mains rotation field alarm:** If the mains returns after a mains failure with a reversed rotation direction the generator remains in emergency power operation until the mains rotation matches the rotation of the generator set.

 **NOTE**  
The generator will not start upon a mains rotation field alarm, but it will keep on running if it has already started.

EN	On / Off				Emergency power: Monitoring	On / Off
DE	Ein/Aus					
CL2	{0}	{1o}	{1oc}	{2oc}	On.....	If the unit is in the AUTOMATIC operating mode and a mains fault occurs according to the following parameters, the engine is started and an automatic emergency operation is carried out.
2802	---	---	---	✓	Off.....	No emergency operation is carried out.
EN	Mains fail delay time				Emergency power: Mains failure: Start delay	0.00 to 99.99 s
DE	Startverzögerung					
CL2	{0}	{1o}	{1oc}	{2oc}	To start the engine and to carry out an emergency operation the monitored mains must be failed continuously for the minimum period of time set with this parameter. This delay time starts only if the easYgen is in AUTOMATIC operating mode and emergency power is activated.	
2800	---	---	---	✓		
EN	Emerg. start with MCB failure				Emergency power: Emergency operation by MCB failure	Yes / No
DE	Bei NLS-Fehler aktivieren					
CL2	{0}	{1o}	{1oc}	{2oc}	Emergency power operations may be configured with the failure of the MCB in addition to a loss of power on the mains supply. An MCB breaker alarm is indicated if parameter "MCB monitoring" (parameter 2620 on page 115) is configured "On".	
3408	---	---	---	✓		
EN	Inhibit emerg. run				Emergency power: Inhibit emergency power	LogicsManager
DE	Kein Notstrombetrieb					
CL2	{0}	{1o}	{1oc}	{2oc}	Once the conditions of the <i>LogicsManager</i> have been fulfilled the emergency power operation will be terminated or blocked. The <i>LogicsManager</i> and its default settings are explained on page 252 in Appendix B: " <i>LogicsManager</i> ".	
12200	---	---	---	✓		
EN	Break emerg. in critical mode				Emergency power: Override emergency operations in critical mode	0 to 999 s
DE	Pause Notstrom bei Sprinkler					
CL2	{0}	{1o}	{1oc}	{2oc}	The emergency power operations are overridden for the configured time when the critical mode starts in order to supply the complete generator power to the sprinkler pump.	
4101	---	---	---	✓		

Configure Application: Configure Automatic Run

Configure Application: Automatic, Start In AUTOMATIC Operating Mode (*LogicsManager*)

The start of the engine can be performed via different logical conditions. This can be:

- a discrete input
- a temperature level
- an interface start condition
- a start request from the LDSS function
- a timer
- any logical combination

If this logical output becomes TRUE in AUTOMATIC operating mode, the generator starts and the GCB will be closed. The simultaneous activation of other *LogicsManager* outputs (e.g. Stop req. in Auto) may affect this function.

The breaker handling depends on the configured application mode and breaker logic.



NOTE

Refer to Figure 3-24 and Priority Hierarchy of the Logical Outputs on page 256 for the priority of the logical outputs in case that more than one logical output is TRUE.

EN		Start req. in Auto				Start request in operation mode AUTOMATIC	LogicsManager
DE		Startanf. in Auto					
CL2	{0}	{1o}	{1oc}	{2oc}	Once the conditions of the <i>LogicsManager</i> have been fulfilled, the control issues a start request in AUTOMATIC mode. The <i>LogicsManager</i> and its default settings are explained on page 252 in Appendix B: " <i>LogicsManager</i> ".		
12120	✓	✓	✓	✓			

Configure Application: Automatic, Stop In AUTOMATIC Operating Mode (*LogicsManager*)

If this logical output becomes TRUE, it inhibits all other start processes (e.g. Start req. in Auto, emergency power, etc.). Stopping of the engine can be initiated externally via a discrete input or any logical combination.

EN		Stop req. in Auto				Stop request in operation mode AUTOMATIC	LogicsManager
DE		Stopanf. in Auto					
CL2	{0}	{1o}	{1oc}	{2oc}	Once the conditions of the <i>LogicsManager</i> have been fulfilled, the control issues a stop request in AUTOMATIC mode. The <i>LogicsManager</i> and its default settings are explained on page 252 in Appendix B: " <i>LogicsManager</i> ".		
12190	✓	✓	✓	✓			

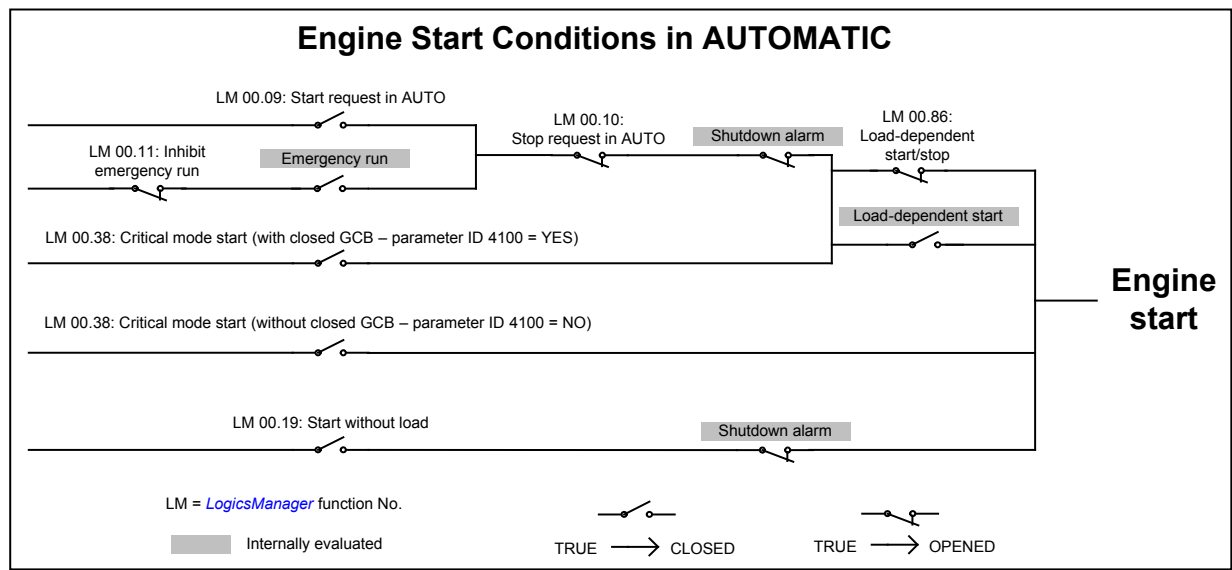


Figure 3-24: Automatic run - engine start conditions

## Configure Application: Automatic, Load-Dependent Start/Stop (LDSS)

Refer to Appendix G: LDSS Formulas on page 315 for all formulas related with the LDSS function.

Load-dependent start/stop may either be performed according to a system reserve power or the generator load depending on the configuration of the "Start stop mode" (parameter 5752 on page 186).

### Configure Application: Automatic, Load-Dependent Start/Stop: System Reserve Power

If the "Start stop mode" (parameter 5752 on page 186) is configured to "Reserve power", load-dependent start stop is performed in a way that a configured minimum reserve power is maintained in the system. This means that there is always enough reserve power for load swings on the busbar regardless of the generator load. The actual reserve power in the system is the total rated power of all gensets on the busbar minus the actual total generator real power.

This functionality provides high system reliability and is intended for applications that require a dedicated reserve power on the busbar, independent of the number of gensets on the busbar.

The following parameters need to be configured for this operation:

Parameter ID	Parameter text	Note
5760	IOP Reserve power	only for isolated operation
5761	IOP Hysteresis	only for isolated operation
5767	MOP Minimum load	only for mains parallel operation
5768	MOP Reserve power	only for mains parallel operation
5769	MOP Hysteresis	only for mains parallel operation

Table 3-66: Load-dependent start/stop - parameters for reserve power operation

#### A.....1 Isolated Operation

$$P_{\text{Reserve}} = P_{\text{rated active}} - P_{\text{GN real active}}$$

$$P_{\text{rated active}} = P_{\text{RatedGen}[1]} + P_{\text{RatedGen}[2]} + \dots + P_{\text{RatedGen}[n]} \text{ (total rated power of all gensets on the busbar in the system)}$$

$$P_{\text{GN real active}} = P_{\text{ActualGen}[1]} + P_{\text{ActualGen}[2]} + \dots + P_{\text{ActualGen}[n]} \text{ (total actual load of all gensets on the busbar in the system)}$$

If the reserve power falls below the IOP reserve power threshold (parameter 5760), another genset will be added.

$$P_{\text{Reserve}} < P_{\text{ReserveIOP}}$$

If the reserve power exceeds the IOP reserve power threshold (parameter 5760) plus the hysteresis (parameter 5761) plus the rated load of the genset, the genset will be stopped. The hysteresis is intended to prevent frequent starting and stopping of gensets in case of small load variations.

$$P_{\text{Reserve}} > P_{\text{reserve isolatedIOP}} + P_{\text{hysteresis IOP}} + P_{\text{RatedGen}}$$

## A.....2 Mains Parallel Operation (mains import power control)

$$P_{\text{Reserve}} = P_{\text{rated active}} - P_{\text{GN real active}}$$

$$P_{\text{rated active}} = P_{\text{RatedGen}[1]} + P_{\text{RatedGen}[2]} + \dots + P_{\text{RatedGen}[n]} \text{ (total rated power of all gensets on the busbar in the system)}$$

$$P_{\text{GN real active}} = P_{\text{ActualGen}[1]} + P_{\text{ActualGen}[2]} + \dots + P_{\text{ActualGen}[n]} \text{ (total actual load of all gensets on the busbar in the system)}$$

If the required generator load set point for the control at the mains interchange point exceeds the MOP minimum load threshold (parameter 5767), the first genset will be added.

$$P_{\text{MN setpoint}} - P_{\text{MN real}} > P_{\text{MOP minimum}}$$

If at least one genset is supplying the load in parallel with the mains and the reserve power falls below the reserve power threshold (parameter 5768), another genset will be added.

$$P_{\text{Reserve}} < P_{\text{reserve parallel}}$$

If at least two gensets are supplying the load in parallel with the mains and the reserve power exceeds the MOP reserve power threshold (parameter 5768) plus the hysteresis (parameter 5769) plus the rated load of the genset, the genset will be stopped. The hysteresis is intended to prevent frequent starting and stopping of gensets in case of small load variations.

$$P_{\text{Reserve}} > P_{\text{reserve parallel}} + P_{\text{hysteresis MOP}} + P_{\text{RatedGen}}$$

If one genset is supplying the load in parallel with the mains and the generator load exceeds the MOP minimum load threshold (parameter 5767) minus the hysteresis (parameter 5769), the genset will be stopped. The hysteresis is intended to prevent frequent starting and stopping of gensets in case of small load variations.

$$P_{\text{MN setpoint}} - P_{\text{MN real}} + P_{\text{GN real active}} < P_{\text{MOP minimum}} - P_{\text{hysteresis MOP}}$$

### **Configure Application: Automatic, Load-Dependent Start/Stop: Generator Capacity Utilization**

If the "Start stop mode" (parameter 5752 on page 186) is configured to "Generator load", load-dependent start stop is performed in a way that the next genset will be started if all gensets in operation reach the maximum generator load (parameter 5762 or 5770 "IOP/MOP Max. generator load"), a configured percentage (e.g. 80%) of the rated power. In order to stop one generator, the load of all gensets in operation must fall below the minimum generator load (parameter 5763 or 5771 "IOP/MOP Min. generator load"), a configured percentage (e.g. 30%) of the rated power. There are different set points for isolated and mains parallel operation.

An additional dynamic parameter (parameter 5757 or 5758 "IOP/MOP Dynamic") prevents the gensets from being started and stopped continuously if only a few gensets are in operation. Refer to the description of the dynamic parameters for detailed information.

This function provides an easy calculation for the start of the next genset.

The following parameters need to be configured for this operation:

Parameter ID	Parameter text	Note
5757	IOP Dynamic	only for isolated operation
5758	MOP Dynamic	only for mains parallel operation
5767	MOP Minimum load	only for mains parallel operation
5769	MOP Hysteresis	only for mains parallel operation
5770	MOP Max. generator load	only for mains parallel operation

Table 3-67: Load-dependent start/stop - parameters for generator load operation



**A.....1                      Isolated Operation**

If the configured maximum generator capacity utilization is exceeded, another genset will be added.

$$P_{GN \text{ real active}} > P_{\text{max. load isolated}}$$

If the configured minimum generator capacity utilization has been fallen below, a genset will be stopped depending on the dynamic setting. (refer to parameter 5757 on page 191 for detailed information).

$$P_{GN \text{ real active}} < P_{\text{min. load isolated}}$$

**A.....2                      Mains Parallel Operation (mains import power control)**

If the required generator load set point for the control at the mains interchange point exceeds the MOP minimum load threshold (parameter 5767), the first genset will be added.

$$P_{MN \text{ setpoint}} - P_{MN \text{ real}} > P_{MOP \text{ minimum}}$$

If at least one genset is supplying the load in parallel with the mains and the total generator load exceeds the MOP maximum generator load threshold (parameter 5770), another genset will be added.

$$P_{GN \text{ real active}} > P_{\text{max. load parallel}}$$

If at least two gensets are supplying the load in parallel with the mains and the configured minimum generator capacity utilization has been fallen below, a genset will be stopped depending on the dynamic setting. (refer to parameter 5758 on page 194 for detailed information)

$$P_{GN \text{ real active}} < P_{\text{min. load parallel}}$$

If one genset is supplying the load in parallel with the mains and the generator load exceeds the MOP minimum load threshold (parameter 5767) minus the hysteresis (parameter 5769), the genset will be stopped. The hysteresis is intended to prevent frequent starting and stopping of gensets in case of small load variations.

$$P_{MN \text{ setpoint}} - P_{MN \text{ real}} + P_{GN \text{ real active}} < P_{MOP \text{ minimum}} - P_{\text{hysteresis MOP}}$$

***Configure Application: Automatic, Load-Dependent Start/Stop: Generator Selection***

If a genset is to be started, the genset with the highest priority configured will be started. If a genset is to be stopped, the genset with the lowest priority configured will be stopped. If all gensets have the same priority, the next genset is selected according to the size of engine, i.e. the genset combination, which allows an optimum efficiency will be used. If all gensets have the same rated load or this parameter is disabled, the remaining hours until the next maintenance are considered. If these are also the same, the genset with the lowest generator number will be started first or stopped last.

**Priority order:**

1. Priority (parameter 5751)
2. Efficiency (size of engines) (parameter 5754)
3. Service hours (parameter 5755)
4. Generator (device) number (parameter 1702)

The load-dependent start/stop function requires the following conditions have been met:

- The control has been placed in AUTOMATIC operating mode
- A start request (Start req. in AUTO, Emergency run) is active
- All load sharing parameters are configured identically for all generators participating in load sharing (refer to Configure Monitoring: Miscellaneous, Multi-Unit Configuration Check on page 132)
- The mains interchange load control (import/export power) has been enabled or the gensets are in isolated operation
- The conditions of the *LogicsManager* function "Load-dependent start/stop" have been fulfilled

EN	LD start stop			
DE	Lastabh. Zu/Abs.			
CL2	{0}	{1o}	{1oc}	{2oc}
12930	✓	✓	✓	✓

#### Load-dependent start stop

*LogicsManager*

Once the conditions of the *LogicsManager* have been fulfilled, the load-dependent start/stop function is enabled. The *LogicsManager* and its default settings are explained on page 252 in Appendix B: "*LogicsManager*".

EN	Start stop mode			
DE	Start Stop Modus			
CL2	{0}	{1o}	{1oc}	{2oc}
5752	✓	✓	✓	✓

#### Load-dependent start stop: Start stop mode

#### Reserve power / Generator load

**Reserve power** ..Load-dependent start stop is performed in a way that a configured minimum reserve power is maintained in the system. The reserve power is the total generator rated power minus the total actual generator power. If the reserve power falls below the threshold, another genset will be started. If the reserve power is sufficient to stop one genset without falling below the threshold, a genset will be stopped.

**Generator load** .Load-dependent start stop is performed in a way that a configured maximum generator capacity utilization is not exceeded. If the generator capacity utilization exceeds this threshold, another genset will be started. If the generator capacity utilization is low enough to stop one genset without exceeding the threshold again, a genset will be stopped.

EN	Dead busbar start mode			
DE	Schwarze Schiene Start Modus			
CL2	{0}	{1o}	{1oc}	{2oc}
5753	✓	✓	✓	✓

#### Load-dependent start stop: Dead busbar start mode

All / LDSS

**All** ..... All available gensets will be started in case of a dead busbar and remain connected to the busbar for the minimum running time (parameter 5759). Then the gensets will be stopped according to the configured LDSS procedure. The start delay is configured in parameter 2800 (Mains fail delay time).

**LDSS** ..... The start of the gensets will be performed according to the configured LDSS priority in case of a dead busbar.

**Note:** This function cannot be used as an emergency power function in mains parallel operations because it cannot control the MCB operation. If the MCB shall be operated, the emergency run function (parameter 2802) must be enabled

EN	Base priority			
DE	Grund Priorität			
CL2	{0}	{1o}	{1oc}	{2oc}
5751	✓	✓	✓	✓

#### Load-dependent start stop: Base priority

1 to 32

The priority of the genset in the load-dependent start/stop network is configured with this parameter (refer to Configure Application: Automatic, Load-Dependent Start/Stop: Generator Selection on page 185). The lower the number configured here, the higher the priority. This priority may be overridden by the LDSS Priority parameters (parameters 12924, 12925, and 12926).

EN	LDSS Priority 2			
DE	LZA Priorität 2			
CL2	{0}	{1o}	{1oc}	{2oc}
12926	✓	✓	✓	✓

#### Load-dependent start stop: Priority 2

*LogicsManager*

Once the conditions of the *LogicsManager* have been fulfilled, the load-dependent start/stop priority will be set to 2 (the highest priority is valid). The *LogicsManager* and its default settings are explained on page 252 in Appendix B: "*LogicsManager*".

EN	LDSS Priority 3			
DE	LZA Priorität 3			
CL2	{0}	{1o}	{1oc}	{2oc}
12925	✓	✓	✓	✓

**Load-dependent start stop: Priority 3***LogicsManager*

Once the conditions of the *LogicsManager* have been fulfilled, the load-dependent start/stop priority will be set to 3 (the highest priority is valid). The *LogicsManager* and its default settings are explained on page 252 in Appendix B: "*LogicsManager*".

EN	LDSS Priority 4			
DE	LZA Priorität 4			
CL2	{0}	{1o}	{1oc}	{2oc}
12924	✓	✓	✓	✓

**Load-dependent start stop: Priority 4***LogicsManager*

Once the conditions of the *LogicsManager* have been fulfilled, the load-dependent start/stop priority will be set to 4 (the highest priority is valid). The *LogicsManager* and its default settings are explained on page 252 in Appendix B: "*LogicsManager*".

EN	Fit size of engine			
DE	Auswahl nach Nennleistung			
CL2	{0}	{1o}	{1oc}	{2oc}
5754	✓	✓	✓	✓

**Load-dependent start stop: Fit size of engine**

Yes / No

This parameter defines whether the start/stop priority order (refer to Configure Application: Automatic, Load-Dependent Start/Stop: Generator Selection on page 185) considers the size of the engine (generator rated power) or not. In case of different sized gensets, the control can start a genset combination which results in optimum efficiency. The fuel efficiency may be optimized when this parameter is enabled. This parameter may be disabled if all generators have the same size.

**Yes** ..... The priority order considers the engine size for the start of the next engine for gensets with the same priority.

**No** ..... The priority order does not consider the rated power of the engines to fit the best size of engines.

EN	Fit service hours			
DE	Auswahl nach Wartungsintervall			
CL2	{0}	{1o}	{1oc}	{2oc}
5755	✓	✓	✓	✓

**Load-dependent start stop: Fit service hours**

Off / Staggered / Equal

**Off**..... The remaining hours until the next service is required are not considered when evaluating the engines to be started.

**Staggered** .... The remaining hours until the next service is required are considered when evaluating the engines to be started for gensets with same priority. The gensets are utilized in a way that the maintenance may be performed at different times to ensure that not all gensets have a downtime due to a maintenance at the same time. The genset with the lowest hours until the next service will be started first.

**Equal** ..... The remaining hours until the next service is required are considered when evaluating the engines to be started for gensets with same priority. The gensets are utilized in a way that the maintenance may be performed at the same time for all gensets. The genset with the highest hours until the next service will be started first.

DE	Changes of engines			
	Aggregatewechsel			
CL2	{0}	{10}	{100}	{200}
5756	✓	✓	✓	✓

## Load-dependent start stop: Changes of engines

Off / All 32h / All 64h / All 128h

① This parameter is only effective if fit service hours (parameter 5755) is configured to "Equal".

Engine sequencing may be configured to start and stop engines according to the time remaining until the maintenance hours counter (parameter 2550) expires (counter reaches 0 hrs). The easYgen-3000 takes the time remaining on the maintenance hours counter and divides it by the service hours group (32/64/128 h) configured in this parameter to determine the individual unit's time group. A generator with a larger time group number has more time remaining before the maintenance hours timer expires and is considered to be the higher priority generator. If two generators are in the same time group, the configured generator number determines which generator is the higher priority and will be started first. This functionality enables the end user to have multiple generators due for service at approximately the same time.

**Off** .....No engine change will be performed. The engines are selected according to the setting of parameter 5755 (Fit service hours) with 1 hour spacing in case of load changes.

**All 32/64/128h** If parameter 5754 (Fit size of engine) is configured to "Yes", only engines with the same rated power and priority are changed, if it is configured to "No", engines with the same priority are changed depending on the service hours and generator number. All engines are divided into 32/64/128 service hour groups. An engine change is performed if one engine changes to another group in 32/64/128 hour spacing.

Example 1: "Changes of engines" is configured to "All 64h"

Generator 1 has 262 maintenance hours remaining

Generator 2 has 298 maintenance hours remaining

The time group for generator 1 is calculated as:  $262\text{h}/64\text{h} = 4.09 = \text{Time group 4}$

The time group for generator 2 is calculated as:  $298\text{h}/64\text{h} = 4.66 = \text{Time group 4}$

Both generators are in time group 4. Time group 4 consists of any generator that the time group calculation total ranges from 4.00 through 4.99. In this instance the assigned generator number is used to determine which generator is brought online. Generator 1 will be started.

Example 2: "Changes of engines" is configured to "All 64h"

Generator 1 has 262 maintenance hours remaining

Generator 2 has 345 maintenance hours remaining

Generator 3 has 298 maintenance hours remaining

The time group for generator 1 is calculated as:  $262\text{h}/64\text{h} = 4.09 = \text{Time group 4}$

The time group for generator 2 is calculated as:  $345\text{h}/64\text{h} = 5.39 = \text{Time group 5}$

The time group for generator 3 is calculated as:  $298\text{h}/64\text{h} = 4.66 = \text{Time group 4}$

Generators 1 and 3 are in time group 4. Time group 4 consists of any generator that the time group calculation total ranges from 4.00 through 4.99. Generator 2 is in time group 5. Time group 5 consists of any generator that the time group calculation total ranges from 5.00 through 5.99. In this instance the largest time group will determine which generator is brought online. Generator 2 will be started because it is in time group 5.

EN	Minimum running time			
DE	Aggregate Mindestlaufzeit			
CL2	{0}	{1o}	{1oc}	{2oc}
5759	✓	✓	✓	✓

**Load-dependent start stop: Minimum running time** 0 to 32000 s

If a genset has been started by the LDSS function, it continues to operate at least for this time even if it would have been stopped before. This timer is started with the closure of the GCB. If an emergency run is active (refer to Configure Application: Configure Emergency Run on page 180) and the mains return, this timer will be overridden and the load is transferred back to the mains after the mains settling time (parameter 2801 on page 73) has expired.

## Configure Application: Automatic, Load-Dependent Start/Stop: Isolated Parallel Operation (IOP)

In case of an isolated parallel operation (MCB open), the first genset will be connected to the de-energized busbar. At least one genset must be in operation in isolated operation. There are dedicated LDSS parameters for isolated parallel operation because the supply of the load is important here.

EN	IOP Reserve power				Load-dependent start stop: IOP Reserve power	0 to 999999 kW
DE	IPB Reserveleistung					
CL2 5760	{0}	{1o}	{1oc}	{2oc}	<p>① This parameter is only effective if start stop mode (parameter 5752) is configured to "Reserve power".</p>	
	✓	✓	✓	✓		

The value configured for the reserve power determines when an additional generator will be started. The reserve power is the desired spinning reserve of a generator or generators. The reserve power is usually estimated as the largest load swing that a power plant may encounter during the time it takes to bring an additional generator online. The available generator power is calculated by adding up the generator real power ratings of all generators with closed GCBs. The reserve generator power is calculated by subtracting the power currently being produced by all generators with closed GCBs from the total available generator power. If the actual reserve power of the generators is less than the value configured in this parameter, the next generator will be started.

$$\begin{aligned} & \text{Currently available total generator rated real power} \\ & - \text{Currently available total generator actual real power} \\ & = \text{Reserve power} \end{aligned}$$

EN	IOP Hysteresis				Load-dependent start stop: IOP Hysteresis	0 to 65000 kW
DE	IPB Hysterese					
CL2 5761	{0}	{1o}	{1oc}	{2oc}	<p>① This parameter is only effective if start stop mode (parameter 5752) is configured to "Reserve power".</p>	
	✓	✓	✓	✓		

If the reserve power is sufficient to stop one genset without falling below the threshold and the hysteresis configured here, a genset will be stopped.

EN	IOP Max. generator load				Load-dependent start stop: IOP Maximum generator load	0 to 100 %
DE	IPB Max. Generatorlast					
CL2 5762	{0}	{1o}	{1oc}	{2oc}	<p>① This parameter is only effective if start stop mode (parameter 5752) is configured to "Generator load".</p>	
	✓	✓	✓	✓		

If the generator load exceeds the threshold configured here, the load-dependent start/stop function will start another genset.

EN	IOP Min. generator load				Load-dependent start stop: IOP Minimum generator load	0 to 100 %
DE	IPB Min. Generatorlast					
CL2 5763	{0}	{1o}	{1oc}	{2oc}	<p>① This parameter is only effective if start stop mode (parameter 5752) is configured to "Generator load".</p>	
	✓	✓	✓	✓		

If the generator load falls below the threshold configured here, the load-dependent start/stop function will stop a genset. If only a few gensets are operating in a multi-genset application, the IOP Dynamic (parameter 5757 on page 191) will also be considered when stopping a genset.

DE	EN	IOP Dynamic				Load-dependent start stop: IOP Dynamic	Low / Moderate / High
		IPB Dynamik					
CL2	{0}	{1o}	{1oc}	{2oc}	① This parameter is only effective if start stop mode (parameter 5752) is configured to "Generator load".		
5757	✓	✓	✓	✓			

The dynamic determines when to start or stop the next genset and shows the following behavior:

#### Starting a genset:

The Dynamic is only considered for the start sequence if "Fit size of engines" is enabled (refer to parameter 5754). The control requests a certain amount of additional load depending on the dynamic. It may start two or more gensets to supply the required load. Also refer to the following example.

- Low** ..... A larger genset is requested and it will take longer until the next change is required. The engines are operated with more reserve power.  
The requested load is calculated so that the gensets will be loaded with 25 % of the range between minimum and maximum generator load (parameters 5762 & 5763) after the new genset has been started.
- Moderate** ..... A medium genset is requested.  
The requested load is calculated so that the gensets will be loaded with 50 % of the range between minimum and maximum generator load (parameters 5762 & 5763) after the new genset has been started.
- High** ..... A smaller genset is requested to operate the engines with higher efficiency. This may lead to more frequent starts and stops.  
The requested load is calculated so that the gensets will be loaded with 75 % of the range between minimum and maximum generator load (parameters 5762 & 5763) after the new genset has been started.

#### Stopping a genset:

The dynamic determines how soon a genset will be stopped. It prevents continuous start and stop if only a few gensets are in operation. In this case, the remaining gensets would not reach the maximum limit if one genset stops (if, for example, two gensets with 100 kW rated load, a minimum load of 40 % and a maximum load of 70 % are operated, the second genset will be shut down if both reach 40 kW and the remaining engine would operate with 80 kW and request the next engine and so on). The more gensets are running, the less the influence of this parameter. Also refer to the following example.

- Low** ..... The genset will shut down at a lower limit and be operated longer.  
The number of gensets in operation will remain constant for a wider range of load.  
The load on the remaining gensets must not exceed 25 % of the range between minimum and maximum generator load (parameters 5762 & 5763).
- Moderate** ..... The load on the remaining gensets must not exceed 50 % of the range between minimum and maximum generator load (parameters 5762 & 5763).
- High** ..... The genset will be shut down earlier. This may lead to more frequent starts and stops.  
The load on the remaining gensets must not exceed 75 % of the range between minimum and maximum generator load (parameters 5762 & 5763).

Example for starting a genset:

A plant made up of several gensets with a rated power of 50, 100, and 200 kW is configured to a maximum generator load of 70 % and a minimum generator load of 40 %. One genset with 200 kW is running and the actual load reaches 140 kW. This is the 70 % maximum load limit of the running genset and requires the start of the next genset.

- If the dynamic is configured to Low, a total generator rated power of 294.7 kW is requested and a 100 kW genset will be started.
- If the dynamic is configured to Moderate, a total generator rated power of 254.5 kW is requested and a 100 kW genset will be started.
- If the dynamic is configured to High, a total generator rated power of 224.0 kW is requested and a 50 kW genset will be started.

Refer to Appendix G: LDSS Formulas on page 315 for details about the formulas used for calculation.

Example for stopping a genset:

Two gensets with the same rated power are configured to a maximum generator load of 70 % and a minimum generator load of 40 %. Table 3-68 shows the load level before stopping the second genset and the resulting load level for the first genset depending on the dynamic setting.

Dynamic	Load level before stopping	Resulting load level for remaining engine
Low	23.75 %	47.5 % (25 % of the difference between 70 and 40 %)
Moderate	27.5 %	55 % (50 % of the difference between 70 and 40 %)
High	31.25 %	62.5 % (75 % of the difference between 70 and 40 %)

Table 3-68: Load-dependent start/stop - dynamic influence on stopping a genset

EN	IOP Add on delay				
DE	IPB Zusatzverzögerung				
CL2	{0}	{1o}	{1oc}	{2oc}	
5764	✓	✓	✓	✓	

**Load-dependent start stop: IOP Add on delay****0 to 32000 s**

Load swings may exceed the threshold momentarily. In order to prevent the engine from starting due to short-term load swings, a delay time may be configured. The LDSS criterion for adding load must be exceeded without interruption for this delay time, configured in seconds, prior to a start command being issued. If the LDSS criterion for adding load is fallen below before the delay time expires, the delay time is reset and a start command is not issued.

EN	IOP Add on delay at rated load				
DE	IPB Zusatzverzög. bei Nennlast				
CL2	{0}	{1o}	{1oc}	{2oc}	
5765	✓	✓	✓	✓	

**Load-dependent start stop: IOP Add on delay at rated load****0 to 32000 s**

The command to start the next genset in case a genset exceeds rated load will be issued after the delay configured here has expired. This parameter becomes only effective in case a genset exceeds rated load to achieve a faster start and overrides parameter 5764.

EN	IOP Add off delay				
DE	IPB Absetzverzögerung				
CL2	{0}	{1o}	{1oc}	{2oc}	
5766	✓	✓	✓	✓	

**Load-dependent start stop: IOP Add off delay****0 to 32000 s**

Load swings may fall below the threshold momentarily. In order to prevent the engine from stopping due to short-term load swings, a delay time may be configured. The load must remain below the hysteresis set point without interruption for the delay time, configured in seconds, prior to a stop command being issued. If the load exceeds the hysteresis set point before the delay time expires, the delay time is reset and a stop command is not issued.



**Configure Application: Automatic, Load-Dependent Start/Stop: Mains Parallel Operation (MOP)**

In case of a mains parallel operation (MCB closed), load-dependent start stop is only enabled, if the gensets participates in load sharing at the interchange point (all participating gensets must be configured to the same set point). A minimum load threshold must be exceeded to start the first genset, i.e. a genset will only be started if a minimum load would be demanded from the generator. There are dedicated LDSS parameters for mains parallel operation.

EN	MOP Minimum load				Load-dependent start stop: MOP Minimum load	0 to 65000 kW
DE	NPB Mindestlast					
CL2	{0}	{1o}	{1oc}	{2oc}		
5767	✓	✓	✓	✓		

For the mains interchange (import/export) real power control to function, a minimum generator power set point value is required to start the first genset. In many cases, it is desirable that the engine is prevented from starting unless the generator will operate at a specific kW level or higher to ensure a reasonable degree of efficiency.

Example: The mains interchange must reach a level that will permit an 80kW generator to operate at a minimum load of 40kW prior to the engine starting.

EN	MOP Hysteresis				Load-dependent start stop: MOP Hysteresis	0 to 65000 kW
DE	NPB Hysterese					
CL2	{0}	{1o}	{1oc}	{2oc}	① The importance of this parameter depends on the setting of the start stop mode (parameter 5752).	
5769	✓	✓	✓	✓		

Start stop mode configured to "Reserve power": If the reserve power is sufficient to stop one genset without falling below the reserve power threshold and the hysteresis configured here, a genset will be stopped.

If the generator load falls below the minimum load threshold minus the hysteresis configured here, the last genset will be stopped.

EN	MOP Reserve power				Load-dependent start stop: MOP Reserve power	0 to 999999 kW
DE	NPB Reserveleistung					
CL2	{0}	{1o}	{1oc}	{2oc}	① This parameter is only effective if start stop mode (parameter 5752) is configured to "Reserve power".	
5768	✓	✓	✓	✓		

The minimum reserve power in mains parallel operation is configured here. This is the maximum expected load swing on the busbar, which shall be supported by the gensets. If the reserve power falls below this value, the load-dependent start/stop function will start another genset.

EN	MOP Max. generator load				Load-dependent start stop: MOP Maximum generator load	0 to 100 %
DE	NPB Max. Generatorlast					
CL2	{0}	{1o}	{1oc}	{2oc}	① This parameter is only effective if start stop mode (parameter 5752) is configured to "Generator load".	
5770	✓	✓	✓	✓		

If the generator load exceeds the threshold configured here, the load-dependent start/stop function will start another genset.

EN	MOP Min. generator load				Load-dependent start stop: MOP Minimum generator load	0 to 100 %
DE	NPB Min. Generatorlast					
CL2	{0}	{1o}	{1oc}	{2oc}	① This parameter is only effective if start stop mode (parameter 5752) is configured to "Generator load".	
5771	✓	✓	✓	✓		

If the generator load falls below the threshold configured here, the load-dependent start/stop function will stop a genset. If only a few gensets are operating in a multi-genset application, the MOP Dynamic (parameter 5758) will also be considered when stopping a genset.

DE	EN	MOP Dynamic					Load-dependent start stop: MOP Dynamic	Low / Moderate / High
		NPB Dynamik						
CL2	{0}	{10}	{100}	{200}		① This parameter is only effective if start stop mode (parameter 5752) is configured to "Generator load".		
5758	✓	✓	✓	✓				

The dynamic determines when to start or stop the next genset and shows the following behavior:

#### Starting a genset:

The Dynamic is only considered for the start sequence if "Fit size of engines" is enabled (refer to parameter 5754). The control requests a certain amount of additional load depending on the dynamic. It may start two or more gensets to supply the required load.

- Low** ..... A larger genset is requested and it will take longer until the next change is required. The engines are operated with more reserve power.  
The requested load is calculated so that the gensets will be loaded with 25 % of the range between minimum and maximum generator load (parameters 5762 & 5763) after the new genset has been started.
- Moderate** ..... A medium genset is requested.  
The requested load is calculated so that the gensets will be loaded with 50 % of the range between minimum and maximum generator load (parameters 5762 & 5763) after the new genset has been started.
- High** ..... A smaller genset is requested to operate the engines with higher efficiency. This may lead to more frequent starts and stops.  
The requested load is calculated so that the gensets will be loaded with 75 % of the range between minimum and maximum generator load (parameters 5762 & 5763) after the new genset has been started.

#### Stopping a genset:

The dynamic determines how soon a genset will be stopped. It prevents continuous start and stop if only a few gensets are in operation. In this case, the remaining gensets would not reach the maximum limit if one genset stops (if, for example, two gensets with 100 kW rated load, a minimum load of 40 % and a maximum load of 70 % are operated, the second genset will be shut down if both reach 40 kW and the remaining engine would operate with 80 kW and request the next engine and so on). The more gensets are running, the less the influence of this parameter. Also refer to the following example.

- Low** ..... The genset will shut down at a lower limit and be operated longer.  
The number of gensets in operation will remain constant for a wider range of load.  
The load on the remaining gensets must not exceed 25 % of the range between minimum and maximum generator load (parameters 5762 & 5763).
- Moderate** ..... The load on the remaining gensets must not exceed 50 % of the range between minimum and maximum generator load (parameters 5762 & 5763).
- High** ..... The genset will be shut down earlier. This may lead to more frequent starts and stops.  
The load on the remaining gensets must not exceed 75 % of the range between minimum and maximum generator load (parameters 5762 & 5763).

Refer to parameter 5757 on page 191 for examples on starting and stopping a genset depending on the dynamic setting.

EN	MOP Add on delay			
DE	NPB Zusatzverzögerung			
<b>CL2</b>	{0}	{1o}	{1oc}	{2oc}
5772	✓	✓	✓	✓

**Load-dependent start stop: MOP Add on delay****0 to 32000 s**

Load swings may exceed the threshold momentarily. In order to prevent the engine from starting due to short-term load swings, a delay time may be configured. The LDSS criterion for adding load must be exceeded without interruption for this delay time, configured in seconds, prior to a start command being issued. If the LDSS criterion for adding load is fallen below before the delay time expires, the delay time is reset and a start command is not issued.

EN	MOP Add on delay at rated load			
DE	NPB Zusatzverzög. bei Nennlast			
<b>CL2</b>	{0}	{1o}	{1oc}	{2oc}
5773	✓	✓	✓	✓

**Load-dependent start stop: MOP Add on delay at rated load****0 to 32000 s**

The command to start the next genset in case a genset exceeds rated load will be issued after the delay configured here has expired. This parameter becomes only effective in case a genset exceeds rated load to achieve a faster start and overrides parameter 5772.

EN	MOP Add off delay			
DE	NPB Absetzverzögerung			
<b>CL2</b>	{0}	{1o}	{1oc}	{2oc}
5774	✓	✓	✓	✓

**Load-dependent start stop: MOP Add off delay****0 to 32000 s**

Load swings may fall below the threshold momentarily. In order to prevent the engine from stopping due to short-term load swings, a delay time may be configured. The load must remain below the hysteresis set point without interruption for the delay time, configured in seconds, prior to a stop command being issued. If the load exceeds the hysteresis set point before the delay time expires, the delay time is reset and a stop command is not issued.

## Configure Application: Automatic, Start w/o Load (*LogicsManager*)

	Start w/o load			
	Start ohne Übernahme			
CL2	{0}	{1o}	{1oc}	{2oc}
12540	---	---	✓	✓

### Start without assuming load

*LogicsManager*

If this *LogicsManager* condition is TRUE switching from mains to generator supply following an engine start is prevented (the GCB close operation is blocked). This function may be used to perform a test operation. If an emergency power case occurs meanwhile, it is still possible to change to generator operation. If this condition becomes TRUE in isolated operation, the GCB cannot be opened before the MCB has been closed. The *LogicsManager* and its default settings are explained on page 252 in Appendix B: "*LogicsManager*".

## Configure Application: Automatic, Operation Modes

	Startup in mode			
	Einschalten in Betriebsart			
CL2	{0}	{1o}	{1oc}	{2oc}
1795	---	---	✓	✓

### Operating mode after applying the power supply

STOP / AUTO / MAN / Last

If the controller is powered down, the unit will start in the following configured mode when it is powered up again.

**STOP**.....The unit starts in the STOP operating mode.

**AUTO**.....The unit starts in the AUTOMATIC operating mode.

**MAN**.....The unit starts in the MANUAL operating mode.

**Last**.....The unit starts in the last operating mode the control was in prior to being de-energized.



### NOTE

For the selection of the operating mode via the *LogicsManager* (if two different operating modes have been selected simultaneously) the control unit will prioritize the modes as follows:

1. STOP
2. MANUAL
3. AUTOMATIC

	Operat. mode AUTO			
	Betriebsart AUTO			
CL2	{0}	{1o}	{1oc}	{2oc}
12510	✓	✓	✓	✓

### Activate operating mode AUTOMATIC

*LogicsManager*

Once the conditions of the *LogicsManager* have been fulfilled the unit will change into operating mode AUTOMATIC. If AUTOMATIC mode is selected via the *LogicsManager* it is not possible to change operating modes via the front panel. The *LogicsManager* and its default settings are explained on page 252 in Appendix B: "*LogicsManager*".

	Operat. mode MAN			
	Betriebsart MAN			
CL2	{0}	{1o}	{1oc}	{2oc}
12520	✓	✓	✓	✓

### Activate operating mode MANUAL

*LogicsManager*

Once the conditions of the *LogicsManager* have been fulfilled the unit will change into operating mode MANUAL. If MANUAL mode is selected via the *LogicsManager* it is not possible to change operating modes via the front panel. The *LogicsManager* and its default settings are explained on page 252 in Appendix B: "*LogicsManager*".

	Operat. mode STOP			
	Betriebsart STOP			
CL2	{0}	{1o}	{1oc}	{2oc}
12530	✓	✓	✓	✓

### Activate operating mode STOP

*LogicsManager*

Once the conditions of the *LogicsManager* have been fulfilled the unit will change into operating mode STOP. If STOP mode is selected via the *LogicsManager* it is not possible to change operating modes via the front panel. The *LogicsManager* and its default settings are explained on page 252 in Appendix B: "*LogicsManager*".

### Configure Application: Automatic, Critical Mode (Sprinkler Operation, *LogicsManager*)

The critical mode may be used to operate a fire engine pump or any other critical operation which does not allow a shutdown of the genset under any alarm conditions. The *LogicsManager* is used to define the conditions that will enable the critical mode like a discrete input (for conditions and explanation of programming refer to *Configure LogicsManager* on page 244).

#### Alarm Classes

When critical mode is enabled the alarm classes are reclassified as follows:

	Alarm classes					
Normal operation	A	B	C	D	E	F
Critical mode	A	B	B	B	B	B

#### Critical mode "On"

A critical mode will be initiated/started once the critical mode operation *LogicsManager* output becomes TRUE (logic "1"). The "**Critical mode**" message is displayed on the display screen. If the engine is not already running, the controller will attempt to start the engine as configured (parameter 4102 on page 173). All shutdown alarms become warning messages (see above).

#### Critical mode "Off"

A critical mode will be interrupted/stopped once critical mode operation *LogicsManager* output becomes FALSE (logic "0") and the postrun time has expired. If the operation mode changes to STOP, this time will be considered as expired. With termination of the critical mode, a normal cool down is performed.



#### NOTE

Refer to Priority Hierarchy of the Logical Outputs on page 256 for more information about the priorities of the logical outputs.

#### Critical Operation (Sprinkler) Connected to the Busbar

Aforementioned fire engine pump or other critical operation is connected to the busbar, i.e. it requires a closed GCB to be supplied by the generator during critical operation. Parameter 4100 (Close GCB in critical mode) should be configured to "Yes" and an external provision for load reduction should be provided. This ensures the pump operation of a sprinkler system.

Application and breaker transition mode remain as configured. A mains parallel operation is possible.

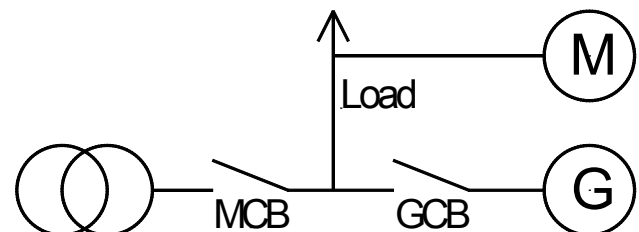


Figure 3-25: Automatic - Critical operation at busbar



#### NOTE

The GCB will not be closed if the load is supplied by the mains until the mains fail and the MCB remains closed because emergency run (parameter 2802) is disabled.

#### A.....1 Critical Mode During Mains Supply

If critical mode is enabled during mains supply (MCB is closed), the generator will be started (if not already running) and the GCB will be closed. The "**Critical mode**" message is displayed on the display screen. All shutdown alarms become warning messages.

If critical mode is disabled again, all shutdown alarms become active again. If the genset was not running before critical mode has been enabled, it will be stopped after the critical mode postrun time (parameter 4102) has expired. MCB operation will be performed according to the configured transition mode.

#### A.....2                    Emergency Power During Critical Mode

If there is a mains failure during critical mode, the "**Emerg/Critical**" message is displayed on the display screen after the mains fail delay time (parameter 2800) has expired. All shutdown alarms become warning messages.

- ⇒ Critical mode ends before mains recovery: The emergency power operation will be continued and all shutdown alarms become active again. If the mains return, the unit transfers the load from generator supply to mains supply after the mains settling delay expires.
- ⇒ Emergency power operation ends before the end of the critical mode: The critical mode is maintained and the load is transferred from generator supply to mains supply after the mains settling delay expires. The engine remains running until the conditions for the critical mode are no longer existent. If the genset was not running before critical mode has been enabled, it will be stopped after cool down time (parameter 3316) has expired. The GCB will take on the same state as it has before the critical mode has been enabled.

#### A.....3                    Critical Mode During Emergency Power

An emergency power operation is active (load is supplied by the generator, GCB is closed, MCB is open). If critical mode is enabled now, the GCB remains closed and the "**Emerg/Critical**" message is displayed on the display screen. All shutdown alarms become warning messages.

- ⇒ Critical mode ends before mains recovery: The emergency power operation will be continued and all shutdown alarms become active again. If the mains return, the unit transfers the load from generator supply to mains supply after the mains settling delay expires, if Enable MCB (parameter 12923) has been enabled.
- ⇒ Emergency power operation ends before the end of the critical mode: The critical mode is maintained and the load is transferred from generator supply to mains supply after the mains settling delay expires. The engine remains running until the conditions for the critical mode are no longer existent. If the genset was not running before critical mode has been enabled, it will be stopped after cool down time (parameter 3316) has expired. The GCB will take on the same state as it has before the critical mode has been enabled.

#### A.....4                    Start Request During Critical Mode

The critical mode operation has priority than the remote request (Start/Stop request in AUTO). Therefore, the remote request cannot start or stop the engine and has no effect on the breaker positions. The "**Critical mode**" message is displayed on the display screen and all shutdown alarms become warning alarms.

- ⇒ Critical mode ends before the start request is terminated: The engine continues running. All shutdown alarms will become active again. By resetting the start request the GCB will be opened and the engine will be stopped.
- ⇒ Start request will be terminated before the critical mode is terminated: The critical mode operation is continued. The engine keeps running until the conditions for the critical mode are no longer fulfilled and all shutdown alarms will become active again. If the genset was not running before critical mode has been enabled, it will be stopped after cool down time (parameter 3316) has expired. The GCB will take on the same state as it has before the critical mode has been enabled.
- ⇒ Critical mode and start request: The generator is supplying load in automatic mode with closed GCB. If critical mode is enabled, the "**Critical mode**" message is displayed on the display screen and all shutdown alarms become warning alarms.

### Critical Operation (Sprinkler) Connected to the Generator

Aforementioned fire engine pump or other critical operation is connected to the generator, i.e. it does not require a closed GCB to be supplied by the generator during critical operation. Parameter 4100 (Close GCB in critical mode) should be configured to "No". This ensures an open GCB during critical mode. A closed GCB is possible in case of an emergency operation.

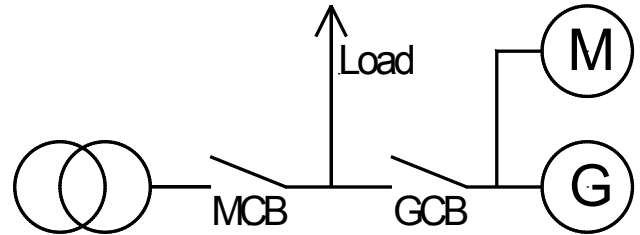


Figure 3-26: Automatic - Critical operation at generator

#### A.....1 Critical Mode During Mains Supply

If critical mode is enabled during mains supply (MCB is closed), the generator will be started (if not already running) and operated at idle speed (GCB is open). The "**Critical mode**" message is displayed on the display screen. All shutdown alarms become warning messages.

If critical mode is disabled again, all shutdown alarms become active again. If the genset was not running before critical mode has been enabled, it will be stopped after the critical mode postrun time (parameter 4102) has expired.

#### A.....2 Emergency Power During Critical Mode

If there is a mains failure during critical mode, the MCB will be opened after the mains fail delay time (parameter 2800) has expired and the GCB will be closed. It is not necessary to configure parameter 4101 (Break emerg. in critical mode) because the critical operation is already supplied. The "**Emerg/Critical**" message is displayed on the display screen and all shutdown alarms become warning messages.

- ⇒ Critical mode ends before mains recovery: The emergency power operation will be continued and all shutdown alarms become active again. If the mains return, the unit transfers the load from generator supply to mains supply after the mains settling delay expires.
- ⇒ Emergency power operation ends before the end of the critical mode: The critical mode is maintained and the load is transferred from generator supply to mains supply after the mains settling delay expires. The GCB will be opened without unloading (transition mode interchange or parallel). If open transition mode is configured, the GCB will not be opened to prevent a dead busbar. All shutdown alarms become active again. If the genset was not running before critical mode has been enabled, it will be stopped after cool down time (parameter 3316) has expired.

#### A.....3 Critical Mode During Emergency Power

An emergency power operation is active (load is supplied by the generator, GCB is closed, MCB is open). If critical mode is enabled now, the GCB will be opened dependent on the setting of the parameter 4101 (Break emerg. in critical mode) and a closure of the GCB is prevented for this time. The "**Emerg/Critical**" message is displayed on the display screen and all shutdown alarms become warning messages.

- ⇒ Critical mode ends before mains recovery: The emergency power operation will be continued and all shutdown alarms become active again. If the mains return, the unit transfers the load from generator supply to mains supply after the mains settling delay expires.
- ⇒ Emergency power operation ends before the end of the critical mode: The critical mode is maintained and the load is transferred from generator supply to mains supply after the mains settling delay expires. The GCB will be opened without unloading (transition mode interchange or parallel). All shutdown alarms become active again. If the genset was not running before critical mode has been enabled, it will be stopped after cool down time (parameter 3316) has expired.

#### A.....4 Start Request During Critical Mode

The critical mode operation has priority than the remote request (Start/Stop request in AUTO). Therefore, the remote request cannot start or stop the engine and has no effect on the breaker positions. The "**Critical mode**" message is displayed on the display screen and all shutdown alarms become warning alarms.

- ⇒ Critical mode ends before the start request is terminated: The engine continues running and a change to generator or parallel operation is performed. All shutdown alarms will become active again.
- ⇒ Start request will be terminated before the critical mode is terminated: The critical mode operation is continued. The engine keeps running until the conditions for the critical mode are no longer fulfilled and all shutdown alarms will become active again. If the genset was not running before critical mode has been enabled, it will be stopped after cool down time (parameter 3316) has expired. The GCB will take on the same state as it has before the critical mode has been enabled.

#### A.....5 Critical Mode During Start Request

The generator supplies the load and the GCB is closed. If critical mode is enabled, the MCB will be operated according to the configured transition mode (parameter 3411). The GCB will be opened without unloading (transition mode interchange or parallel). The "**Critical mode**" message is displayed on the display screen and all shutdown alarms become warning alarms.

- ⇒ Critical mode ends before the start request is terminated: The engine continues running and a change to generator or parallel operation is performed. All shutdown alarms will become active again.
- ⇒ Start request will be terminated before the critical mode is terminated: The critical mode operation is continued. The engine keeps running until the conditions for the critical mode are no longer fulfilled and all shutdown alarms will become active again. If the genset was not running before critical mode has been enabled, it will be stopped after cool down time (parameter 3316) has expired.

#### **Critical mode During Isolated Operation**

The busbar is supplied by the generator and emergency run (parameter 2802) is disabled. If the critical mode is enabled, the GCB will be opened although the MCB is not enabled. This will cause a dead busbar.





## Configure Application: Configure Controller



### WARNING

The following parameters dictate how the easYgen-3000 controls voltage, frequency, load, and power factor. It is vital that the correct setting be entered in these parameters. Failure to do so may lead to incorrect measurements and failures within the control unit resulting in damage to or destruction of the generator and/or personal injury or death.

### Overview

The Real load, reactive load, and process control all utilize PID controllers. The response of each control loop can be adjusted for optimum response, however it is important to understand what a PID controller is and the effect of each controller adjustment has on the controller response. Proportional gain, integral gain (stability), and DR (speed derivative ratio) are the adjustable and interacting parameters used to match the response of the control loop with the response of the system. They correspond to the P (proportional), I (integral), and D (derivative) terms, and are displayed in the easYgen as follows:

- P = Proportional gain (%)
- I = Integral gain (%)
- D = Derivative gain (determined by DR and I)

### Proportional Control

Proportional response is directly proportional to a process change. [Analogy: Setting hand throttle to keep constant speed on straight and level.]

Proportional control (using the same analogy) results in a certain speed as long as the car is not subjected to any load change such as a hill. If a throttle is set to any particular setting, the speed of the car will remain constant as long as the car remains straight and level. If the car goes up a hill it will slow down. Of course, going down a hill the car would gain speed.

### Integral Control

Integral compensates for process and set point load changes. [Analogy: Cruise control maintains constant speed regardless of hills.]

Integral, sometimes called reset, provides additional action to the original proportional response as long as the process variable remains away from the set point. Integral is a function of the magnitude and duration of the deviation. In this analogy the reset response would keep the car speed constant regardless of the terrain.

### Derivative

Derivative provides a temporary over-correction to compensate for long transfer lags and reduce stabilization time on process upsets (momentary disturbances). The behavior of the derivative parameter is shown in Figure 3-27 on page 203. [Analogy: Accelerating into high speed lane with merging traffic.]

Derivative, sometimes called "preact" or "rate", is very difficult to draw an accurate analogy to, because the action takes place only when the process changes and is directly related to the speed at which the process changes. Merging into high speed traffic of a freeway from an "on" ramp is no easy task and requires accelerated correction (temporary overcorrection) in both increasing and decreasing directions. The application of brakes to fall behind the car in the first continuous lane or passing gear to get ahead of the car in the first continuous lane is a derivative action.

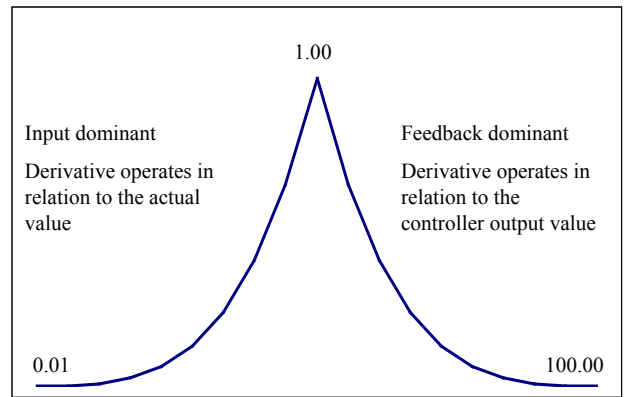


Figure 3-27: Controllers - Behavior of the derivative parameter

## PID Tuning Example

If the system is unstable, make sure the governor is the cause. This can be checked by closing the valve limiter until it has control of the actuator output. If the governor is causing the oscillation, time the oscillation cycle time. A rule-of-thumb is, if the system's oscillation cycle time is less than 1 second, reduce the Proportional gain term. A rule-of-thumb is, if the system's oscillation cycle time is greater than 1 second, reduce the Integral gain term (proportional gain may need to be increased also).

On an initial startup with the easYgen-3000, all PID dynamic gain terms will require adjustment to match the respective PID's response to that of its control loop. There are multiple dynamic tuning methods available that can be used with the easYgen's PIDs to assist in determining the gain terms that provide optimum control loop response times.

The following method can be used to achieve PID gain values that are close to optimum:

1. Increase Derivative Ratio (DR) to 100.
2. Reduce integral gain to 0.01.
3. Increase proportional gain until system just starts to oscillate.
4. The optimum gain for this step is when the system just starts to oscillate and maintains a self-sustaining oscillation that does not increase or decrease in magnitude.
5. Record the control gain ( $K_c$ ) and oscillation period ( $T$ ) in seconds.
6. Set the dynamics as follows:
  - For PI control:  $G = P(I/s + 1)$
  - Set: Proportional gain =  $0.45 * K_c$
  - Integral gain =  $1.2/T$
  - Derivative ratio = 100
  - For PID control:  $G = P(I/s + 1 + Ds)$
  - Set: Proportional gain =  $0.60 * K_c$
  - Integral gain =  $2/T$
  - Deriv ratio =  $8/(T * \text{Integral Gain})$  for feedback dominant  
     =  $(T * \text{Integral Gain})/8$  for input dominant
7. This method of tuning will get the gain settings close, they can be fine-tuned from this point.

## Configure Application: Controller, Frequency Control

EN	Frequency Control			
DE	Frequenzregler			
CL2	{0}	{1o}	{1oc}	{2oc}
5507	✓	✓	✓	✓

Frequency control: activation

PID analog / 3pos controller / Off

**PID analog**...The frequency is controlled using an analog PID controller.

**3pos contr.**...The frequency is controlled using a three-step controller.

**Off**.....Frequency control is not carried out.

EN	Proportional gain			
DE	Verstärkung			
CL2	{0}	{1o}	{1oc}	{2oc}
5510	✓	✓	✓	✓

Frequency control: proportional gain

0.01 to 100.00

① This parameter is only visible if frequency control (parameter 5507) is configured to "PID analog".

The proportional coefficient specifies the gain. By increasing the gain, the response is increased to permit larger corrections to the variable to be controlled. The farther out of tolerance the process is the larger the response action is to return the process to the tolerance band. If the gain is configured too high, the result is excessive overshoot/undershoot of the desired value.

EN	Integral gain			
DE	Integrierbeiwert			
CL2	{0}	{1o}	{1oc}	{2oc}
5511	✓	✓	✓	✓

Frequency control: integral gain

0.01 to 100.00

① This parameter is only visible if frequency control (parameter 5507) is configured to "PID analog".

The integral gain identifies the I part of the PID controller. The integral gain corrects for any offset (between set point and process variable) automatically over time by shifting the proportioning band. Reset automatically changes the output requirements until the process variable and the set point are the same. This parameter permits the user to adjust how quickly the reset attempts to correct for any offset. The integral gain constant must be greater than the derivative time constant. If the integral gain constant is too large, the engine will continually oscillate. If the integral gain constant is too small, the engine will take too long to settle at a steady state.

EN	Derivative ratio			
DE	Differenziervhältnis			
CL2 5512	{0}	{1o}	{1oc}	{2oc}
	✓	✓	✓	✓

## Frequency control: derivative ratio

0.01 to 100.00

④ This parameter is only visible if frequency control (parameter 5507) is configured to "PID analog".

The derivative ratio identifies the D part of the PID controller. By increasing this parameter, the stability of the system is increased. The controller will attempt to slow down the action of the actuator in an attempt to prevent excessive overshoot or undershoot. Essentially this is the brake for the process. This portion of the PID loop operates anywhere within the range of the process unlike reset.

EN	Deadband			
DE	Unempfindlichkeit			
CL1 5550	{0}	{1o}	{1oc}	{2oc}
	✓	✓	✓	✓

## Frequency control: deadband

0.02 to 9.99 Hz

④ This parameter is only visible if frequency control (parameter 5507) is configured to "3pos controller".

**Isolated operation:** The generator frequency is controlled in such a manner that the measured frequency does not deviate from the configured set point by more than the value configured in this parameter without the controller issuing a frequency raise/lower signal to the frequency control. This prevents unneeded wear on the frequency bias output control or the raise/lower relay contacts.

Example: If the frequency set point is 50 Hz and a deadband of 0.5 Hz is configured, the measured generator frequency must exceed 50.5 Hz ( $50 + 0.5$ ) to issue a lower pulse or fall below 49.5 Hz ( $50 - 0.5$ ) to issue a raise pulse.

**Synchronization:** The generator frequency is controlled in such a manner that the measured frequency does not deviate from the monitored reference (mains or busbar) frequency by more than the value configured in this parameter without the controller issuing a frequency raise/lower signal to the frequency control. This prevents unneeded wear on the frequency bias output control or the raise/lower relay contacts. The value configured for this parameter must be less than the value configured for the df max (maximum frequency differential) for synchronization.

EN	Time pulse minimum			
DE	Impulsdauer Minimum			
CL1 5551	{0}	{1o}	{1oc}	{2oc}
	✓	✓	✓	✓

## Frequency control: time pulse minimum

0.01 to 2.00 s

④ This parameter is only visible if frequency control (parameter 5507) is configured to "3pos controller".

A minimum pulse on time must be configured here. The shortest possible pulse time should be configured to limit overshoot of the desired speed reference point.

EN	Gain factor			
DE	Verstärkungsfaktor			
CL1 5552	{0}	{1o}	{1oc}	{2oc}
	✓	✓	✓	✓

## Frequency control: gain factor

0.1 to 10.0

④ This parameter is only visible if frequency control (parameter 5507) is configured to "3pos controller".

The gain factor Kp influences the operating time of the relays. By increasing the number configured in this parameter, the operating time of the relay will be increased in response to a deviation from the frequency reference. By increasing the gain, the response is increased to permit larger corrections to the variable to be controlled. The farther out of tolerance the process is the larger the response action is to return the process to the tolerance band. If the gain is configured too high, the result is excessive overshoot/undershoot of the desired value.

Expand deadband factor					Frequency control: expand deadband factor	1.0 to 9.9
EN	Aufweitung Unempfindlichkeit					
CLI	{0}	{10}	{100}	{200}	① This parameter is only visible if frequency control (parameter 5507) is configured to "3pos controller".	
5553	✓	✓	✓	✓		

If the measured generator frequency is within the deadband range (parameter 5550) and the configured delay expand deadband time (parameter 5554) expires, the deadband will be multiplied with the factor configured here.

### Kick Impulse Function

Frequency control provides a kick impulse function, which issues a pulse if the frequency control deadband (parameter 5550) is not exceeded and no synchronization could be performed for 20 seconds. The function is enabled, if a synchronization is carried out.

If the phase angle is between 0° and 180°, a "frequency lower" signal is issued.

If the phase angle is between 180° and 360°, a "frequency raise" signal is issued.

The pulse duration is 100ms. If the synchronization still fails, another pulse will be issued after 10 seconds.

The following conditions are required for the kick impulse function:

- Frequency control (parameter 5507) is configured to "3pos controller"
- Synchronization mode (parameter 5728) is configured to "RUN" or "CHECK" (or "Controlled by LM" and RUN or CHECK enabled by the [LogicsManager](#))

DE	EN	Delay expand deadband				Frequency control: delay expand deadband	1.0 to 9.9 s
		Verzögerung Aufweitung					
CL1		{0}	{10}	{100}	{200}	① This parameter is only visible if frequency control (parameter 5507) is configured to "3pos controller".	
5554		✓	✓	✓	✓		

The measured generator frequency must be within the deadband range for the time configured here in order to multiply the deadband with the factor configured in parameter 5553.

EN	Frequency setpoint 1 source			
DE	Frequenz Sollwert 1 Auswahl			
CL2	{0}	{1o}	{1oc}	{2oc}
5518	✓	✓	✓	✓

**Frequency control: frequency setpoint 1 source**

refer to text below

The Frequency setpoint 1 source may be selected from the available data sources. Use the "+" and "-" softkeys to scroll through the list of variables and confirm your selection with the Enter softkey. Even it is possible to select all data sources (refer to Appendix C on page 289), only the following data sources may be used (selecting a different data source may not allow the controller to operate properly):

- 05.01 Internal frequency setpoint 1  
Internal frequency control setpoint 1 (parameter 5500) is used as setpoint 1
- 05.02 Internal frequency setpoint 2  
Internal frequency control setpoint 2 (parameter 5501) is used as setpoint 1
- 05.03 Interface frequency setpoint  
The setpoint, which is transmitted via the interface, is used as setpoint
- 05.13 Discrete raise/lower frequency  
The setpoint from the discrete raise/lower frequency function is used as setpoint
- 06.01 Analog input 1  
Analog input 1 is used to control the setpoint
- 06.02 Analog input 2  
Analog input 2 is used to control the setpoint
- 06.03 Analog input 3  
Analog input 3 is used to control the setpoint

The frequency set point may be adjusted within the configured operating limits (refer to Configure Monitoring: Generator, Operating Voltage / Frequency on page 38).

EN	Int. freq. control setpoint 1			
DE	Frequenzregler Sollwert 1 int.			
CL1	{0}	{1o}	{1oc}	{2oc}
5500	✓	✓	✓	✓

**Frequency control: internal set point 1**

0.00 to 70.00 Hz

The internal generator frequency set point 1 is defined in this screen. This value is the reference for the frequency controller when performing isolated and/or no-load operations. Generally 50 Hz or 60 Hz will be the values entered into this parameter. It is possible to enter a different value here.

EN	Frequency setpoint 2 source			
DE	Frequenz Sollwert 2 Auswahl			
CL2	{0}	{1o}	{1oc}	{2oc}
5519	✓	✓	✓	✓

**Frequency control: frequency setpoint 2 source**

refer to text below

The Frequency setpoint 2 source may be selected from the available data sources. Use the "+" and "-" softkeys to scroll through the list of variables and confirm your selection with the Enter softkey. Even it is possible to select all data sources (refer to Appendix C on page 289), only the following data sources may be used (selecting a different data source may not allow the controller to operate properly):

- 05.01 Internal frequency setpoint 1  
Internal frequency control setpoint 1 (parameter 5500) is used as setpoint 2
- 05.02 Internal frequency setpoint 2  
Internal frequency control setpoint 2 (parameter 5501) is used as setpoint 2
- 05.03 Interface frequency setpoint  
The setpoint, which is transmitted via the interface, is used as setpoint
- 05.13 Discrete raise/lower frequency  
The setpoint from the discrete raise/lower frequency function is used as setpoint
- 06.01 Analog input 1  
Analog input 1 is used to control the setpoint
- 06.02 Analog input 2  
Analog input 2 is used to control the setpoint
- 06.03 Analog input 3  
Analog input 3 is used to control the setpoint

The frequency set point may be adjusted within the operating limits (refer to Configure Monitoring: Generator, Operating Voltage / Frequency on page 38).

EN	Int. freq. control setpoint 2			
DE	Frequenzregler Sollwert 2 int.			
CL1	{0}	{1o}	{1oc}	{2oc}
5501	✓	✓	✓	✓

**Frequency control: internal set point 2****0.00 to 70.00 Hz**

The internal generator frequency set point 2 is defined in this screen. This value is the reference for the frequency controller when performing isolated and/or no-load operations. Generally 50 Hz or 60 Hz will be the values entered into this parameter. It is possible that a different value may be entered here.

EN	Setpoint 2 freq.			
DE	Freq. Sollwert 2			
CL2	{0}	{1o}	{1oc}	{2oc}
12918	✓	✓	✓	✓

**Frequency control: frequency set point 2 activation***LogicsManager*

If this *LogicsManager* condition is TRUE, the frequency set point 2 will be enabled, i.e. the setting of parameter 5519 overrides the setting of parameter 5518. The *LogicsManager* and its default settings are explained on page 252 in Appendix B: "*LogicsManager*".

EN	Start frequency control level			
DE	Startwert			
CL1	{0}	{1o}	{1oc}	{2oc}
5516	✓	✓	✓	✓

**Frequency control: start value****00.00 to 70.00 Hz**

The frequency controller is activated when the monitored generator frequency has exceeded the value configured in this parameter. This prevents the easYgen from attempting to control the frequency while the engine is completing its start sequence.

EN	Start frequency control delay			
DE	Start Verzögerung			
CL1	{0}	{1o}	{1oc}	{2oc}
5517	✓	✓	✓	✓

**Frequency control: start delay****0 to 999 s**

The frequency controller is enabled after the configured time for this parameter expires.

EN	Freq. control set point ramp			
DE	Frequenzregler Rampe			
CL2	{0}	{1o}	{1oc}	{2oc}
5503	✓	✓	✓	✓

**Frequency control: set point ramp****0.10 to 60.00 Hz/s**

The different set point values are supplied to the controller via this ramp. The slope of the ramp is used to alter the rate at which the controller modifies the set point value. The faster the change in the set point is to be carried out, the greater the value entered here must be.



Frequency control droop					0.1 to 20.0 %	
EN	Frequenzregler Statik					
CL2	{0}	{1o}	{1oc}	{2oc}	If this control is to be operated on a generator in parallel with other generators and frequency control is enabled, a droop characteristic curve must be used. Each generator in the system will require the same value to be configured for the droop characteristic, so that when the system is stable the active power will be distributed proportionally among all generators in relation to their rated power.	
5504	✓	✓	✓	✓		
EN	Freq. droop act.				Frequency droop active	
DE	Freq.Statik akt.				LogicsManager	
CL2	{0}	{1o}	{1oc}	{2oc}	If this <i>LogicsManager</i> condition is TRUE, the frequency droop is enabled. The <i>LogicsManager</i> and its default settings are explained on page 252 in Appendix B: " <i>LogicsManager</i> ".	
12904	✓	✓	✓	✓		
<div>NOTE</div> <p>The active droop will also be sent to an ECU connected to the J1939 interface (CAN interface 2). This information is independent from the breaker states or active controller (frequency or power controller).</p>						
<div>Example</div> <p>Rated power: 500 kW</p> <p>Rated frequency set point: 50.0 Hz</p> <p>Droop 5.0 %</p> <p>Active power 0 kW = 0 % of rated power</p> <p>Frequency is adjusted to <math>(50.0 \text{ Hz} - [5.0\% * 0.0 * 50 \text{ Hz}]) = 50.0 \text{ Hz}</math>.</p> <p>Active power +250 kW = +50 % of rated power</p> <p>Frequency is adjusted to <math>(50.0\text{Hz} - [5 \% * 0.50 * 50 \text{ Hz}]) = 50.0 \text{ Hz} - 1.25 \text{ Hz} = 48.75 \text{ Hz}</math>.</p> <p>Active power +500 kW = +100 % of rated power</p> <p>Frequency is adjusted to <math>(50.0\text{Hz} - [5 \% * 1.00 * 50 \text{ Hz}]) = 50.0 \text{ Hz} - 2.5 \text{ Hz} = 47.50 \text{ Hz}</math>.</p>						
Slip frequency setpoint offset					Frequency control: slip frequency set point offset	
EN					0.00 to 0.50 Hz	
DE	Frequenz Offset Schlupf					
CL2	{0}	{1o}	{1oc}	{2oc}	This value is the offset for the synchronization to the busbar / utility. With this offset, the unit synchronizes with a positive slip.	
5502	✓	✓	✓	✓		
<div>Example:</div> <p>If this parameter is configured to 0.10 Hz and the busbar/mains frequency is 50.00 Hz, the synchronization set point is 50.10 Hz.</p>						
Phase matching gain					Frequency control: phase matching gain	
EN					1 to 99	
DE	Nullphasen Regelg. Verstärkg.					
CL2	{0}	{1o}	{1oc}	{2oc}	The phase matching gain multiplies the setting of the proportional gain (parameter 5510 on page 204) for phase matching control.	
5505	✓	✓	✓	✓		
Phase matching df-start					Frequency control: phase matching df start	
EN					0.02 to 0.25 Hz	
DE	Nullphasen Regelg. df-Start					
CL2	{0}	{1o}	{1oc}	{2oc}	Phase matching will only be enabled if the frequency difference between the systems to be synchronized is below the configured value.	
5506	✓	✓	✓	✓		
Freq. control initial state					Frequency control: initial state	
EN					0.0 to 100.0 %	
DE	Frequenzregler Grundstellung					
CL2	{0}	{1o}	{1oc}	{2oc}	The value entered for this parameter is the start reference point for the analog output to the speed controller. If the output to the speed control has been disabled, the output will act as a control position reference point.	
5508	✓	✓	✓	✓		

## Configure Application: Controller, Load Control

	Load Control			
	Wirkleistungsregler			
CL2	{0}	{1o}	{1oc}	{2oc}
5525	✓	✓	✓	✓

Load control: activation

PID analog / 3pos controller / Off

**PID analog** .. The generator load is controlled using an analog PID controller.

**3pos contr....** The generator load is controlled using a three-step controller.

**Off**..... Load control is not carried out.

	Proportional gain			
	Verstärkung			
CL2	{0}	{1o}	{1oc}	{2oc}
5513	✓	✓	✓	✓

Load control: proportional gain

0.01 to 100.00

① This parameter is only visible if load control (parameter 5525) is configured to "PID analog".

The proportional coefficient specifies the gain. By increasing the gain, the response is increased to permit larger corrections to the variable to be controlled. The farther out of tolerance the process is the larger the response action is to return the process to the tolerance band. If the gain is configured too high, the result is excessive overshoot/undershoot of the desired value.

	Integral gain			
	Integrierbeiwert			
CL2	{0}	{1o}	{1oc}	{2oc}
5514	✓	✓	✓	✓

Load control: integral gain

0.01 to 100.00

① This parameter is only visible if load control (parameter 5525) is configured to "PID analog".

The integral gain identifies the I part of the PID controller. The integral gain corrects for any offset (between set point and process variable) automatically over time by shifting the proportioning band. Reset automatically changes the output requirements until the process variable and the set point are the same. This parameter permits the user to adjust how quickly the reset attempts to correct for any offset. The integral gain constant must be greater than the derivative time constant. If the integral gain constant is too large, the engine will continually oscillate. If the integral gain constant is too small, the engine will take too long to settle at a steady state.

	Derivative ratio			
	Differenziervhältnis			
CL2	{0}	{1o}	{1oc}	{2oc}
5515	✓	✓	✓	✓

Load control: derivative ratio

0.01 to 100.00

① This parameter is only visible if load control (parameter 5525) is configured to "PID analog".

The derivative ratio identifies the D part of the PID controller. By increasing this parameter, the stability of the system is increased. The controller will attempt to slow down the action of the actuator in an attempt to prevent excessive overshoot or undershoot. Essentially this is the brake for the process. This portion of the PID loop operates anywhere within the range of the process unlike reset.

	Deadband			
	Unempfindlichkeit			
CL1	{0}	{1o}	{1oc}	{2oc}
5560	✓	✓	✓	✓

Load control: deadband

0.10 to 9.99 %

① This parameter is only visible if load control (parameter 5525) is configured to "3pos controller".

The generator load is controlled in such a manner, when paralleled with the mains, so that the monitored load does not deviate from the configured load set point by more than the value configured in this parameter without the controller issuing a raise/lower signal to the speed control. This prevents unneeded wear on the raise/lower relay contacts. The configured percentage for the dead band refers to the generator rated active power (parameter 1752 on page 29).

EN	Time pulse minimum				Load control: time pulse minimum	0.01 to 2.00 s
DE	Impulsdauer Minimum					
CL1	{0}	{1o}	{1oc}	{2oc}	① This parameter is only visible if load control (parameter 5525) is configured to "3pos controller".	
5561	✓	✓	✓	✓		

A minimum pulse on time must be configured here. The shortest possible pulse time should be configured to limit overshoot of the desired load reference point.

EN	Gain factor				Load control: gain factor	0.1 to 10.0
DE	Verstärkungsfaktor					
CL1	{0}	{1o}	{1oc}	{2oc}	① This parameter is only visible if load control (parameter 5525) is configured to "3pos controller".	
5562	✓	✓	✓	✓		

The gain factor Kp influences the operating time of the relays. By increasing the number configured in this parameter, the operating time of the relay will be increased in response to a deviation from the power reference. By increasing the gain, the response is increased to permit larger corrections to the variable to be controlled. The farther out of tolerance the process is the larger the response action is to return the process to the tolerance band. If the gain is configured too high, the result is excessive overshoot/undershoot of the desired value.

EN	Expand deadband factor				Load control: expand deadband factor	1.0 to 9.9
DE	Aufweitung Unempfindlichkeit					
CL1	{0}	{1o}	{1oc}	{2oc}	① This parameter is only visible if load control (parameter 5525) is configured to "3pos controller".	
5563	✓	✓	✓	✓		

If the measured generator load is within the deadband range (parameter 5560) and the configured delay expand deadband time (parameter 5564) expires, the deadband will be multiplied with the factor configured here.

EN	Delay expand deadband				Load control: delay expand deadband	1.0 to 9.9 s
DE	Verzögerung Aufweitung					
CL1	{0}	{1o}	{1oc}	{2oc}	① This parameter is only visible if load control (parameter 5525) is configured to "3pos controller".	
5564	✓	✓	✓	✓		

The measured generator load must be within the deadband range for the time configured here in order to multiply the deadband with the factor configured in parameter 5563.

EN	Load setpoint 1 source			
DE	Wirkl. Sollwert 1 Auswahl			
CL2 5539	{0}	{1o}	{1oc}	{2oc}
	✓	✓	✓	✓

**Load control: load setpoint 1 source**

refer to text below

The load setpoint 1 source may be selected from the available data sources. Use the "+" and "-" softkeys to scroll through the list of variables and confirm your selection with the Enter softkey. Even it is possible to select all data sources (refer to Appendix C on page 289), only the following data sources may be used (selecting a different data source may not allow the controller to operate properly):

- 05.04 Internal load setpoint 1  
Internal load control setpoint 1 (parameter 5520) is used as setpoint 1
- 05.05 Internal load setpoint 2  
Internal load control setpoint 2 (parameter 5527) is used as setpoint 1
- 05.06 Interface load setpoint  
The setpoint, which is transmitted via the interface, is used as setpoint
- 05.14 Discrete raise/lower load  
The setpoint from the discrete raise/lower load function is used as setpoint
- 06.01 Analog input 1  
Analog input 1 is used to control the setpoint
- 06.02 Analog input 2  
Analog input 2 is used to control the setpoint
- 06.03 Analog input 3  
Analog input 3 is used to control the setpoint

The load set point may be adjusted between 0 and the configured load control setpoint maximum (parameter 5523 on page 214).

EN	Load setpoint 1			
DE	Sollwert 1			
CL2 5526	{0}	{1o}	{1oc}	{2oc}
	✓	✓	✓	✓

**Load control: set point 1****Import / Export / Constant**

**Import**.....The value entered for the import level shall always be supplied by the utility. All load swings are absorbed by the generator(s) provided the load rating for the generator(s) is not exceeded. The generator will always start when an import power operation is enabled.

**Export**.....The value entered for the export level shall always be supplied to the utility. All load swings are absorbed by the generator(s) provided the load rating for the generator(s) is not exceeded. The generator will always start when an export power operation is enabled.

**Constant**.....The generator shall always supply the value entered for the constant power level. All load swings are absorbed by the utility. The generator will always start when a constant power (base load) operation is enabled.

EN	Int. load control setpoint 1			
DE	Lstg.regler Sollwert 1 intern			
CL1 5520	{0}	{1o}	{1oc}	{2oc}
	✓	✓	✓	✓

**Load control: internal load control set point 1****0 to 9,999.9 kW**

The load set point 1 is defined in this screen. This value is the reference for the load controller when performing parallel operations.

EN	Load setpoint 2 source			
DE	Wirkl. Sollwert 2 Auswahl			
CL2 5540	{0}	{1o}	{1oc}	{2oc}
	✓	✓	✓	✓

**Load control: load setpoint 2 source**

refer to text below

The load setpoint 2 source may be selected from the available data sources. Use the "+" and "-" softkeys to scroll through the list of variables and confirm your selection with the Enter softkey. Even it is possible to select all data sources (refer to Appendix C on page 289), only the following data sources may be used (selecting a different data source may not allow the controller to operate properly):

- 05.04 Internal load setpoint 1  
Internal load control setpoint 1 (parameter 5520) is used as setpoint 2
- 05.05 Internal load setpoint 2  
Internal load control setpoint 2 (parameter 5527) is used as setpoint 2
- 05.06 Interface load setpoint  
The setpoint, which is transmitted via the interface, is used as setpoint
- 05.14 Discrete raise/lower load  
The setpoint from the discrete raise/lower load function is used as setpoint
- 06.01 Analog input 1  
Analog input 1 is used to control the setpoint
- 06.02 Analog input 2  
Analog input 2 is used to control the setpoint
- 06.03 Analog input 3  
Analog input 3 is used to control the setpoint

The load set point may be adjusted between 0 and the configured load control setpoint maximum (parameter 5523 on page 214).

EN	Load setpoint 2			
DE	Sollwert 2			
CL2 5527	{0}	{1o}	{1oc}	{2oc}
	✓	✓	✓	✓

**Load control: set point 2****Import / Export / Constant**

**Import** ..... The value entered for the import level shall always be supplied by the utility. All load swings are absorbed by the generator(s) provided the load rating for the generator(s) is not exceeded. The generator will always start when an import power operation is enabled.

**Export**..... The value entered for the export level shall always be supplied to the utility. All load swings are absorbed by the generator(s) provided the load rating for the generator(s) is not exceeded. The generator will always start when an export power operation is enabled.

**Constant** ..... The generator shall always supply the value entered for the constant power level. All load swings are absorbed by the utility. The generator will always start when a constant power (base load) operation is enabled.

EN	Int. load control setpoint 2			
DE	Lstg.regler Sollwert 2 intern			
CL1 5521	{0}	{1o}	{1oc}	{2oc}
	✓	✓	✓	✓

**Load control: internal load control set point 2****0 to 9,999.9 kW**

The load set point 2 is defined in this screen. This value is the reference for the load controller when performing parallel operations.

EN	Setp. 2 load			
DE	Lstg.regler Soll2			
CL2 12919	{0}	{1o}	{1oc}	{2oc}
	✓	✓	✓	✓

**Load control: set point 2 request****LogicsManager**

If this *LogicsManager* condition is TRUE, the load set point 2 will be enabled, i.e. the setting of parameter 5540 overrides the setting of parameter 5539. The *LogicsManager* and its default settings are explained on page 252 in Appendix B: "*LogicsManager*".

EN	Load control setpoint ramp			
DE	Leistungsregler Rampe			
CL2 5522	{0}	{1o}	{1oc}	{2oc}
	✓	✓	✓	✓

**Load control: set point ramp** **0.10 to 100.0 %/s**

The different set point values are supplied to the controller via this ramp. The slope of the ramp is used to alter the rate at which the controller modifies the set point value. The faster the change in the set point is to be carried out, the greater the value entered here must be.

**Note:** This ramp is also used in isolated operation for loading or unloading an additional genset. An excessive oscillation may occur if the ramp is configured too high.

EN	Load control setpoint maximum			
DE	Leistungsregler Sollwert Maximum			
CL2 5523	{0}	{1o}	{1oc}	{2oc}
	✓	✓	✓	✓

**Load control: set point maximum** **0 to 150 %**

If the maximum generator load is to be limited, a percentage based on the rated generator power (parameter 1752 on page 29) must be entered here. The controller adjusts the generator in such a manner that this value is not exceeded. This parameter limits the set point of the load controller when the generator is in a mains parallel operation.

EN	Minimum gen. import/export			
DE	Min. Gen.leistg Übergabereg.			
CL2 5524	{0}	{1o}	{1oc}	{2oc}
	✓	✓	✓	✓

**Load control: minimum generator load on import/export** **0 to 100 %**

If the minimum generator load is to be limited, a percentage based on the rated generator power (parameter 1752 on page 29) must be entered here. The controller will not permit the load to drop below the configured load limit value. This parameter is only functional when the generator is in a mains parallel operation.

EN	Warm up load limit			
DE	Aufwärmleistungs- Limit			
CL2 5532	{0}	{1o}	{1oc}	{2oc}
	✓	✓	✓	✓

**Load control: warm up load limit** **0 to 100 %**

The maximum load is limited to this percentage of the generator rated power (parameter 1752 on page 29) until the warm up time (parameter 5534 on page 214) has expired or the warm up temperature threshold (parameter 5546 on page 215) has been exceeded.

EN	Warm up time			
DE	Aufwärmzeit			
CL2 5534	{0}	{1o}	{1oc}	{2oc}
	✓	✓	✓	✓

**Power control: warm up time** **0 to 9999 s**

ⓘ This parameter is only effective if Warm up mode (parameter 5533) is configured to "Time controlled".

The maximum load is limited to the value configured in parameter 5532 on page 214 for the time configured here.

EN	Warm up mode			
DE	Aufwärmmodus			
CL2 5533	{0}	{1o}	{1oc}	{2oc}
	✓	✓	✓	✓

**Load control: warm up mode** **Analog val contr / Time controlled**

**Analog val contr** ..The maximum load is limited to the value configured in parameter 5532 until the temperature measured according to the setting in parameter 5538 has exceeded the threshold configured in parameter 5546.

**Time controlled** ...The maximum load is limited to the value configured in parameter 5532 until the time configured in parameter 5534 has expired.

EN	Engine warm up criterium				
DE	Teillast Warmlauf Kriterium				
CL2	{0}	{1o}	{1oc}	{2oc}	
5538	✓	✓	✓	✓	

**Load control: warm up load criterion**

refer to text below

① This parameter is only effective if Warm up mode (parameter 5533) is configured to "Analog val contr".

The engine warm up criterion may be selected from the available data sources. Use the "+" and "-" softkeys to scroll through the list of variables and confirm your selection with the Enter softkey. Even it is possible to select all data sources (refer to Appendix C on page 289), only the following data source may be used (selecting a different data source may not allow the controller to operate properly):

- 06.01 Analog input 1  
Analog input 1 is used to control the setpoint
- 06.02 Analog input 2  
Analog input 2 is used to control the setpoint
- 06.03 Analog input 3  
Analog input 3 is used to control the setpoint

EN	Warm up threshold				
DE	Aufwärm Grenzwert				
CL2	{0}	{1o}	{1oc}	{2oc}	
5546	✓	✓	✓	✓	

**Load control: warm up threshold**

0 to 1000 °C

① This parameter is only effective if Warm up mode (parameter 5533) is configured to "Analog val contr".

The maximum load is limited to the value configured in parameter 5532 until the temperature has exceeded the threshold configured here.

## Configure Application: Controller, Voltage Control

EN	Voltage Control					Voltage control: activation	PID analog / 3pos controller / Off
	Spannungsregler						
CL2	{0}	{1o}	{1oc}	{2oc}		PID analog ...The voltage is controlled using an analog PID controller. 3pos contr. ...The voltage is controlled using a three-step controller	
5607	✓	✓	✓	✓			

5607 ✓ ✓ ✓ ✓

DE	EN	Proportional gain					Voltage control: proportional gain	0.01 to 100.00
		Verstärkung						
CL2	{0}	{1o}	{1oc}	{2oc}		① This parameter is only visible if voltage control (parameter 5607) is configured to "PID analog".		
5610	✓	✓	✓	✓				

5610 ✓ ✓ ✓ ✓

The proportional coefficient specifies the gain. By increasing the gain, the response is increased to permit larger corrections to the variable to be controlled. The farther out of tolerance the process is the larger the response action is to return the process to the tolerance band. If the gain is configured too high, the result is excessive overshoot/undershoot of the desired value.

DE	EN	Integral gain				Voltage control: integral gain	0.01 to 100.00
		Integrierbeiwert					
	CL2	{0}	{1o}	{1oc}	{2oc}	① This parameter is only visible if voltage control (parameter 5607) is configured to "PID analog".	
	5611	✓	✓	✓	✓		

5611 ✓ ✓ ✓ ✓

The integral gain identifies the I part of the PID controller. The integral gain corrects for any offset (between set point and process variable) automatically over time by shifting the proportioning band. Reset automatically changes the output requirements until the process variable and the set point are the same. This parameter permits the user to adjust how quickly the reset attempts to correct for any offset. The integral gain constant must be greater than the derivative time constant. If the integral gain constant is too large, the engine will continually oscillate. If the integral gain constant is too small, the engine will take too long to settle at a steady state.

DE	Derivative ratio				Voltage control: derivative ratio	0.01 to 100.00
	Differenzierverhältnis					
EN						
CL2	{0}	{1o}	{1oc}	{2oc}	ⓘ This parameter is only visible if voltage control (parameter 5607) is configured to "PID analog".	
5612	✓	✓	✓	✓		

5612 ✓ ✓ ✓ ✓

The derivative ratio identifies the D part of the PID controller. By increasing this parameter, the stability of the system is increased. The controller will attempt to slow down the action of the actuator in an attempt to prevent excessive overshoot or undershoot. Essentially this is the brake for the process. This portion of the PID loop operates anywhere within the range of the process unlike reset.



EN	Deadband			
DE	Unempfindlichkeit			
CL1 5650	{0}	{1o}	{1oc}	{2oc}
	✓	✓	✓	✓

## Voltage control: deadband

0.10 to 9.99 %

① This parameter is only visible if voltage control (parameter 5607) is configured to "3pos controller".

**Isolated operation:** The generator voltage is controlled in such a manner that the measured voltage does not deviate from the configured set point by more than the value configured in this parameter without the controller issuing a voltage raise/lower signal to the voltage regulator. This prevents unneeded wear on the voltage bias output control or the raise/lower relay contacts.

**Synchronization:** The generator voltage is controlled in such a manner that the measured voltage does not deviate from the monitored reference (mains or busbar) voltage by more than the value configured in this parameter without the controller issuing a voltage raise/lower signal to the voltage regulator. This prevents unneeded wear on the voltage bias output control or the raise/lower relay contacts. The value configured for this parameter must be less than the value configured for the dV max (maximum voltage differential) for synchronization (parameters 5700 or 5710).

EN	Time pulse minimum			
DE	Impulsdauer Minimum			
CL1 5651	{0}	{1o}	{1oc}	{2oc}
	✓	✓	✓	✓

## Voltage control: time pulse minimum

0.01 to 2.00 s

① This parameter is only visible if voltage control (parameter 5607) is configured to "3pos controller".

A minimum pulse on time must be configured here. The shortest possible pulse time should be configured to limit overshoot of the desired voltage reference point.

EN	Gain factor			
DE	Verstärkungsfaktor			
CL1 5652	{0}	{1o}	{1oc}	{2oc}
	✓	✓	✓	✓

## Voltage control: gain factor

0.1 to 10.0

① This parameter is only visible if voltage control (parameter 5607) is configured to "3pos controller".

The gain factor Kp influences the operating time of the relays. By increasing the number configured in this parameter, the operating time of the relay will be increased in response to a deviation from the voltage reference. By increasing the gain, the response is increased to permit larger corrections to the variable to be controlled. The farther out of tolerance the process is the larger the response action is to return the process to the tolerance band. If the gain is configured too high, the result is excessive overshoot/undershoot of the desired value.

EN	Expand deadband factor			
DE	Aufweitung Unempfindlichkeit			
CL1 5653	{0}	{1o}	{1oc}	{2oc}
	✓	✓	✓	✓

## Voltage control: expand deadband factor

1.0 to 9.9

① This parameter is only visible if voltage control (parameter 5607) is configured to "3pos controller".

If the measured generator voltage is within the deadband range (parameter 5650) and the configured delay expand deadband time (parameter 5654) expires, the deadband will be multiplied with the factor configured here.

EN	Delay expand deadband			
DE	Verzögerung Aufweitung			
CL1 5654	{0}	{1o}	{1oc}	{2oc}
	✓	✓	✓	✓

## Voltage control: delay expand deadband

1.0 to 9.9 s

① This parameter is only visible if voltage control (parameter 5607) is configured to "3pos controller".

The measured generator voltage must be within the deadband range for the time configured here in order to multiply the deadband with the factor configured in parameter 5653.

EN	Voltage setpoint 1 source			
DE	Spannungs Sollwert 1 Auswahl			
CL2	{0}	{1o}	{1oc}	{2oc}
5618	✓	✓	✓	✓

**Voltage control: load setpoint 1 source**

refer to text below

The voltage setpoint 1 source may be selected from the available data sources. Use the "+" and "-" softkeys to scroll through the list of variables and confirm your selection with the Enter softkey. Even it is possible to select all data sources (refer to Appendix C on page 289), only the following data sources may be used (selecting a different data source may not allow the controller to operate properly):

- 05.07 Internal voltage setpoint 1  
Internal voltage control setpoint 1 (parameter 5600) is used as setpoint 1
- 05.08 Internal voltage setpoint 2  
Internal voltage control setpoint 2 (parameter 5601) is used as setpoint 1
- 05.09 Interface voltage setpoint  
The setpoint, which is transmitted via the interface, is used as setpoint
- 05.15 Discrete raise/lower voltage  
The setpoint from the discrete raise/lower voltage function is used as setpoint
- 06.01 Analog input 1  
Analog input 1 is used to control the setpoint
- 06.02 Analog input 2  
Analog input 2 is used to control the setpoint
- 06.03 Analog input 3  
Analog input 3 is used to control the setpoint

The voltage set point may be adjusted within the configured operating limits (refer to Configure Monitoring: Generator, Operating Voltage / Frequency on page 38).

EN	Int.voltage control setpoint 1			
DE	Spg.regler Sollwert 1 intern			
CL1	{0}	{1o}	{1oc}	{2oc}
5600	✓	✓	✓	✓

**Voltage control: internal voltage set point 1**

50 to 650,000 V

The internal generator voltage set point 1 is defined in this screen. This value is the reference for the voltage controller when performing isolated and/or no-load operations.

EN	Voltage setpoint 2 source			
DE	Spannungs Sollwert 2 Auswahl			
CL2	{0}	{1o}	{1oc}	{2oc}
5619	✓	✓	✓	✓

**Voltage control: load setpoint 2 source**

refer to text below

The voltage setpoint 2 source may be selected from the available data sources. Use the "+" and "-" softkeys to scroll through the list of variables and confirm your selection with the Enter softkey. Even it is possible to select all data sources (refer to Appendix C on page 289), only the following data sources may be used (selecting a different data source may not allow the controller to operate properly):

- 05.07 Internal voltage setpoint 1  
Internal voltage control setpoint 1 (parameter 5600) is used as setpoint 2
- 05.08 Internal voltage setpoint 2  
Internal voltage control setpoint 2 (parameter 5601) is used as setpoint 2
- 05.09 Interface voltage setpoint  
The setpoint, which is transmitted via the interface, is used as setpoint
- 05.15 Discrete raise/lower voltage  
The setpoint from the discrete raise/lower voltage function is used as setpoint
- 06.01 Analog input 1  
Analog input 1 is used to control the setpoint
- 06.02 Analog input 2  
Analog input 2 is used to control the setpoint
- 06.03 Analog input 3  
Analog input 3 is used to control the setpoint

The voltage set point may be adjusted within the configured operating limits (refer to Configure Monitoring: Generator, Operating Voltage / Frequency on page 38).

EN	Int.voltage control setpoint 2				
DE	Spg.regler Sollwert 2 intern				
CL1	{0}	{1o}	{1oc}	{2oc}	
5601	✓	✓	✓	✓	

**Voltage control: internal voltage set point 2** 50 to 650,000 V

The internal generator voltage set point 2 is defined in this screen. This value is the reference for the voltage controller when performing isolated and/or no-load operations.

EN	Setp. 2 voltage				
DE	Spannung Einstellpunkt 2				
CL2	{0}	{1o}	{1oc}	{2oc}	
12920	✓	✓	✓	✓	

**Voltage set point 2 request** *LogicsManager*

If this *LogicsManager* condition is TRUE, the voltage set point 2 will be enabled, i.e. the setting of parameter 5619 overrides the setting of parameter 5618. The *LogicsManager* and its default settings are explained on page 252 in Appendix B: "*LogicsManager*".

EN	Start value				
DE	Startwert				
CL1	{0}	{1o}	{1oc}	{2oc}	
5616	✓	✓	✓	✓	

**Voltage control: start value** 0 to 100 %

① This value refers to the generator voltage set point (parameter 5600 or 5601 on page 219).

The voltage controller is activated when the monitored generator voltage has exceeded the value configured in this parameter. This prevents the easYgen from attempting to control the voltage while the engine is completing its start sequence.

EN	Start delay				
DE	Start Verzögerung				
CL1	{0}	{1o}	{1oc}	{2oc}	
5617	✓	✓	✓	✓	

**Voltage control: start delay** 0 to 999 s

The voltage controller is enabled after the configured time for this parameter expires.

EN	Voltage control set point ramp				Voltage control: set point ramp	1.00 to 300.00 %/s
DE	Spannungsregler Rampe					
CL2	{0}	{1o}	{1oc}	{2oc}	The different set point values are supplied to the controller via this ramp. The slope of the ramp is used to alter the rate at which the controller modifies the set point value. The faster the change in the set point is to be carried out, the greater the value entered here must be.	
5603	✓	✓	✓	✓		

EN	Voltage control droop				Voltage control: droop	0.0 to 20.0 %
DE	Spannungsregler Statik					
CL2	{0}	{1o}	{1oc}	{2oc}	If this control is to be operated on a generator in parallel with other generators and voltage control is enabled, a droop characteristic curve must be used. Each generator in the system will require the same value to be configured for the droop characteristic, so that when the system is stable the reactive power will be distributed proportionally among all generators in relation to their rated reactive power.	
5604	✓	✓	✓	✓		

EN	Volt. droop act.				Voltage droop active	<i>LogicsManager</i>
DE	Spannungs Statik aktiv					
CL2	{0}	{1o}	{1oc}	{2oc}	If this <i>LogicsManager</i> condition is TRUE, the voltage droop is enabled. The <i>LogicsManager</i> and its default settings are explained on page 252 in Appendix B: " <i>LogicsManager</i> ".	
12905	✓	✓	✓	✓		

**Example**

Rated reactive power: 400 kvar  
 Rated voltage set point: 410 V  
 Droop 5.0 %

Reactive power 0 kvar = 0 % of rated power  
 Voltage is adjusted to  $(410 \text{ V} - [5.0\% * 0.0 * 410 \text{ V}]) = 410 \text{ V}$ .

Reactive power 400 kvar = 100 % of rated reactive power  
 Voltage is adjusted to  $(410 \text{ V} - [5.0\% * 1.0 * 410 \text{ V}]) = 410 \text{ V} - 20.5 \text{ V} = 389.5 \text{ V}$ .

EN	Voltage control initial state				Voltage control: initial state	0.0 to 100.0 %
DE	Spannungsregler Grundstellung					
CL2	{0}	{1o}	{1oc}	{2oc}	The value entered for this parameter is the start reference point for the analog output to the voltage controller. If the output to the voltage control has been disabled, the output will act as a control position reference point.	
5608	✓	✓	✓	✓		

## Configure Application: Controller, Power Factor Control

Power factor Control					Power factor control: activation	PID analog / 3pos controller / Off
Leistungsfaktor-Regler						
CL2	{0}	{1o}	{1oc}	{2oc}	<b>PID analog</b> .. The power factor is controlled using an analog PID controller. <b>3pos contr....</b> The power factor is controlled using a three-step controller. <b>Off</b> ..... Power factor control is not carried out.	
5625	✓	✓	✓	✓		
Proportional gain					Power factor control: proportional gain	0.01 to 100.00
Verstärkung						
CL2	{0}	{1o}	{1oc}	{2oc}	ⓘ This parameter is only visible if power factor control (parameter 5625) is configured to "PID analog".	
5613	✓	✓	✓	✓		
					The proportional coefficient specifies the gain. By increasing the gain, the response is increased to permit larger corrections to the variable to be controlled. The farther out of tolerance the process is the larger the response action is to return the process to the tolerance band. If the gain is configured too high, the result is excessive overshoot/undershoot of the desired value.	
Integral gain					Power factor control: integral gain	0.01 to 100.00
Integrierbeiwert						
CL2	{0}	{1o}	{1oc}	{2oc}	ⓘ This parameter is only visible if power factor control (parameter 5625) is configured to "PID analog".	
5614	✓	✓	✓	✓		
					The integral gain identifies the I part of the PID controller. The integral gain corrects for any offset (between set point and process variable) automatically over time by shifting the proportioning band. Reset automatically changes the output requirements until the process variable and the set point are the same. This parameter permits the user to adjust how quickly the reset attempts to correct for any offset. The integral gain constant must be greater than the derivative time constant. If the integral gain constant is too large, the engine will continually oscillate. If the integral gain constant is too small, the engine will take too long to settle at a steady state.	
Derivative ratio					Power factor control: derivative ratio	0.01 to 100.00
Differenziervhältnis						
CL2	{0}	{1o}	{1oc}	{2oc}	ⓘ This parameter is only visible if power factor control (parameter 5625) is configured to "PID analog".	
5615	✓	✓	✓	✓		
					The derivative ratio identifies the D part of the PID controller. By increasing this parameter, the stability of the system is increased. The controller will attempt to slow down the action of the actuator in an attempt to prevent excessive overshoot or undershoot. Essentially this is the brake for the process. This portion of the PID loop operates anywhere within the range of the process unlike reset.	
Deadband					Power factor control: deadband	0.10 to 9.99 %
Unempfindlichkeit						
CL1	{0}	{1o}	{1oc}	{2oc}	ⓘ This parameter is only visible if power factor control (parameter 5625) is configured to "3pos controller".	
5660	✓	✓	✓	✓		

EN	Time pulse minimum			
DE	Impulsdauer Minimum			
CL1 5661	{0}	{1o}	{1oc}	{2oc}
	✓	✓	✓	✓

**Power factor control: time pulse minimum****0.01 to 2.00 s**

① This parameter is only visible if power factor control (parameter 5625) is configured to "3pos controller".

A minimum pulse on time must be configured here. The shortest possible pulse time should be configured to limit overshoot of the desired power factor reference point.

EN	Gain factor			
DE	Verstärkungsfaktor			
CL1 5662	{0}	{1o}	{1oc}	{2oc}
	✓	✓	✓	✓

**Power factor control: gain factor****0.1 to 10.0**

① This parameter is only visible if power factor control (parameter 5625) is configured to "3pos controller".

The gain factor  $K_p$  influences the operating time of the relays. By increasing the number configured in this parameter, the operating time of the relay will be increased in response to a deviation from the power factor reference. By increasing the gain, the response is increased to permit larger corrections to the variable to be controlled. The farther out of tolerance the process is the larger the response action is to return the process to the tolerance band. If the gain is configured too high, the result is excessive overshoot/undershoot of the desired value.

EN	Expand deadband factor			
DE	Aufweitung Unempfindlichkeit			
CL1 5663	{0}	{1o}	{1oc}	{2oc}
	✓	✓	✓	✓

**Power factor control: expand deadband factor****1.0 to 9.9**

① This parameter is only visible if power factor control (parameter 5625) is configured to "3pos controller".

If the measured generator power factor is within the deadband range (parameter 5660) and the configured delay expand deadband time (parameter 5664) expires, the deadband will be multiplied with the factor configured here.

EN	Delay expand deadband			
DE	Verzögerung Aufweitung			
CL1 5664	{0}	{1o}	{1oc}	{2oc}
	✓	✓	✓	✓

**Power factor control: delay expand deadband****1.0 to 9.9 s**

① This parameter is only visible if power factor control (parameter 5625) is configured to "3pos controller".

The measured generator power factor must be within the deadband range for the time configured here in order to multiply the deadband with the factor configured in parameter 5663.

EN	Power Factor setpoint 1 source			
DE	Cos.phi Sollwert 1 Auswahl			
CL2	{0}	{1o}	{1oc}	{2oc}
5638	✓	✓	✓	✓

**Power factor control: power factor setpoint 1 source** refer to text below

The power factor setpoint 1 source can be selected from the available data sources. Use the "+" and "-" softkeys to scroll through the list of variables and confirm your selection with the Enter softkey. Even it is possible to select all data sources (refer to Appendix C on page 289), only the following data sources may be used (selecting a different data source may not allow the controller to operate properly):

- 05.10 Internal power factor setpoint 1  
Internal power factor control setpoint 1 (parameter 5620) is used as setpoint 1
- 05.11 Internal power factor setpoint 2  
Internal power factor control setpoint 2 (parameter 5621) is used as setpoint 1
- 05.12 Interface power factor setpoint  
The setpoint, which is transmitted via the interface, is used as setpoint
- 05.16 Discrete raise/lower power factor  
The setpoint from the discrete raise/lower power factor function is used as setpoint
- 06.01 Analog input 1  
Analog input 1 is used to control the setpoint
- 06.02 Analog input 2  
Analog input 2 is used to control the setpoint
- 06.03 Analog input 3  
Analog input 3 is used to control the setpoint

The power factor set point may be adjusted between 0.71 leading and 0.71 lagging.

EN	Int: power factor setpoint 1			
DE	Cos.phi Sollwert 1 intern			
CL1	{0}	{1o}	{1oc}	{2oc}
5620	✓	✓	✓	✓

**Power factor control: internal power factor set point 1** -0.710 to +0.710

The desired power factor may be configured here so that the reactive power is regulated in the system. The designations "-" and "+" stand for inductive/lagging (generator overexcited) and capacitive/leading (generator underexcited) reactive power. This set point is active only in mains parallel operation.

EN	Power Factor setpoint 2 source			
DE	Cos.phi Sollwert 2 Auswahl			
CL2 5639	{0}	{1o}	{1oc}	{2oc}
	✓	✓	✓	✓

**Power factor control: power factor setpoint 2 source**

refer to text below

The power factor setpoint 2 source can be selected from the available data sources. Use the "+" and "-" softkeys to scroll through the list of variables and confirm your selection with the Enter softkey. Even it is possible to select all data sources (refer to Appendix C on page 289), only the following data sources may be used (selecting a different data source may not allow the controller to operate properly):

- 05.10 Internal power factor setpoint 1  
Internal power factor control setpoint 1 (parameter 5620) is used as setpoint 2
- 05.11 Internal power factor setpoint 2  
Internal power factor control setpoint 2 (parameter 5621) is used as setpoint 2
- 05.12 Interface power factor setpoint  
The setpoint, which is transmitted via the interface, is used as setpoint
- 05.16 Discrete raise/lower power factor  
The setpoint from the discrete raise/lower power factor function is used as setpoint
- 06.01 Analog input 1  
Analog input 1 is used to control the setpoint
- 06.02 Analog input 2  
Analog input 2 is used to control the setpoint
- 06.03 Analog input 3  
Analog input 3 is used to control the setpoint

The power factor set point may be adjusted between 0.71 leading and 0.71 lagging.

EN	Int: power factor setpoint 2			
DE	Cos.phi Sollwert 2 intern			
CL1 5621	{0}	{1o}	{1oc}	{2oc}
	✓	✓	✓	✓

**Power factor control: internal power factor set point 2**

-0.710 to +0.710

The desired power factor may be configured here so that the reactive power is regulated in the system. The designations "-" and "+" stand for inductive/lagging (generator overexcited) and capacitive/leading (generator underexcited) reactive power. This set point is active only in mains parallel operation.

EN	Setp. 2 pwr.factor			
DE	Cos.phi Soll 2			
CL2 12921	{0}	{1o}	{1oc}	{2oc}
	✓	✓	✓	✓

**Reactive power set point 2 request***LogicsManager*

If this *LogicsManager* condition is TRUE, the power factor set point 2 will be enabled, i.e. the setting of parameter 5639 overrides the setting of parameter 5638. The *LogicsManager* and its default settings are explained on page 252 in Appendix B: "*LogicsManager*".

EN	React. pwr. ctrl setpoint ramp			
DE	Blindlsg.regler Rampe			
CL2 5622	{0}	{1o}	{1oc}	{2oc}
	✓	✓	✓	✓

**Power factor control: reactive power ramp**

0.01 to 100.00 %/s

The different set point values are supplied to the controller via this ramp. The slope of the ramp is used to alter the rate at which the controller modifies the set point value. The faster the change in the set point is to be carried out, the greater the value entered here must be.

**Note:** This ramp is also used in isolated operation for loading or unloading an additional genset. An excessive oscillation may occur if the ramp is configured too high.



## Configure Application: Controller, Load Share Control

The easYgen performs proportional load and/or var sharing. This means each generator will share the load at the same percentage level of the generator rated power when paralleled against the mains, in an isolated operation with multiple generators paralleled, or when re-synchronizing the common bus to the mains. Proportional load/var sharing will not be performed when the easYgen has the GCB closed and is in the constant power/base load mode. A system can consist out of 32 gensets which are controlled by a single easYgen.

### ***Mains parallel operation with mains interchange real power control (import/export)***

The easYgen controllers maintain the real load level on the individually controlled generators at a level so that the real power set point at the mains interchange remains at the configured set point. The real power set point for the mains interchange must be configured identically for each easYgen.

The easYgen controller communicates with other controls in the system via a CAN bus. This enables the controllers to adjust the real power generated by the generator while remaining within the rated power of the generator. A smaller generator will contribute less real power as compared to a large generator, but they will both be utilized to the same capacity factor. An example of this would be a 100 kW generator with a configured 1000 kW generator and a mains interchange of 825 kW. The 100 kW generator would contribute 75 kW and the 1000 kW generator would contribute 750 kW or both generators would be at 75% of their rated capacity.

Reactive load sharing is not performed when operating in parallel with the mains. The reactive power control will be defined by the configured power factor set point of the individual controllers. If the power factor controller set point is configured as +0.950, the easYgen will proportionally share the real load with all generators in parallel with the mains while controlling the reactive power at a 0.95 inductive (lagging) power factor regardless of the what power factor the mains is operating at.

The parameter "Active power Load share factor" (parameter 5530) can be used now to define the priority of the real power sharing reference variable (real power at interchange). A higher configured percentage influences the control more towards maintaining the real power set point for the interchange. A lower configured percentage influences the control more towards maintaining real power sharing between units.

The parameter "React. power Load share factor" (parameter 5630) has no influence here.

### ***Isolated operation in parallel***

The easYgen controllers maintain the voltage and frequency of the individually controlled generators at a constant level. This makes it imperative that the voltage and frequency set points are configured identically for each easYgen.

The easYgen controller communicates with other controls in the system via a CAN bus. This enables the controllers to adjust the real power generated by the generator while remaining within the rated power of the generator. A smaller generator will contribute less real power as compared to a large generator, but they will both be utilized to the same capacity factor. An example of this would be a 100 kW generator and a 1000 kW generator with an 825 kW load. The 100 kW generator would contribute 75 kW and the 1000 kW generator would contribute 750 kW or both generators would be at 75% of their rated capacity.

The reactive power will be shared proportionally among all generators involved.

The parameter "Active power Load share factor" (parameter 5530) can be used to define the priority of the reference variable for real power sharing. A higher configured percentage influences the control more towards frequency control. A lower configured percentage influences the control more towards real power sharing. The parameter "React. power Load share factor" (parameter 5630) can be used now to define the priority of the reference variable for reactive power sharing. A higher configured percentage influences the control more towards voltage control. A lower configured percentage influences the control more towards reactive power sharing.

### ***Re-synchronization of the busbar to the mains***

The system is operating as an isolated system, for synchronization to be performed the voltage and frequency differentials of the mains and bus must be within the configured windows.

The bus frequency reference point is dictated by the monitored mains frequency and the configured frequency differential (+ slip frequency setpoint offset (parameter 5502 on page 209)).

Example: If + slip frequency setpoint offset = 0.2 Hz, the easYgen will calculate the bus frequency reference point as:

$$[\text{monitored mains frequency}] + [\text{slip frequency setpoint offset}] = \text{bus frequency reference point}$$

A practical example of this would be:

The monitored mains frequency is 60 Hz

Configured + slip frequency setpoint offset = 0.2 Hz

$$[60 \text{ Hz}] + [0.2 \text{ Hz}] = 60.2 \text{ Hz bus frequency reference point}$$

The differential voltage is configured as a window. The monitored voltage from the potential transformers secondary for the mains and the bus must be within the configured voltage differential limit in relation to the rated voltage configuration.

This means that the voltage window dV [%] is in relation to the rated voltage configuration [%].

When the monitored bus frequency and voltage are within the configured differential limits, the "Command: close MCB" relay will enable, closing the MCB, and the system will be paralleled to the mains.

### ***Prerequisites***

All easYgen controllers connected to the system must have rated system frequencies and breaker logic configured identically and the parameter "Active power load share" (parameter 5531) or "Reactive power load share" (parameter 5631) must be enabled.

### ***Description of the load-share interface***

The easYgen utilizes a peer relationship between units to control the system. This permits for parallel applications of up to 32 generators.



#### **NOTE**

**Refer to the Interface section of the Installation Manual 37223 for information about the CAN bus connection.**

### ***Diagram of load/var sharing via the CAN bus***

Refer to Figure 3-28 on page 227 for this diagram. The parameter "Active load sharing factor" determines if and how a generator performs real power or frequency control when paralleled with other generators in an isolated operation. This parameter is defined as a percentage. In the figure below 10 % means increased real power control and 99 % increased frequency control. This parameter must be configured individually for each generator.

In the illustrated control system, it must be noted that each control calculates the mean utilization factor of all controls from the data transmitted via the CAN bus and then compares this with its own utilization factor. The utilization factor is compared with the reference variable and results in a new reference variable set point. Frequency and real power control are carried out simultaneously in these controls (corresponding to the reference variable).

Frequency control is carried out via the measured voltage/frequency of the voltage system. The MPU is used merely for monitoring functions, or is available as a control value to the secondary controller.

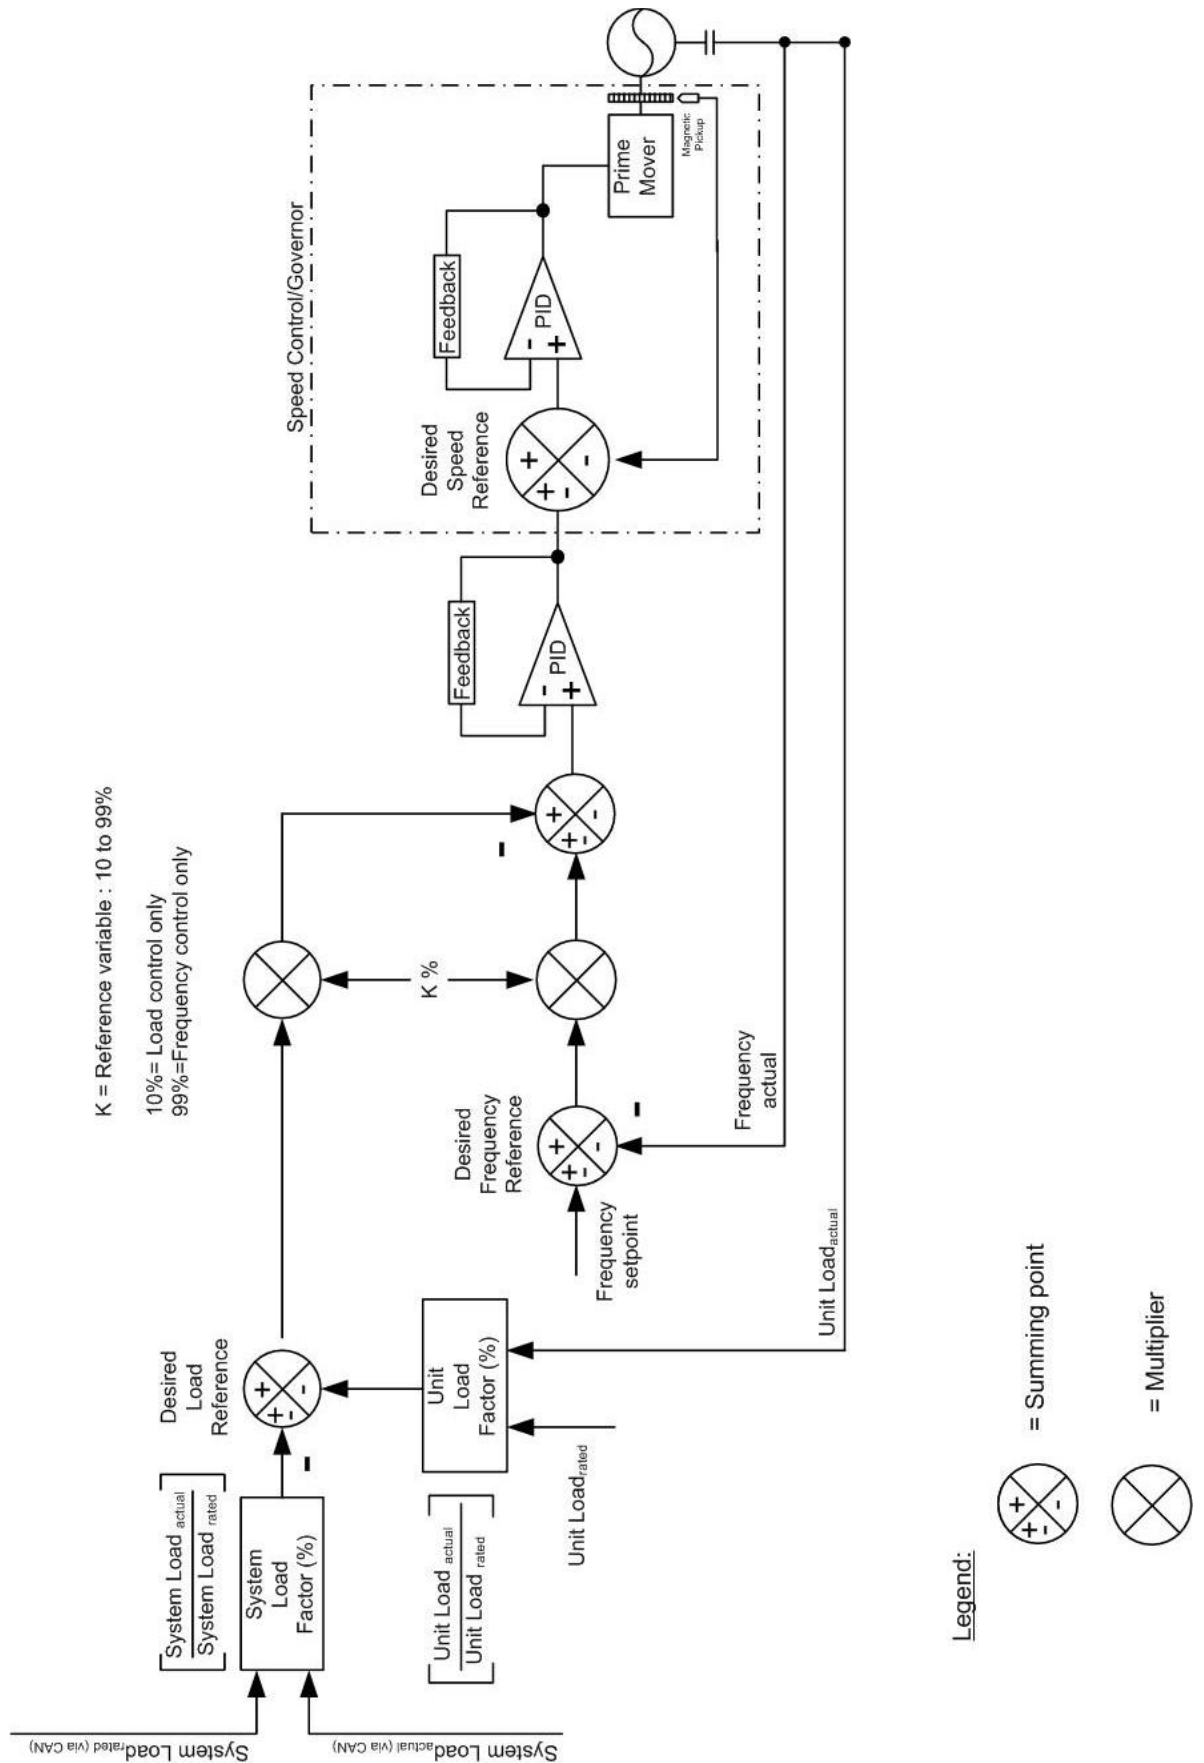


Figure 3-28: CAN bus load/var sharing, diagram

EN	Active power load share			
DE	Wirkleistungsverteilung			
CL2	{0}	{10}	{100}	{200}
5531	✓	✓	✓	✓

**Load share control: active power LS activation****On / Off**

**On** ..... Active power load share is enabled. When multiple generators are operating in parallel, the real power is shared proportionally.

**Off** ..... Active power load share is disabled

EN	Active power load share factor			
DE	Wirkl.verteilg. Führungsgr.			
CL2	{0}	{10}	{100}	{200}
5530	✓	✓	✓	✓

**Load share control: active power load share factor****10 to 99 %**

It is possible to change the emphasis placed on maintaining control variables. By increasing or decreasing the percentage value in this parameter, the control places a higher priority on maintaining the primary or secondary control reference variable. If the value for this parameter is configured higher, maintaining the primary control variable has a higher priority. If the value for this parameter is configured lower, maintaining the secondary control variable has a higher priority.

## Primary control variable

- Isolated operation = frequency maintained
- Mains parallel operation = real power level at the mains interchange point maintained

## Secondary control variable

- Isolated operation = real power sharing with other generators maintained
- Mains parallel operation = real power sharing with other generators maintained

The smaller this factor the higher the priority to equally share the load among all generators.

If 99 % is configured here, only the primary control reference variable is considered. If 10 % is configured here, only the secondary control reference variable is considered.

EN	Reactive power load share			
DE	Blindleistungsverteilung			
CL2	{0}	{10}	{100}	{200}
5631	✓	✓	✓	✓

**Load share control: reactive power LS activation****On / Off**

**On** ..... Reactive power load share is enabled. When multiple generators are operating in parallel, the reactive power is shared proportionally.

**Off** ..... Reactive power load share is disabled

EN	React. power load share factor			
DE	Blindl.verteilg. Führungsgr.			
CL2	{0}	{10}	{100}	{200}
5630	✓	✓	✓	✓

**Load share control: reactive power load share factor****10 to 99 %**

It is possible to change the emphasis placed on maintaining control variables. By increasing or decreasing the percentage value in this parameter, the control places a higher priority on maintaining the primary or secondary control reference variable. If the value for this parameter is configured higher, maintaining the primary control variable has a higher priority. If the value for this parameter is configured lower, maintaining the secondary control variable has a higher priority.

## Primary control variable

- Isolated operation = voltage maintained

## Secondary control variable

- Isolated operation = reactive power sharing with other generators maintained

The smaller this factor the higher the priority to equally share the load among all generators.

If 99 % is configured here, only the primary control reference variable is considered. If 10 % is configured here, only the secondary control reference variable is considered.

### Configure Application: Controller, Load Share Control, Grouping

Load sharing with several gensets is possible for a supply of a maximum of four split busbars. A group breakers splits the busbar in a way that some gensets supply one busbar and some supply another one. However, it is necessary to group the gensets, which supply the same busbar, into segments.

The configured segment number can be changed to one of three alternative segment numbers. The *LogicsManager* is used to realize this.

#### Example:

Six gensets (G1 through G6) supply a system with two group breakers (A, B) as shown in Figure 3-29. All gensets have the same segment number configured #1 (parameter 1723)

Case I: Group breakers A and B are closed and G1 through G6 supply the same busbar.

The same segment number is configured to each genset since all gensets supply the same busbar.

Case II: Group breaker A is closed and group breaker B is open (G1 through G4 supply a different busbar than G5 and G6).

A different segment number must be selected for G5 and G6 by enabling the *LogicsManager* function "Segment no.2 act" (parameter 12929) in order to change the segment number of G5 and G6 to #2.

Case III: Group breakers A and B are open (G1 and G2, G3 and G4, as well as G5 and G6 supply different busbars).

A different segment number must be selected for G3 and G4 (*LogicsManager* function "Segment no.2 act" (parameter 12929)) as well as to G5 and G6 (*LogicsManager* function "Segment no.3 act" (parameter 12928)).

With this, the segment number of G3 and G4 is changed to #2 and the segment number of G5 and G6 is changed to #3.

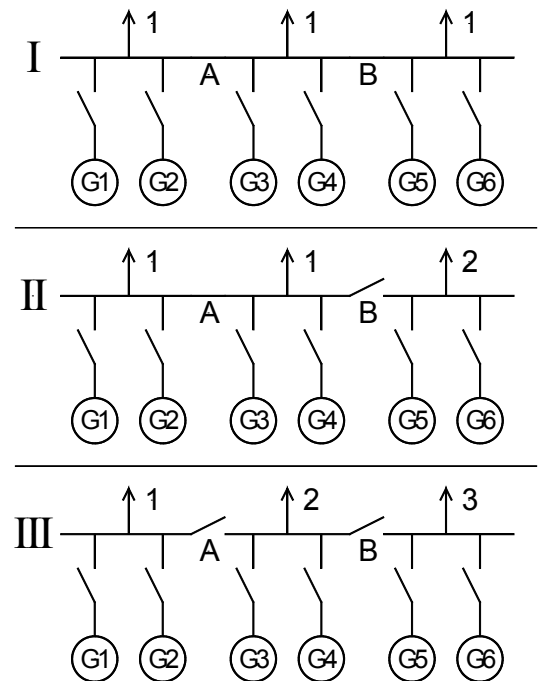


Figure 3-29: Load sharing - grouping

EN	Segment number			
DE	Segmentnummer			
CL2	{0}	{10}	{10c}	{20c}
1723	✓	✓	✓	✓

**Load share control: segment number** 1 to 32

---

The genset is assigned a load share segment number with this parameter. This segment number may be overridden by the following parameters 12929, 12928, and 12927.

EN	Segment no.2 act			
DE	Segmentnr.2 aktiv			
CL2	{0}	{10}	{10c}	{20c}
12929	✓	✓	✓	✓

**Load share control: segment number 2 active** *LogicsManager*

---

Once the conditions of the *LogicsManager* have been fulfilled, this genset is assigned load share segment number 2 (this parameter has priority over parameters 12928 and 12927). The *LogicsManager* and its default settings are explained on page 252 in Appendix B: "*LogicsManager*".

EN	Segment no.3 act			
DE	Segmentnr.3 aktiv			
CL2	{0}	{10}	{10c}	{20c}
12928	✓	✓	✓	✓

**Load share control: segment number 3 active** *LogicsManager*

---

Once the conditions of the *LogicsManager* have been fulfilled, this genset is assigned load share segment number 3 (this parameter has priority over parameter 12927). The *LogicsManager* and its default settings are explained on page 252 in Appendix B: "*LogicsManager*".

EN	Segment no.4 act			
DE	Segmentnr.4 aktiv			
CL2	{0}	{10}	{10c}	{20c}
12927	✓	✓	✓	✓

**Load share control: segment number 4 active** *LogicsManager*

---

Once the conditions of the *LogicsManager* have been fulfilled, this genset is assigned load share segment number 4. The *LogicsManager* and its default settings are explained on page 252 in Appendix B: "*LogicsManager*".

### Configure Application: Controller, Discrete Raise/Low/Function

The frequency / load and voltage / reactive power set points may be raised and lowered using the *LogicsManager* functionality, i.e. it is possible to use *LogicsManager* command variables to raise and lower these set points. Most commonly a button may be used to energize a discrete input on the control, which is used again as a *LogicsManager* command variable to enable the respective *LogicsManager* function to change the set point.

The discrete raise/lower function always uses the actual value at the time when this function is enabled for the respective controller set point as initial value. If the actual value is negative at this point in time, the initial value is zero.

Frequency and voltage may be adjusted within the configured operating limits (refer to Configure Monitoring: Generator, Operating Voltage / Frequency on page 38). Active power may be adjusted between 0 and the configured load control setpoint maximum (parameter 5523 on page 214). The power factor may be adjusted between 0.71 leading and 0.71 lagging.

EN	Discrete f/P +				Setpoints digital poti: raise f/P set point	LogicsManager
	Sollwert f/P +					
CL2	{0}	{1o}	{1oc}	{2oc}	Once the conditions of the <i>LogicsManager</i> have been fulfilled, the frequency / load set point will be raised. The <i>LogicsManager</i> and its default settings are explained on page 252 in Appendix B: " <i>LogicsManager</i> ".	
12900	✓	✓	✓	✓		
EN	Discrete f/P -				Setpoints digital poti: lower f/P set point	LogicsManager
	Sollwert f/P -					
CL2	{0}	{1o}	{1oc}	{2oc}	Once the conditions of the <i>LogicsManager</i> have been fulfilled, the frequency / load set point will be lowered. The <i>LogicsManager</i> and its default settings are explained on page 252 in Appendix B: " <i>LogicsManager</i> ".	
12901	✓	✓	✓	✓		
EN	Discrete V/PF +				Setpoints digital poti: raise V/Q set point	LogicsManager
	Sollwert U/Q +					
CL2	{0}	{1o}	{1oc}	{2oc}	Once the conditions of the <i>LogicsManager</i> have been fulfilled, the voltage / reactive power set point will be raised. The <i>LogicsManager</i> and its default settings are explained on page 252 in Appendix B: " <i>LogicsManager</i> ".	
12902	✓	✓	✓	✓		
EN	Discrete V/PF -				Setpoints digital poti: lower V/Q set point	LogicsManager
	Sollwert U/Q -					
CL2	{0}	{1o}	{1oc}	{2oc}	Once the conditions of the <i>LogicsManager</i> have been fulfilled, the voltage / reactive power set point will be lowered. The <i>LogicsManager</i> and its default settings are explained on page 252 in Appendix B: " <i>LogicsManager</i> ".	
12903	✓	✓	✓	✓		

## Configure Interfaces



### NOTE

Please refer to the Interface Manual 37383 for a detailed description of the interface parameters.

## Configure Interfaces: Configure CAN Interfaces (*FlexCAN*)



### NOTE

The CAN bus is a field bus and subject to various disturbances. Therefore, it cannot be guaranteed that every request will be answered. We recommend to repeat a request, which is not answered within reasonable time.

### Configure CAN Interface 1

EN	Baudrate				CAN bus 1: Baud rate	20 / 50 / 100 / 125 / 250 / 500 / 800 / 1,000 kBaud
DE	Baudrate					
CL2	{0}	{1o}	{1oc}	{2oc}	This parameter defines the used Baud rate. Please note, that all participants on the CAN bus must use the same Baud rate.	
3156	✓	✓	✓	✓		

EN	Node-ID CAN-Bus 1				CAN bus 1: Node ID	1 to 127
DE	Node-ID CAN-Bus 1					
CL2	{0}	{1o}	{1oc}	{2oc}	A number that is unique to the control must be set in this parameter so that this control unit can be correctly identified on the CAN bus. This address number may only be used once on the CAN bus. All additional addresses are calculated based on this unique device number.	
8950	✓	✓	✓	✓		

EN	CANopen Master				CAN bus 1: CANopen Master	Default Master / On / Off
DE	CANopen Master					
CL2	{0}	{1o}	{1oc}	{2oc}	One bus participant must take over the network management and put the other participants into "operational" mode. The easYgen is able to perform this task.	
8993	✓	✓	✓	✓		

**Default Master** The unit starts up in "operational" mode and sends a "Start\_Remote\_node" message after a short delay (the delay is the Node ID (parameter 8950) in seconds, i.e. if the Node ID is configured to 2, the message will be sent after 2 seconds). If more than one easYgen is configured to Default Master, the unit with the lower Node ID will take over control. Therefore, the CAN bus devices, which are intended to act as Default Master should be assigned a low Node ID. No other device on the CAN bus (except the easYgens) may operate as Master).

**On** ..... The unit is the CANopen Master and automatically changes into operational mode and transmits data.

**Off** ..... The unit is a CANopen Slave. An external Master must change into operational mode.



### NOTE

If CANopen Master (parameter 8993) is configured to "Off", the Master controller (for example a PLC) must send a "Start\_Remote\_node" message to initiate the load share message transmission of the easYgen.

If no "Start\_Remote\_node" message would be sent, the complete system would not be operational.



EN	Producer heartbeat time				
DE	Producer heartbeat time				
CL2	{0}	{1o}	{1oc}	{2oc}	
9120	✓	✓	✓	✓	

**CAN bus 1: Producer heartbeat time****0 to 65500 ms**

Independent from the CANopen Master configuration, the unit transmits a heartbeat message with this configured heartbeat cycle time. If the producer heartbeat time is equal 0, the heartbeat will only be sent as response to a remote frame request. The time configured here will be rounded up to the next 20 ms step.

EN	COB ID SYNC Message				
DE	COB ID SYNC Message				
CL2	{0}	{1o}	{1oc}	{2oc}	
9100	✓	✓	✓	✓	

**CAN bus 1: COB ID SYNC Message****1 to FFFFFFFF hex**

This parameter defines whether the unit generates the SYNC message or not.

*Complies with CANopen specification: object 1005, subindex 0; defines the COB ID of the synchronization object (SYNC). The structure of this object is shown in the following tables:*

UNSIGNED 32 bits 11 bit ID	bits	MSB				LSB	
		31	30	29	28-11	10-0	
		X	0/1	X	000000000000000000	11 bit identifier	

bit number	value	meaning
31 (MSB)	X	N/A
30	0 1	Unit does not generate SYNC message Unit generates SYNC message
29	X	N/A
28-11	0	always
10-0 (LSB)	X	bits 10-0 of SYNC COB ID

EN	Producer SYNC Message time				
DE	Producer SYNC Message time				
CL2	{0}	{1o}	{1oc}	{2oc}	
8940	✓	✓	✓	✓	

**CAN bus 1: Sending time for SYNC Message****0 to 65000 ms**

This is the cycle time of the SYNC message. If the unit is configured for this function (parameter 9100) it will send the SYNC message with this interval. The time configured here will be rounded up to the next 10 ms step.

## Additional Server SDOs (Service Data Objects)



### NOTE

The first Node ID is the standard Node ID of CAN interface 1 (parameter 8950).

EN	2. Node-ID			
DE	2. Node-ID			
CL2	{0}	{1o}	{1oc}	{2oc}
33040	✓	✓	✓	✓

#### CAN bus 1: Additional Server SDOs - 2. Node ID

0 to 127

In a multi-master application, each Master needs its own identifier (Node ID) from the unit. in order to send remote signals (i.e. remote start, stop, or acknowledge) to the unit. The additional SDO channel will be made available by configuring this Node ID to a value different than zero. This is the additional CAN ID for the PLC.

EN	3. Node-ID			
DE	3. Node-ID			
CL2	{0}	{1o}	{1oc}	{2oc}
33041	✓	✓	✓	✓

#### CAN bus 1: Additional Server SDOs - 3. Node ID

0 to 127

In a multi-master application, each Master needs its own identifier (Node ID) from the unit. in order to send remote signals (i.e. remote start, stop, or acknowledge) to the unit. The additional SDO channel will be made available by configuring this Node ID to a value different than zero. This is the additional CAN ID for the PLC.

EN	4. Node-ID			
DE	4. Node-ID			
CL2	{0}	{1o}	{1oc}	{2oc}
33042	✓	✓	✓	✓

#### CAN bus 1: Additional Server SDOs - 4. Node ID

0 to 127

In a multi-master application, each Master needs its own identifier (Node ID) from the unit. in order to send remote signals (i.e. remote start, stop, or acknowledge) to the unit. The additional SDO channel will be made available by configuring this Node ID to a value different than zero. This is the additional CAN ID for the PLC.

EN	5. Node-ID			
DE	5. Node-ID			
CL2	{0}	{1o}	{1oc}	{2oc}
33043	✓	✓	✓	✓

#### CAN bus 1: Additional Server SDOs - 5. Node ID

0 to 127

In a multi-master application, each Master needs its own identifier (Node ID) from the unit. in order to send remote signals (i.e. remote start, stop, or acknowledge) to the unit. The additional SDO channel will be made available by configuring this Node ID to a value different than zero. This is the additional CAN ID for the PLC.

## Receive PDO {x} (Process Data Object) [x = 1 to 3]

Figure 3-30 shows the principle of PDO mapping.

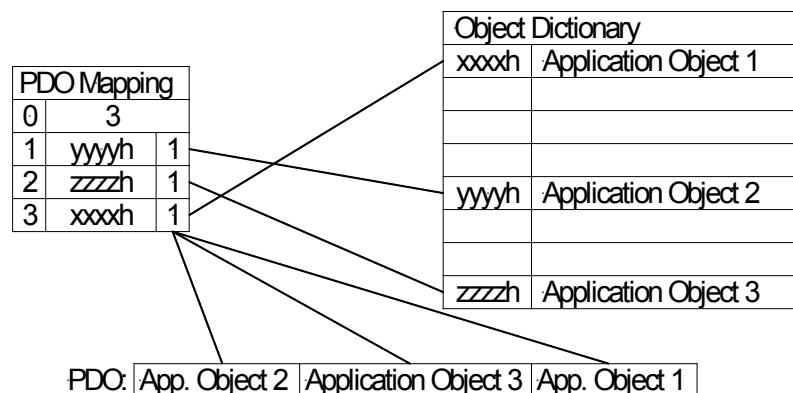


Figure 3-30: Interfaces - Principle of PDO mapping

EN	COB-ID
DE	COB-ID
CL2	{0} {1o} {1oc} {2oc}
9300	✓
9310	✓
9320	✓

**CAN bus 1: Receive PDO {x} - COB ID****1 to FFFFFFFF hex**

This parameter contains the communication parameters for the PDOs, the device is able to receive.

Complies with CANopen specification: object 1400 (for RPDO 1, 1401 for RPDO 2, 1402 for TPDO 3), subindex 1. The structure of this object is shown in the following tables:

UNSIGNED 32 bits	MSB	31	30	29	28-11	LSB	10-0
11 bit ID	0/1	X	X	X	00000000000000000000	11 bit identifier	

bit number	value	meaning
31 (MSB)	0	PDO exists / is valid
	1	PDO does not exist / is not valid
30	X	N/A
29	X	N/A
28-11	0	always
10-0 (LSB)	X	bits 10-0 of COB ID

PDO valid / not valid allows to select, which PDOs are used in the operational state.

EN	Number of Mapped Objects
DE	Anzahl der Mapped Objekte
CL2	{0} {1o} {1oc} {2oc}
9910	✓
33855	✓
33860	✓

**CAN bus 1: Receive PDO {x} - Number of mapped objects****0 to 4**

This parameter defines the number of valid entries within the mapping record. This number is also the number of the application variables, which shall be received with the corresponding PDO.

Complies with CANopen specification: object 1600 (for RPDO 1, 1601 for RPDO 2, 1602 for RPDO 3), subindex 0

EN	1. Mapped Object
DE	1. Mapped Objekt
CL2	{0} {1o} {1oc} {2oc}
9911	✓
33856	✓
33861	✓

**CAN bus 1: Receive PDO {x} - 1. mapped object****0 to 65535**

This parameter contains the information about the mapped application variables. These entries describe the PDO contents by their index. The sub-index is always 1. The length is determined automatically.

Complies with CANopen specification: object 1600 (for RPDO 1, 1601 for RPDO 2, 1602 for RPDO 3), subindex 1

EN	2. Mapped Object
DE	2. Mapped Objekt
CL2	{0} {1o} {1oc} {2oc}
9912	✓
33857	✓
33862	✓

**CAN bus 1: Receive PDO {x} - 2. mapped object****0 to 65535**

This parameter contains the information about the mapped application variables. These entries describe the PDO contents by their index. The sub-index is always 1. The length is determined automatically.

Complies with CANopen specification: object 1600 (for RPDO 1, 1601 for RPDO 2, 1602 for RPDO 3), subindex 2

EN	3. Mapped Object
DE	3. Mapped Objekt
CL2	{0} {1o} {1oc} {2oc}
9913	✓
33858	✓
33863	✓

**CAN bus 1: Receive PDO {x} - 3. mapped object****0 to 65535**

This parameter contains the information about the mapped application variables. These entries describe the PDO contents by their index. The sub-index is always 1. The length is determined automatically.

Complies with CANopen specification: object 1600 (for RPDO 1, 1601 for RPDO 2, 1602 for RPDO 3), subindex 3

EN	4. Mapped Object
DE	4. Mapped Objekt
CL2	{0} {1o} {1oc} {2oc}
9914	✓
33859	✓
33864	✓

**CAN bus 1: Receive PDO {x} - 4. mapped object****0 to 65535**

This parameter contains the information about the mapped application variables. These entries describe the PDO contents by their index. The sub-index is always 1. The length is determined automatically.

Complies with CANopen specification: object 1600 (for RPDO 1, 1601 for RPDO 2, 1602 for RPDO 3), subindex 4

**Transmit PDO {x} (Process Data Objects) [x = 1 to 4]**

	COB-ID			
DE	COB-ID			
EN	{0}	{1o}	{1oc}	{2oc}
<b>CL2</b>	✓	✓	✓	✓
9600				
9610				
9620				
9630				

**CAN bus 1: Transmit PDO {x} - COB ID****1 to FFFFFFFF hex**

This parameter contains the communication parameters for the PDOs the unit is able to transmit. The unit transmits data (i.e. visualization data) on the CAN ID configured here.

Complies with CANopen specification: object 1800 for (TPDO 1, 1801 for TPDO 2, 1802 for TPDO 3, 1803 for TPDO 4), subindex 1. The structure of this object is shown in the following tables:

UNSIGN 32		MSB			LSB	
bits	bits	31	30	29	28-11	10-0
11 bit ID	11 bit ID	0/1	X	X	00000000000000000000	11 bit identifier

bit number	value	meaning
31 (MSB)	0	PDO exists / is valid
	1	PDO does not exist / is not valid
30	X	N/A
29	X	N/A
28-11	0	always
10-0 (LSB)	X	bits 10-0 of COB ID

PDO valid / not valid allows to select, which PDOs are used in the operational state.

	Transmission type			
DE	Transmission type			
EN	{0}	{1o}	{1oc}	{2oc}
<b>CL2</b>	✓	✓	✓	✓
9602				
9612				
9622				
9632				

**CAN bus 1: Transmit PDO {x} - Transmission type****0 to 255**

This parameter contains the communication parameters for the PDOs the unit is able to transmit. It defines whether the unit broadcasts all data automatically (value 254 or 255) or only upon request with the configured address of the COB ID SYNC message (parameter 9100).

Complies with CANopen specification: object 1800 (for TPDO 1, 1801 for TPDO 2, 1802 for TPDO 3, 1803 for TPDO 4), subindex 2. The description of the transmission type is shown in the following table:

transmission type	PDO transmission				
	cyclic	acyclic	synchronous	asynchronous	RTR only
0	will not be sent				
1-240	X		X		
241-251	will not be sent				
252	will not be sent				
253	will not be sent				
254				X	
255				X	

A value between 1 and 240 means that the PDO is transferred synchronously and cyclically. The transmission type indicating the number of SYNC, which are necessary to trigger PDO transmissions. Receive PDOs are always triggered by the following SYNC upon reception of data independent of the transmission types 0 to 240. For TPDOs, transmission type 254 and 255 means, the application event is the event timer.

	Event-timer			
DE	Event-timer			
EN	{0}	{1o}	{1oc}	{2oc}
<b>CL2</b>	✓	✓	✓	✓
9604				
9614				
9624				
9634				

**CAN bus 1: Transmit PDO {x} - Event timer****0 to 65500 ms**

This parameter contains the communication parameters for the PDOs the unit is able to transmit. The broadcast cycle for the transmitted data is configured here. The time configured here will be rounded up to the next 5 ms step.

Complies with CANopen specification: object 1800 (for TPDO 1, 1801 for TPDO 2, 1802 for TPDO 3, 1803 for TPDO 4), subindex 5

EN	Number of Mapped Objects			
DE	Anzahl der Mapped Objekte			
CL2	{0}	{1o}	{1oc}	{2oc}
9609	✓	✓	✓	✓
9619				
9629				
9639				

**CAN bus 1: Transmit PDO {x} - Number of mapped objects****0 to 4**

This parameter contains the mapping for the PDOs the unit is able to transmit. This number is also the number of the application variables, which shall be transmitted with the corresponding PDO.

*Complies with CANopen specification: object 1A00 (for TPDO 1, 1A01 for TPDO 2, 1A02 for TPDO 3, 1A03 for TPDO 4), subindex 0*

EN	1. Mapped Object			
DE	1. Mapped Objekt			
CL2	{0}	{1o}	{1oc}	{2oc}
9605	✓	✓	✓	✓
9615				
9625				
9635				

**CAN bus 1: Transmit PDO {x} - 1. mapped object****0 to 65535**

This parameter contains the information about the mapped application variables. These entries describe the PDO contents by their index. The sub-index is always 1. The length is determined automatically.

*Complies with CANopen specification: object 1A00 (for TPDO 1, 1A01 for TPDO 2, 1A02 for TPDO 3, 1A03 for TPDO 4), subindex 1*

EN	2. Mapped Object			
DE	2. Mapped Objekt			
CL2	{0}	{1o}	{1oc}	{2oc}
9606	✓	✓	✓	✓
9616				
9626				
9636				

**CAN bus 1: Transmit PDO {x} - 2. mapped object****0 to 65535**

This parameter contains the information about the mapped application variables. These entries describe the PDO contents by their index. The sub-index is always 1. The length is determined automatically.

*Complies with CANopen specification: object 1A00 (for TPDO 1, 1A01 for TPDO 2, 1A02 for TPDO 3, 1A03 for TPDO 4), subindex 2*

EN	3. Mapped Object			
DE	3. Mapped Objekt			
CL2	{0}	{1o}	{1oc}	{2oc}
9607	✓	✓	✓	✓
9617				
9627				
9637				

**CAN bus 1: Transmit PDO {x} - 3. mapped object****0 to 65535**

This parameter contains the information about the mapped application variables. These entries describe the PDO contents by their index. The sub-index is always 1. The length is determined automatically.

*Complies with CANopen specification: object 1A00 (for TPDO 1, 1A01 for TPDO 2, 1A02 for TPDO 3, 1A03 for TPDO 4), subindex 3*

EN	4. Mapped Object			
DE	4. Mapped Objekt			
CL2	{0}	{1o}	{1oc}	{2oc}
9608	✓	✓	✓	✓
9618				
9628				
9638				

**CAN bus 1: Transmit PDO {x} - 4. mapped object****0 to 65535**

This parameter contains the information about the mapped application variables. These entries describe the PDO contents by their index. The sub-index is always 1. The length is determined automatically.

*Complies with CANopen specification: object 1A00 (for TPDO 1, 1A01 for TPDO 2, 1A02 for TPDO 3, 1A03 for TPDO 4), subindex 4*

**NOTE**

CANopen allows to send 8 byte of data with each Transmit PDO. These may be defined separately if no pre-defined data protocol is used.

All data protocol parameters with a parameter ID may be sent as an object with a CANopen Transmit PDO.

In this case, the data length will be taken from the data byte column (refer to the Data Protocols section in the Interface Manual 37383):

- 1,2 UNSIGNED16 or SIGNED16
- 3,4 UNSIGNED16 or SIGNED16
- 5,6 UNSIGNED16 or SIGNED16
- 1,2,3,4 UNSIGNED32 or SIGNED32
- 3,4,5,6 UNSIGNED32 or SIGNED32
- etc.

The object ID is identical with the parameter ID when configuring via front panel or ToolKit.

## Configure CAN Interface 2

EN	Baudrate			
DE	Baudrate			
CL2	{0}	{1o}	{1oc}	{2oc}
3157	✓	✓	✓	✓

### CAN bus 2: Baud rate

20 / 50 / 100 / 125 / 250 kBaud

This parameter defines the used Baud rate. Please note, that all participants on the CAN bus must use the same Baud rate.

EN	Function for RPDO 1			
DE	Funktion für RPDO 1			
CL2	{0}	{1o}	{1oc}	{2oc}
9055	✓	✓	✓	✓

### CAN bus 2: Function for RPDO 1

refer to selection below

The unit provides pre-configured CAN bus settings for the connection of different units. The unit to be connected must be selected here.

**no func.** .....No external unit is selected for connection. The CAN bus is disabled. Values are not sent or received.

**1st IKD** .....The unit is pre-configured for the connection of a Woodward IKD 1 expansion board.

**2nd IKD** .....The unit is pre-configured for the connection of a second Woodward IKD 1 expansion board.

**BK 16 DIDO** The unit is pre-configured for the connection of a Phoenix Contact BK 16 DIDO expansion board.

**Co 16 DIDO** The unit is pre-configured for the connection of a Phoenix Contact Co 16 DIDO expansion board.

EN	Function for RPDO 2			
DE	Funktion für RPDO 2			
CL2	{0}	{1o}	{1oc}	{2oc}
9056	✓	✓	✓	✓

### CAN bus 2: Function for RPDO 2

refer to selection below

The unit provides pre-configured CAN bus settings for the connection of different units. The unit to be connected must be selected here.

**no func.** .....No external unit is selected for connection. The CAN bus is disabled. Values are not sent or received.

**1st IKD** .....The unit is pre-configured for the connection of a Woodward IKD 1 expansion board.

**2nd IKD** .....The unit is pre-configured for the connection of a second Woodward IKD 1 expansion board.

**BK 16 DIDO** The unit is pre-configured for the connection of a Phoenix Contact BK 16 DIDO expansion board.

**Co 16 DIDO** The unit is pre-configured for the connection of a Phoenix Contact Co 16 DIDO expansion board.

## J1939 Interface

EN	J1939 device addresses				
DE	J1939 Geräte-Adresse				
<b>CL2</b>	{0}	{1o}	{1oc}	{2oc}	
15106	✓	✓	✓	✓	

### J1939 Interface: Device address

0 to 255

The easYgen sends J1939 request and control messages with this ID. It must be changed for different ECU types according to the following table. The ECU listens only to control messages, if they are sent to the correct address.

Scania S6	EMR2 Deutz	EMS2 Volvo	MTU ADEC	Woodward EGS	MAN EDC7	SISU EEM2/3
39	3	17	1	234	253	n/a

Details may be found in the manual of the genset control and the interface manual 37383.

**Note:** Changing this parameter becomes only effective after restarting the unit.

EN	Engine control address				
DE	Adresse Motorsteuerung				
<b>CL2</b>	{0}	{1o}	{1oc}	{2oc}	
15107	✓	✓	✓	✓	

### J1939 Interface: Engine control address

0 to 255

Configures the address of the J1939 device, which is controlled.

Scania S6	EMR2 Deutz	EMS2 Volvo	MTU ADEC	Woodward EGS	MAN EDC7	SISU EEM2/3
0	0	0	128	0	0	0 / (1)

EN	Reset previous act. DTCs - DM3				
DE	Quittieren passiver Fehler DM3				
<b>CL2</b>	{0}	{1o}	{1oc}	{2oc}	
15108	✓	✓	✓	✓	

### J1939 Interface: Reset previously active DTCs - DM3

Yes / No

If this parameter is set Yes, a DM3 message "Acknowledge passive faults" is sent. After that this parameter is reset automatically to No.  
As a result alarms (DM2) which no longer apply are cleared.

EN	SPN version				
DE	SPN Version				
<b>CL2</b>	{0}	{1o}	{1oc}	{2oc}	
15103	✓	✓	✓	✓	

### J1939 Interface: SPN version

Version 1 / Version 2 / Version 3

The J1939 protocol provides 4 different versions for formatting Suspect Parameter Number. This is important for a correct display of the alarm messages. With this parameter it is defined if formatting occurs according to Version 1, Version 2, or Version 3. Formatting according to Version 4 is identified automatically.

Details may be found in the engine control J1939 manual.

EN	Device type				
DE	Betriebsmodus				
<b>CL2</b>	{0}	{1o}	{1oc}	{2oc}	
15102	✓	✓	✓	✓	

### J1939 Interface: Device type

refer to selection below

The J1939 interface of this device may be operated with different engine control units. This parameter determines the operating mode of the used ECU.

**Off**.....The J1939 interface is disabled. No messages will be received.

**Standard**.....Standard J1939 messages will be received.

**S6 Scania**.....Standard J1939 messages plus special S6 Scania messages.

**EMR2 Deutz**.....Standard J1939 messages plus special Deutz EMR2 messages.

**EMS2 Volvo**.....Standard J1939 messages plus special Volvo EMS2 messages.

**ADEC MTU**.....Standard J1939 messages plus special MTU ADEC messages.

**EGS**.....Standard J1939 messages plus special Woodward EGS messages.

**MAN**.....Standard J1939 messages plus special MAN EDC7 messages.

**SISU EEM**...Standard J1939 messages plus special SISU EEM2/3 messages.

Refer to the Interface Manual 37383 for more detailed information.

ECU remote controlled				
Fernsteuern der ECU über J1939				
CL2	{0}	{1o}	{1oc}	{2oc}
15127	✓	✓	✓	✓

**J1939 Interface: ECU remote control via J1939****On / Off**

**On** ..... The unit sends J1939 control messages to the ECU. Depending on the selected device type (Parameter 15102), contains a specific selection of commands. Available messages are speed deviation and droop for all ECUs as well as engine start/stop, enable idle mode, rated speed switch and preglow for some ECUs. Refer to the interface manual 37383 for more detailed information.

**Off** ..... The ECU remote control via the J1939 protocol will be disabled.

Speed deviation ECU				
Drehzahlhub				
CL2	{0}	{1o}	{1oc}	{2oc}
5537	✓	✓	✓	✓

**J1939 Interface: Speed deviation****0 to 1400 rpm**

① This parameter is only visible if ECU remote controlled (parameter 15127) is configured to "On".

This parameter adjusts the range of the speed deviation around the rated speed, which is sent to the ECU.

It relates to the engine rated speed (parameter 1601). There are two methods of sending the speed set point to the ECU: With a speed offset and a speed setpoint. The frequency and power control must be configured to "PID".

**Speed offset: Scania S6, Volvo EMS2, EGS**

The easYgen sends a speed offset with a range of 0 to 100% (every 20 ms). 50% = rated speed. There is also an internal speed offset configured in the ECU, this parameter determines what corresponds with 0% or 100%. If there is a positive and a negative speed offset, they should be symmetrical in the ECU. We recommend to have the same speed offset configured in the ECU and in this parameter here. A different setting will result in an additional "controller gain".

How to test this parameter during commissioning:

Isolated operation: Disable the frequency controller and change parameter 5508 for the initial state between 0 and 100%, the engine should change the speed as follows:

0 = rated speed – negative speed offset from ECU

50 = rated speed

100 = rated speed + positive speed offset from ECU

Mains parallel operation: Check with the set point in the display if the engine is able to deliver the full power.

**Speed set point: Deutz EMR, MTU ADEC, EGS, SISU, Standard**

The easYgen sends a speed set point in rpm (every 10 ms) that varies around the rated speed in the range of +/- the speed deviation.

How to test this parameter during commissioning:

Isolated operation: Disable the frequency controller and change parameter 5508 for the initial state between 0 and 100%, the engine should change the speed as follows:

0 = rated speed – speed deviation ECU e.g. 1500 – 120 = 1380rpm

50 = rated speed e.g. = 1500rpm

100 = rated speed + speed deviation ECU e.g. 1500 + 120 = 1620rpm

**Note:** Keep this value as small as possible, i.e. do not enter a speed deviation of 500, if the engine varies only between 1400 and 1600rpm.

Mains parallel operation: Check with the set point in the display if the engine is able to deliver the full power.

**NOTE**

The Woodward EGS ECU supports both types of speed deviation control and may be configured either to "Speed offset" or "Speed set point".

In mains parallel operation, the EGS can be configured to receive a real power set point from the easYgen to control the power. In this case, real power control must be disabled in the easYgen.



Load Share Parameters

EN	Load share Interface				CAN Interface: load share interface	CAN #1 / Off
DE	Schnittstelle Lastverteilung					
CL2	{0}	{1o}	{1oc}	{2oc}	The interface, which is used for transmitting the load share data is configured here.	
9923	✓	✓	✓	✓		
EN	Transfer rate LS fast message				CAN Interface: transfer rate load share fast message	0.10 to 0.30 s
DE	Sendetakt der Lastverteilung				The transfer rate defines the time delay between two fast CAN messages. In case of CAN systems with a high bus load (e.g. long distance between the units with low baud rate), a shorter transfer rate (higher time setting) helps to reduce the bus load.	
CL2	{0}	{1o}	{1oc}	{2oc}		
9921	✓	✓	✓	✓		
EN	Load Share CAN-ID				CAN Interface: load share CAN ID	2xx Hex / 3xx Hex / 4xx Hex / 5xx Hex
DE	Lastverteilungs CAN-ID				The first digit of the CAN ID or the range (i.e. 2xx means 200 through 2FF) is configured here. The last two digits will be assigned by the control with the settings from the device number (parameter 1702 on page 25).	
CL2	{0}	{1o}	{1oc}	{2oc}		
9920	✓	✓	✓	✓		

## Configure Interfaces: Configure RS-232 Interfaces

### Configure Serial Interface 1

EN					<b>Baudrate</b>	<b>Serial interface 1: Baud rate</b>	<b>2.4 / 4.8 / 9.6 / 14.4 / 19.2 / 38.4 / 56 / 115 kBaud</b>
DE					<b>Baudrate</b>		
CL2	{0}	{1o}	{1oc}	{2oc}		This parameter defines the baud rate for communications. Please note, that all participants on the bus must use the same baud rate.	
3163	✓	✓	✓	✓			
EN					<b>Parity</b>	<b>Serial interface 1: Parity</b>	<b>no / even / odd</b>
DE					<b>Parity</b>		
CL2	{0}	{1o}	{1oc}	{2oc}		The used parity of the interface is set here.	
3161	✓	✓	✓	✓			
EN					<b>Stop bits</b>	<b>Serial interface 1: Stop bits</b>	<b>one / two</b>
DE					<b>Stop Bits</b>		
CL2	{0}	{1o}	{1oc}	{2oc}		The number of stop bits is set here.	
3162	✓	✓	✓	✓			
EN					<b>Enable Modbus protocol</b>	<b>Serial interface 1: Enable Modbus protocol</b>	<b>Yes / No</b>
DE					<b>Modbus-Protokoll aktivieren</b>		
CL2	{0}	{1o}	{1oc}	{2oc}		<b>Yes</b> ..... The Modbus protocol is enabled.	
7900	✓	✓	✓	✓		<b>No</b> ..... The Modbus protocol is disabled.	
EN					<b>ModBus Slave ID</b>	<b>Serial interface 1: Modbus Slave ID</b>	<b>0 to 255</b>
DE					<b>ModBus Slave ID</b>		
CL2	{0}	{1o}	{1oc}	{2oc}		The Modbus device address, which is used to identify the device via Modbus, is entered here.	
3185	✓	✓	✓	✓			
EN					<b>Reply delay time</b>	<b>Serial interface 1: Reply delay time</b>	<b>0.00 to 1.00 s</b>
DE					<b>Zeitverzöger. der Antwort</b>		
CL2	{0}	{1o}	{1oc}	{2oc}		This is the minimum delay time between a request from the Modbus master and the sent response of the slave. This time is also required if an external interface converter to RS-485 is used for example.	
3186	✓	✓	✓	✓			
EN					<b>Enable ServLink protocol</b>	<b>Serial interface 1: Enable ServLink protocol</b>	<b>Yes / No</b>
DE					<b>ServLink-Protokoll aktivieren</b>		
CL2	{0}	{1o}	{1oc}	{2oc}		<b>Yes</b> ..... The ServLink protocol is enabled.	
7901	✓	✓	✓	✓		<b>No</b> ..... The ServLink protocol is disabled.	

## Configure Interfaces: Configure RS-485 Interfaces

### Configure Serial Interface 2

EN					<b>Baudrate</b>	<b>Serial interface 2: Baud rate</b>	<b>2.4 / 4.8 / 9.6 / 14.4 / 19.2 / 38.4 / 56 / 115 kBaud</b>
DE					<b>Baudrate</b>		
CL2	{0}	{1o}	{1oc}	{2oc}		This parameter defines the baud rate for communications. Please note, that all participants on the bus must use the same baud rate.	
3170	✓	✓	✓	✓			
EN					<b>Parity</b>	<b>Serial interface 2: Parity</b>	<b>no / even / odd</b>
DE					<b>Parity</b>		
CL2	{0}	{1o}	{1oc}	{2oc}		The used parity of the interface is set here.	
3171	✓	✓	✓	✓			
EN					<b>Stop bits</b>	<b>Serial interface 2: Stop bits</b>	<b>one / two</b>
DE					<b>Stop Bits</b>		
CL2	{0}	{1o}	{1oc}	{2oc}		The number of stop bits is set here.	
3172	✓	✓	✓	✓			
EN					<b>Full-, halfduplex mode</b>	<b>Serial interface 2: Full-/halfduplex mode</b>	<b>Fullduplex / Halfduplex</b>
DE					<b>Voll-, Halbduplex Modus</b>		
CL2	{0}	{1o}	{1oc}	{2oc}		<b>Fullduplex</b> ... Fullduplex mode is enabled.	
3173	✓	✓	✓	✓		<b>Halfduplex</b> .. Halfduplex mode is enabled.	
EN					<b>Enable Modbus protocol</b>	<b>Serial interface 2: Enable Modbus protocol</b>	<b>Yes / No</b>
DE					<b>Modbus-Protokoll aktivieren</b>		
CL2	{0}	{1o}	{1oc}	{2oc}		<b>Yes</b> ..... The Modbus protocol is enabled.	
7908	✓	✓	✓	✓		<b>No</b> ..... The Modbus protocol is disabled.	
EN					<b>ModBus Slave ID</b>	<b>Serial interface 2: Modbus Slave ID</b>	<b>0 to 255</b>
DE					<b>ModBus Slave ID</b>		
CL2	{0}	{1o}	{1oc}	{2oc}		The Modbus device address, which is used to identify the device via Modbus, is entered here.	
3188	✓	✓	✓	✓			
EN					<b>Reply delay time</b>	<b>Serial interface 2: Reply delay time</b>	<b>0.00 to 1.00 s</b>
DE					<b>Zeitverzöger. der Antwort</b>		
CL2	{0}	{1o}	{1oc}	{2oc}		This is the minimum delay time between a request from the Modbus master and the sent response of the slave. This time is required in halfduplex mode.	
3189	✓	✓	✓	✓			

## Configure *LogicsManager*



### Configure *LogicsManager*: Configure Internal Flags

Internal flags within the *LogicsManager* logical outputs may be programmed and used for multiple functions. For conditions and explanation of programming please refer to page 252 in chapter "*LogicsManager*").

EN

DE

	Flag {x}			
	Merker {x}			
CL2	{0}	{1o}	{1oc}	{2oc}
yyyyy	✓	✓	✓	✓


Internal flags: Flag {x} [x = 1 to 16]

*LogicsManager*

The flags may be used as auxiliary flags for complex combinations by using the logical output of these flags as command variable for other logical outputs.

Flag {x}	Flag 1	Flag 1	Flag 1	Flag 1	Flag 1	Flag 1	Flag 1	Flag 1
Parameter ID yyyyy	12230	12240	12250	12260	12270	12280	12290	12300
Flag {x}	Flag 9	Flag 9	Flag 9	Flag 9	Flag 9	Flag 9	Flag 9	Flag 9
Parameter ID yyyyy	12910	12911	12912	12913	12914	12915	12916	12917

Table 3-69: Internal flags - parameter IDs



NOTE

Flag 1 is also used as placeholder in other logical combinations. Flag 8 is preset with a timer start.

## Configure *LogicsManager*: Set Timer

### *LogicsManager*: Daily Time Set Point

Utilizing the *LogicsManager* it is possible to establish specific times of the day that functions (i.e. generator exerciser) can be enabled. The two daily time set points are activated each day at the configured time. Using the *LogicsManager* these set points may be configured individually or combined to create a time range.

EN	Timer {x}: Hour				Timer: Daily time set point {x} [x = 1/2]: hour	0 to 23 h
DE	Zeitpunkt {x}: Stunde					
CL2	{0}	{10}	{10c}	{20c}	Enter the hour of the daily time set point here. Example:	
1652	✓	✓	✓	✓	0..... 0 <sup>th</sup> hour of the day (midnight).	
1657					23..... 23 <sup>rd</sup> hour of the day (11pm).	
EN	Timer {x}: Minute				Timer: Daily time set point {x} [x = 1/2]: minute	0 to 59 min
DE	Zeitpunkt {x}: Minute					
CL2	{0}	{10}	{10c}	{20c}	Enter the minute of the daily time set point here. Example:	
1651	✓	✓	✓	✓	0..... 0 <sup>th</sup> minute of the hour.	
1656					59..... 59 <sup>th</sup> minute of the hour.	
EN	Timer {x}: Second				Timer: Daily time set point {x} [x = 1/2]: second	0 to 59 s
DE	Zeitpunkt {x}: Sekunde					
CL2	{0}	{10}	{10c}	{20c}	Enter the second of the daily time set point here. Example	
1650	✓	✓	✓	✓	0..... 0 <sup>th</sup> second of the minute.	
1655					59..... 59 <sup>th</sup> second of the minute.	

### *LogicsManager*: Active Time Set Point

Utilizing the *LogicsManager* it is possible to establish specific days (or hours, minutes, seconds) that functions (i.e. generator exerciser) can be enabled. The active switching point is activated only on a specified day (or hour, minute, second). The set points may be configured individually or combined via the *LogicsManager*. You may configure monthly, daily, hourly, minutely, or even secondly time set points depending on how you combine the set points in the *LogicsManager*.

EN	Active day				Timer: Active time set point: day	1 to 31
DE	Aktiver Tag					
CL2	{0}	{10}	{10c}	{20c}	Enter the day of the active switch point here. Example:	
1663	✓	✓	✓	✓	01..... 1 <sup>st</sup> day of the month.	
					31..... 31 <sup>st</sup> day of the month.	
					The active time set point is enabled during the indicated day from 0:00:00 hours to 23:59:59 hours.	
EN	Active hour				Timer: Active time set point: hour	0 to 23 h
DE	Aktive Stunde					
CL2	{0}	{10}	{10c}	{20c}	Enter the hour of the active switch point here. Example:	
1662	✓	✓	✓	✓	0..... 0 <sup>th</sup> hour of the day.	
					23..... 23 <sup>rd</sup> hour of the day.	
					The active time set point is enabled every day during the indicated hour from minute 0 to minute 59.	
EN	Active minute				Timer: Active time set point: minute	0 to 59 min
DE	Aktive Minute					
CL2	{0}	{10}	{10c}	{20c}	Enter the minute of the active switch point here. Example:	
1661	✓	✓	✓	✓	0..... 0 <sup>th</sup> minute of the hour.	
					59..... 59 <sup>th</sup> minute of the hour.	
					The active time set point is enabled every hour during the indicated minute from second 0 to second 59.	

EN	Active second			
DE	Aktive Sekunde			
CL2	{0}	{10}	{10c}	{20c}
1660	✓	✓	✓	✓

Timer: Active time set point: second

0 to 59 s

Enter the second of the active switch point here. Example:

0 ..... 0<sup>th</sup> second of the minute.

59 ..... 59<sup>th</sup> second the minute.

The active time set point is enabled every minute during the indicated second.

### LogicsManager: Weekly Time Set Point

Utilizing the *LogicsManager* it is possible to establish specific days of the week that functions (i.e. generator exerciser) can be enabled. The weekly time set point is enabled during the indicated day from 0:00:00 hours to 23:59:59 hours.

EN	Monday active			
DE	Montag aktiv			
CL2	{0}	{10}	{10c}	{20c}
1670	✓	✓	✓	✓

Timer: Weekly time set points Monday: days

Yes / No

Please enter the days of the weekly workdays.

**Monday** ..... **Yes** - The switch point is enabled every Monday  
**No** - The switch point is disabled every Monday

EN	Tuesday active			
DE	Dienstag aktiv			
CL2	{0}	{10}	{10c}	{20c}
1671	✓	✓	✓	✓

Timer: Weekly time set points Tuesday: days

Yes / No

Please enter the days of the weekly workdays.

**Tuesday** ..... **Yes** - The switch point is enabled every Tuesday  
**No** - The switch point is disabled every Tuesday

EN	Wednesday active			
DE	Mittwoch aktiv			
CL2	{0}	{10}	{10c}	{20c}
1672	✓	✓	✓	✓

Timer: Weekly time set points Wednesday: days

Yes / No

Please enter the days of the weekly workdays.

**Wednesday** ..... **Yes** - The switch point is enabled every Wednesday  
**No** - The switch point is disabled every Wednesday

EN	Thursday active			
DE	Donnerstag aktiv			
CL2	{0}	{10}	{10c}	{20c}
1673	✓	✓	✓	✓

Timer: Weekly time set points Thursday: days

Yes / No

Please enter the days of the weekly workdays.

**Thursday** ..... **Yes** - The switch point is enabled every Thursday  
**No** - The switch point is disabled every Thursday

EN	Friday active			
DE	Freitag aktiv			
CL2	{0}	{10}	{10c}	{20c}
1674	✓	✓	✓	✓

Timer: Weekly time set points Friday: days

Yes / No

Please enter the days of the weekly workdays.

**Friday** ..... **Yes** - The switch point is enabled every Friday  
**No** - The switch point is disabled every Friday

EN	Saturday active			
DE	Samstag aktiv			
CL2	{0}	{10}	{10c}	{20c}
1675	✓	✓	✓	✓

Timer: Weekly time set points Saturday: days

Yes / No

Please enter the days of the weekly workdays.

**Saturday** ..... **Yes** - The switch point is enabled every Saturday  
**No** - The switch point is disabled every Saturday

EN	Sunday active			
DE	Sonntag aktiv			
CL2	{0}	{10}	{10c}	{20c}
1676	✓	✓	✓	✓

Timer: Weekly time set points Sunday: days

Yes / No

Please enter the days of the weekly workdays.

**Sunday** ..... **Yes** - The switch point is enabled every Sunday  
**No** - The switch point is disabled every Sunday

## Configure Counters



### Configure Counters: Maintenance Call

A maintenance call will be issued if the configured number of maintenance hours has expired or the configured number of days has expired since the last maintenance.

In case of a maintenance call, the display indicates "**Mainten. days exceeded**" or "**Mainten. hours exceeded**".

EN	Maintenance hours			
DE	Wartungsintervall Stunden			
CL2	{0}	{1o}	{1oc}	{2oc}
2550	✓	✓	✓	✓

Counter: Maintenance interval 'Hours'

0 to 9,999 h

④ To disable the maintenance "hours" counter configure "0" for this entry.

This parameter defines the remaining hours until the next maintenance call occurs. Once the generator has been operated for the number of hours configured here, a maintenance message is displayed.

If the maintenance counter is reset either by the push-buttons at the front panel (refer to manual 37225), or by configuring the parameter "Reset maintenance call" to "Yes" (parameter 2562 on page 247), the maintenance counter is reset to the configured value.

EN	Reset maintenance period hrs			
DE	Wartungsstunden rücksetzen			
CL2	{0}	{1o}	{1oc}	{2oc}
2562	✓	✓	✓	✓

Counter: Reset maintenance call counter 'Hours'

Yes / No

If this parameter is configured to "Yes" the maintenance "hours" counter is reset to the configured value. Once the counter has been reset, the control unit changes this parameter to "No".

EN	Maintenance days			
DE	Wartungsintervall Tage			
CL2	{0}	{1o}	{1oc}	{2oc}
2551	✓	✓	✓	✓

Counter: Maintenance interval 'Days'

0 to 999 days

④ To disable the maintenance "days" counter configure "0" for this entry.

This parameter defines the remaining days until the next maintenance call occurs. Once the configured number of days has expired since the last maintenance, a maintenance message is displayed.

If the maintenance counter is reset either by the push-buttons at the front panel (refer to manual 37225), or by configuring the parameter "Reset maintenance call" to "Yes" (parameter 2563 on page 247), the maintenance counter is reset to the configured value.

EN	Reset maintenance period days			
DE	Wartungstage rücksetzen			
CL2	{0}	{1o}	{1oc}	{2oc}
2563	✓	✓	✓	✓

Counter: Reset maintenance call counter 'Days'

Yes / No

If this parameter is configured to "Yes" the maintenance "days" counter is reset to the configured value. Once the counter has been reset, the control unit changes this parameter to "No".

EN	Code level for reset maint.			
DE	Codeebene für Wartung rückset.			
CL2	{0}	{1o}	{1oc}	{2oc}
2567	✓	✓	✓	✓

Counter: Code level for resetting the maintenance call

0 to 3

This parameter determines the required code level for resetting the counter "Maintenance call in...". User with a lower code level may not access this function.

The following code levels exist:

- 3 = Commissioner
- 2 = Temporary commissioner
- 1 = Service level
- 0 = Operator

## Configure Counters: Operation Hours, kWh, and kvarh

EN	Counter value preset			
DE	Zähler-Setzwert			
CL2	{0}	{1o}	{1oc}	{2oc}
2515	✓	✓	✓	✓

### Counter: Set point value for counters

0 to 99,999,999

This value is utilized to set the following counters:

- operation hours counter
- kWh counter
- kvarh counter

The number entered into this parameter is the number that will be set to the parameters listed above when they are enabled.

EN	Set operation hours in 0.00h			
DE	Betriebsstd. setzen in 0.00h			
CL2	{0}	{1o}	{1oc}	{2oc}
2554	✓	✓	✓	✓

### Counter: Set operation hours counter

Yes / No

**Yes** ..... The current value of this counter is overwritten with the value configured in "set point value for counters". After the counter has been (re)set, this parameter changes back to "No" automatically.

**No** ..... The value of this counter is not changed.

EN	Gen. active power [0.00MWh]			
DE	Gen. Wirkarbeit [0.00MWh]			
CL2	{0}	{1o}	{1oc}	{2oc}
2510	✓	✓	✓	✓

### Counter: Set kWh counter

Yes / No

**Yes** ..... The current value of this counter is overwritten with the value configured in "set point value for counters". After the counter has been (re)set, this parameter changes back to "No" automatically.

**No** ..... The value of this counter is not changed.

EN	Gen. react. power [0.00Mvarh]			
DE	Gen. Blindarbeit [0.00Mvarh]			
CL2	{0}	{1o}	{1oc}	{2oc}
2511	✓	✓	✓	✓

### Counter: Set kvarh counter

Yes / No

**Yes** ..... The current value of this counter is overwritten with the value configured in "set point value for counters". After the counter has been (re)set, this parameter changes back to "No" automatically.

**No** ..... The value of this counter is not changed.

EN	Gen. -react. power [0.00Mvarh]			
DE	Gen. -Blindarbeit [0.00Mvarh]			
CL2	{0}	{1o}	{1oc}	{2oc}
2513	✓	✓	✓	✓

### Counter: Set kvarh counter

Yes / No

**Yes** ..... The current value of this counter is overwritten with the value configured in "set point value for counters". After the counter has been (re)set, this parameter changes back to "No" automatically.

**No** ..... The value of this counter is not changed.



## NOTE

Example: The counter value preset (parameter 2515 on page 248) is configured to "3456".

If parameter 2554 will be configured to Yes, the operation hour counter will be set to 3456h.

If parameter 2510 will be configured to Yes, the active energy counter will be set to 34.56MWh.



Configure Counters: Start Counter

EN	Counter value preset				Counter: Set point value for start counter	0 to 65535
	Zähler-Setzwert					
CL2	{0}	{10}	{100}	{200}	This parameter defines the number of times the control unit registers a start of the generator set. The number entered here will overwrite the current displayed value after confirming with parameter 2542 on page 249.	
2541	✓	✓	✓	✓		

EN	Set number of starts				Counter: Set start counter	Yes / No
	Anzahl Starts setzen					
CL2	{0}	{10}	{100}	{200}	<b>Yes</b> ..... The current value of the start counter is overwritten with the value configured in "Set point value for start counter". After the counter has been (re)set, this parameter changes back to "No" automatically. <b>No</b> ..... The value of this counter is not changed..	
2542	✓	✓	✓	✓		

# Appendix A. Miscellaneous

## Alarm Classes



The control functions are structured in the following alarm classes:

Alarm class	Visible in the display	LED "Alarm" & horn	Relay "Command: open GCB"	Shut-down engine	Engine blocked until ack. sequence has been performed
<b>A</b>	<b>yes</b> <b>Warning Alarm</b> This alarm does not interrupt the unit operation. A message output without a centralized alarm occurs: ⇒ Alarm text.	<b>no</b>	<b>no</b>	<b>no</b>	<b>no</b>
<b>B</b>	<b>yes</b> <b>Warning Alarm</b> This alarm does not interrupt the unit operation. An output of the centralized alarm occurs and the command variable 3.05 (horn) is issued. ⇒ Alarm text + flashing LED "Alarm" + Relay centralized alarm (horn).	<b>yes</b>	<b>no</b>	<b>no</b>	<b>no</b>
<b>C</b>	<b>yes</b> <b>Shutdown Alarm</b> With this alarm the GCB is opened and the engine is stopped. Coasting occurs. ⇒ Alarm text + flashing LED "Alarm" + Relay centralized alarm (horn) + GCB open + Coasting + Engine stop.	<b>yes</b>	<b>soft unloading</b>	<b>cool down time</b>	<b>yes</b>
<b>D</b>	<b>yes</b> <b>Shutdown Alarm</b> With this alarm the GCB is opened and the engine is stopped. Coasting occurs. ⇒ Alarm text + flashing LED "Alarm" + Relay centralized alarm (horn) + GCB open + Coasting + Engine stop.	<b>yes</b>	<b>immediately</b>	<b>cool down time</b>	<b>yes</b>
<b>E</b>	<b>yes</b> <b>Shutdown Alarm</b> With this alarm the GCB is opened immediately and the engine is stopped. ⇒ Alarm text + flashing LED "Alarm" + Relay centralized alarm (horn)+ GCB open + Engine stop.	<b>yes</b>	<b>soft unloading</b>	<b>immediately</b>	<b>yes</b>
<b>F</b>	<b>yes</b> <b>Shutdown Alarm</b> With this alarm the GCB is opened immediately and the engine is stopped. ⇒ Alarm text + flashing LED "Alarm" + Relay centralized alarm (horn)+ GCB open + Engine stop.	<b>yes</b>	<b>immediately</b>	<b>immediately</b>	<b>yes</b>
<b>Control</b>	<b>no</b> <b>Control Signal</b> This signal issues a control command only. It may be assigned to a discrete input for example to get a control signal, which may be used in the <a href="#">LogicsManager</a> . No alarm message and no entry in the alarm list or the event history will be issued. This signal is always self-acknowledging, but considers a delay time and may also be configured with an engine delay.	<b>no</b>	<b>no</b>	<b>no</b>	<b>no</b>



### CAUTION

If an alarm of class C, D, or E is present and the GCB cannot be opened, the engine will not be stopped. This can only be achieved by enabling GCB monitoring (parameter 2600 on page 112) with the alarm class configured to "F" (parameter 2601 on page 112).



### NOTE

If an alarm has been configured with a shutdown alarm that has been enabled to self-acknowledge, and has been configured as engine delayed the following scenario may happen:

- The alarm shuts down the engine because of its alarm class.
- Due to the engine stopping, all engine delayed alarms are ignored.
- The alarm class is acknowledged automatically.
- The alarm will self-acknowledge and clear the fault message that shut the engine down. This prevents the fault from being analyzed. After a short delay, the engine will restart.
- After the engine monitoring delay expires, the fault that originally shut down the engine will do so again. This cycle will continue to repeat until corrected.

Conversion Factors



Temperature

°C ⇔ °F	°F ⇔ °C
$T\text{ [°F]} = (T\text{ [°C]} \times 1.8) + 32$	$T\text{ [°C]} = (T\text{ [°F]} - 32) / 1.8$

Pressure

bar ⇔ psi	psi ⇔ bar
$P\text{ [psi]} = P\text{ [bar]} \times 14.503$	$P\text{ [bar]} = P\text{ [psi]} / 14.503$

## Appendix B.

# LogicsManager

The *LogicsManager* is used to customize the sequence of events in the control **unit** such as the start command of the engine or the operation of control unit relay outputs. For example, the start routine may be programmed so that it requires the closing of a discrete input or a preset time of day. Depending on the application mode of the unit, the number of available relays that may be programmed with the *LogicsManager* will vary. Two independent time delays are provided for the configured action to take place and be reset.

### Structure and Description of the *LogicsManager*

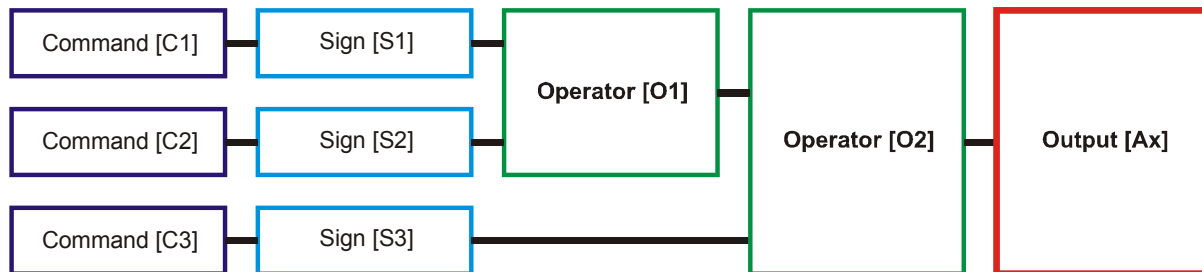


Figure 3-31: *LogicsManager* - function overview

- **Command (variable)** - A list of over 400 parameters and functions is provided for the command inputs. Examples of the parameters that may be configured into these commands are generator undervoltage thresholds 1 and 2, start fail, and cool down. These command variables are used to control the output function or relay. Refer to Logical Command Variables starting on page 258 for a complete list of all command variables.
- **Sign** - The sign field can be used to invert the state of the command or to fix its output to a logical true or false if the command is not needed. Setting the sign to the NOT state changes the output of the command variable from true to false or vice versa.
- **Operator** - A logical device such as AND or OR.
- **(Logical) output** - The action or control sequence that occurs when all parameters set into the *LogicsManager* are met.




[Cx] - Command {x}	[Sx] - Sign {x}	[Ox] - Operator {x}	[Ax] - Output {x}
The description and the tables of all values, flags, and internal functions that are able to combine via the <i>LogicsManager</i> can be found in the Logical Command Variables section starting on page 258.	<b>Value {[Cx]}</b> The value [Cx] is passed 1:1.	<b>AND</b> Logical AND	The description and the tables of all logical outputs, flags, and functions that are able to combine via the <i>LogicsManager</i> can be found in the Logical Outputs section starting on page 254.
	<b>NOT Value {[Cx]}</b> The opposite of the value [Cx] is passed.	<b>NAND</b> Logical negated AND	
		<b>OR</b> Logical OR	
	<b>0 [False; always "0"]</b> The value [Cx] is ignored and this logic path will always be FALSE.	<b>NOR</b> Logical negated OR	
		<b>XOR</b> Exclusive OR	
	<b>1 [True; always "1"]</b> The value [Cx] is ignored and this logic path will always be TRUE.	<b>NXOR</b> Exclusive negated OR (See Table 3-71 for symbols)	
			

Table 3-70: *LogicsManager* - command overview

Configuration of the Command Chain

Using the values specified in the above table, the chain of commands of the *LogicsManager* (for example: operating the relays, setting the flags, specification of the automatic functions) is configured as follows:

[Ax] = ( ( [C1] & [S1] ) & [O1] & ( [C2] & [S2] ) ) & [O2] & ( [C3] & [S3] )

Programming example for the *LogicsManager*:

Relay [R2] shall energize, whenever "Discrete input [D2]" is energized "AND" the control does "NOT" have a fault that is "Alarm class C" "AND" does "NOT" have a fault that is "Alarm class D" ⇨

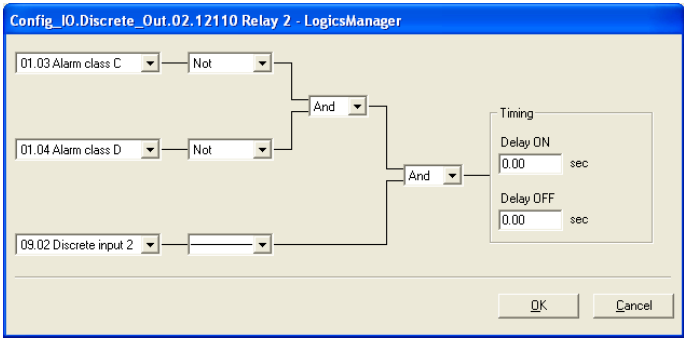


Figure 3-32: *LogicsManager* - display in Toolkit

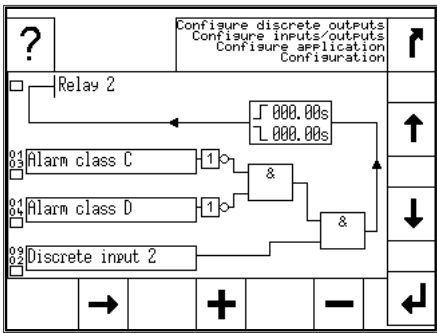


Figure 3-33: *LogicsManager* - display on LCD screen

Logical Symbols



The following symbols are used for the graphical programming of the *LogicsManager*.

ToolKit	AND			OR			NAND			NOR			NXOR			XOR		
easYgen																		
DIN 40 700																		
ASA US MIL																		
IEC617-12																		
Truth table	x1	x2	y	x1	x2	y	x1	x2	y	x1	x2	y	x1	x2	y	x1	x2	y
	0	0	0	0	0	0	0	0	1	0	0	1	0	0	1	0	0	0
	0	1	0	0	1	1	0	1	1	0	1	0	0	1	0	0	1	1
	1	0	0	1	0	1	1	0	1	1	0	0	1	0	0	1	0	1
	1	1	1	1	1	1	1	1	0	1	1	0	1	1	1	1	1	0

Table 3-71: *LogicsManager* - logical symbols

## Logical Outputs



The logical outputs or combinations may be grouped into three categories:

- Internal logical flags
- Internal functions
- Relay outputs



### NOTE

The numbers of the logical outputs in the third column may again be used as input variable for other outputs in the [LogicsManager](#).

### Logical Outputs: Internal Flags

16 internal logical flags may be programmed to activate/deactivate functions. This permits more than 3 commands to be included in a logical function. They may be used like "auxiliary flags".

Name	Function	Number
Flag 1	Internal flag 1	00.01
Flag 2	Internal flag 2	00.02
Flag 3	Internal flag 3	00.03
Flag 4	Internal flag 4	00.04
Flag 5	Internal flag 5	00.05
Flag 6	Internal flag 6	00.06
Flag 7	Internal flag 7	00.07
Flag 8	Internal flag 8	00.08
Flag 9	Internal flag 9	00.30
Flag 10	Internal flag 10	00.31
Flag 11	Internal flag 11	00.32
Flag 12	Internal flag 12	00.33
Flag 13	Internal flag 13	00.34
Flag 14	Internal flag 14	00.35
Flag 15	Internal flag 15	00.36
Flag 16	Internal flag 16	00.37

## Logical Outputs: Internal Functions

The following logical functions may be used to activate/deactivate functions.

Name	Function	Number
Start request in AUTO	Start in AUTOMATIC operating mode (parameter 12120 on page 182)	00.09
Stop request in AUTO	Stop in AUTOMATIC operating mode (parameter 12190 on page 182)	00.10
Inhibit emergency run	Blocking or interruption of an emergency power operating in AUTOMATIC operating mode (parameter 12200 on page 181)	00.11
Undelay close GCB	Immediately closing of the GCB after engine start without waiting for the engine delayed monitoring and generator stable timer to expire (parameter 12210 on page 147)	00.12
Constant idle run	Enables idle/rated speed modes (parameter 12550 on page 179).	00.14
External acknowledge	The alarm acknowledgement is performed from an external source (parameter 12490 on page 122)	00.15
Operation mode AUTO	Activation of the AUTOMATIC operating mode (parameter 12510 on page 196)	00.16
Operation mode MAN	Activation of the MANUAL operating mode (parameter 12520 on page 196)	00.17
Operation mode STOP	Activation of the STOP operating mode (parameter 12530 on page 196)	00.18
Start without load	Starting the engine without closing the GCB (parameter 12540 on page 196)	00.19
Automatic idle mode	Automatic idle mode (blocks the undervoltage, underfrequency, and underspeed monitoring for a configured time automatically, parameter 12570 on page 179)	00.20
Discrete f/P +	Raise frequency / real power set point (parameter 12900 on page 231)	00.21
Discrete f/P -	Lower frequency / real power set point (parameter 12901 on page 231)	00.22
Discrete V/PF +	Raise voltage / power factor set point (parameter 12902 on page 231)	00.23
Discrete V/PF -	Lower voltage / power factor set point (parameter 12903 on page 231)	00.24
Freq. Droop active	Activation of the frequency droop (parameter 12904 on page 209)	00.25
Volt. Droop active	Activation of the voltage droop (parameter 12905 on page 220)	00.26
Ext. mains decoupling requested	Activation of the mains decoupling function (parameter 12922 on page 75)	00.27
Critical mode	Activation of critical mode operation (parameter 12220 on page 201)	00.28
Firing speed	Firing (ignition) speed is reached (parameter 12500 on page 175)	00.29
Synchronization mode CHECK	Activation of CHECK synchronization mode (parameter 12906 on page 149)	00.38
Synchroniz. mode PERMISSIVE	Activation of PERMISSIVE synchronization mode (parameter 12907 on page 149)	00.39
Synchronization mode RUN	Activation of RUN synchronization mode (parameter 12908 on page 149)	00.40
Frequency setpoint 2	Activates the frequency set point 2 (parameter 12918 on page 208)	00.81
Load setpoint 2	Activates the load set point 2 (parameter 12919 on page 213)	00.82
Voltage setpoint 2	Activates the voltage set point 2 (parameter 12920 on page 219)	00.83
Power factor setpoint 2	Activates the power factor set point 2 (parameter 12921 on page 224)	00.84
Enable MCB	Enables the MCB (parameter 12923 on page 148)	00.85
Load-dependent start/stop	Activation of load-dependent start/stop (parameter 12930 on page 186)	00.86

## Priority Hierarchy of the Logical Outputs

The following table contains the priority relationships between the start conditions of the logical outputs in the *LogicsManager*:

Prioritized function	overrides	Reaction
Critical mode	Stop req. in Auto	A start will still be performed.
	Start req. in Auto	The behavior of the system depends on the configuration of the related parameters.
Stop req. in Auto	Start req. in Auto	No start will be performed.
	Emergency power	No start will be performed.
	Idle mode	No start will be performed.
Start w/o load	Start req. in Auto	The GCB remains open / will be opened.
Emergency power	Start w/o load	The GCB will be closed nevertheless.
	Critical mode	The GCB will be closed nevertheless. The alarm class management is still performed like for the critical mode. If emergency power is already enabled and the critical mode will be enabled then, a pause time may be configured for the emergency power operation.
Inhibit emergency run	Emergency power	No start will be performed.
	Emergency power during Start w/o load	The generator keeps on running without taking over load.



## Logical Outputs: Relay Outputs

All relays may be controlled directly by the *LogicsManager* depending on the respective application mode.

Name	Function	Number
Relay 1 (Ready for operation OFF)	If this logical output becomes true, the relay output 1 will be activated	00.41
Relay 2	If this logical output becomes true, the relay output 2 will be activated	00.42
Relay 3	If this logical output becomes true, the relay output 3 will be activated	00.43
Relay 4	If this logical output becomes true, the relay output 4 will be activated	00.44
Relay 5	If this logical output becomes true, the relay output 5 will be activated	00.45
Relay 6	If this logical output becomes true, the relay output 6 will be activated	00.46
Relay 7	If this logical output becomes true, the relay output 7 will be activated	00.47
Relay 8	If this logical output becomes true, the relay output 8 will be activated	00.48
Relay 9	If this logical output becomes true, the relay output 9 will be activated	00.49
Relay 10	If this logical output becomes true, the relay output 10 will be activated	00.50
Relay 11	If this logical output becomes true, the relay output 11 will be activated	00.51
Relay 12	If this logical output becomes true, the relay output 12 will be activated	00.52
External DO 1	If this logical output becomes true, the external relay output 1 will be activated	00.63
External DO 2	If this logical output becomes true, the external relay output 2 will be activated	00.64
External DO 3	If this logical output becomes true, the external relay output 3 will be activated	00.65
External DO 4	If this logical output becomes true, the external relay output 4 will be activated	00.66
External DO 5	If this logical output becomes true, the external relay output 5 will be activated	00.67
External DO 6	If this logical output becomes true, the external relay output 6 will be activated	00.68
External DO 7	If this logical output becomes true, the external relay output 7 will be activated	00.69
External DO 8	If this logical output becomes true, the external relay output 8 will be activated	00.70
External DO 9	If this logical output becomes true, the external relay output 9 will be activated	00.71
External DO 10	If this logical output becomes true, the external relay output 10 will be activated	00.72
External DO 11	If this logical output becomes true, the external relay output 11 will be activated	00.73
External DO 12	If this logical output becomes true, the external relay output 12 will be activated	00.74
External DO 13	If this logical output becomes true, the external relay output 13 will be activated	00.75
External DO 14	If this logical output becomes true, the external relay output 14 will be activated	00.76
External DO 15	If this logical output becomes true, the external relay output 15 will be activated	00.77
External DO 16	If this logical output becomes true, the external relay output 16 will be activated	00.78

Table 3-70 shows the function of each relay in each of the application modes.

Relay Number	Term.	Application mode (parameter 3401 on page 134)			
		None {0}	GCB open {1o}	GCB open/close {1oc}	GCB/MCB open/close {2oc}
Internal relay outputs, board #1					
[R1]	41/42	'Ready for operation OFF'; additionally programmable with <i>LogicsManager</i>			
[R2]	43/46	<i>LogicsManager</i> ; pre-assigned with 'Centralized alarm (horn)'			
[R3]	44/46	<i>LogicsManager</i> ; pre-assigned with 'Starter'			
[R4]	45/46	<i>LogicsManager</i> ; pre-assigned with 'Diesel: Fuel solenoid, Gas: Gas valve'			
[R5]	47/48	<i>LogicsManager</i> ; pre-assigned with 'Diesel: Preglow, Gas: Ignition'			
[R6]	49/50	<i>LogicsManager</i>		Command: close GCB	
[R7]	51/52	<i>LogicsManager</i>	Command: open GCB		
[R8]	53/54	<i>LogicsManager</i>			Command: close MCB
[R9]	55/56	<i>LogicsManager</i>			Command: open MCB
[R10]	57/60	<i>LogicsManager</i> ; pre-assigned with 'Auxiliary services'			
[R11]	58/60	<i>LogicsManager</i> ; pre-assigned with 'Alarm class A, B active'			
[R12]	59/60	<i>LogicsManager</i> ; pre-assigned with 'Alarm class C, D, E, F active'			

Table 3-72: Relay outputs - terminal assignment

## Logical Command Variables



The logical command variables are grouped into different categories:

- Group 00: Flags condition 1
- Group 01: Alarm system
- Group 02: Systems condition
- Group 03: Engine control
- Group 04: Applications condition
- Group 05: Engine related alarms
- Group 06: Generator related alarms
- Group 07: Mains related alarms
- Group 08: System related alarms
- Group 09: Discrete inputs
- Group 10: Analog inputs
- Group 11: Clock and timer
- Group 12: External DIs 1
- Group 13: Discrete outputs
- Group 14: External DOs 1
- Group 15: Flexible limits
- Group 18: Transistor outputs

## Logical Command Variables: Group 00: Flags Condition 1

### Flags condition 1, Logic command variables 00.01-00.86

Internal Flags are the result of the output of the logic ladders from Flag 1 to 16. Flags are internal logic that can be sent to other flags or Command variables.

No.	ID	Name	Function	Note
00.01	0	Flag 1	Internal flag 1	Internal calculation; descr. page 254
00.02	1	Flag 2	Internal flag 2	Internal calculation; descr. page 254
00.03	2	Flag 3	Internal flag 3	Internal calculation; descr. page 254
00.04	3	Flag 4	Internal flag 4	Internal calculation; descr. page 254
00.05	4	Flag 5	Internal flag 5	Internal calculation; descr. page 254
00.06	5	Flag 6	Internal flag 6	Internal calculation; descr. page 254
00.07	6	Flag 7	Internal flag 7	Internal calculation; descr. page 254
00.08	7	Flag 8	Internal flag 8	Internal calculation; descr. page 254
00.09	8	Start request in AUTO	Start in AUTOMATIC operating mode	Internal calculation; descr. page 182
00.10	9	Stop request in AUTO	Stop in AUTOMATIC operating mode	Internal calculation; descr. page 182
00.11	10	Inhibit emergency run	Blocking or interruption of an emergency power operation in AUTOMATIC operating mode	Internal calculation; descr. page 181
00.12	11	Undelay close GCB	Immediately closing of the GCB without waiting for the engine delayed monitoring timer to expire	Internal calculation; descr. page 147
00.13	12	Reserved		
00.14	13	Constant idle run	Constant idle speed mode enabled (blocks alarm for undervoltage, underfrequency, and underspeed constantly)	Internal calculation; descr. page 179
00.15	14	External acknowledge	The alarm acknowledgement is performed from an external source	Internal calculation; descr. page 122
00.16	15	Operation mode AUTO	Activation of the AUTOMATIC operating mode	Internal calculation; descr. page 196
00.17	16	Operation mode MAN	Activation of the MANUAL operating mode	Internal calculation; descr. page 196
00.18	17	Operation mode STOP	Activation of the STOP operating mode	Internal calculation; descr. page 196
00.19	18	Start w/o load	Starting the engine without closing the GCB	Internal calculation; descr. page 196
00.20	19	Automatic idle mode	Automatic idle speed mode (blocks alarm for undervoltage, underfrequency, and underspeed automatically for a set time)	Internal calculation; descr. page 179
00.21	20	Discrete f/P +	Raise frequency / real power set point	Internal calculation; descr. page 231
00.22	21	Discrete f/P -	Lower frequency / real power set point	Internal calculation; descr. page 231
00.23	22	Discrete V/PF +	Raise voltage / power factor set point	Internal calculation; descr. page 231
00.24	23	Discrete V/PF -	Lower voltage / power factor set point	Internal calculation; descr. page 231
00.25	24	Freq. Droop active	Frequency droop active	Internal calculation; descr. page 209
00.26	25	Volt. Droop active	Voltage droop active	Internal calculation; descr. page 220
00.27	26	Mains failure by external device	External mains failure detected	Internal calculation; descr. page 75
00.28	27	Critical mode	Activation of critical mode operation	Internal calculation; descr. page 197
00.29	28	Firing speed	Firing (ignition) speed is reached.	Internal calculation; descr. page 174

No.	ID	Name	Function	Note
00.30	29	Flag 9	Internal flag 9	Internal calculation; descr. page 254
00.31	30	Flag 10	Internal flag 10	Internal calculation; descr. page 254
00.32	31	Flag 11	Internal flag 11	Internal calculation; descr. page 254
00.33	32	Flag 12	Internal flag 12	Internal calculation; descr. page 254
00.34	33	Flag 13	Internal flag 13	Internal calculation; descr. page 254
00.35	34	Flag 14	Internal flag 14	Internal calculation; descr. page 254
00.36	35	Flag 15	Internal flag 15	Internal calculation; descr. page 254
00.37	36	Flag 16	Internal flag 16	Internal calculation; descr. page 254
00.38	37	Syn. mode CHECK	Activation of CHECK synchronization mode	Internal calculation; descr. page 149
00.39	38	Syn. mode PERMIS.	Activation of PERMISSIVE synchronization mode	Internal calculation; descr. page 149
00.40	39	Syn. mode RUN	Activation of RUN synchronization mode	Internal calculation; descr. page 149
00.41	40	Relay 1		TRUE, if the <i>LogicsManager</i> condition driving this relay is fulfilled; refer to page 162 for more information
00.42	41	Relay 2		
00.43	42	Relay 3		
00.44	43	Relay 4		
00.45	44	Relay 5		
00.46	45	Relay 6		
00.47	46	Relay 7		
00.48	47	Relay 8		
00.49	48	Relay 9		
00.50	49	Relay 10		
00.51	50	Relay 11		
00.52	51	Relay 12		
00.53	52	Reserved		
00.54	53	Reserved		
00.55	54	Reserved		
00.56	55	Reserved		
00.57	56	Reserved		
00.58	57	Reserved		
00.59	58	Reserved		
00.60	59	Reserved		
00.61	60	Reserved		
00.62	61	Reserved		
00.63	62	External relay DO 1		TRUE, if the <i>LogicsManager</i> condition driving this relay is fulfilled; refer to page 163 for more information
00.64	63	External relay DO 2		
00.65	64	External relay DO 3		
00.66	65	External relay DO 4		
00.67	66	External relay DO 5		
00.68	67	External relay DO 6		
00.69	68	External relay DO 7		
00.70	69	External relay DO 8		
00.71	70	External relay DO 9		
00.72	71	External relay DO 10		
00.73	72	External relay DO 11		
00.74	73	External relay DO 12		
00.75	74	External relay DO 13		
00.76	75	External relay DO 14		
00.77	76	External relay DO 15		
00.78	77	External relay DO 16		
00.79	78	Reserved		
00.80	79	Reserved		
00.81	80	Setpoint 2 frequency	Activation of frequency set point 2	
00.82	81	Setpoint 2 load	Activation of load set point 2	
00.83	82	Setpoint 2 voltage	Activation of voltage set point 2	
00.84	83	Setpoint 2 power factor	Activation of power factor set point 2	
00.85	84	Enable MCB	MCB is enabled	
00.86	85	LD start/stop	Activation of load-dependent start/stop	Internal calculation; descr. page 183

## Logical Command Variables: Group 01: Alarm System

### Alarm system, Logic command variables 01.01-01.11

Alarm classes may be configured as command variables for all logical outputs in the *LogicsManager*. Refer to page 250 for a description of the alarm classes.

No.	ID	Name / Function	Note
01.01	99	Alarm class A	TRUE as long as this alarm class is active
01.02	100	Alarm class B	TRUE as long as this alarm class is active
01.03	101	Alarm class C	TRUE as long as this alarm class is active
01.04	102	Alarm class D	TRUE as long as this alarm class is active
01.05	103	Alarm class E	TRUE as long as this alarm class is active
01.06	104	Alarm class F	TRUE as long as this alarm class is active
01.07	105	All alarm classes	TRUE as long as at least one of the alarm classes A/B/C/D/E/F is active
01.08	106	Warning alarm	TRUE as long as at least one of the alarm classes A/B is active
01.09	107	Stopping alarm	TRUE as long as one of alarm classes C / D / E / F is active
01.10	108	Centralized alarm	TRUE as long as at least one of the alarm classes B/C/D/E/F is active
01.11	109	New alarm triggered	TRUE if any alarm has been triggered until it is acknowledged
01.12	110	Reserved	
01.13	111	Reserved	
01.14	112	Reserved	
01.15	113	Reserved	
01.16	114	Reserved	
01.17	115	Reserved	
01.18	116	Reserved	
01.19	117	Reserved	
01.20	118	Reserved	

## Logical Command Variables: Group 02: Systems Condition

### Systems condition, Logic command variables 02.01-02.22

The status of the system may be used as command variable in a logical output to set parameters for customized operations.

No.	ID	Name	Function	Note
02.01	119	Firing speed detected	Firing speed recognized (via MPU/gen. frequency / <i>LogicsManager</i> )	TRUE as long as at least firing speed is measured (either via the MPU, the generator frequency, or the <i>LogicsManager</i> output "ignition speed reached")
02.02	120	Speed detected	Speed recognized (via MPU/gen. frequency / <i>LogicsManager</i> )	TRUE as long as a speed is measured (this can be lower than the ignition speed; either via the MPU, the generator frequency, or the <i>LogicsManager</i> output "ignition speed reached")
02.03	121	Generator voltage ok	Generator voltage within operating window	TRUE as long as the generator voltage is within the operating window
02.04	122	Generator frequency ok	Generator frequency within operating window	TRUE as long as the generator frequency is within the operating window
02.05	123	Generator ok	Generator voltage and frequency within operating windows	TRUE as long as the generator voltage and frequency are within the operating windows (02.03. and 02.04 are TRUE)
02.06	124	Busbar 1 voltage ok	Busbar 1 voltage within generator voltage operating window	TRUE as long as the busbar 1 voltage is within the generator voltage operating window
02.07	125	Busbar 1 frequency ok	Busbar 1 frequency within frequency voltage operating window	TRUE as long as the busbar 1 frequency is within the generator frequency operating window
02.08	126	Busbar 1 ok	Busbar 1 voltage and frequency within generator voltage and frequency operating windows	TRUE as long as the busbar 1 voltage and frequency are within the generator voltage operating windows (02.06. and 02.07 are TRUE)
02.09	127	Mains voltage ok	Mains voltage within operating window	TRUE as long as the mains voltage is within the operating window
02.10	128	Mains frequency ok	Mains frequency within operating window	TRUE as long as the mains frequency is within the operating window
02.11	129	Mains ok	Mains voltage and frequency within operating windows	TRUE as long as the mains voltage and frequency are within the operating windows (02.09. and 02.10 are TRUE)
02.12	130	Generator rotation CCW	Generator voltage: rotating direction CCW	only possible for three-phase generator voltage measurement
02.13	131	Generator rotation CW	Generator voltage: rotating direction CW	
02.14	132	Mains rotation CCW	Mains voltage: rotating direction CCW	only possible for three-phase mains voltage measurement
02.15	133	Mains rotation CW	Mains voltage: rotating direction CW	
02.16	134	Busbar 1 rotation CCW	Busbar voltage: rotating direction CCW	only possible for three-phase busbar voltage measurement
02.17	135	Busbar 1 rotation CW	Busbar voltage: rotating direction CW	
02.18	136	Reserved		
02.19	137	Reserved		
02.20	138	Reserved		
02.21	139	Busbar 1 is dead	Busbar 1 is dead	TRUE as long as the busbar voltage is below the value configured in parameter 5820 (Dead bus detection max. volt.)
02.22	140	Reserved		

## Logical Command Variables: Group 03: Engine Control

### Engine control, Logic command variables 03.01-03.31

These variables may be used as command variable in a logical output to set parameters for customized operations.

No.	ID	Name / Function	Note
03.01	179	Auxiliary services	
03.02	180	Starter	
03.03	181	Reserved	
03.04	182	Preglow (Diesel) Ignition (Gas)	
03.05	183	Horn (active)	TRUE if alarm class B to F is activated until the time until horn reset is expired or it is acknowledged for the first time.
03.06	184	Engine released	TRUE if the engine is requested and the start is released
03.07	185	Engine delay over (engine delayed monitoring expired)	TRUE after expiration of the "delayed engine monitoring" timer until the fuel relay is de-energized
03.08	186	Breaker delay over (engine delayed monitoring expired)	TRUE after expiration of the "breaker delay" timer until the fuel relay is de-energized (= CB may be closed)
03.09	187	Reserved	
03.10	188	Reserved	
03.11	189	Reserved	
03.12	190	Reserved	
03.13	191	Blinking lamp ECU	TRUE as soon as the ECU activates the diagnosis light (only for EMS Scania ECU). This command variable is only active if remote control of the ECU via easYgen is activated.
03.14	192	ECU special ignition	TRUE as long as a reset or read-out of the Scania S6 ECU blink code is requested (only for EMS Scania ECU). This command variable is only active if remote control of the ECU via easYgen is activated.
03.15	193	Reserved	
03.16	194	Reserved	
03.17	195	Reserved	
03.18	196	Reserved	
03.19	197	Reserved	
03.20	198	Three-position controller output: frequency / active power (governor) raise	
03.21	199	Three-position controller output: frequency / active power (governor) lower	
03.22	200	Three-position controller output: voltage / reactive power (AVR) raise	
03.23	201	Three-position controller output: voltage / reactive power (AVR) lower	
03.24	202	Reserved	
03.25	203	Reserved	
03.26	204	Reserved	
03.27	205	Stopping solenoid (Diesel)	
03.28	206	Operating solenoid (Diesel) Gas valve (Gas)	
03.29	207	Reserved	
03.30	208	Auxiliary services prerun	TRUE, if "Auxiliary services prerun" is active
03.31	209	Auxiliary services postrun	TRUE, if "Auxiliary services postrun" is active

## Logical Command Variables: Group 04: Applications Condition

### Applications condition, Logic command variables 4.01-04.43

These operating statuses may be used as command variable in a logical output to set parameters for customized operations.

No.	ID	Name	Function	Note
04.01	239	Auto mode	AUTOMATIC operating mode active	
04.02	240	Stop mode	STOP operating mode active	
04.03	241	Manual mode	MANUAL operating mode active	
04.04	242	Lamp test	A lamp test is being performed	TRUE if the lamp test is active
04.05	243	Acknowledge	"Acknowledge" push button has been pressed or an external acknowledgment via <a href="#">LogicsManager</a>	Note: this condition is TRUE for approx. 40 ms and must be extended utilizing a delay time
04.06	244	GCB closed	GCB is closed ("Reply GCB" = 0)	{1oc} / {2oc}
04.07	245	MCB closed	MCB is closed ("Reply MCB" = 0)	{2oc}
04.08	246	Reserved		
04.09	247	Emergency mode	Emergency power operation active	TRUE with the expiration of the emergency power delay; FALSE with the expiration of the mains setting time
04.10	248	Cool down	Engine cool-down cycle active	
04.11	249	Mains settling	Mains setting time active	Becomes TRUE with a mains failure and FALSE after the mains settling timer has expired
04.12	250	Start w/o load	Start without closing GCB is active	
04.13	251	Remote request	Request over remote control to activate a function	TRUE if the start bit is set via serial connection (ToolKit, Modbus) or CAN bus (ToolKit, CANopen)
04.14	252	Remote acknowledge	Request over remote control to acknowledge	TRUE if the acknowledgement bit is set
04.15	253	Idle run active	Idle mode is active	TRUE if the idle mode is active. This may be used to issue an "Idle" command to a speed controller.
04.16	254	Reserved		
04.17	255	Reserved		
04.18	256	Synchron. GCB active	Synchronization GCB is active	
04.19	257	Opening GCB active	Opening GCB is active	
04.20	258	Closing GCB active	Closing GCB is active	
04.21	259	Syn. MCB is active	Synchronization MCB is active	
04.22	260	Opening MCB active	Opening MCB is active	
04.23	261	Closing MCB active	Closing MCB is active	
04.24	262	Reserved		
04.25	263	Reserved		
04.26	264	Reserved		
04.27	265	Critical mode	Critical mode operation is active	
04.28	266	Generator unloading	Generator unloading sequence is active	
04.29	267	Mains unloading	Mains unloading sequence is active	
04.30	268	Power limited prerun	Prerun operation with power limitation is active	
04.31	269	Segment no.2 act	Load share group 2 is enabled	
04.32	270	Segment no.3 act	Load share group 3 is enabled	
04.33	271	Segment no.4 act	Load share group 4 is enabled	
04.34	272	LDSS Priority 2	Load-dependent start/stop priority 2 is enabled	
04.35	273	LDSS Priority 3	Load-dependent start/stop priority 3 is enabled	
04.36	274	LDSS Priority 4	Load-dependent start/stop priority 4 is enabled	



No.	ID	Name	Function	Note
04.37	275	Remote volt. setp. 2	Voltage set point 2 is enabled	
04.38	276	Remote freq. setp. 2	Frequency set point 2 is enabled	
04.39	277	Remote PF setp. 2	Power factor set point 2 is enabled	
04.40	278	Remote pwr. setp. 2	Load set point 2 is enabled	
04.41	279	Transition mode 1	Breaker transition mode alternative 1	
04.42	280	Transition mode 2	Breaker transition mode alternative 2	
04.43	281	LD start/stop	Activation of load-dependent start/stop	Internal calculation; descr. page 183

## Logical Command Variables: Group 05: Engine Related Alarms

### Engine related alarms, Logic command variables 05.01-05.15

These engine alarms may be used as command variable in a logical output to set parameters for customized operations.

No.	ID	Name / Function	Note
05.01	299	Overspeed (limit) 1	TRUE = limit value reached FALSE = alarm acknowledged
05.02	300	Overspeed (limit) 2	
05.03	301	Underspeed (limit) 1	
05.04	302	Underspeed (limit) 2	
05.05	303	Unintended stop	
05.06	304	Engine stop malfunction	
05.07	305	Speed/frequency mismatch	
05.08	306	Start fail	
05.09	307	Maintenance days exceeded	
05.10	308	Maintenance hours exceeded	
05.11	309	Charge alternator low voltage	
05.12	310	Reserved	
05.13	311	Red stop lamp	
05.14	312	Amber warning lamp	
05.15	313	EEPROM failure	
05.16	314	-free-	
05.17	315	-free-	
05.18	316	-free-	
05.19	317	-free-	
05.20	318	-free-	

## Logical Command Variables: Group 06: Generator Related Alarms

### Generator related alarms, Logic command variables 06.01-06.31

These generator alarms may be used as command variable in a logical output to set parameters for customized operations.

No.	ID	Name / Function	Note
06.01	339	Generator overfrequency (limit) 1	TRUE = limit value reached FALSE = alarm acknowledged
06.02	340	Generator overfrequency (limit) 2	
06.03	341	Generator underfrequency (limit) 1	
06.04	342	Generator underfrequency (limit) 2	
06.05	343	Generator overvoltage (limit) 1	
06.06	344	Generator overvoltage (limit) 2	
06.07	345	Generator undervoltage (limit) 1	
06.08	346	Generator undervoltage (limit) 2	
06.09	347	Generator (definite time) overcurrent (limit) 1	
06.10	348	Generator (definite time) overcurrent (limit) 2	
06.11	349	Generator (definite time) overcurrent (limit) 3	
06.12	350	Generator reverse/reduced power (limit) 1	
06.13	351	Generator reverse/reduced power (limit) 2	
06.14	352	Generator overload IOP (limit) 1	
06.15	353	Generator overload IOP (limit) 2	
06.16	354	(Generator) unbalanced load (limit) 1	
06.17	355	(Generator) unbalanced load (limit) 2	
06.18	356	Generator (voltage) asymmetry	
06.19	357	Ground fault (limit) 1	
06.20	358	Ground fault (limit) 2	
06.21	359	Generator mismatched phase rotation (rotation field alarm)	
06.22	360	(Generator) inverse time-overcurrent	
06.23	361	Generator overload MOP (limit) 1	
06.24	362	Generator overload MOP (limit) 2	
06.25	363	Generator power factor inductive (limit) 1	
06.26	364	Generator power factor inductive (limit) 2	
06.27	365	Generator power factor capacitive (limit) 1	
06.28	366	Generator power factor capacitive (limit) 2	
06.29	367	Generator active power ramp mismatch	
06.30	368	Generator unloading mismatch	
06.31	369	Out of operating range	
06.32	370	-free-	
06.33	371	-free-	
06.34	372	-free-	
06.35	373	-free-	
06.36	374	-free-	
06.37	375	-free-	
06.38	376	-free-	
06.39	377	-free-	
06.40	378	-free-	

## Logical Command Variables: Group 07: Mains Related Alarms

### Mains related alarms, Logic command variables 07.01-07.25

These mains alarms may be used as command variable in a logical output to set parameters for customized operations.

No.	ID	Function	Note
07.01	399	Reserved	TRUE = limit value reached FALSE = alarm acknowledged
07.02	400	Reserved	
07.03	401	Reserved	
07.04	402	Reserved	
07.05	403	Mains mismatched phase rotation (rotation field alarm)	
07.06	404	Mains overfrequency (limit) 1	
07.07	405	Mains overfrequency (limit) 2	
07.08	406	Mains underfrequency (limit) 1	
07.09	407	Mains underfrequency (limit) 2	
07.10	408	Mains overvoltage (limit) 1	
07.11	409	Mains overvoltage (limit) 2	
07.12	410	Mains undervoltage (limit) 1	
07.13	411	Mains undervoltage (limit) 2	
07.14	412	Mains phase shift	
07.15	413	Reserved	
07.16	414	Mains active power mismatch	
07.17	415	Mains power factor inductive (limit) 1	
07.18	416	Mains power factor inductive (limit) 2	
07.19	417	Mains power factor capacitive (limit) 1	
07.20	418	Mains power factor capacitive (limit) 2	
07.21	419	Mains import power (limit) 1	
07.22	420	Mains import power (limit) 2	
07.23	421	Mains export power (limit) 1	
07.24	422	Mains export power (limit) 2	
07.25	423	Mains decoupling	
07.26	424	-free-	
07.27	425	-free-	
07.28	426	-free-	
07.29	427	-free-	
07.30	428	-free-	

## Logical Command Variables: Group 08: System Related Alarms

### System related alarms, Logic command variables 08.01-08.33

These system alarms may be used as command variable in a logical output n to set parameters for customized operations.

No.	ID	Function	Note
08.01	459	Battery overvoltage (limit) 1	TRUE = limit value reached FALSE = alarm acknowledged
08.02	460	Battery overvoltage (limit) 2	
08.03	461	Battery undervoltage (limit) 1	
08.04	462	Battery undervoltage (limit) 2	
08.05	463	GCB fail to close	
08.06	464	GCB fail to open	
08.07	465	MCB fail to close	
08.08	466	MCB fail to open	
08.09	467	Reserved	
08.10	468	CAN J1939 communication alarm	
08.11	469	CAN interface 1 RPDO 1 no answer	
08.12	470	CAN interface 1 RPDO 2 no answer	
08.13	471	CAN interface 1 RPDO 3 no answer	
08.14	472	CAN interface 2 Function 1 no answer	
08.15	473	CAN interface 2 Function 2 no answer	
08.16	474	Parameter alignment	
08.17	475	Missing members	
08.18	476	Reserved	
08.19	477	Reserved	
08.20	478	Reserved	
08.21	479	Reserved	
08.22	480	Reserved	
08.23	481	Reserved	
08.24	482	Reserved	
08.25	483	Reserved	
08.26	484	Reserved	
08.27	485	Reserved	
08.28	486	Reserved	
08.29	487	Reserved	
08.30	488	Timeout synchronization GCB	
08.31	489	Timeout synchronization MCB	
08.32	490	Reserved	
08.33	491	Generator /busbar / mains phase rotation mismatch	
08.34	492	Reserved	

## Logical Command Variables: Group 09: Discrete Inputs

### Discrete inputs, Logic command variables 09.01-09.12

The discrete inputs may be used as command variable in a logical output to set parameters for customized operations.

No.	ID	Function	Note
09.01	519	DI 1 (Discrete input [DI 01])	TRUE = logical "1" (delay times and No/NC parameters are ignored) FALSE = logical "0" (alarm has been acknowledged or immediately after TRUE condition is not present anymore, if Control is configured as alarm class)
09.02	520	DI 2 (Discrete input [DI 02])	
09.03	521	DI 3 (Discrete input [DI 03])	
09.04	522	DI 4 (Discrete input [DI 04])	
09.05	523	DI 5 (Discrete input [DI 05])	
09.06	524	DI 6 (Discrete input [DI 06])	
09.07	525	DI 7 (Discrete input [DI 07])	
09.08	526	DI 8 (Discrete input [DI 08])	
09.09	527	DI 9 (Discrete input [DI 09])	
09.10	528	DI 10 (Discrete input [DI 10])	
09.11	529	DI 11 (Discrete input [DI 11])	
09.12	530	DI 12 (Discrete input [DI 12])	
09.13	531	Reserved	
09.14	532	Reserved	
09.15	533	Reserved	
09.16	534	Reserved	
09.17	535	Reserved	
09.18	536	Reserved	
09.19	537	Reserved	
09.20	538	Reserved	
09.21	539	Reserved	
09.22	540	Reserved	
09.23	541	Reserved	

## Logical Command Variables: Group 10: Analog Inputs

### Analog inputs, Logic command variables 10.01-10.03

The analog inputs may be used as command variable in a logical output.

No.	ID	Name / Function	Note
10.01	559	Analog input AI 01 wire break	TRUE = measured value out of range FALSE = logical "0" (alarm has been acknowledged, or immediately after TRUE condition is not present anymore, if Control is configured as alarm class)
10.02	560	Analog input AI 02 wire break	
10.03	561	Analog input AI 03 wire break	
10.04	562	Reserved	
10.05	563	Reserved	
10.06	564	Reserved	
10.07	565	Reserved	
10.08	566	Reserved	
10.09	567	Reserved	
10.10	568	Reserved	
10.11	569	Reserved	
10.12	570	Reserved	
10.13	571	Reserved	
10.14	572	Reserved	
10.15	573	Reserved	
10.16	574	Reserved	
10.17	575	Reserved	
10.18	576	Reserved	
10.19	577	Reserved	
10.20	578	Reserved	

## Logical Command Variables: Group 11: Clock and Timer

### Clock and timer, Logic command variables 11.01-11.10

Time functions may be used as command variable in a logical output.

No.	ID	Name / Function	Note
11.01	579	Timer set point 1 (exceeded)	see page 245
11.02	580	Timer set point 2 (exceeded)	see page 245
11.03	581	Active weekday (equal to setting)	see page 245
11.04	582	Active day (equal to setting)	see page 245
11.05	583	Active hour (equal to setting)	see page 245
11.06	584	Active minute (equal to setting)	see page 245
11.07	585	Active second (equal to setting)	see page 245
11.08	586	Engine (running hours exceeded by) 1 hour	Status changes every operating hour
11.09	587	Engine (running hours exceeded by) 10 hour	Status changes every 10 operating hours
11.10	588	Engine (running hours exceeded by) 100 hour	Status changes every 100 operating hours
11.11	589	Reserved	
11.12	590	Reserved	
11.13	591	Reserved	
11.14	592	Reserved	
11.15	593	Reserved	
11.16	594	Reserved	
11.17	595	Reserved	
11.18	596	Reserved	
11.19	597	Reserved	
11.20	598	Reserved	

## Logical Command Variables: Group 12: External Discrete Inputs 1

### External discrete inputs 1, Logic command variables 12.01-12.16

Additional discrete inputs from an expansion board (i.e. IKD 1 extension board) may be used as command variable in a logical output.

No.	ID	Name / Function	Note
12.01	609	External discrete input 1 [D.E01]	TRUE = logical "1" (delay times and No/NC parameters are ignored) FALSE = logical "0" (alarm has been acknowledged, or immediately after TRUE condition is not present anymore, if Control is configured as alarm class)
12.02	610	External discrete input 2 [D.E02]	
12.03	611	External discrete input 3 [D.E03]	
12.04	612	External discrete input 4 [D.E04]	
12.05	613	External discrete input 5 [D.E05]	
12.06	614	External discrete input 6 [D.E06]	
12.07	615	External discrete input 7 [D.E07]	
12.08	616	External discrete input 8 [D.E08]	
12.09	617	External discrete input 9 [D.E09]	
12.10	618	External discrete input 10 [D.E10]	
12.11	619	External discrete input 11 [D.E11]	
12.12	620	External discrete input 12 [D.E12]	
12.13	621	External discrete input 13 [D.E13]	
12.14	622	External discrete input 14 [D.E14]	
12.15	623	External discrete input 15 [D.E15]	
12.16	624	External discrete input 16 [D.E16]	
12.17	625	Reserved	
12.18	626	Reserved	
12.19	627	Reserved	
12.20	628	Reserved	

## Logical Command Variables: Group 13: Discrete Outputs

### Discrete outputs, Logic command variables 13.01-13.12

The discrete outputs may be used as command variable in a logical output.

No.	ID	Name / Function	Note
13.01	629	Discrete output DO1 [R01]	TRUE = logical "1" (this condition indicates the logical status of the internal relays) FALSE = logical "0" (this condition indicates the logical status of the internal relays)
13.02	630	Discrete output DO2 [R02]	
13.03	631	Discrete output DO3 [R03]	
13.04	632	Discrete output DO4 [R04]	
13.05	633	Discrete output DO5 [R05]	
13.06	634	Discrete output DO6 [R06]	
13.07	635	Discrete output DO7 [R07]	
13.08	636	Discrete output DO8 [R08]	
13.09	637	Discrete output DO9 [R09]	
13.10	638	Discrete output DO10 [R10]	
13.11	639	Discrete output DO11 [R11]	
13.12	640	Discrete output DO12 [R12]	
13.13	641	Reserved	
13.14	642	Reserved	
13.15	643	Reserved	
13.16	644	Reserved	
13.17	645	Reserved	
13.18	646	Reserved	
13.19	647	Reserved	
13.20	648	Reserved	
13.21	649	Reserved	
13.22	650	Reserved	

## Logical Command Variables: Group 14: External Discrete Outputs 1

### External discrete outputs 1, Logic command variables 14.01-14.16

The external discrete outputs may be used as command variable in a logical output.

No.	ID	Name / Function	Note
14.01	669	External discrete output DO1 [R01]	TRUE = logical "1" (this condition indicates the logical status of the relays, which are connected via external expansion boards) FALSE = logical "0" (this condition indicates the logical status of the relays, which are connected via external expansion boards)
14.02	670	External discrete output DO2 [R02]	
14.03	671	External discrete output DO3 [R03]	
14.04	672	External discrete output DO4 [R04]	
14.05	673	External discrete output DO5 [R05]	
14.06	674	External discrete output DO6 [R06]	
14.07	675	External discrete output DO7 [R07]	
14.08	676	External discrete output DO8 [R08]	
14.09	677	External discrete output DO9 [R09]	
14.10	678	External discrete output DO10 [R10]	
14.11	679	External discrete output DO11 [R11]	
14.12	680	External discrete output DO12 [R12]	
14.13	681	External discrete output DO13 [R13]	
14.14	682	External discrete output DO14 [R14]	
14.15	683	External discrete output DO15 [R15]	
14.16	684	External discrete output DO16 [R16]	
14.17	685	Reserved	
14.18	686	Reserved	
14.19	687	Reserved	
14.20	688	Reserved	



## Logical Command Variables: Group 15: Flexible Limits

### Flexible limits, Logic command variables 15.01-15.40

The flexible analog input thresholds may be used as command variable in a logical output.

No.	ID	Name / Function	Note
15.01	689	Flexible analog input 1 (triggered)	TRUE = limit value reached FALSE = alarm acknowledged
15.02	690	Flexible analog input 2 (triggered)	
15.03	691	Flexible analog input 3 (triggered)	
15.04	692	Flexible analog input 4 (triggered)	
15.05	693	Flexible analog input 5 (triggered)	
15.06	694	Flexible analog input 6 (triggered)	
15.07	695	Flexible analog input 7 (triggered)	
15.08	696	Flexible analog input 8 (triggered)	
15.09	697	Flexible analog input 9 (triggered)	
15.10	698	Flexible analog input 10 (triggered)	
15.11	699	Flexible analog input 11 (triggered)	
15.12	700	Flexible analog input 12 (triggered)	
15.13	701	Flexible analog input 13 (triggered)	
15.14	702	Flexible analog input 14 (triggered)	
15.15	703	Flexible analog input 15 (triggered)	
15.16	704	Flexible analog input 16 (triggered)	
15.17	705	Flexible analog input 17 (triggered)	
15.18	706	Flexible analog input 18 (triggered)	
15.19	707	Flexible analog input 19 (triggered)	
15.20	708	Flexible analog input 20 (triggered)	
15.21	709	Flexible analog input 21 (triggered)	
15.22	710	Flexible analog input 22 (triggered)	
15.23	711	Flexible analog input 23 (triggered)	
15.24	712	Flexible analog input 24 (triggered)	
15.25	713	Flexible analog input 25 (triggered)	
15.26	714	Flexible analog input 26 (triggered)	
15.27	715	Flexible analog input 27 (triggered)	
15.28	716	Flexible analog input 28 (triggered)	
15.29	717	Flexible analog input 29 (triggered)	
15.30	718	Flexible analog input 30 (triggered)	
15.31	719	Flexible analog input 31 (triggered)	
15.32	720	Flexible analog input 32 (triggered)	
15.33	721	Flexible analog input 33 (triggered)	
15.34	722	Flexible analog input 34 (triggered)	
15.35	723	Flexible analog input 35 (triggered)	
15.36	724	Flexible analog input 36 (triggered)	
15.37	725	Flexible analog input 37 (triggered)	
15.38	726	Flexible analog input 38 (triggered)	
15.39	727	Flexible analog input 39 (triggered)	
15.40	728	Flexible analog input 40 (triggered)	

## Logical Command Variables: Group 18: Transistor Outputs

### Transistor outputs, Logic command variables 18.01-18.04

The transistor outputs may be used as command variable in a logical output.

No.	ID	Name / Function	Note
18.01	813	Reserved	
18.02	814	Reserved	
18.03	815	D+ charge alternator 12 Volt feature active	
18.04	816	D+ charge alternator 24 Volt feature active	
18.05	817	Reserved	
18.06	818	Reserved	
18.07	819	Reserved	
18.08	820	Reserved	
18.09	821	Reserved	
18.10	822	Reserved	
18.11	823	Reserved	
18.12	824	Reserved	
18.13	825	Reserved	
18.14	826	Reserved	
18.15	827	Reserved	
18.16	828	Reserved	
18.17	829	Reserved	
18.18	830	Reserved	
18.19	831	Reserved	
18.20	832	Reserved	

# Factory Setting



The inputs, outputs, and internal flags, which may be programmed via the *LogicsManager* have the following factory default settings when delivered:


simple (function)	extended (configuration)	result
-------------------	--------------------------	--------

## Factory Setting: Functions


[00.0x] Flag {x}; {x} = 1 to 7		
{0}	✓	If TRUE, flag {x} becomes TRUE. Deactivated by default
{1o}	✓	
{1oc}	✓	
{2oc}	✓	
STOP	✓	
AUTO	✓	
MAN	✓	
<div><div><div><div>?</div><div>Configure internal flag Configure LogicManager Configuration Parameter</div><div>Flag 1</div><div>00LM:Flag 1"0"</div><div>00LM:Flag 1"1"</div><div>00LM:Flag 1"1"</div><div>000.00s</div><div>000.00s</div><div>&amp;</div><div>&amp;</div><div>&amp;</div><div>→</div><div>+</div><div>-</div><div>↶</div></div><div>FALSE</div></div></div>		
[00.08] Flag 8 - pre-configured to engine start via timer		
{0}	✓	If TRUE, flag 8 becomes TRUE. TRUE once the configured time 1 has been reached [11.01], and the configured time 2 [11.02] has not been reached as well if the current day is the configured day [11.03] (see page 245 "Configure <i>LogicsManager</i> : Set ")
{1o}	✓	
{1oc}	✓	
{2oc}	✓	
STOP	---	
AUTO	✓	
MAN	---	
<div><div><div><div>?</div><div>Configure internal flag Configure LogicManager Configuration Parameter</div><div>Flag 8</div><div>11Timer 1</div><div>11Timer 2</div><div>11Active weekday</div><div>000.00s</div><div>000.00s</div><div>&amp;</div><div>&amp;</div><div>&amp;</div><div>→</div><div>+</div><div>-</div><div>↶</div></div><div>dependent on timer</div></div></div>		
[00.09] Start request in Auto		
{0}	✓	If TRUE, the engine is started in AUTOMATIC operating mode. TRUE once discrete input [DI 2] is energized. <b>Note:</b> This function is pre-configured and may be activated by passing through the command variables [00.08] LM: Flag 8 or [04.03] Remote request ('—' instead of '0').
{1o}	✓	
{1oc}	✓	
{2oc}	✓	
STOP	---	
AUTO	✓	
MAN	---	
<div><div><div><div>?</div><div>Configure automatic run Configure application Configuration Parameter</div><div>Start req in AUTO</div><div>02Discrete input 2</div><div>08LM: Flag 8</div><div>04Remote request</div><div>000.00s</div><div>000.00s</div><div>≥1</div><div>≥1</div><div>→</div><div>+</div><div>-</div><div>↶</div></div><div>dependent on [DI 2]</div></div></div>		

simple (function)	extended (configuration)	result
-------------------	--------------------------	--------


**[00.10] Stop request in Auto**

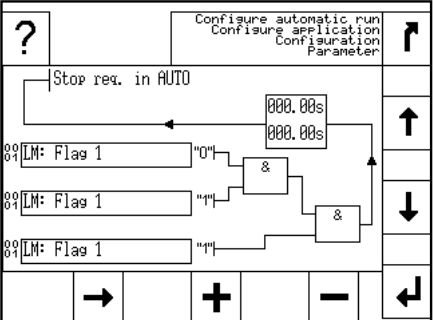{0}	✓	If TRUE, the engine is either stopped in AUTOMATIC operating mode or a start of the engine is suppressed (also an emergency operation). Deactivated by default		<b>FALSE</b>
{1o}	✓			
{1oc}	✓			
{2oc}	✓			
STOP	---			
AUTO	✓			
MAN	---			


**[00.11] Inhibit emergency run**




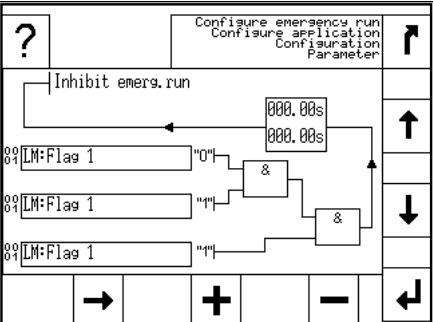
{0}	---	If TRUE, an emergency operation is inhibited or interrupted. Deactivated by default		<b>FALSE</b>
{1o}	---			
{1oc}	---			
{2oc}	✓			
STOP	---			
AUTO	✓			
MAN	---			





**[00.12] Undelay close GCB**




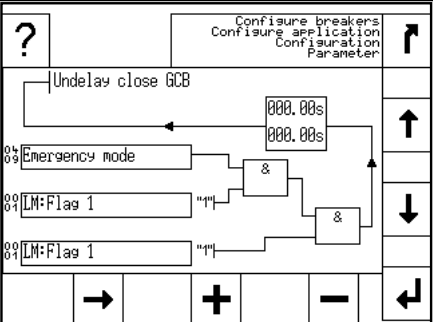
{0}	---	If TRUE, the GCB will be closed in an emergency operation without waiting for expiration of the delayed engine monitoring. TRUE once emergency mode is enabled.		dependent on emergency operation
{1o}	---			
{1oc}	---			
{2oc}	✓			
STOP	---			
AUTO	✓			
MAN	✓			





**[00.14] Constant Idle run**

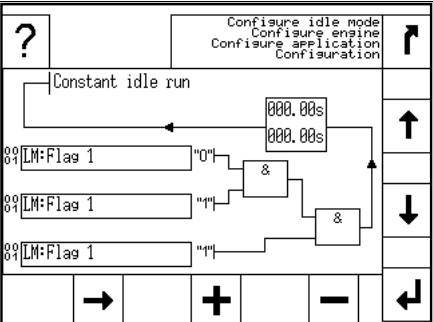{0}	✓	If TRUE, the control outputs an "Constant idle run" if a start request for the generator is present Deactivated by default		<b>FALSE</b>
{1o}	✓			
{1oc}	✓			
{2oc}	✓			
STOP	✓			
AUTO	✓			
MAN	✓			

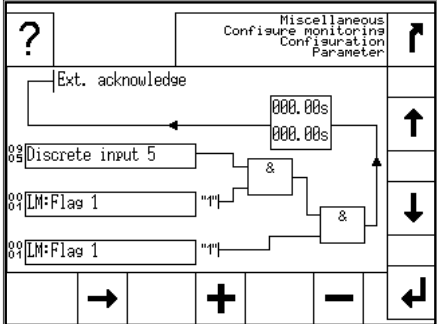
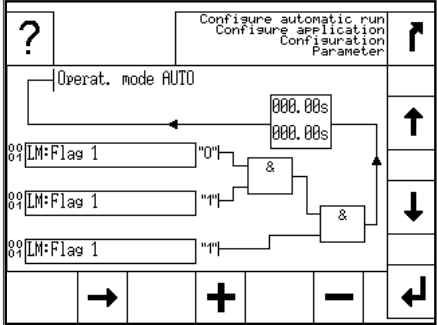
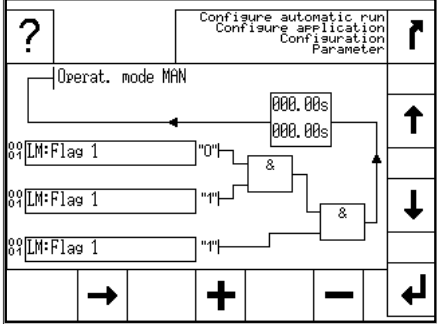
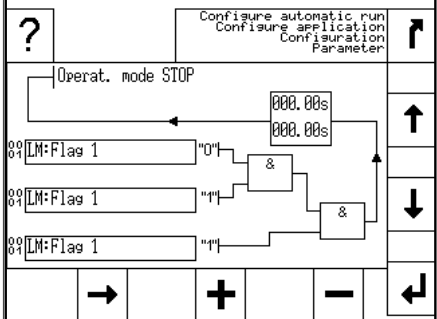
		simple (function)	extended (configuration)	result
<b>[00.15] External acknowledgment</b>				
{0}	✓	If TRUE, all alarms are acknowledged from an external source. TRUE once discrete input [DI 5] is energized.		dependent on discrete input [DI 5]
{1o}	✓			
{1oc}	✓			
{2oc}	✓			
STOP	✓			
AUTO	✓			
MAN	✓			
<b>[00.16] Operation mode AUTOMATIC</b>				
{0}	✓	If TRUE the unit changes into AUTOMATIC operating mode. Deactivated by default		FALSE
{1o}	✓			
{1oc}	✓			
{2oc}	✓			
STOP	✓			
AUTO	✓			
MAN	✓			
<b>[00.17] Operation mode MANUAL</b>				
{0}	✓	If TRUE the unit changes into MANUAL operating mode. Deactivated by default		FALSE
{1o}	✓			
{1oc}	✓			
{2oc}	✓			
STOP	✓			
AUTO	✓			
MAN	✓			
<b>[00.18] Operation mode STOP</b>				
{0}	✓	If TRUE the unit changes into STOP operating mode. Deactivated by default		FALSE
{1o}	✓			
{1oc}	✓			
{2oc}	✓			
STOP	✓			
AUTO	✓			
MAN	✓			

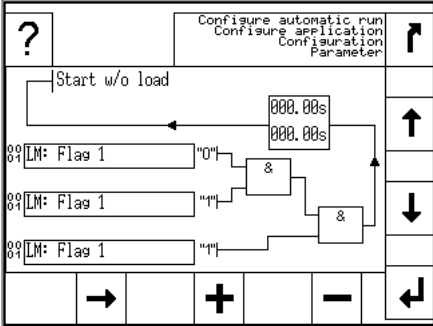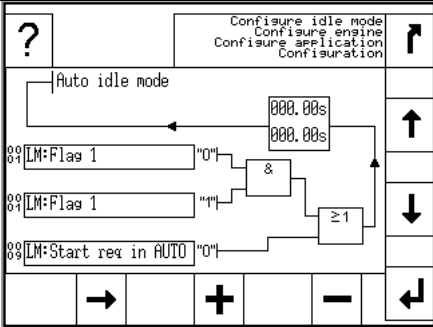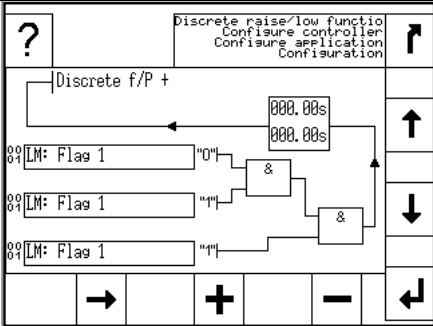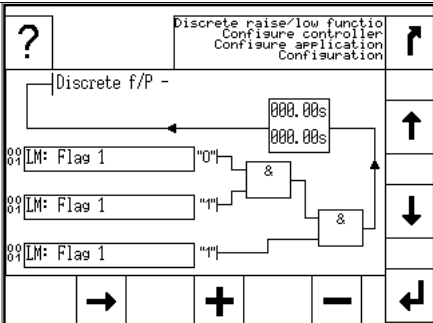simple (function)		extended (configuration)	result
[00.19] Start without load			
{0}	✓	If TRUE, the engine is started without load transfer to the generator (closing the GCB is blocked). Deactivated by default	
{1o}	✓		
{1oc}	✓		
{2oc}	✓		
STOP	✓		
AUTO	✓		
MAN	✓		
[00.20] Automatic Idle mode			
{0}	✓	If TRUE, the control performs an idle run for a configured time at start-up. Deactivated by default <b>Note:</b> This function is pre-configured and may be activated by passing through the command variable [00.09] Start req. in Auto ('—' instead of '0').	
{1o}	✓		
{1oc}	✓		
{2oc}	✓		
STOP	✓		
AUTO	✓		
MAN	✓		
[00.21] Raise frequency/load set point			
{0}	✓	If TRUE, the frequency/load set point will be raised. Deactivated by default	
{1o}	✓		
{1oc}	✓		
{2oc}	✓		
STOP	✓		
AUTO	✓		
MAN	✓		
[00.22] Lower frequency/load set point			
{0}	✓	If TRUE, the frequency/load set point will be lowered. Deactivated by default	
{1o}	✓		
{1oc}	✓		
{2oc}	✓		
STOP	✓		
AUTO	✓		
MAN	✓		

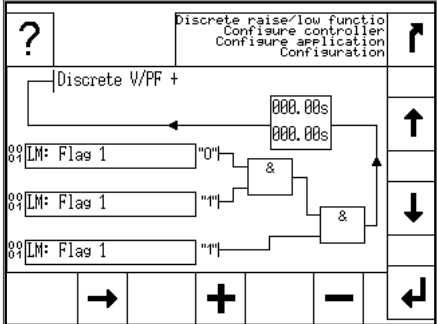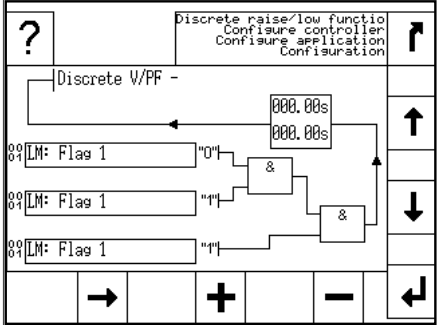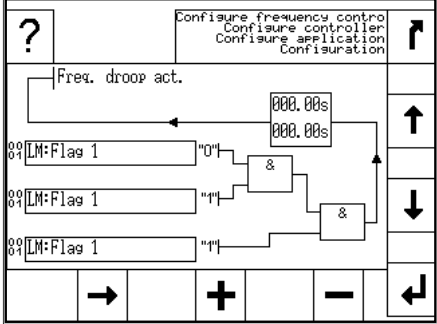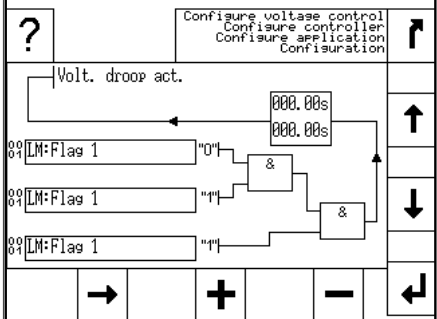simple (function)		extended (configuration)	result
<b>[00.23] Raise voltage/power factor set point</b>			
{0}	✓	If TRUE, the voltage/power factor set point will be raised. Deactivated by default	
{1o}	✓		
{1oc}	✓		
{2oc}	✓		
STOP	✓		
AUTO	✓		
MAN	✓		
			FALSE
<b>[00.24] Lower voltage/power factor set point</b>			
{0}	✓	If TRUE, the voltage/power factor set point will be lowered. Deactivated by default	
{1o}	✓		
{1oc}	✓		
{2oc}	✓		
STOP	✓		
AUTO	✓		
MAN	✓		
			FALSE
<b>[00.25] Frequency droop active</b>			
{0}	✓	If TRUE, the frequency droop is enabled. Deactivated by default	
{1o}	✓		
{1oc}	✓		
{2oc}	✓		
STOP	---		
AUTO	✓		
MAN	✓		
			FALSE
<b>[00.26] Voltage droop active</b>			
{0}	✓	If TRUE, the voltage droop is enabled. Deactivated by default	
{1o}	✓		
{1oc}	✓		
{2oc}	✓		
STOP	---		
AUTO	✓		
MAN	✓		
			FALSE

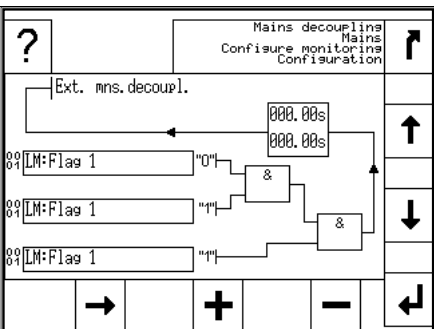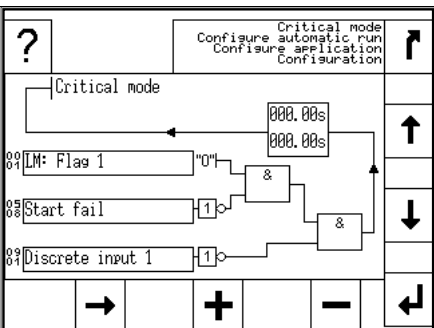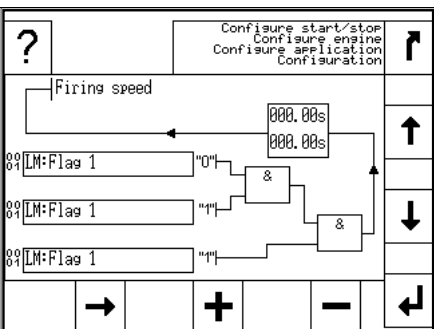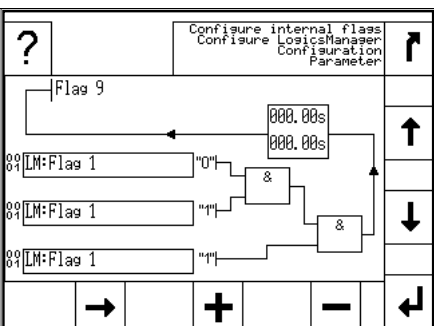
simple (function)		extended (configuration)	result	
[00.27] External mains decoupling				
{0}	✓	If TRUE, a mains failure is requested by an external device. Deactivated by default		
{1o}	✓			
{1oc}	✓			
{2oc}	✓			
STOP	---			
AUTO	✓	[00.28] Critical mode	If TRUE, the control performs a critical mode operation. Deactivated by default TRUE, if no start failure is present and/or discrete input [DI 1] is not energized.	
MAN	---			
[00.29] Firing speed reached				
{0}	✓	If TRUE, the unit recognizes that the ignition speed has been reached. Deactivated by default		
{1o}	✓			
{1oc}	✓			
{2oc}	✓			
STOP	✓			
AUTO	✓	[00.3x] Flag {y}; {x} = 0 to 7, {y} = 9 to 16	If TRUE, flag {y} becomes TRUE. Deactivated by default	
MAN	✓			

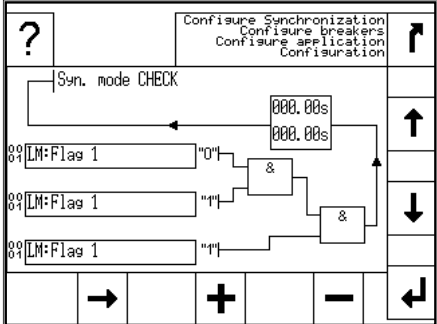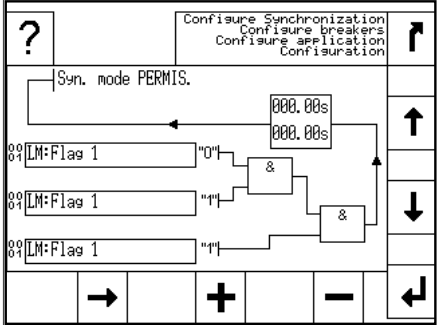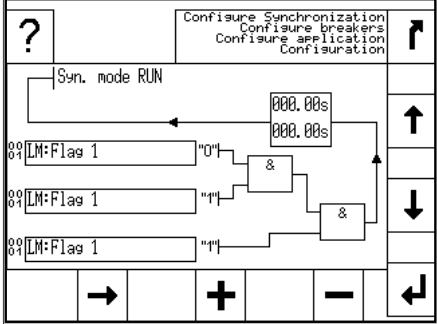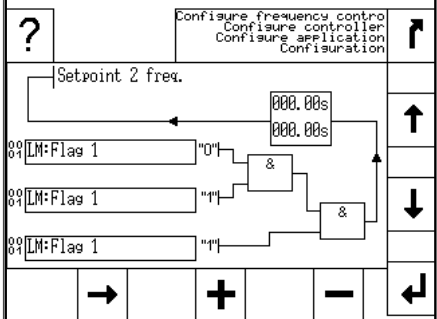


simple (function)		extended (configuration)	result
<b>[00.38] Synchronization mode CHECK</b>			
{0}	---	If TRUE, the CHECK synchronization mode is enabled. Deactivated by default	
{1o}	---		
{1oc}	---		
{2oc}	✓		
STOP	---		
AUTO	✓		
MAN	---		
			<b>FALSE</b>
<b>[00.39] Synchronization mode PERMISSIVE</b>			
{0}	---	If TRUE, the PERMISSIVE synchronization mode is enabled. Deactivated by default	
{1o}	---		
{1oc}	---		
{2oc}	✓		
STOP	---		
AUTO	✓		
MAN	---		
			<b>FALSE</b>
<b>[00.40] Synchronization mode RUN</b>			
{0}	---	If TRUE, the RUN synchronization mode is enabled. Deactivated by default	
{1o}	---		
{1oc}	---		
{2oc}	✓		
STOP	---		
AUTO	✓		
MAN	---		
			<b>FALSE</b>
<b>[00.81] Setpoint 2 frequency enabled</b>			
{0}	✓	If TRUE, the frequency set point 2 is enabled. Deactivated by default	
{1o}	✓		
{1oc}	✓		
{2oc}	✓		
STOP	---		
AUTO	✓		
MAN	---		
			<b>FALSE</b>

simple (function)	extended (configuration)	result
-------------------	--------------------------	--------

**[00.82] Setpoint 2 load enabled**

{0}	✓	If TRUE, the load set point 2 is enabled. Deactivated by default		FALSE
{1o}	✓			
{1oc}	✓			
{2oc}	✓			
STOP	---			
AUTO	✓			
MAN	---			

**[00.83] Setpoint 2 voltage enabled**





{0}	✓	If TRUE, the voltage set point 2 is enabled. Deactivated by default		FALSE
{1o}	✓			
{1oc}	✓			
{2oc}	✓			
STOP	---			
AUTO	✓			
MAN	---			

**[00.84] Setpoint 2 power factor enabled**

{0}	✓	If TRUE, the power factor set point 2 is enabled. Deactivated by default		FALSE
{1o}	✓			
{1oc}	✓			
{2oc}	✓			
STOP	---			
AUTO	✓			
MAN	---			

## [00.85] Enable MCB


{0}	---	If TRUE, the MCB is enabled.		dependent on [DI 6] and MCB closure and mains phase rotation
{1o}	---	TRUE, if discrete input [DI 6] is energized		
{1oc}	---	and/or MCB did not fail to close and/or no		
{2oc}	✓	mains phase rotation mismatch is detected.		
STOP	---			
AUTO	✓			
MAN	---			

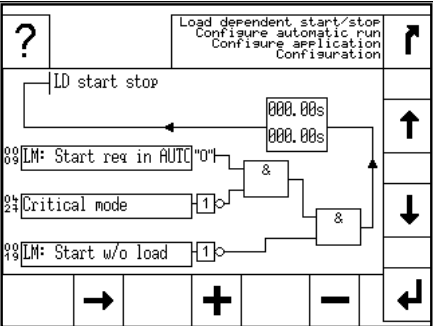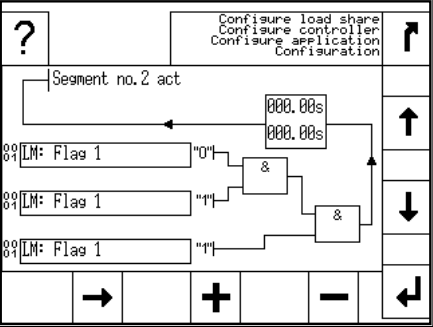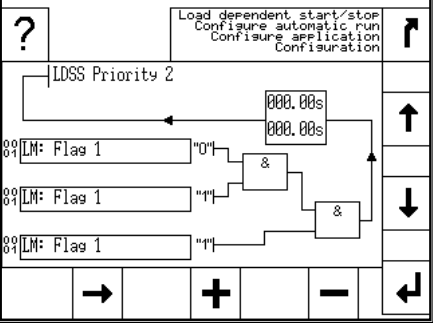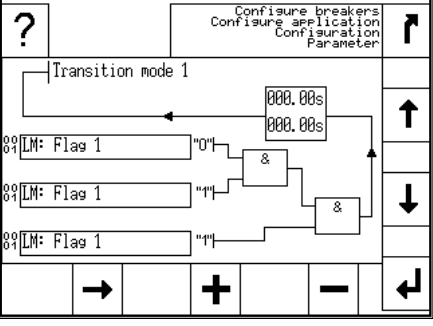simple (function)		extended (configuration)	result
<b>[00.86] Load-dependent start/stop</b>			
{0}	---	If TRUE, load-dependent start/stop is enabled. Deactivated by default Prepared for start request in AUTO and no critical mode and no Start without load.	
{1o}	---		
{1oc}	---		
{2oc}	✓		
STOP	---		
AUTO	✓		
MAN	---		
			FALSE
<b>[04.3x] Segment no.{y} active; {x} = 1 to 3; {y} = 2 to 4</b>			
{0}	---	If TRUE, load-dependent start/stop segment no. {y} is enabled. Deactivated by default	
{1o}	---		
{1oc}	---		
{2oc}	✓		
STOP	---		
AUTO	✓		
MAN	---		
			FALSE
<b>[04.3x] LDSS Priority {y}; {x} = 4 to 6; {y} = 2 to 4</b>			
{0}	---	If TRUE, load-dependent start/stop priority {y} is enabled. Deactivated by default	
{1o}	---		
{1oc}	---		
{2oc}	✓		
STOP	---		
AUTO	✓		
MAN	---		
			FALSE
<b>[04.4x] Transition mode {x}; {x} = 1 to 2</b>			
{0}	---	If TRUE, transition mode {x} is enabled. Deactivated by default	
{1o}	---		
{1oc}	---		
{2oc}	✓		
STOP	---		
AUTO	✓		
MAN	---		
			FALSE


simple (function)	extended (configuration)	result
-------------------	--------------------------	--------

## Factory Setting: Relay Outputs


### Relay 1 [R01] - Ready for operation OFF

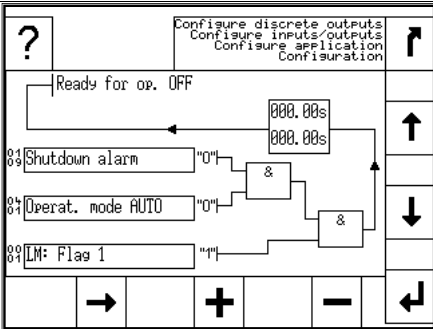{0}	✓	Relay will be de-energized if unit is not ready for operation or the logics manager output is TRUE. Deactivated by default <b>Note:</b> This function is pre-configured and may be activated by passing through the command variables [01.09] Shutdown alarm or [04.01] Operating mode AUTO or [00.01] LM: Flag 1 ('—' instead of '0'). The unit is only ready for operation after an start-up delay following the power supply connection.		<b>FALSE</b>
{1o}	✓			
{1oc}	✓			
{2oc}	✓			
STOP	✓			
AUTO	✓			
MAN	✓			


### Relay 2 [R02] - Centralized alarm (horn) / freely configurable




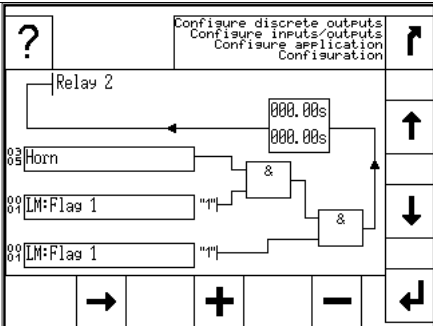
{0}	✓	Relay energizes if the internal condition "Horn" is TRUE		dependent on Logics Command Variable [03.05]
{1o}	✓			
{1oc}	✓			
{2oc}	✓			
STOP	✓			
AUTO	✓			
MAN	✓			

### Relay 3 [R03] - Starter / freely configurable

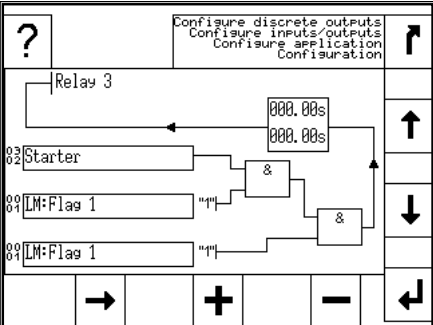{0}	✓	Relay energizes if the internal condition "Starter" is TRUE		dependent on Logics Command Variable [03.02]
{1o}	✓			
{1oc}	✓			
{2oc}	✓			
STOP	✓			
AUTO	✓			
MAN	✓			


### Relay 4 [R04] - Start/Gas / freely configurable

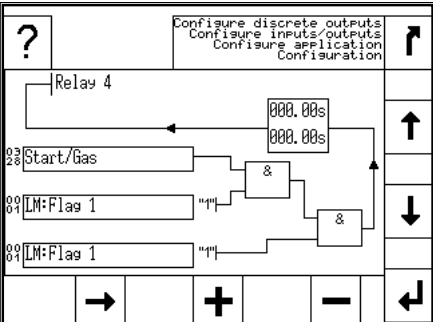{0}	✓	Relay energizes if the internal condition "Start/Gas" is TRUE to energize the start (Diesel) or gas (Gas) solenoid		dependent on Logics Command Variable [03.28]
{1o}	✓			
{1oc}	✓			
{2oc}	✓			
STOP	✓			
AUTO	✓			
MAN	✓			

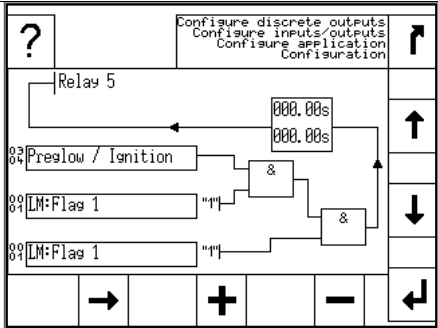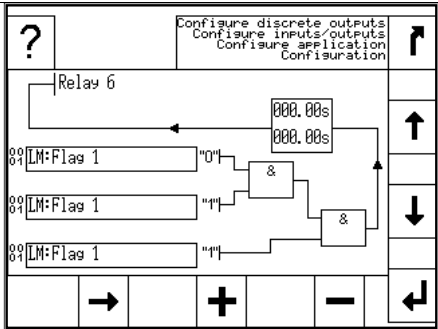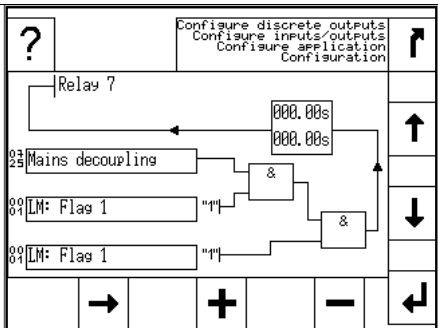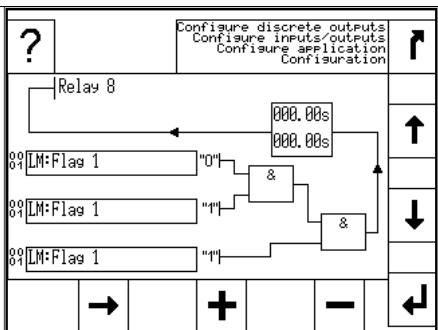
simple (function)		extended (configuration)	result	
Relay 5 [R05] - Preglow / Ignition / freely configurable				
{0}	✓	Relay energizes if the internal condition "Preglow / Ignition" is TRUE to preglow the Diesel engine or enabling the ignition of the gas engine		dependent on Logics Command Variable [03.04]
{1o}	✓			
{1oc}	✓			
{2oc}	✓			
STOP	✓			
AUTO	✓			
MAN	✓			
Relay 6 [R06] - free / Command: close GCB				
{0}	✓	In application mode {0} and {1o} = freely configurable relay (unassigned)		FALSE
{1o}	✓			
{1oc}	---			
{2oc}	---			
STOP	✓			
AUTO	✓			
MAN	✓			
Relay 7 [R07] - Mains decoupling / freely configurable / Command: open GCB				
{0}	✓	In application mode {0} pre-configured to mains decoupling. Relay energizes if the internal condition "Mains decoupling" is TRUE to decouple the genset from the mains.		dependent on application mode and Logics Command Variable [07.25]
{1o}	---			
{1oc}	---			
{2oc}	---			
STOP	✓			
AUTO	✓			
MAN	✓			
Relay 8 [R08] - free / Command: close MCB				
{0}	✓	In application mode {0}, {1o}, and {1oc} = freely configurable relay (unassigned)		FALSE
{1o}	✓			
{1oc}	✓			
{2oc}	---			
STOP	✓			
AUTO	✓			
MAN	✓			

simple (function)	extended (configuration)	result
-------------------	--------------------------	--------


**Relay 9 [R09] - Mains decoupling / freely configurable / Command: open MCB**

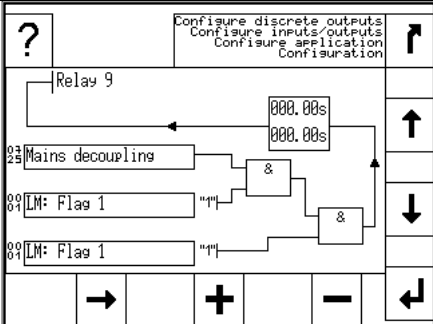{0}	✓	In application mode {0}, {1o} and {1oc} pre-configured to mains decoupling. Relay energizes if the internal condition "Mains decoupling" is TRUE to decouple the genset from the mains.		dependent on application mode and Logics Command Variable [07.25]
{1o}	✓			
{1oc}	✓			
{2oc}	---			
STOP	✓	In application mode {2oc} "Command: open MCB"		
AUTO	✓			
MAN	✓			
		Deactivated by default		


**Relay 10 [R10] - Auxiliary services / freely configurable**

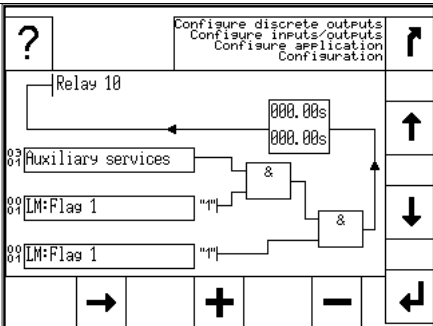
{0}	✓	Relay energizes if the internal condition "Auxiliary services" is TRUE to activate the auxiliary services (it energizes prior to an engine start and de-energizes with the engine stop)		dependent on Logics Command Variable [03.01]
{1o}	✓			
{1oc}	✓			
{2oc}	✓			
STOP	✓			
AUTO	✓			
MAN	✓			

**Relay 11 [R11] - Warning alarm class active / freely configurable**

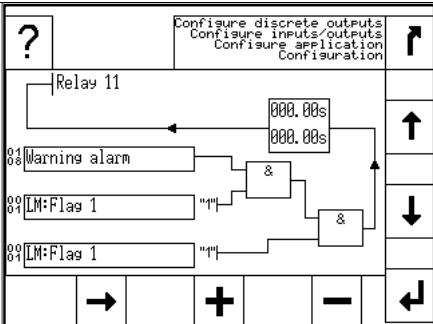{0}	✓	Relay energizes if one of the alarm classes A or B is active		dependent on Logics Command Variable [01.08]
{1o}	✓			
{1oc}	✓			
{2oc}	✓			
STOP	✓			
AUTO	✓			
MAN	✓			

**Relay 12 [R12] - Stopping alarm class active / freely configurable**

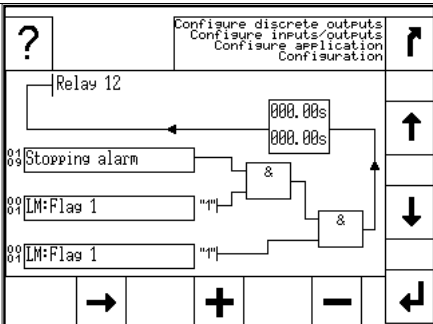{0}	✓	Relay energizes if one of the alarm classes C, D, E or F is active		dependent on Logics Command Variable [01.09]
{1o}	✓			
{1oc}	✓			
{2oc}	✓			
STOP	✓			
AUTO	✓			
MAN	✓			

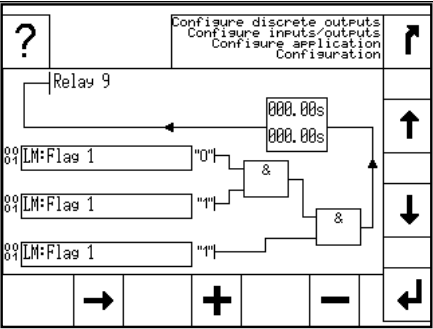simple (function)		extended (configuration)	result
External digital output {x} - free (external expansion card, if connected; {x} = 1 to 16)			
{0}	✓		FALSE
{1o}	✓		
{1oc}	✓		
{2oc}	✓		
STOP	✓		
AUTO	✓		
MAN	✓		

## Discrete Inputs

[DI01]	{0}	freely configurable, pre-assigned to EMERGENCY STOP alarm class F
	{1o}	
	{1oc}	
	{2oc}	
[DI02]	{0}	freely configurable, pre-assigned to <i>LogicsManager</i> Start in AUTO alarm class Control
	{1o}	
	{1oc}	
	{2oc}	
[DI03]	{0}	freely configurable, pre-assigned to Low oil pressure alarm class B
	{1o}	
	{1oc}	
	{2oc}	
[DI04]	{0}	freely configurable, pre-assigned to Coolant temperature alarm class B
	{1o}	
	{1oc}	
	{2oc}	
[DI05]	{0}	freely configurable, pre-assigned to <i>LogicsManager</i> External acknowledgement alarm class Control
	{1o}	
	{1oc}	
	{2oc}	
[DI06]	{0}	freely configurable, pre-assigned to <i>LogicsManager</i> Enable MCB alarm class Control
	{1o}	
	{1oc}	
	{2oc}	
[DI07]	{0}	Reply MCB (not available in the <i>LogicsManager</i> )
	{1o}	
	{1oc}	
	{2oc}	
[DI08]	{0}	Reply GCB (not available in the <i>LogicsManager</i> )
	{1o}	
	{1oc}	
	{2oc}	
[DI09]	{0}	freely configurable discrete input (unassigned) alarm class B
	{1o}	
	{1oc}	
	{2oc}	
[DI10]	{0}	freely configurable discrete input (unassigned) alarm class B
	{1o}	
	{1oc}	
	{2oc}	
[DI11]	{0}	freely configurable discrete input (unassigned) alarm class B
	{1o}	
	{1oc}	
	{2oc}	
[DI12]	{0}	freely configurable discrete input (unassigned) alarm class B
	{1o}	
	{1oc}	
	{2oc}	



# Appendix C.

## Analog Manager



To enhance flexibility of programming the functions of the easYgen-3000, an analog manager is used. All analog values, which are delivered by the easYgen may be used as data sources for the analog outputs (refer to Configure Analog Outputs on page 163), the flexible limit monitoring (refer to Configure Monitoring: Flexible Limits on page 118), and the controller set points (refer to Configure Application: Configure Controller on page 202).

Every data source is indicated by a group number and a sub-number.

Some values are percentage values and relate to reference values.

### Data Sources



#### Group 00: Internal Values

Analog input #	Data source	Reference value
00.01	Engine speed	Rated speed
00.02	Voltage bias	0 to 10000
00.03	Speed bias	0 to 10000
00.04	Battery voltage	Battery voltage 24 V
00.05	Analog input D+ (auxiliary excitation)	Battery voltage 24 V
00.06	Calculated ground current	Generator rated current
00.07	Measured ground current	Ground current transformer ratio setting *

\* Refer to parameters 1810 1811 on page 37

## Group 01: Generator Values

Analog input #	Data source	Reference value
01.01	Generator voltage wye average (phase-neutral)	Generator rated voltage
01.02	Generator voltage L1-N	Generator rated voltage
01.03	Generator voltage L2-N	Generator rated voltage
01.04	Generator voltage L3-N	Generator rated voltage
01.05	Generator voltage delta average (phase-phase)	Generator rated voltage
01.06	Generator voltage L1-L2	Generator rated voltage
01.07	Generator voltage L2-L3	Generator rated voltage
01.08	Generator voltage L3-L1	Generator rated voltage
01.09	Generator frequency	Rated frequency
01.10	Generator frequency L1-L2	Rated frequency
01.11	Generator frequency L2-L3	Rated frequency
01.12	Generator frequency L3-L1	Rated frequency
01.13	Generator current average	Generator rated current
01.14	Generator current L1	Generator rated current
01.15	Generator current L2	Generator rated current
01.16	Generator current L3	Generator rated current
01.17	Generator maximum current L1	Generator rated current
01.18	Generator maximum current L2	Generator rated current
01.19	Generator maximum current L3	Generator rated current
01.20	Generator power factor	Power factor 1
01.21	Generator power factor L1	Power factor 1
01.22	Generator power factor L2	Power factor 1
01.23	Generator power factor L3	Power factor 1
01.24	Generator total real power	Generator rated real power
01.25	Generator real power L1-N	Generator rated real power
01.26	Generator real power L2-N	Generator rated real power
01.27	Generator real power L3-N	Generator rated real power
01.28	Generator total reactive power	Generator rated reactive power
01.29	Generator reactive power L1-N	Generator rated reactive power
01.30	Generator reactive power L2-N	Generator rated reactive power
01.31	Generator reactive power L3-N	Generator rated reactive power
01.32	Generator total apparent power	Generator rated real and reactive power
01.33	Generator apparent power L1-N	Generator rated real and reactive power
01.34	Generator apparent power L2-N	Generator rated real and reactive power
01.35	Generator apparent power L3-N	Generator rated real and reactive power

## Group 02: Mains Values

Analog input #	Data source	Reference value
02.01	Mains voltage wye average (phase-neutral)	Mains rated voltage
02.02	Mains voltage L1-N	Mains rated voltage
02.03	Mains voltage L2-N	Mains rated voltage
02.04	Mains voltage L3-N	Mains rated voltage
02.05	Mains voltage delta average (phase-phase)	Mains rated voltage
02.06	Mains voltage L1-L2	Mains rated voltage
02.07	Mains voltage L2-L3	Mains rated voltage
02.08	Mains voltage L3-L1	Mains rated voltage
02.09	Mains frequency	Rated frequency
02.10	Mains frequency L1-L2	Rated frequency
02.11	Mains frequency L2-L3	Rated frequency
02.12	Mains frequency L3-L1	Rated frequency
02.13	Mains current average	Mains rated current
02.14	Mains current L1	Mains rated current
02.17	Maximum mains current L1	Mains rated current
02.20	Mains power factor	Power factor 1
02.21	Mains power factor L1	Power factor 1
02.24	Mains total power	Mains rated real power
02.25	Mains power L1-N	Mains rated real power
02.28	Mains total reactive power	Mains rated reactive power
02.29	Mains reactive power L1-N	Mains rated reactive power
02.32	Mains total apparent power	Mains rated real and reactive power
02.33	Mains apparent power L1-N	Mains rated real and reactive power

### Group 03: Busbar 1 Values

Analog input #	Data source	Reference value
03.01	Busbar 1 average voltage	Busbar 1 rated voltage
03.02	Busbar 1 voltage L1-L2	Busbar 1 rated voltage
03.05	Busbar 1 frequency	Rated frequency
03.06	Busbar 1 frequency L1-L2	Rated frequency

### Group 05: Controller Set Points

Analog input #	Data source	Reference value
05.01	Internal frequency set point 1	
05.02	Internal frequency set point 2	
05.03	Interface frequency set point	
05.04	Internal power set point 1	
05.05	Internal power set point 2	
05.06	Interface power set point	
05.07	Internal voltage set point 1	
05.08	Internal voltage set point 2	
05.09	Interface voltage set point	
05.10	Internal power factor set point 1	
05.11	Internal power factor set point 2	
05.12	Interface power factor set point	
05.13	Discrete f +/-	
05.14	Discrete P +/-	
05.15	Discrete V +/-	
05.16	Discrete PF +/-	

### Group 06: DC Analog Input Values

Analog input #	Data source	Reference value
06.01	Analog input 1	Display value format*
06.02	Analog input 2	Display value format*
06.03	Analog input 3	Display value format*

\* Refer to Table 3-73 on page 291 for more information

If the analog input type (parameter 1000 on page 152) is configured to VDO or Pt100, the following display value formats apply:

Analog input type	Display value format	Example value	Example format
VDO 5 bar	0.01 bar	5.0 bar	500
VDO 10 bar	0.01 bar	6.6 bar	660
VDO 120°C	1°C	69°C	69
VDO 150°C	1°C	73°C	73
Pt100	1°C	103°C	103

Table 3-73: Analog Manager - display value format

## Reference Values



### NOTE

Refer to the **Configure Analog Outputs** section on page 163 for a description of the configuration parameters for the analog output.

Refer to the **Configure Monitoring: Flexible Limits** section on page 117 for a description of the configuration parameters for the flexible limits.

### Generator Rated Voltage

All generator voltage values (wye, delta, and average values) refer to the generator rated voltage (parameter 1766 on page 28).

#### Analog output example:

The generator rated voltage (parameter 1766 on page 28) is configured to 400 V

The source value at maximum output is configured to 110.00% (of the rated voltage i.e. 440 V)

The source value at minimum output is configured to 10.00% (of the rated voltage i.e. 40 V)

The analog output range is configured to 0 to 20 mA

If a generator voltage of 40 V (or below) is measured, the analog output issues its lower limit (i.e. 0 mA)

If a generator voltage of 440 V (or above) is measured, the analog output issues its upper limit (i.e. 20 mA)

If a generator voltage of 240 V is measured, the analog output issues 50 % of its upper limit (i.e. 10 mA)

If a generator voltage of 400 V is measured, the analog output issues 90 % of its upper limit (i.e. 18 mA)

#### Flexible limit example:

The generator rated voltage (parameter 1766 on page 28) is configured to 400 V

If the flexible limit is to be configured to 110.00% (of the rated voltage i.e. 440 V), it must be entered as 11000

### Mains Rated Voltage

All mains voltage values (wye, delta, average, and peak values) refer to the mains rated voltage (parameter 1768 on page 28).

#### Analog output example:

The mains rated voltage (parameter 1768 on page 28) is configured to 400 V

The source value at maximum output is configured to 110.00% (of the rated voltage i.e. 440 V)

The source value at minimum output is configured to 10.00% (of the rated voltage i.e. 40 V)

The analog output range is configured to 0 to 20 mA

If a mains voltage of 40 V (or below) is measured, the analog output issues its lower limit (i.e. 0 mA)

If a mains voltage of 440 V (or above) is measured, the analog output issues its upper limit (i.e. 20 mA)

If a mains voltage of 240 V is measured, the analog output issues 50 % of its upper limit (i.e. 10 mA)

If a mains voltage of 400 V is measured, the analog output issues 90 % of its upper limit (i.e. 18 mA)

#### Flexible limit example:

The mains rated voltage (parameter 1768 on page 28) is configured to 400 V

If the flexible limit is to be configured to 110.00% (of the rated voltage i.e. 440 V), it must be entered as 11000

## Rated Frequency

All frequency values (generator, mains, busbar 1) refer to the rated system frequency (parameter 1750 on page 28).

### Analog output example:

The rated system frequency (parameter 1750 on page 28) is configured to 50 Hz

The source value at maximum output is configured to 110.00% (of the rated frequency i.e. 55 Hz)

The source value at minimum output is configured to 90.00% (of the rated frequency i.e. 45 Hz)

The analog output range is configured to 0 to 20 mA

If a frequency of 45 Hz (or below) is measured, the analog output issues its lower limit (i.e. 0 mA)

If a frequency of 55 Hz (or above) is measured, the analog output issues its upper limit (i.e. 20 mA)

If a frequency of 50 Hz is measured, the analog output issues 50 % of its upper limit (i.e. 10 mA)

If a frequency of 51 Hz is measured, the analog output issues 60 % of its upper limit (i.e. 12 mA)

### Flexible limit example:

The rated system frequency (parameter 1750 on page 28) is configured to 50 Hz

If the flexible limit is to be configured to 105.00% (of the rated frequency i.e. 52.5 Hz), it must be entered as 10500

## Generator Rated Active Power

All generator active power values refer to the generator rated active power (parameter 1752 on page 29).

### Analog output example:

The generator rated active power (parameter 1752 on page 29) is configured to 500 kW

The source value at maximum output is configured to 120.00% (of the rated active power i.e. 600 kW)

The source value at minimum output is configured to 0.00% (of the rated active power i.e. 0 kW)

The analog output range is configured to 0 to 20 mA

If an active power of 0 kW is measured, the analog output issues its lower limit (i.e. 0 mA)

If an active power of 600 kW (or above) is measured, the analog output issues its upper limit (i.e. 20 mA)

If an active power of 300 kW is measured, the analog output issues 50 % of its upper limit (i.e. 10 mA)

If an active power of 120 kW is measured, the analog output issues 20 % of its upper limit (i.e. 4 mA)

### Flexible limit example:

The generator rated active power (parameter 1752 on page 29) is configured to 500 kW

If the flexible limit is to be configured to 120.00% (of the rated active power i.e. 600 kW), it must be entered as 12000

## Generator Rated Reactive Power

All generator reactive power values refer to the generator rated reactive power (parameter 1758 on page 29).

### Analog output example:

The generator rated reactive power (parameter 1758 on page 29) is configured to 500 kvar

The source value at maximum output is configured to 120.00% (of the rated reactive power i.e. 600 kvar)

The source value at minimum output is configured to 0.00% (of the rated reactive power i.e. 0 kvar)

The analog output range is configured to 0 to 20 mA

If a reactive power of 0 kvar is measured, the analog output issues its lower limit (i.e. 0 mA)

If a reactive power of 600 kvar (or above) is measured, the analog output issues its upper limit (i.e. 20 mA)

If a reactive power of 300 kvar is measured, the analog output issues 50 % of its upper limit (i.e. 10 mA)

If a reactive power of 120 kvar is measured, the analog output issues 20 % of its upper limit (i.e. 4 mA)

### Flexible limit example:

The generator rated reactive power (parameter 1758 on page 29) is configured to 500 kvar

If the flexible limit is to be configured to 120.00% (of the rated reactive power i.e. 600 kvar), it must be entered as 12000



## NOTE

**Above example is valid for inductive/lagging power. If capacitive/leading power is to be output, the settings for the source value at min/max output must be negative.**

## Mains Rated Active Power

All mains active power values refer to the mains rated active power (parameter 1748 on page 29).

### Analog output example:

The mains rated active power (parameter 1748 on page 29) is configured to 500 kW

The source value at maximum output is configured to 120.00% (of the rated active power i.e. 600 kW)

The source value at minimum output is configured to 0.00% (of the rated active power i.e. 0 kW)

The analog output range is configured to 0 to 20 mA

If a real power of 0 kW is measured, the analog output issues its lower limit (i.e. 0 mA)

If a real power of 600 kW (or above) is measured, the analog output issues its upper limit (i.e. 20 mA)

If a real power of 300 kW is measured, the analog output issues 50 % of its upper limit (i.e. 10 mA)

If a real power of 120 kW is measured, the analog output issues 20 % of its upper limit (i.e. 4 mA)

### Flexible limit example:

The mains rated active power (parameter 1748 on page 29) is configured to 500 kW

If the flexible limit is to be configured to 120.00% (of the rated active power i.e. 600 kW), it must be entered as 12000

## Mains Rated Reactive Power

All mains reactive power values refer to the mains rated reactive power (parameter 1746 on page 29).

### Analog output example:

The mains rated reactive power (parameter 1746 on page 29) is configured to 500 kvar

The source value at maximum output is configured to 120.00% (of the rated reactive power i.e. 600 kvar)

The source value at minimum output is configured to 0.00% (of the rated reactive power i.e. 0 kvar)

The analog output range is configured to 0 to 20 mA

If a reactive power of 0 kvar is measured, the analog output issues its lower limit (i.e. 0 mA)

If a reactive power of 600 kvar (or above) is measured, the analog output issues its upper limit (i.e. 20 mA)

If a reactive power of 300 kvar is measured, the analog output issues 50 % of its upper limit (i.e. 10 mA)

If a reactive power of 120 kvar is measured, the analog output issues 20 % of its upper limit (i.e. 4 mA)

### Flexible limit example:

The mains rated reactive power (parameter 1746 on page 29) is configured to 500 kvar

If the flexible limit is to be configured to 120.00% (of the rated reactive power i.e. 600 kvar), it must be entered as 12000

## Generator Rated Apparent Power

All generator apparent power values refer to the generator rated active power (parameter 1752 on page 29) and generator rated reactive power (parameter 1758 on page 29). The generator rated apparent power  $S$  is calculated using the real power  $P$  and the reactive power  $Q$  according to this formula:  $S = \sqrt{P^2 + Q^2}$

### Analog output example:

The generator rated active power (parameter 1752 on page 29) is configured to 200 kW

The generator rated reactive power (parameter 1758 on page 29) is configured to 200 kvar

The generator rated apparent power is  $\sqrt{200^2 + 200^2} = 282.84$  kVA

The source value at maximum output is configured to 120.00% (of the rated apparent power i.e. 339.41 kVA)

The source value at minimum output is configured to 0.00% (of the rated apparent power i.e. 0 kVA)

The analog output range is configured to 0 to 20 mA

If an apparent power of 0 kVA is measured, the analog output issues its lower limit (i.e. 0 mA)

If an apparent power of 339.41 kVA (or above) is measured, the analog output issues its upper limit (i.e. 20 mA)

If an apparent power of 169.71 kVA is measured, the analog output issues 50 % of its upper limit (i.e. 10 mA)

If an apparent power of 67.88 kVA is measured, the analog output issues 20 % of its upper limit (i.e. 4 mA)

### Flexible limit example:

The generator rated active power (parameter 1752 on page 29) is configured to 200 kW

The generator rated reactive power (parameter 1758 on page 29) is configured to 200 kvar

The generator rated apparent power is  $\sqrt{200^2 + 200^2} = 282.84$  kVA

If the flexible limit is to be configured to 120.00% (of the rated apparent power i.e. 339.41 kVA), it must be entered as 12000

## Mains Rated Apparent Power

All mains apparent power values refer to the mains rated active power (parameter 1748 on page 29) and mains rated reactive power (parameter 1746 on page 29). The mains rated apparent power  $S$  is calculated using the real power  $P$  and the reactive power  $Q$  according to this formula:  $S = \sqrt{P^2 + Q^2}$

### Analog output example:

The mains rated active power (parameter 1748 on page 29) is configured to 200 kW

The mains rated reactive power (parameter 1746 on page 29) is configured to 200 kvar

The mains rated apparent power is  $\sqrt{200^2 + 200^2} = 282.84$  kVA

The source value at maximum output is configured to 120.00% (of the rated apparent power i.e. 339.41 kVA)

The source value at minimum output is configured to 0.00% (of the rated apparent power i.e. 0 kVA)

The analog output range is configured to 0 to 20 mA

If an apparent power of 0 kVA is measured, the analog output issues its lower limit (i.e. 0 mA)

If an apparent power of 339.41 kVA (or above) is measured, the analog output issues its upper limit (i.e. 20 mA)

If an apparent power of 169.71 kVA is measured, the analog output issues 50 % of its upper limit (i.e. 10 mA)

If an apparent power of 67.88 kVA is measured, the analog output issues 20 % of its upper limit (i.e. 4 mA)

### Flexible limit example:

The mains rated active power (parameter 1748 on page 29) is configured to 200 kW

The mains rated reactive power (parameter 1746 on page 29) is configured to 200 kvar

The mains rated apparent power is  $\sqrt{200^2 + 200^2} = 282.84$  kVA

If the flexible limit is to be configured to 120.00% (of the rated apparent power i.e. 339.41 kVA), it must be entered as 12000



## Generator / Mains Power Factor

The power factor is scaled linear over a range from 0001 to 9999 according to the following:

Power factor	leading 0.01	corresponds with a value of	0001 (i.e. 00.01% of the value range)
Power factor	leading 0.50	corresponds with a value of	2500 (i.e. 25.00% of the value range)
Power factor	leading 0.80	corresponds with a value of	4000 (i.e. 40.00% of the value range)
Power factor	1.00	corresponds with a value of	5000 (i.e. 50.00% of the value range)
Power factor	lagging 0.80	corresponds with a value of	6000 (i.e. 60.00% of the value range)
Power factor	lagging 0.50	corresponds with a value of	7500 (i.e. 75.00% of the value range)
Power factor	lagging 0.01	corresponds with a value of	9999 (i.e. 99.99% of the value range)

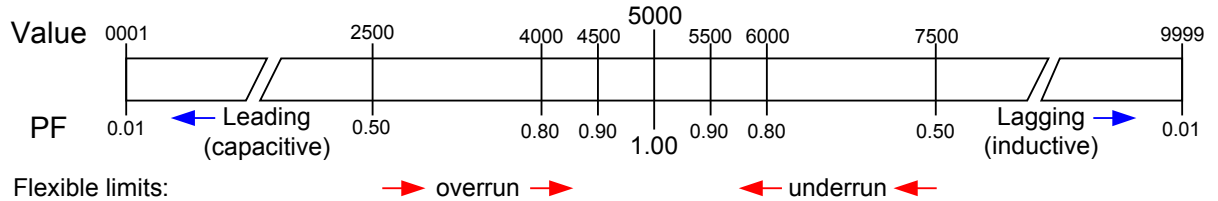


Figure 3-34: Reference values - power factor scaling

### Analog output example:

The source value at maximum output is configured to 10000

The source value at minimum output is configured to 00000

The analog output range is configured to 0 to 20 mA

If a power factor of leading 0.8 is measured, the analog output issues 40% of its upper limit (i.e. 8 mA)

If a power factor of leading 1 is measured, the analog output issues 50% of its upper limit (i.e. 10 mA)

If a power factor of lagging 0.9 is measured, the analog output issues 55% of its upper limit (i.e. 11 mA)

### Flexible limit example:

If a power factor of leading 0.95 is measured, the issued value is 4750

If a power factor of leading 1 is measured, the issued value is 5000

If a power factor of lagging 0.8 is measured, the issued value is 6000

## Generator Rated Current

All generator current values (line, average, and peak values) refer to the generator rated current (parameter 1754 on page 29).

### Analog output example:

The generator rated current (parameter 1754 on page 29) is configured to 1000 A

The source value at maximum output is configured to 110.00% (of the rated current i.e. 1100 A)

The source value at minimum output is configured to 10.00% (of the rated current i.e. 100 A)

The analog output range is configured to 0 to 20 mA

If a generator current of 100 A (or below) is measured, the analog output issues its lower limit (i.e. 0 mA)

If a generator current of 1100 A (or above) is measured, the analog output issues its upper limit (i.e. 20 mA)

If a generator current of 600 A is measured, the analog output issues 50 % of its upper limit (i.e. 10 mA)

If a generator current of 300 A is measured, the analog output issues 20 % of its upper limit (i.e. 4 mA)

### Flexible limit example:

The generator rated current (parameter 1754 on page 29) is configured to 1000 A

If the flexible limit is to be configured to 110.00% (of the rated current i.e. 1100 A), it must be entered as 11000

## Mains Rated Current

All mains current values (line, average, and peak values) refer to the mains rated current (parameter 1785 on page 29).

### Analog output example:

The mains rated current (parameter 1785 on page 29) is configured to 1000 A

The source value at maximum output is configured to 110.00% (of the rated current i.e. 1100 A)

The source value at minimum output is configured to 10.00% (of the rated current i.e. 100 A)

The analog output range is configured to 0 to 20 mA

If a mains current of 100 A (or below) is measured, the analog output issues its lower limit (i.e. 0 mA)

If a mains current of 1100 A (or above) is measured, the analog output issues its upper limit (i.e. 20 mA)

If a mains current of 600 A is measured, the analog output issues 50 % of its upper limit (i.e. 10 mA)

If a mains current of 300 A is measured, the analog output issues 20 % of its upper limit (i.e. 4 mA)

### Flexible limit example:

The mains rated current (parameter 1785 on page 29) is configured to 1000 A

If the flexible limit is to be configured to 110.00% (of the rated current i.e. 1100 A), it must be entered as 11000

## Rated Speed

The measured speed refers to the rated speed (parameter 1601 on page 28).

### Analog output example:

The rated speed (parameter 1601 on page 28) is configured to 1500 rpm

The source value at maximum output is configured to 120.00% (of the rated speed i.e. 1800 rpm)

The source value at minimum output is configured to 0.00% (of the rated speed i.e. 0 rpm)

The analog output range is configured to 0 to 20 mA

If a speed of 0 rpm is measured, the analog output issues its lower limit (i.e. 0 mA)

If a speed of 1800 rpm (or above) is measured, the analog output issues its upper limit (i.e. 20 mA)

If a speed of 900 rpm is measured, the analog output issues 50 % of its upper limit (i.e. 10 mA)

If a speed of 1500 rpm is measured, the analog output issues ~83 % of its upper limit (i.e. 16.7 mA)

### Flexible limit example:

The rated speed (parameter 1601 on page 28) is configured to 1500 rpm

If the flexible limit is to be configured to 120.00% (of the rated speed i.e. 1800 rpm), it must be entered as 12000

## Battery Voltage

The measured battery and auxiliary excitation voltage refer to the rated battery voltage of 24 V.

### Analog output example:

The source value at maximum output is configured to 120.00% (of the rated voltage i.e. 28.8 V)

The source value at minimum output is configured to 20.00% (of the rated voltage i.e. 4.8 V)

The analog output range is configured to 0 to 20 mA

If a battery voltage of 4.8 V (or below) is measured, the analog output issues its lower limit (i.e. 0 mA)

If a battery voltage of 28.8 V (or above) is measured, the analog output issues its upper limit (i.e. 20 mA)

If a battery voltage of 16.8 V is measured, the analog output issues 50 % of its upper limit (i.e. 10 mA)

If a battery voltage of 24 V is measured, the analog output issues 80 % of its upper limit (i.e. 16 mA)

### Flexible limit example:

If the flexible limit is to be configured to 120.00% (of the rated voltage i.e. 28.8 V), it must be entered as 12000

## Busbar 1 Rated Voltage

The busbar 1 delta voltage values refer to the busbar 1 rated voltage (parameter 1781 on page 29).

### Analog output example:

The busbar 1 rated voltage (parameter 1781 on page 29) is configured to 400 V

The source value at maximum output is configured to 110.00% (of the rated voltage i.e. 440 V)

The source value at minimum output is configured to 10.00% (of the rated voltage i.e. 40 V)

The analog output range is configured to 0 to 20 mA

If a busbar 1 voltage of 40 V (or below) is measured, the analog output issues its lower limit (i.e. 0 mA)

If a busbar 1 voltage of 440 V (or above) is measured, the analog output issues its upper limit (i.e. 20 mA)

If a busbar 1 voltage of 240 V is measured, the analog output issues 50 % of its upper limit (i.e. 10 mA)

If a busbar 1 voltage of 400 V is measured, the analog output issues 90 % of its upper limit (i.e. 18 mA)

### Flexible limit example:

The busbar 1 rated voltage (parameter 1781 on page 29) is configured to 400 V

If the flexible limit is to be configured to 110.00% (of the rated voltage i.e. 440 V), it must be entered as 11000

## Display Value Format

The analog input values refer to the display value format (refer to parameter 1035 on page 157). Delimiters like decimal points or commas are ignored. If the display value format is 0.01 bar for example, a value of 5 bar corresponds with 00500.

### Analog output example:

An analog input is configured to VDO 120°C characteristic.

The source value at maximum output is configured to 00100 (i.e. 100°C)

The source value at minimum output is configured to 00020 (i.e. 20°C)

The analog output range is configured to 0 to 20 mA

If a value of 20°C (or below) is measured, the analog output issues its lower limit (i.e. 0 mA)

If a value of 100°C (or above) is measured, the analog output issues its upper limit (i.e. 20 mA)

If a value of 60°C is measured, the analog output issues 50 % of its upper limit (i.e. 10 mA)

If a value of 84°C is measured, the analog output issues 80 % of its upper limit (i.e. 16 mA)

### Flexible limit example:

An analog input is configured to VDO 10 bar characteristic.

If the flexible limit is to be configured to 5.23 bar, it must be entered as 00523

**Note:** Refer to Table 3-73 on page 291 for more information on the fixed display value formats.

## Appendix D. Event History

The event history is a 300-entry FIFO (First In/First Out) memory for logging alarm events and operation states of the unit. As new event messages are entered into the history, the oldest messages are deleted once 300 events have occurred. Refer to the Operation Manual 37225 for additional information about the event history.

### Resetting the Event History



#### NOTE

**Be sure to be in the appropriate code level to reset the event history. If you have not entered the correct password for the required code level, the parameters for resetting the event history are not available (refer to the System Management section on page 25 for more information).**

The event history can be reset using the parameter "Clear event log" via the front panel.

### Resetting the Event History Using the Front Panel

Make sure that you are in code level CL2 or higher (refer to the Enter Password section on page 23 ).

Set the parameter "Clear event log" to Yes (refer to the System Management section on page 25).

The complete event history is now being cleared (single events may be cleared by pressing the ☒ button).

### Event List

Index	English event text	German event text	Description
14353	AUTO mode	BAW AUTO	Auto mode
14354	STOP mode	BAW STOP	Stop mode
14355	MAN mode	BAW HAND	Manual mode
14700	MCB open	NLS AUF	MCB open
14701	MCB close	NLS ZU	MCB close
14702	GCB open	GLS AUF	GCB open
14703	GCB close	GLS ZU	GCB close
14704	Mains failure	Netzausfall	Mains failure
14705	Emergency run	Notstrombetrieb	Emergency run
14706	Engine is running	Aggregat läuft	Engine is running
14707	Critical mode	Sprinklerbetrieb	Critical mode

Table 3-74: Event history - event list

### Alarm List

Index	English event text	German event text	Description
1714	EEPROM failure	EEPROM Fehler	Internal error. EEPROM checksum corrupted.
1912	Gen. overfrequency 1	Gen.Überfrequenz 1	Alarm overfrequency generator threshold 1
1913	Gen. overfrequency 2	Gen.Überfrequenz 2	Alarm overfrequency generator threshold 2
1962	Gen. underfrequency 1	Gen.Unterfrequenz 1	Alarm underfrequency generator threshold 1
1963	Gen. underfrequency 2	Gen.Unterfrequenz 2	Alarm underfrequency generator threshold 2
2012	Gen. overvoltage 1	Gen.Überspannung 1	Alarm overvoltage generator threshold 1
2013	Gen. overvoltage 2	Gen.Überspannung 2	Alarm overvoltage generator threshold 2
2062	Gen. undervoltage 1	Gen.Unterspannung 1	Alarm undervoltage generator threshold 1
2063	Gen. undervoltage 2	Gen.Unterspannung 2	Alarm undervoltage generator threshold 2
2112	Overspeed 1	Überdrehzahl 1	Alarm engine overspeed threshold 1
2113	Overspeed 2	Überdrehzahl 2	Alarm engine overspeed threshold 2
2162	Underspeed 1	Unterdrehzahl 1	Alarm engine underspeed threshold 1
2163	Underspeed 2	Unterdrehzahl 2	Alarm engine underspeed threshold 2
2218	Gen. overcurrent 1	Gen.Überstrom 1	Alarm overcurrent generator threshold 1
2219	Gen. overcurrent 2	Gen.Überstrom 2	Alarm overcurrent generator threshold 2
2220	Gen. overcurrent 3	Gen.Überstrom 3	Alarm overcurrent generator threshold 3
2262	Gen. rev./red. pwr.1	Gen.Rück/Minderlast1	Alarm reverse/reduced power generator threshold 1
2263	Gen. rev./red. pwr.2	Gen.Rück/Minderlast2	Alarm reverse/reduced power generator threshold 2
2314	Gen. overload IOP 1	Gen. Überlast IPB 1	Alarm overload generator IOP threshold 1
2315	Gen. overload IOP 2	Gen. Überlast IPB 2	Alarm overload generator IOP threshold 2
2337	Gen. PF lagging 1	Gen. cos.phi ind. 1	Monitoring generator power factor on exceeding a power factor limit

Index	English event text	German event text	Description
2338	Gen. PF lagging 2	Gen. cos.phi ind. 2	1. Alarm generator power factor lagging threshold 1. Monitoring generator power factor on exceeding a power factor limit 2. Alarm generator power factor lagging threshold 2.
2362	Gen. overload MOP 1	Gen. Überlast NPB 1	Alarm overload generator MOP threshold 1
2363	Gen. overload MOP 2	Gen. Überlast NPB 2	Alarm overload generator MOP threshold 2
2387	Gen. PF leading 1	Gen. cos.phi kap. 1	Monitoring generator power factor on fall below a power factor limit 1. Alarm generator power factor leading threshold 1.
2388	Gen. PF leading 2	Gen. cos.phi kap. 2	Monitoring generator power factor on fall below a power factor limit 2. Alarm generator power factor leading threshold 2.
2412	Unbalanced load 1	Schiefast 1	Alarm generator unbalanced load threshold 1
2413	Unbalanced load 2	Schiefast 2	Alarm generator unbalanced load threshold 2
2457	Speed/freq. mismatch	Alarm Drehz.erkenng.	Alarm speed detection implausible (generator frequency, pickup, DI are not matching)
2504	Eng. stop malfunct.	Abstellstörung	Alarm shutdown malfunction
2560	Maint. days exceeded	Wartungstage abgel.	Alarm maintenance days overdue
2561	Maint. hrs exceeded	Wartungsstd. abgel.	Alarm maintenance hours overdue
2603	GCB fail to close	GLS ZU Störung	Alarm failed to close GCB
2604	GCB fail to open	GLS AUF Störung	Alarm failed to open GCB
2623	MCB fail to close	NLS ZU Störung	Alarm failed to close MCB
2624	MCB fail to open	NLS AUF Störung	Alarm failed to open MCB
2652	Unintended stop	Ungewollter Stop	Alarm unintended stop
2664	Operat. range failed	Arbeitsber. verfehlt	Alarm operating range failed monitoring
2862	Mains overfreq. 1	Netz Überfrequenz 1	Alarm mains overfrequency threshold 1 (for mains decoupling)
2863	Mains overfreq. 2	Netz Überfrequenz 2	Alarm mains overfrequency threshold 2 (for mains decoupling)
2912	Mains underfreq. 1	Netz Unterfrequenz 1	Alarm mains underfrequency threshold 1 (for mains decoupling)
2913	Mains underfreq. 2	Netz Unterfrequenz 2	Alarm mains underfrequency threshold 2 (for mains decoupling)
2924	Gen act.pwr mismatch	Abweichg. Gen.Wirkl.	Alarm generator active power mismatch
2934	Mns act.pwr mismatch	Abweichg. Netzwirkl.	Alarm mains active power mismatch
2944	Ph.rotation mismatch	Drehfeldfehler	Alarm phase rotation mismatch
2962	Mains overvoltage 1	Netz Überspannung 1	Alarm mains overvoltage threshold 1 (for mains decoupling)
2963	Mains overvoltage 2	Netz Überspannung 2	Alarm mains overvoltage threshold 2 (for mains decoupling)
2985	Mains PF lagging 1	Netz cos.phi ind. 1	Monitoring mains power factor on exceeding a power factor limit 1. Alarm mains power factor lagging threshold 1.
2986	Mains PF lagging 2	Netz cos.phi ind. 2	Monitoring mains power factor on exceeding a power factor limit 2. Alarm mains power factor lagging threshold 2.
3012	Mains undervoltage 1	Netz Unterspannung 1	Alarm mains undervoltage threshold 1 (for mains decoupling)
3013	Mains undervoltage 2	Netz Unterspannung 2	Alarm mains undervoltage threshold 2 (for mains decoupling)
3035	Mains PF leading 1	Netz cos.phi kap. 1	Monitoring mains power factor on fall below a power factor limit 1. Alarm mains power factor leading threshold 1.
3036	Mains PF leading 2	Netz cos.phi kap. 2	Monitoring mains power factor on fall below a power factor limit 2. Alarm mains power factor leading threshold 2.
3057	Mains phase shift	Netz Phasensprung	Alarm mains phase shift for mains decoupling
3064	GCB syn. timeout	GLS Synchron. Zeit	Alarm timeout synchronization GCB
3074	MCB syn. timeout	NLS Synchron. Zeit	Alarm timeout synchronization MCB
3114	Mains decoupling	Netzentskopplung	Alarm mains decoupling triggered. The mains decoupling function has recognized a mains failure and tripped the breaker.
3124	Gen. unloading fault	Gen. Abschaltlsg.	Alarm generator unloading fault. It was not possible to unload the generator within of the configurable time.
3217	Mains import power 1	Netz Bezugsstg. 1	Alarm mains import power threshold 1
3218	Mains import power 2	Netz Bezugsstg. 2	Alarm mains import power threshold 2
3241	Mains export power 1	Netz Lieferstg. 1	Alarm mains export power threshold 1
3242	Mains export power 2	Netz Lieferstg. 2	Alarm mains export power threshold 2
3263	Ground fault 1	Erdschluß 1	Alarm ground fault threshold 1
3264	Ground fault 2	Erdschluß 2	Alarm ground fault threshold 2
3325	Start fail	Startfehler	Alarm start fail
3907	Gen. volt. asymmetry	Gen. Spg. Asymmetrie	Alarm generator voltage asymmetry alarm message
3955	Gen.ph.rot. mismatch	Gen. Drehfeld Fehler	Alarm generator phase rotation miswired
3975	Mns.ph.rot. mismatch	Netz Drehfeld Fehler	Alarm mains phase rotation miswired
4038	Inv. time overcurr.	Überstrom AMZ	Alarm generator inverse time overcurrent
4056	Charge alt. low volt	Lichtm. Unterspg.	Alarm battery charge fail monitoring
4064	Missing members	Anzahl Teilnehmer	
4073	Parameter alignment	Parameterabgleich	
5105	GAP alarm 1	GAP Alarm 1	
5111	GAP alarm 2	GAP Alarm 2	
5117	GAP alarm 3	GAP Alarm 3	
5123	GAP alarm 4	GAP Alarm 4	
5129	GAP alarm 5	GAP Alarm 5	
5135	GAP alarm 6	GAP Alarm 6	
5141	GAP alarm 7	GAP Alarm 7	
5147	GAP alarm 8	GAP Alarm 8	
5153	GAP alarm 9	GAP Alarm 9	
5159	GAP alarm 10	GAP Alarm 10	

Index	English event text	German event text	Description
5165	GAP alarm 11	GAP Alarm 11	
5171	GAP alarm 12	GAP Alarm 12	
5177	GAP alarm 13	GAP Alarm 13	
5183	GAP alarm 14	GAP Alarm 14	
5189	GAP alarm 15	GAP Alarm 15	
5195	GAP alarm 16	GAP Alarm 16	
10005	Bat. undervoltage 1	Bat. Unterspannung 1	Alarm battery undervoltage level 1
10006	Bat. undervoltage 2	Bat. Unterspannung 2	Alarm battery undervoltage level 2
10007	Bat. overvoltage 1	Bat. Überspannung 1	Alarm battery overvoltage level 1
10008	Bat. overvoltage 2	Bat. Überspannung 2	Alarm battery overvoltage level 2
10014	Wb:Analog input 1	Db:Analogeingang 1	Analog input1 wire break or short circuit ( configurable )
10015	Wb:Analog input 2	Db:Analogeingang 2	Analog input2 wire break or short circuit ( configurable )
10017	CAN fault J1939	CAN Fehler J1939	Alarm message: CAN-Error J1939
10018	Flexible limit 1	Flexibler Grenzwert 1	Alarm flexible limit 1 (configurable)
10019	Flexible limit 2	Flexibler Grenzwert 2	Alarm flexible limit 2 (configurable)
10020	Flexible limit 3	Flexibler Grenzwert 3	Alarm flexible limit 3 (configurable)
10021	Flexible limit 4	Flexibler Grenzwert 4	Alarm flexible limit 4 (configurable)
10022	Flexible limit 5	Flexibler Grenzwert 5	Alarm flexible limit 5 (configurable)
10023	Flexible limit 6	Flexibler Grenzwert 6	Alarm flexible limit 6 (configurable)
10024	Flexible limit 7	Flexibler Grenzwert 7	Alarm flexible limit 7 (configurable)
10025	Flexible limit 8	Flexibler Grenzwert 8	Alarm flexible limit 8 (configurable)
10026	Flexible limit 9	Flexibler Grenzwert 9	Alarm flexible limit 9 (configurable)
10027	Flexible limit 10	Flexibler Grenzwert 10	Alarm flexible limit 10 (configurable)
10028	Flexible limit 11	Flexibler Grenzwert 11	Alarm flexible limit 11 (configurable)
10029	Flexible limit 12	Flexibler Grenzwert 12	Alarm flexible limit 12 (configurable)
10030	Flexible limit 13	Flexibler Grenzwert 13	Alarm flexible limit 13 (configurable)
10031	Flexible limit 14	Flexibler Grenzwert 14	Alarm flexible limit 14 (configurable)
10032	Flexible limit 15	Flexibler Grenzwert 15	Alarm flexible limit 15 (configurable)
10033	Flexible limit 16	Flexibler Grenzwert 16	Alarm flexible limit 16 (configurable)
10034	Flexible limit 17	Flexibler Grenzwert 17	Alarm flexible limit 17 (configurable)
10035	Flexible limit 18	Flexibler Grenzwert 18	Alarm flexible limit 18 (configurable)
10036	Flexible limit 19	Flexibler Grenzwert 19	Alarm flexible limit 19 (configurable)
10037	Flexible limit 20	Flexibler Grenzwert 20	Alarm flexible limit 20 (configurable)
10038	Flexible limit 21	Flexibler Grenzwert 21	Alarm flexible limit 21 (configurable)
10039	Flexible limit 22	Flexibler Grenzwert 22	Alarm flexible limit 22 (configurable)
10040	Flexible limit 23	Flexibler Grenzwert 23	Alarm flexible limit 23 (configurable)
10041	Flexible limit 24	Flexibler Grenzwert 24	Alarm flexible limit 24 (configurable)
10042	Flexible limit 25	Flexibler Grenzwert 25	Alarm flexible limit 25 (configurable)
10043	Flexible limit 26	Flexibler Grenzwert 26	Alarm flexible limit 26 (configurable)
10044	Flexible limit 27	Flexibler Grenzwert 27	Alarm flexible limit 27 (configurable)
10045	Flexible limit 28	Flexibler Grenzwert 28	Alarm flexible limit 28 (configurable)
10046	Flexible limit 29	Flexibler Grenzwert 29	Alarm flexible limit 29 (configurable)
10047	Flexible limit 30	Flexibler Grenzwert 30	Alarm flexible limit 30 (configurable)
10048	Flexible limit 31	Flexibler Grenzwert 31	Alarm flexible limit 31 (configurable)
10049	Flexible limit 32	Flexibler Grenzwert 32	Alarm flexible limit 32 (configurable)
10050	Flexible limit 33	Flexibler Grenzwert 33	Alarm flexible limit 33 (configurable)
10051	Flexible limit 34	Flexibler Grenzwert 34	Alarm flexible limit 34 (configurable)
10052	Flexible limit 35	Flexibler Grenzwert 35	Alarm flexible limit 35 (configurable)
10053	Flexible limit 36	Flexibler Grenzwert 36	Alarm flexible limit 36 (configurable)
10054	Flexible limit 37	Flexibler Grenzwert 37	Alarm flexible limit 37 (configurable)
10055	Flexible limit 38	Flexibler Grenzwert 38	Alarm flexible limit 38 (configurable)
10056	Flexible limit 39	Flexibler Grenzwert 39	Alarm flexible limit 39 (configurable)
10057	Flexible limit 40	Flexibler Grenzwert 40	Alarm flexible limit 40 (configurable)
10060	Wb:Analog input 3	Db:Analogeingang 3	Wire break or short circuit at analog input 3
10087	CANopen Interface 1	CANopen Interface 1	
10088	CANopen Interface 2	CANopen Interface 2	
10205	Flexible limit 41	Flexibler Grenzwert 41	Alarm flexible limit 41 (configurable)
10206	Flexible limit 42	Flexibler Grenzwert 42	Alarm flexible limit 42 (configurable)
10207	Flexible limit 43	Flexibler Grenzwert 43	Alarm flexible limit 43 (configurable)
10208	Flexible limit 44	Flexibler Grenzwert 44	Alarm flexible limit 44 (configurable)
10209	Flexible limit 45	Flexibler Grenzwert 45	Alarm flexible limit 45 (configurable)
10210	Flexible limit 46	Flexibler Grenzwert 46	Alarm flexible limit 46 (configurable)
10211	Flexible limit 47	Flexibler Grenzwert 47	Alarm flexible limit 47 (configurable)
10212	Flexible limit 48	Flexibler Grenzwert 48	Alarm flexible limit 48 (configurable)
10213	Flexible limit 49	Flexibler Grenzwert 49	Alarm flexible limit 49 (configurable)
10214	Flexible limit 50	Flexibler Grenzwert 50	Alarm flexible limit 50 (configurable)
10215	Flexible limit 51	Flexibler Grenzwert 51	Alarm flexible limit 51 (configurable)
10216	Flexible limit 52	Flexibler Grenzwert 52	Alarm flexible limit 52 (configurable)
10217	Flexible limit 53	Flexibler Grenzwert 53	Alarm flexible limit 53 (configurable)
10218	Flexible limit 54	Flexibler Grenzwert 54	Alarm flexible limit 54 (configurable)
10219	Flexible limit 55	Flexibler Grenzwert 55	Alarm flexible limit 55 (configurable)

Index	English event text	German event text	Description
10220	Flexible limit 56	Flexibler Grenzwert 56	Alarm flexible limit 56 (configurable)
10221	Wb:External Analog input 1	Db:Externer Analogeingang 1	Wire break or short circuit at external analog input 1
10222	Wb:External Analog input 2	Db:Externer Analogeingang 2	Wire break or short circuit at external analog input 2
10223	Wb:External Analog input 3	Db:Externer Analogeingang 3	Wire break or short circuit at external analog input 3
10224	Wb:External Analog input 4	Db:Externer Analogeingang 4	Wire break or short circuit at external analog input 4
10225	Wb:External Analog input 5	Db:Externer Analogeingang 5	Wire break or short circuit at external analog input 5
10226	Wb:External Analog input 6	Db:Externer Analogeingang 6	Wire break or short circuit at external analog input 6
10227	Wb:External Analog input 7	Db:Externer Analogeingang 7	Wire break or short circuit at external analog input 7
10228	Wb:External Analog input 8	Db:Externer Analogeingang 8	Wire break or short circuit at external analog input 8
10229	Wb:External Analog input 9	Db:Externer Analogeingang 9	Wire break or short circuit at external analog input 9
10230	Wb:External Analog input 10	Db:Externer Analogeingang 10	Wire break or short circuit at external analog input 10
10231	Wb:External Analog input 11	Db:Externer Analogeingang 11	Wire break or short circuit at external analog input 11
10232	Wb:External Analog input 12	Db:Externer Analogeingang 12	Wire break or short circuit at external analog input 12
10233	Wb:External Analog input 13	Db:Externer Analogeingang 13	Wire break or short circuit at external analog input 13
10234	Wb:External Analog input 14	Db:Externer Analogeingang 14	Wire break or short circuit at external analog input 14
10235	Wb:External Analog input 15	Db:Externer Analogeingang 15	Wire break or short circuit at external analog input 15
10236	Wb:External Analog input 16	Db:Externer Analogeingang 16	Wire break or short circuit at external analog input 16
10600	Discrete input 1	Digitaleingang 1	Alarm DI1 (configurable)
10601	Discrete input 2	Digitaleingang 2	Alarm DI2 (configurable)
10602	Discrete input 3	Digitaleingang 3	Alarm DI3 (configurable)
10603	Discrete input 4	Digitaleingang 4	Alarm DI4 (configurable)
10604	Discrete input 5	Digitaleingang 5	Alarm DI5 (configurable)
10605	Discrete input 6	Digitaleingang 6	Alarm DI6 (configurable)
10607	Discrete input 7	Digitaleingang 7	Alarm DI7
10608	Discrete input 8	Digitaleingang 8	Alarm DI8
10609	Discrete input 9	Digitaleingang 9	Alarm DI9 (configurable)
10610	Discrete input 10	Digitaleingang 10	Alarm DI10 (configurable)
10611	Discrete input 11	Digitaleingang 11	Alarm DI11 (configurable)
10612	Discrete input 12	Digitaleingang 12	Alarm DI12 (configurable)
15125	Red stop lamp	Rote Stoplampe	Red lamp alarm of J1939
15126	Amber warning lamp	Gelbe Warnlampe	Amber lamp alarm of J1939
16202	Ext. Discrete input 17	Ext. Digitaleingang 17	Alarm external DI17 (configurable)
16212	Ext. Discrete input 18	Ext. Digitaleingang 18	Alarm external DI18 (configurable)
16222	Ext. Discrete input 19	Ext. Digitaleingang 19	Alarm external DI19 (configurable)
16232	Ext. Discrete input 20	Ext. Digitaleingang 20	Alarm external DI20 (configurable)
16242	Ext. Discrete input 21	Ext. Digitaleingang 21	Alarm external DI21 (configurable)
16252	Ext. Discrete input 22	Ext. Digitaleingang 22	Alarm external DI22 (configurable)
16262	Ext. Discrete input 23	Ext. Digitaleingang 23	Alarm external DI23 (configurable)
16272	Ext. Discrete input 24	Ext. Digitaleingang 24	Alarm external DI24 (configurable)
16282	Ext. Discrete input 25	Ext. Digitaleingang 25	Alarm external DI25 (configurable)
16292	Ext. Discrete input 26	Ext. Digitaleingang 26	Alarm external DI26 (configurable)
16302	Ext. Discrete input 27	Ext. Digitaleingang 27	Alarm external DI27 (configurable)
16312	Ext. Discrete input 28	Ext. Digitaleingang 28	Alarm external DI28 (configurable)
16322	Ext. Discrete input 29	Ext. Digitaleingang 29	Alarm external DI29 (configurable)
16332	Ext. Discrete input 30	Ext. Digitaleingang 30	Alarm external DI30 (configurable)
16342	Ext. Discrete input 31	Ext. Digitaleingang 31	Alarm external DI31 (configurable)
16352	Ext. Discrete input 32	Ext. Digitaleingang 32	Alarm external DI32 (configurable)
16360	Ext. Discrete input 1	Ext. Digitaleingang 1	Alarm external DI1 (configurable)
16361	Ext. Discrete input 2	Ext. Digitaleingang 2	Alarm external DI2 (configurable)
16362	Ext. Discrete input 3	Ext. Digitaleingang 3	Alarm external DI3 (configurable)
16364	Ext. Discrete input 4	Ext. Digitaleingang 4	Alarm external DI4 (configurable)
16365	Ext. Discrete input 5	Ext. Digitaleingang 5	Alarm external DI5 (configurable)
16366	Ext. Discrete input 6	Ext. Digitaleingang 6	Alarm external DI6 (configurable)
16367	Ext. Discrete input 7	Ext. Digitaleingang 7	Alarm external DI7 (configurable)
16368	Ext. Discrete input 8	Ext. Digitaleingang 8	Alarm external DI8 (configurable)
16369	Ext. Discrete input 9	Ext. Digitaleingang 9	Alarm external DI9 (configurable)
16370	Ext. Discrete input 10	Ext. Digitaleingang 10	Alarm external DI10 (configurable)
16371	Ext. Discrete input 11	Ext. Digitaleingang 11	Alarm external DI11 (configurable)
16372	Ext. Discrete input 12	Ext. Digitaleingang 12	Alarm external DI12 (configurable)
16373	Ext. Discrete input 13	Ext. Digitaleingang 13	Alarm external DI13 (configurable)
16374	Ext. Discrete input 14	Ext. Digitaleingang 14	Alarm external DI14 (configurable)
16375	Ext. Discrete input 15	Ext. Digitaleingang 15	Alarm external DI15 (configurable)
16376	Ext. Discrete input 16	Ext. Digitaleingang 16	Alarm external DI16 (configurable)

Table 3-75: Event history - alarm list

## Appendix E.

# Triggering Characteristics

### Time-Dependent Overshoot Monitoring



This triggering characteristic is used for time-dependent overcurrent monitoring.

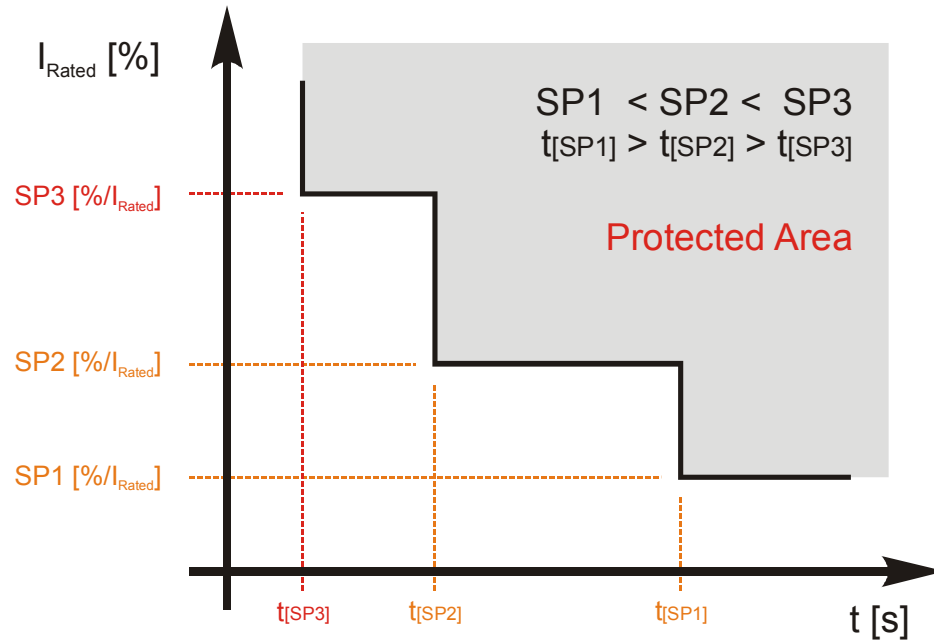


Figure 3-35: Triggering characteristics - three-level time-dependent overshoot monitoring



## Two-Level Overshoot Monitoring



This triggering characteristic is used for generator, mains & battery overvoltage, generator & mains overfrequency, overload IOP & MOP, and engine overspeed monitoring.

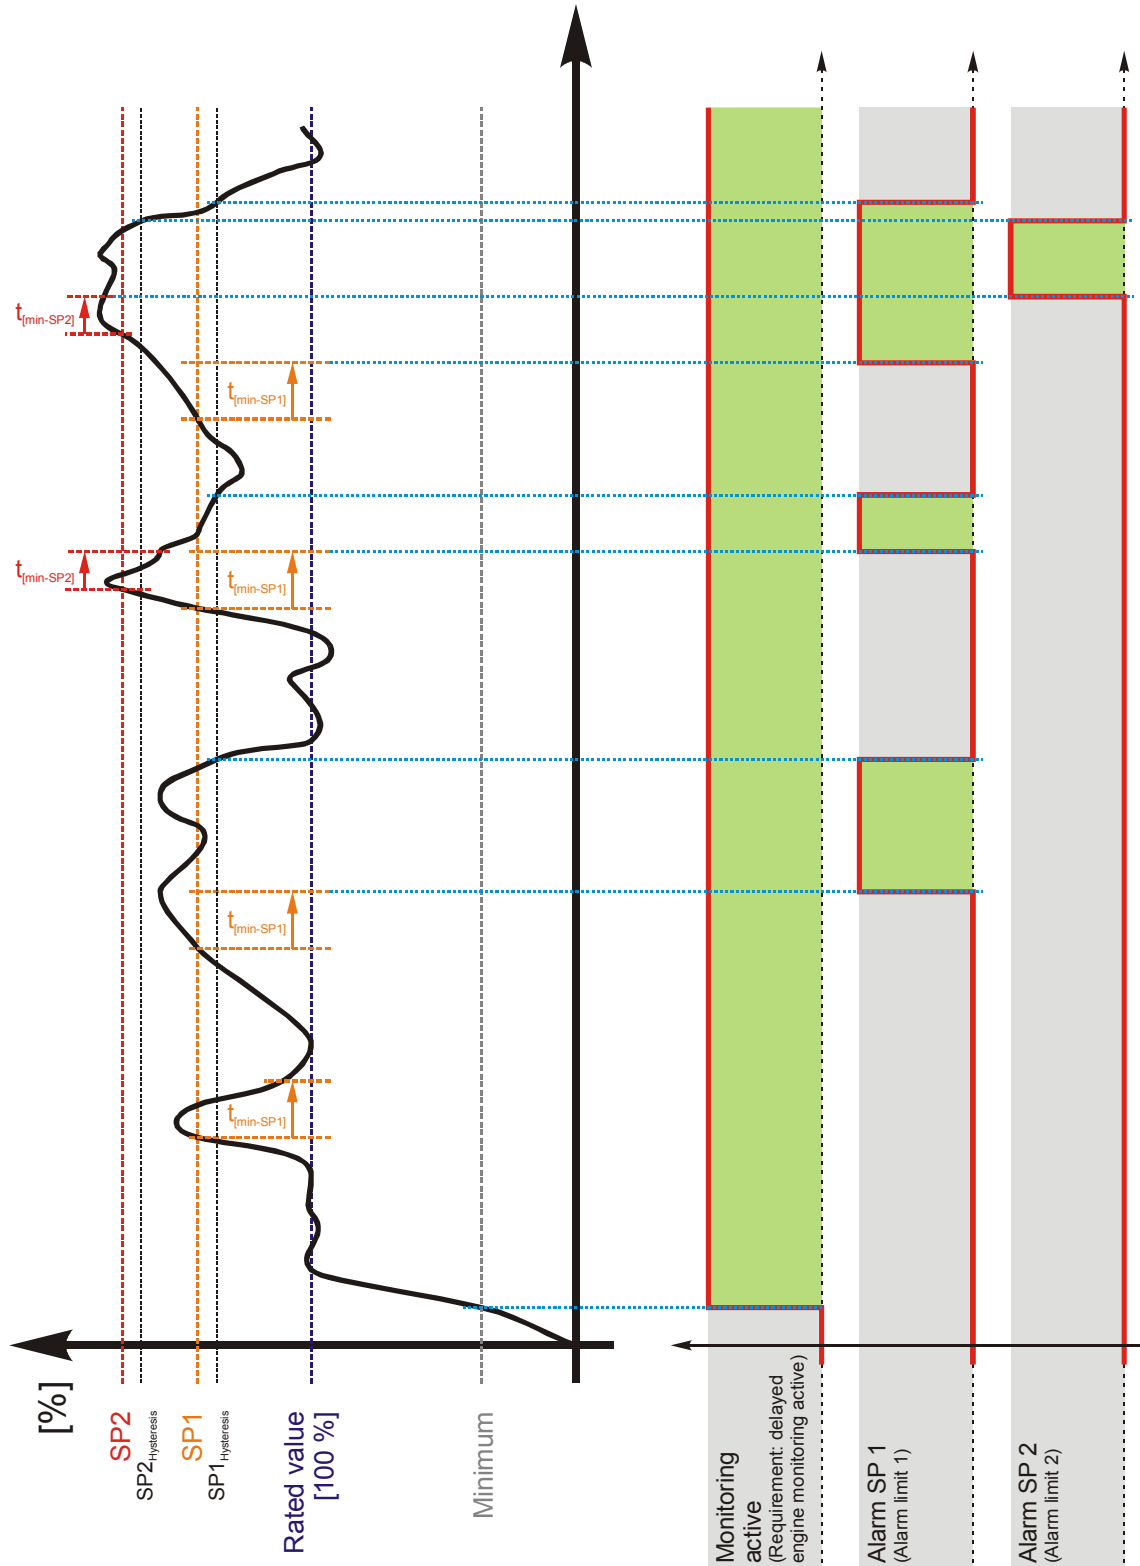


Figure 3-36: Triggering characteristics - two-level overshoot monitoring

## Two-Level Undershoot Monitoring



This triggering characteristic is used for generator, mains & battery undervoltage, generator & mains underfrequency, and engine underspeed monitoring.

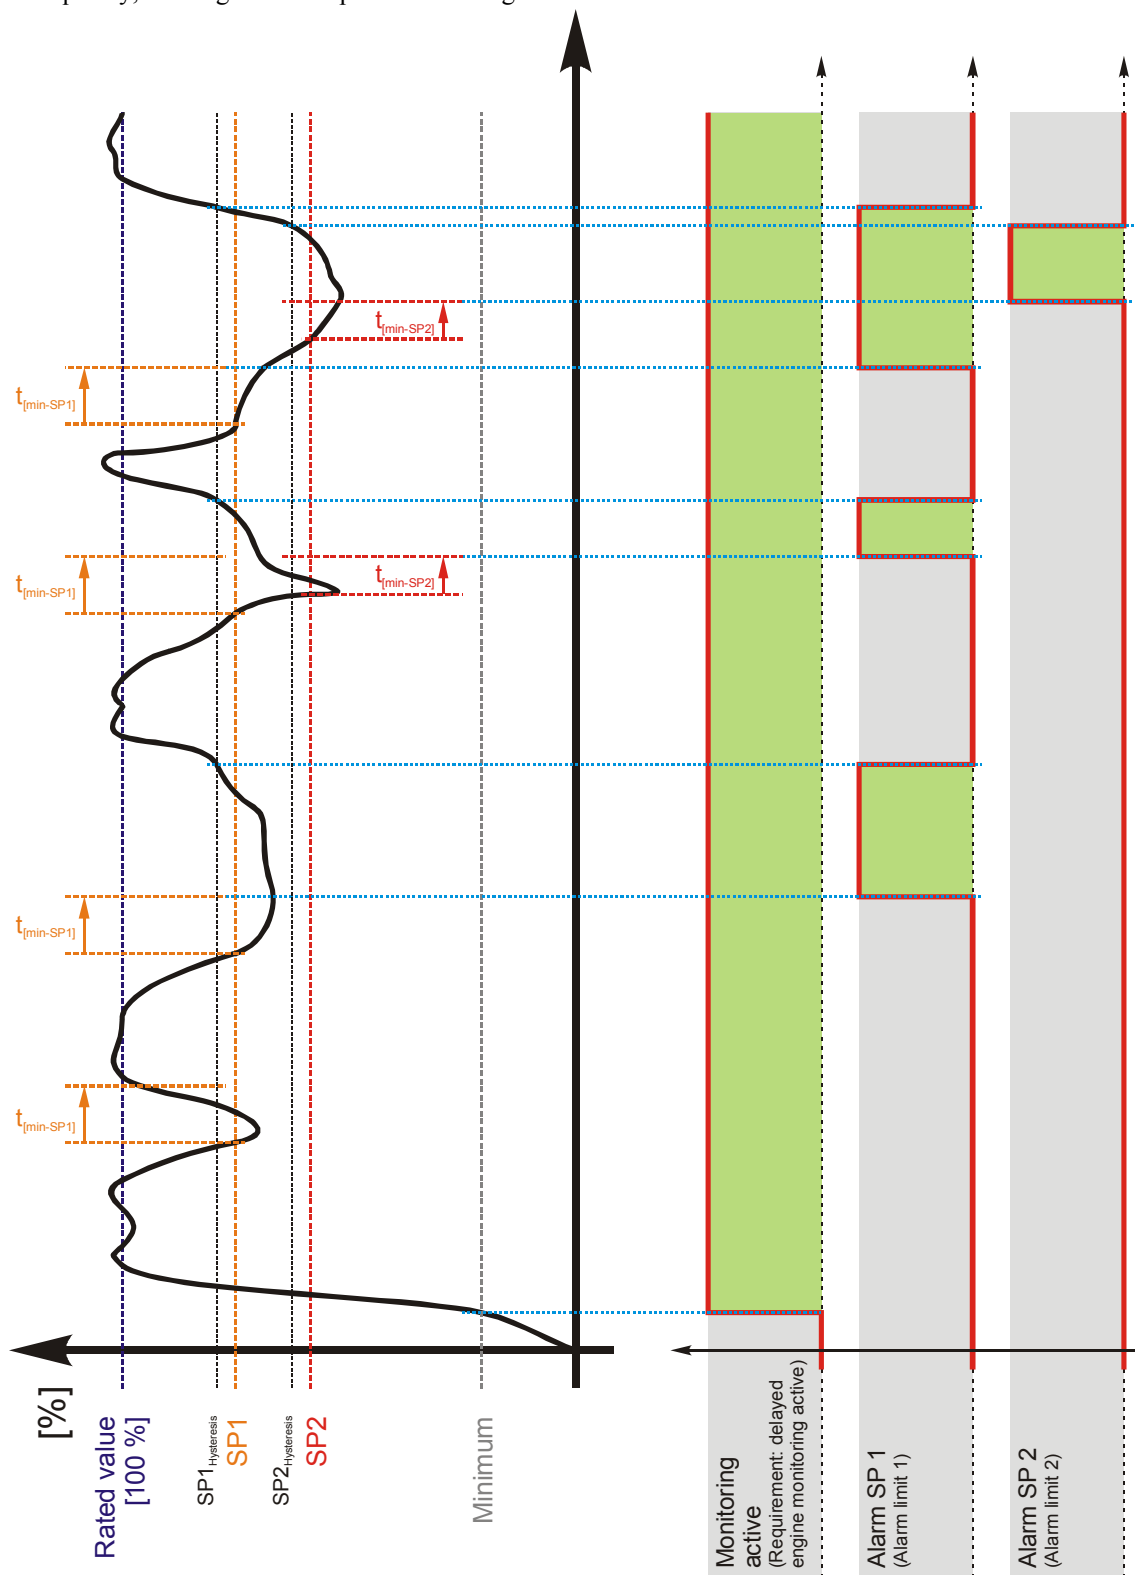


Figure 3-37: Triggering characteristics - two-level undershoot monitoring

## Two-Level Reversed/Reduced Load Monitoring



This triggering characteristic is used for generator reversed/reduced load monitoring.

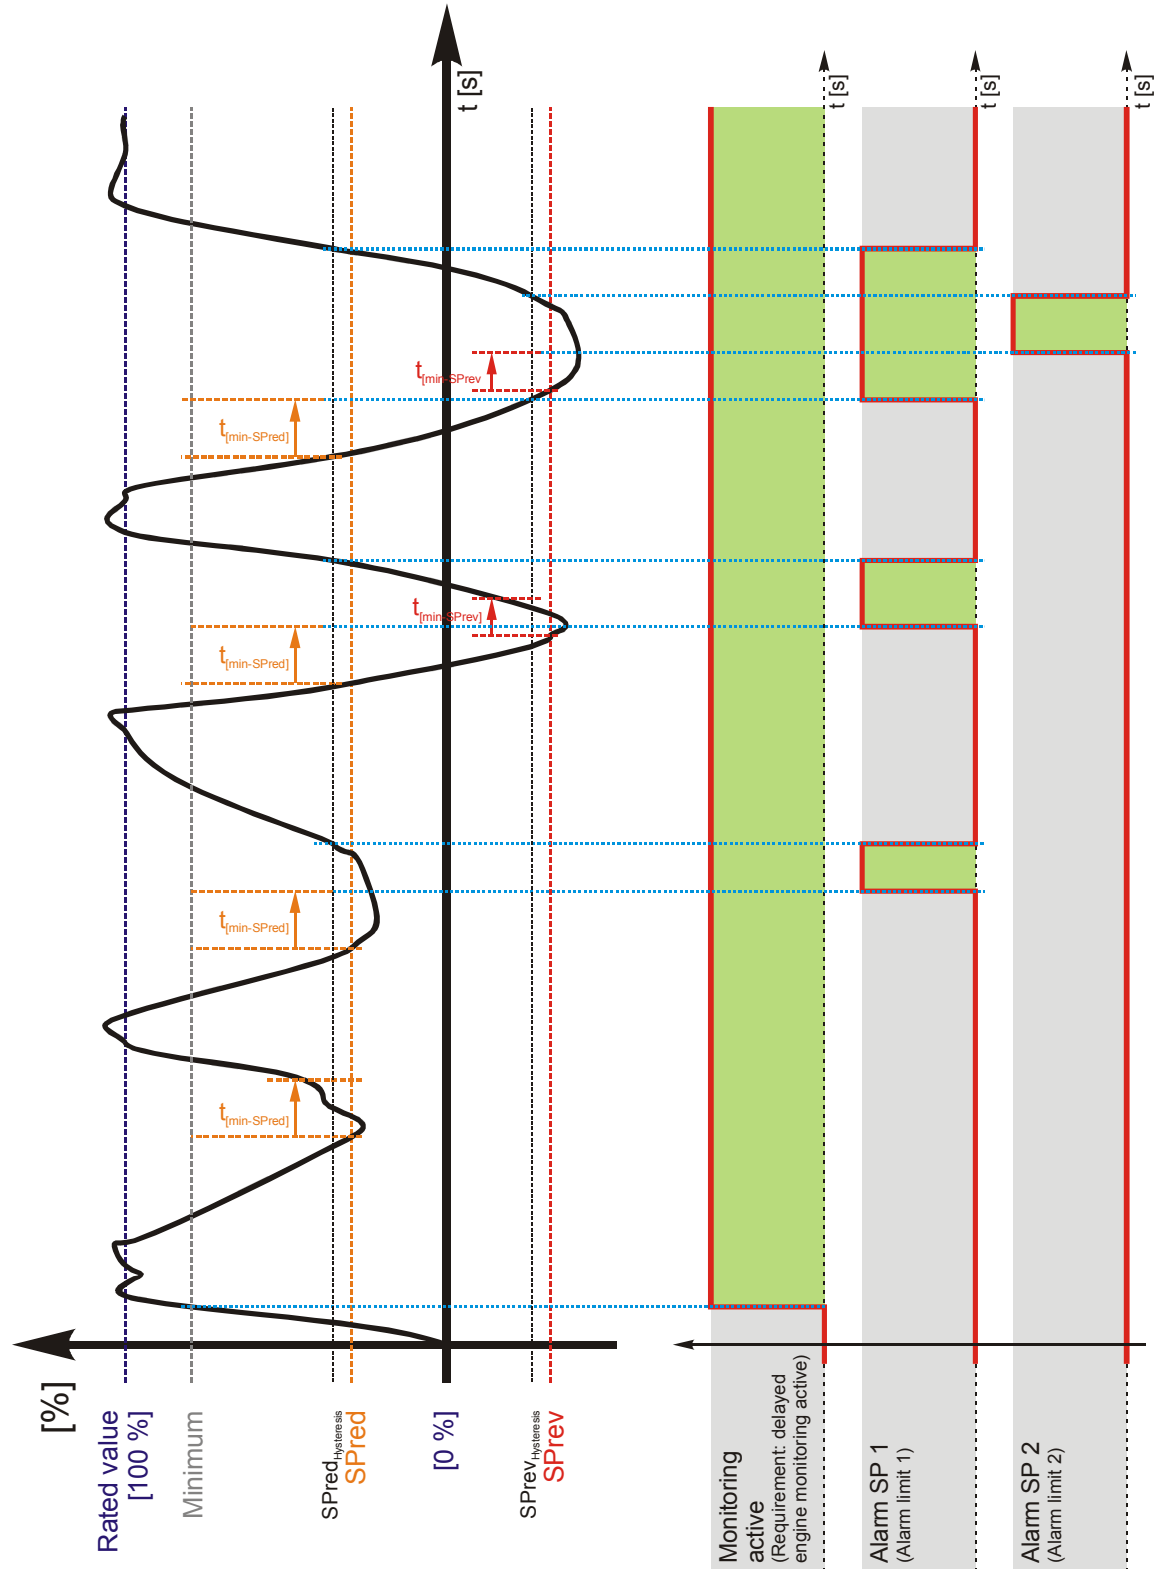


Figure 3-38: Triggering characteristics - two-level reversed/reduced load monitoring

## Two-Level Unbalanced Load Monitoring



This triggering characteristic is used for generator unbalanced load monitoring.

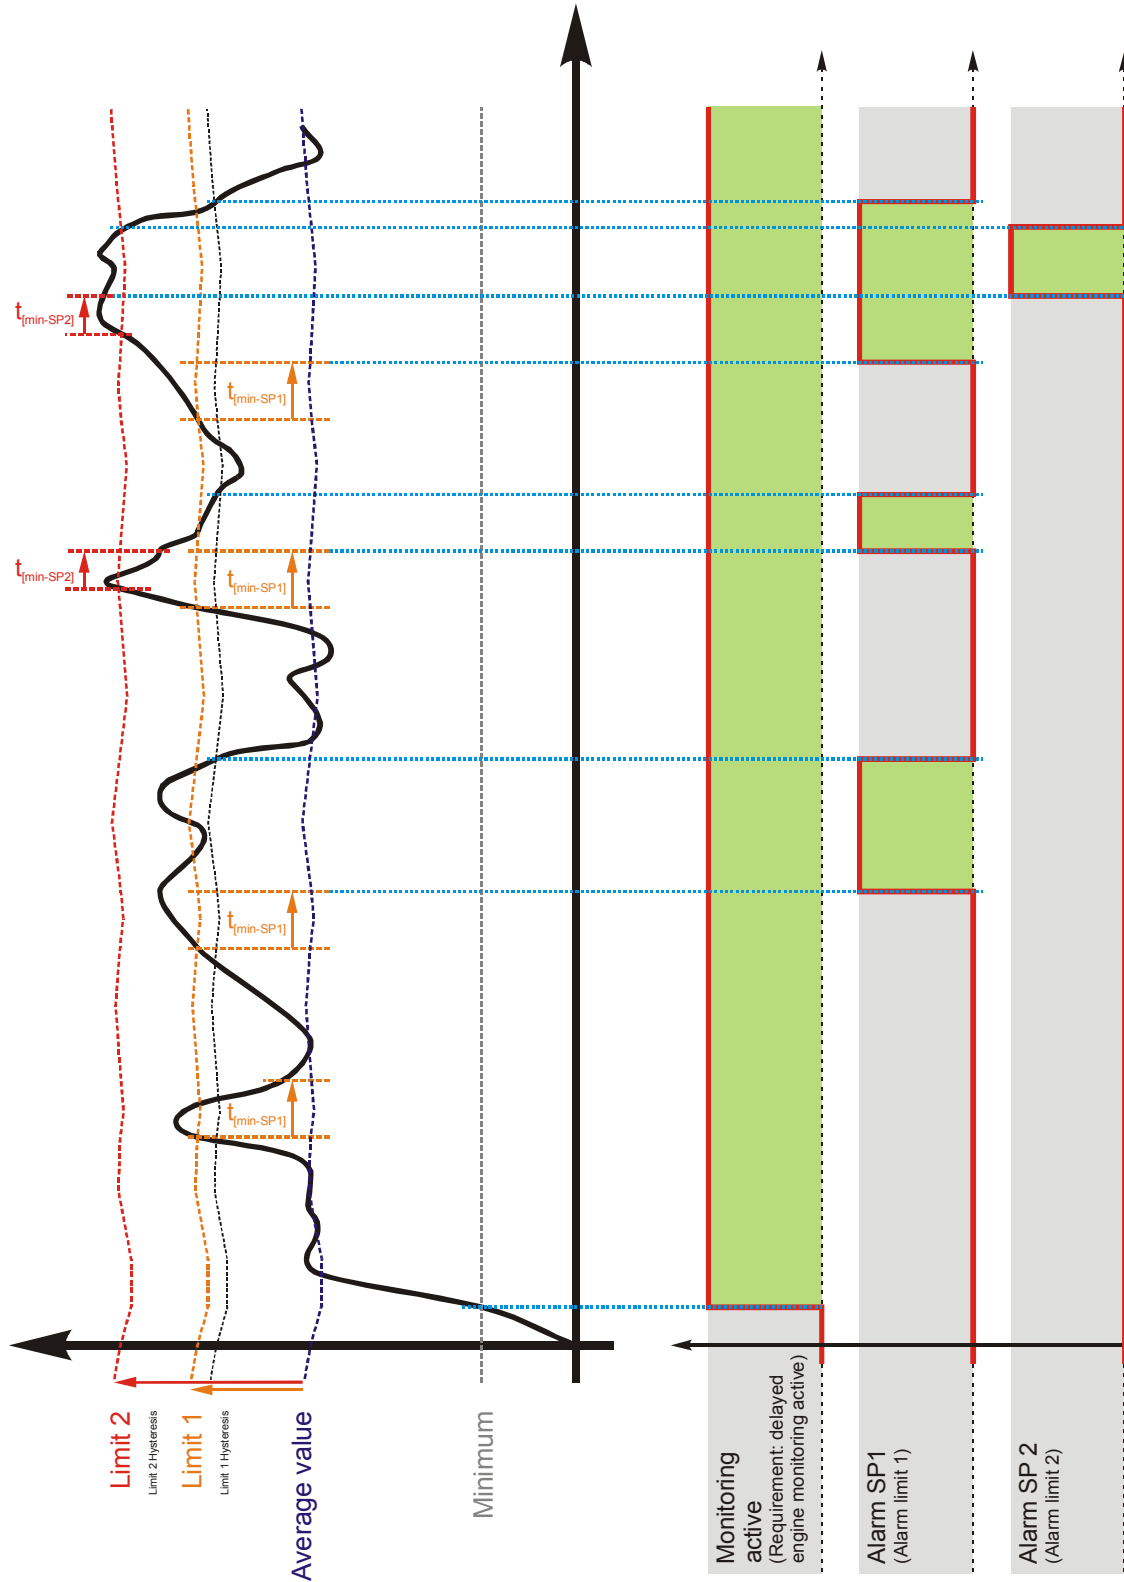


Figure 3-39: Triggering characteristics - two-level unbalanced load monitoring

# One-Level Asymmetry Monitoring



This triggering characteristic is used for generator voltage asymmetry monitoring.

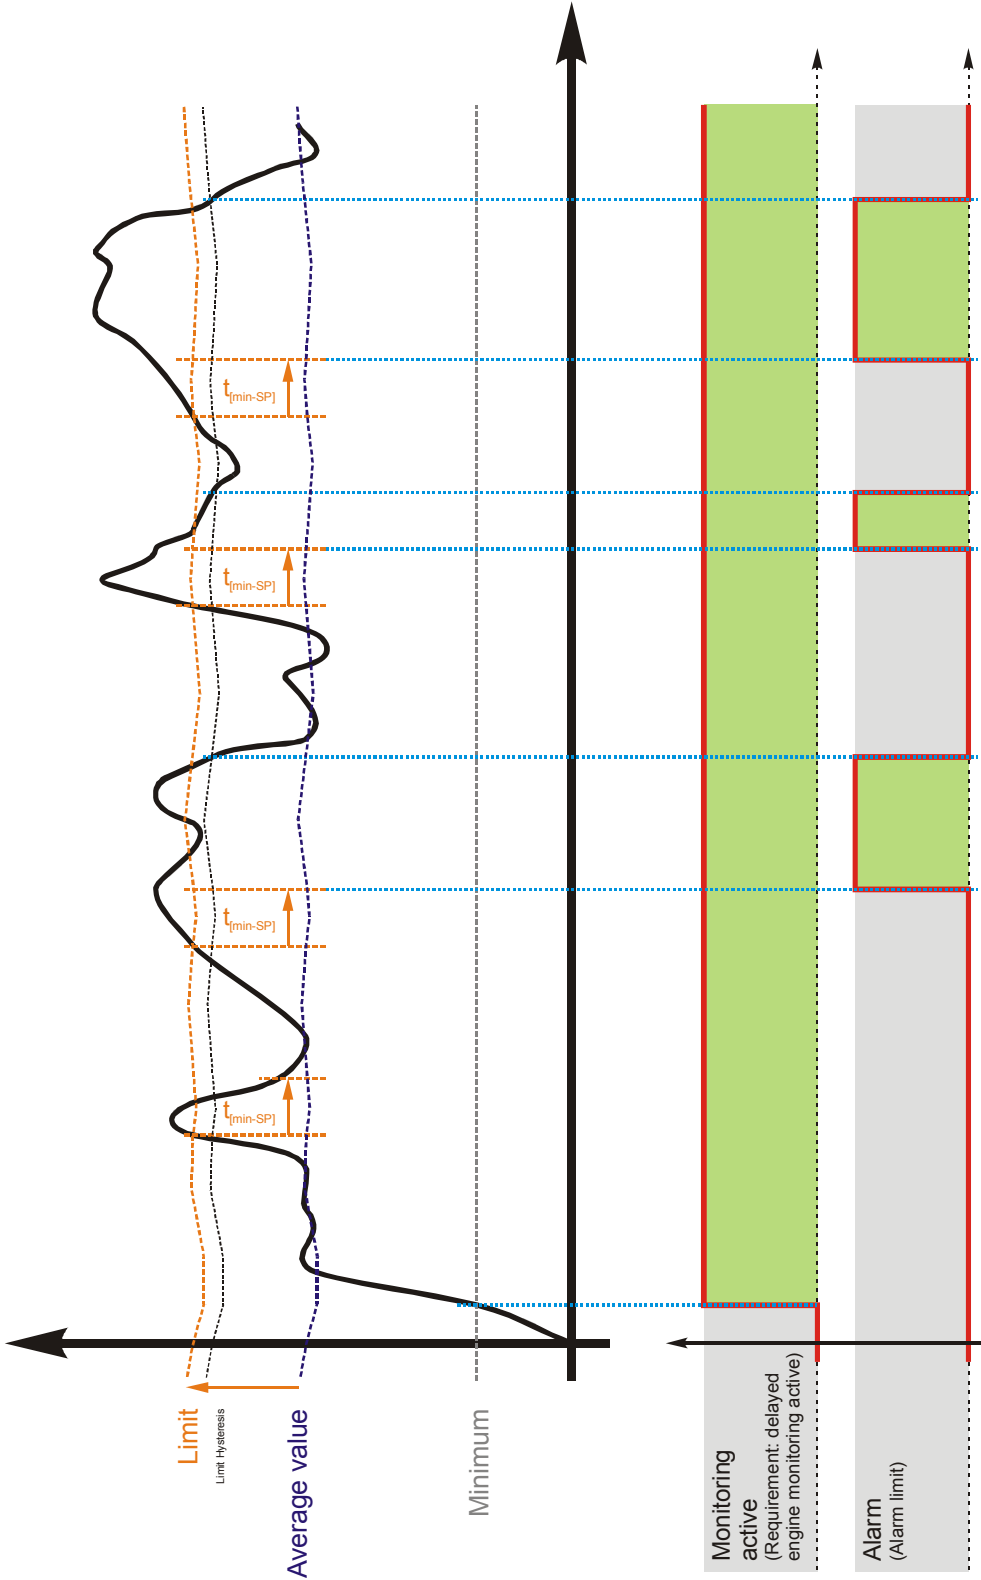


Figure 3-40: Triggering characteristics - one-level asymmetry monitoring

# Appendix F.

## Characteristics Of The VDO Inputs

Since VDO sensors are available in various different types, the Index Numbers of the characteristic curve tables are listed. The customer must observe to order a sensor with the correct characteristic curve when selecting a VDO sensor. Manufacturers of VDO sensors usually list these tables in their catalogs.

### VDO Input "Pressure" (0 to 5 bar / 0 to 72 psi) - Index "III"



VDO Pres. 0-5 bar Index "III"

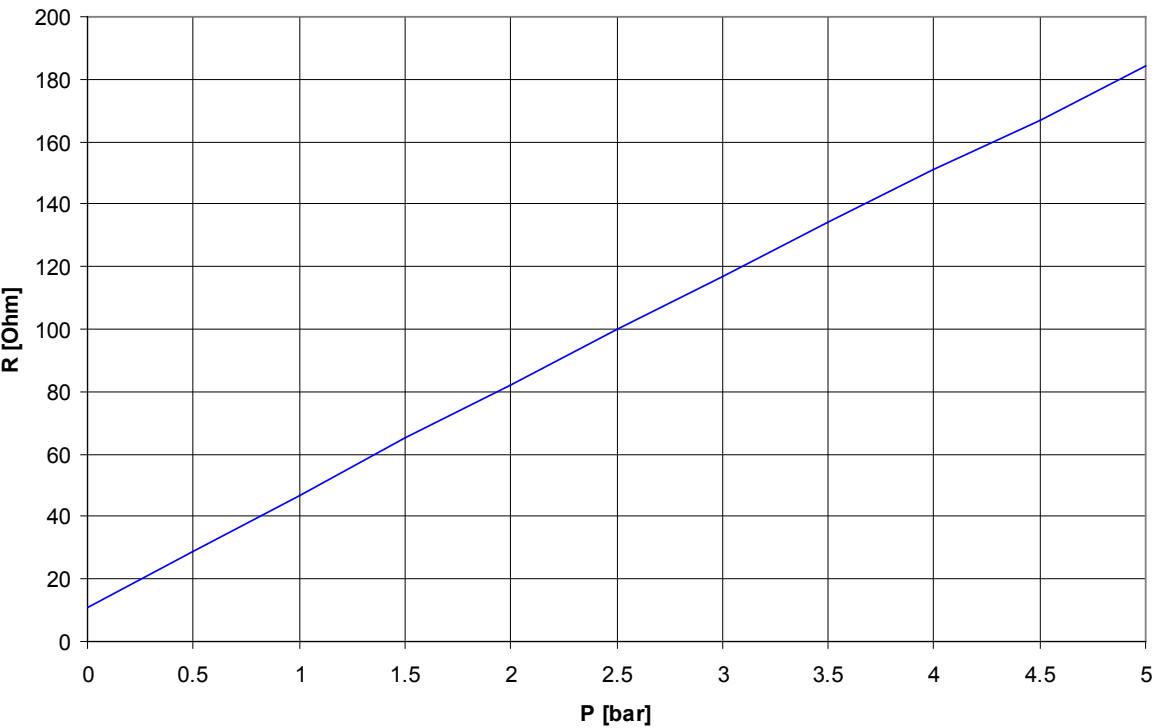


Figure 3-41: Analog inputs - characteristics diagram VDO 0 to 5 bar, Index "III"

P [bar]	0	0.5	1	1.5	2	2.5	3	3.5	4	4.5	5
P [psi}	0	7.25	14.50	21.76	29.00	36.26	43.51	50.76	58.02	65.27	72.52
R [Ohm]	11	29	47	65	82	100	117	134	151	167	184

Table 3-76: Analog inputs - characteristics diagram VDO 0 to 5 bar, Index "III"

VDO Input "Pressure" (0 to 10 bar / 0 to 145 psi) - Index "IV"



VDO Pres. 0-10 bar Index "IV"

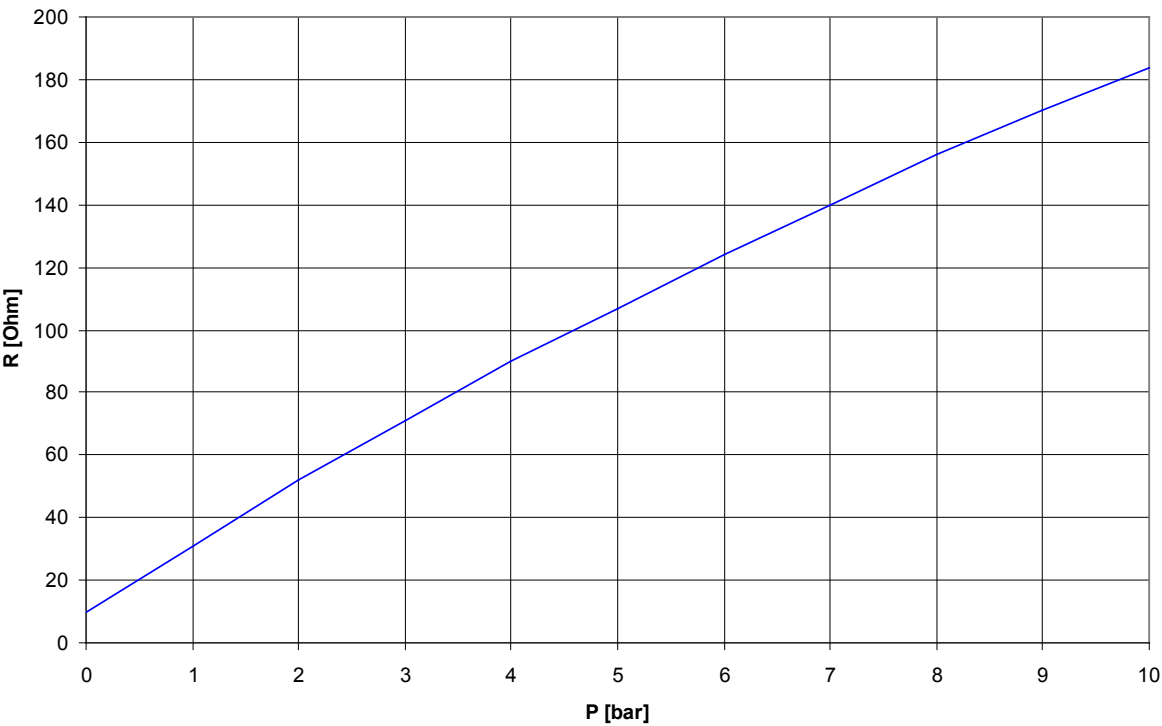


Figure 3-42: Analog inputs - characteristics diagram VDO 0 to 10 bar, Index "IV"

P [bar]	0	0.5	1	1.5	2	3	4	5	6	7	8	8.5	9	10
P [psi}	0	7.25	14.50	21.76	29.00	43.51	58.02	72.52	87.02	101.53	116.03	123.28	130.53	145.04
R [Ohm]	10	21	31	42	52	71	90	107	124	140	156	163	170	184

Table 3-77: Analog inputs - characteristics diagram VDO 0 to 10 bar, Index "IV"

## VDO Input "Temperature" (40 to 120 °C / 104 to 248 °F) - Index "92-027-004"



**VDO Temp. 40-120 °C 92-027-004**

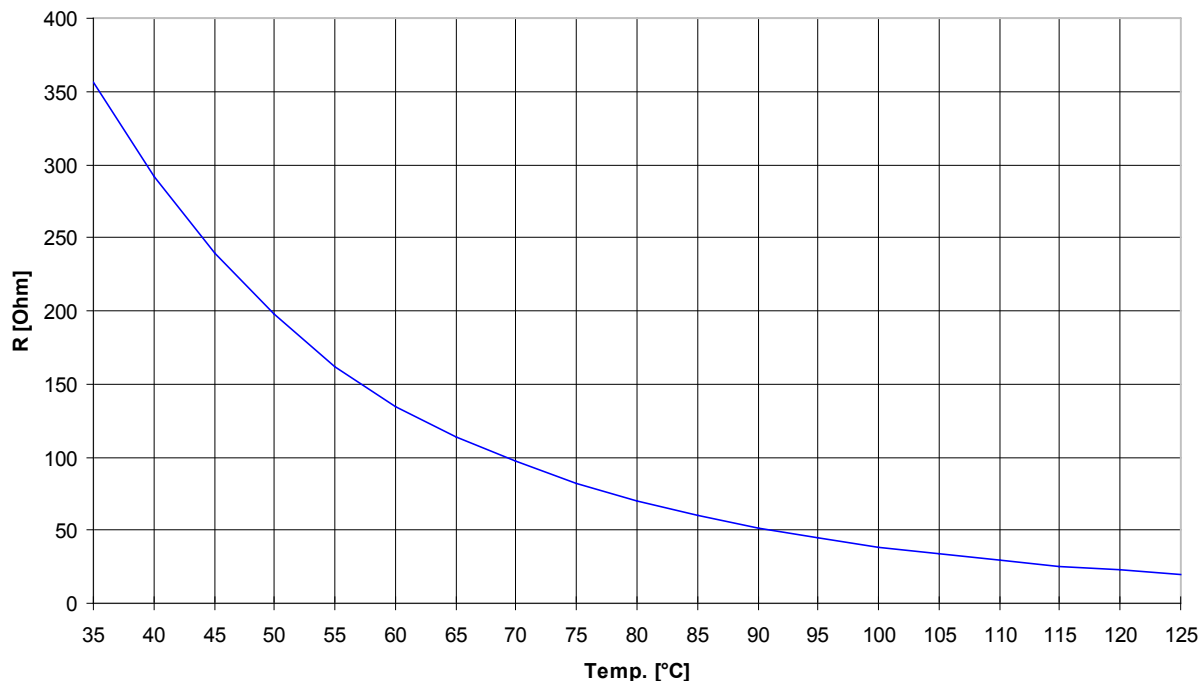


Figure 3-43: Analog inputs - characteristics diagram VDO 40 to 120 °C, Index "92-027-004"

Temp. [°C]	40	45	50	55	60	65	70	75	80
Temp. [°F]	104	113	122	131	140	149	158	167	176
R [Ohm]	291.46	239.56	197.29	161.46	134.03	113.96	97.05	82.36	70.12

Temp. [°C]	85	90	95	100	105	110	115	120	
Temp. [°F]	185	194	203	212	221	230	239	248	
R [Ohm]	59.73	51.21	44.32	38.47	33.40	29.12	25.53	22.44	

Table 3-78: Analog inputs - characteristics diagram VDO 40 to 120 °C, Index "92-027-004"



## VDO Input "Temperature" (50 to 150 °C / 122 to 302 °F) - Index "92-027-006"



**VDO Temp. 50-150 °C 92-027-006**

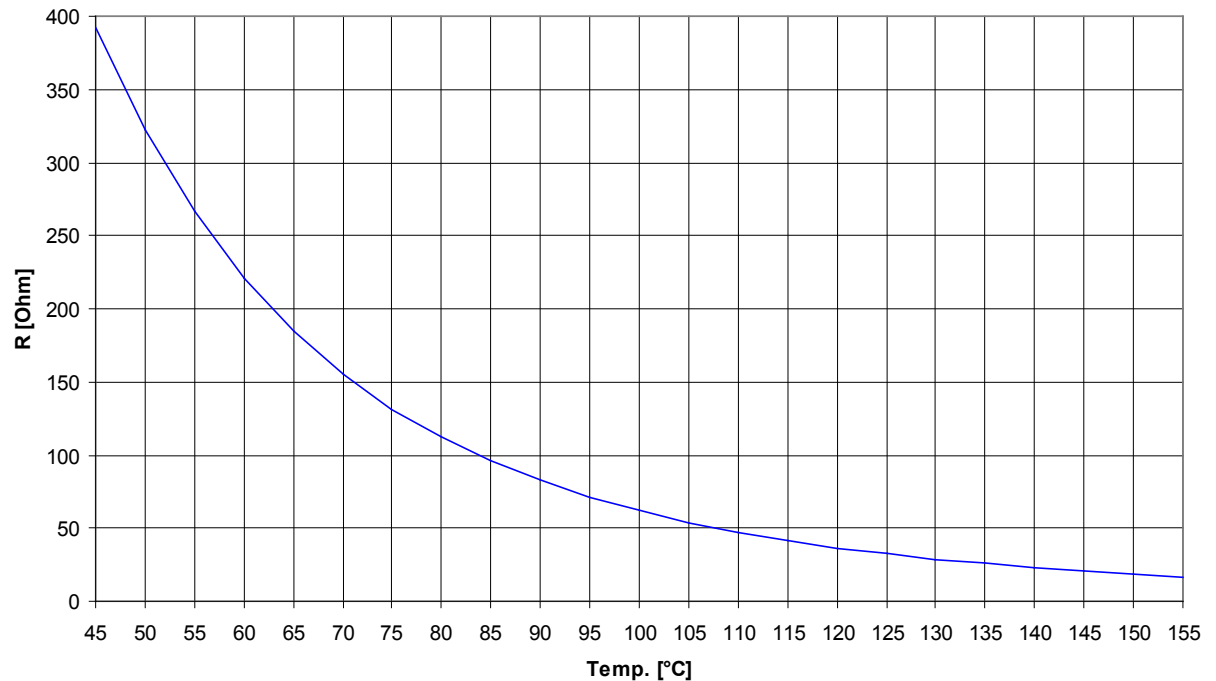


Figure 3-44: Analog inputs - characteristics diagram VDO 50 to 150 °C, Index "92-027-006"

Temp. [°C]	50	55	60	65	70	75	80	85	90	95	100
Temp. [°F]	122	131	140	149	158	167	176	185	194	203	212
R [Ohm]	322.17	266.19	221.17	184.72	155.29	131.38	112.08	96.40	82.96	71.44	61.92
Temp. [°C]	105	110	115	120	125	130	135	140	145	150	
Temp. [°F]	221	230	239	248	257	266	275	284	293	302	
R [Ohm]	54.01	47.24	41.42	36.51	32.38	28.81	25.70	23.00	20.66	18.59	

Table 3-79: Analog inputs - characteristics diagram VDO 50 to 150 °C, Index "92-027-006"

Pt100 RTD

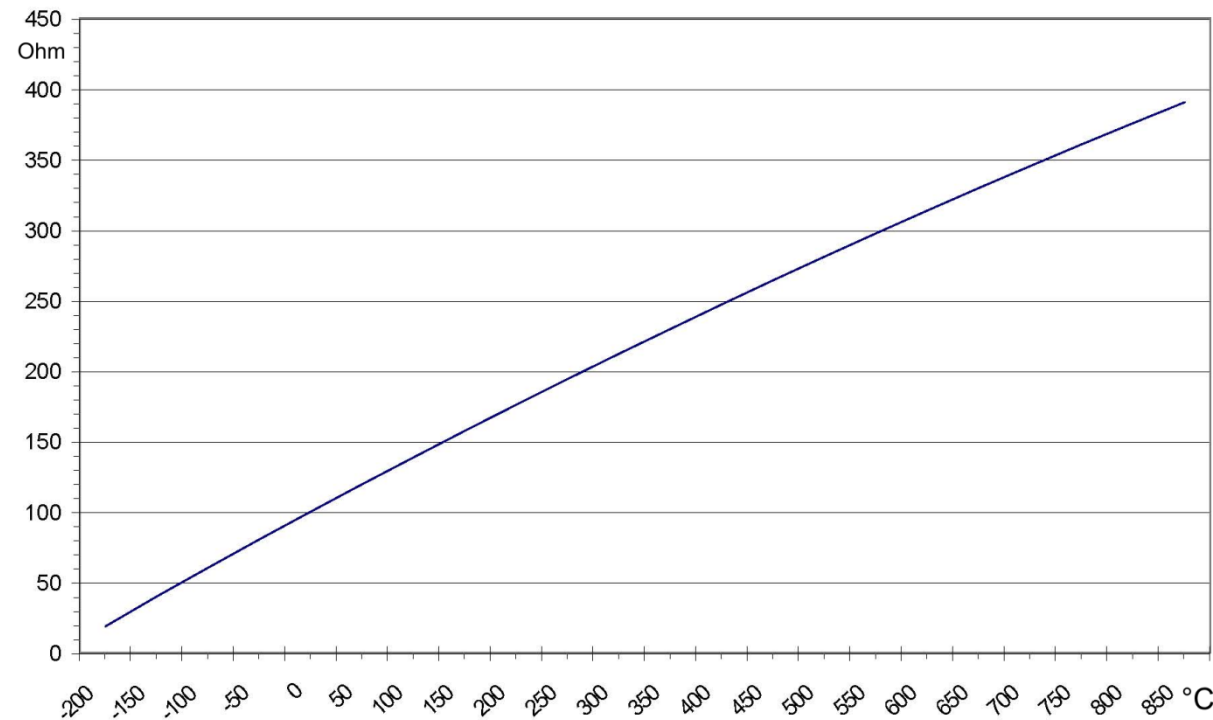


Figure 3-45: Analog inputs - characteristics diagram Pt100

Temp. [°C]	-200	-150	-100	-50	0	10	20	30	40	50	60
Temp. [°F]	-328	-238	-148	-58	32	50	68	86	104	122	140
R [Ohm]	18.5	39.7	60.25	80.7	100	103.9	107.8	111.7	115.5	119.4	123.2

Temp. [°C]	70	80	90	100	125	150	175	200	225	250	300
Temp. [°F]	158	176	194	212	257	302	347	392	437	482	572
R [Ohm]	127.1	130.9	134.7	138.5	147.9	157.3	166.6	175.8	188.6	194.1	212.0

Temp. [°C]	350	400	450	500	550	600	650	700	750	800	850
Temp. [°F]	662	752	842	932	1022	1112	1202	1292	1382	1472	1562
R [Ohm]	229.7	247.0	264.1	280.9	297.4	313.6	329.5	345.1	360.5	375.5	390.25

Table 3-80: Analog inputs - characteristics diagram Pt100

## Appendix G. LDSS Formulas

The following formulas are used by the load-dependent start/stop function to determine whether a genset is to be started or stopped.

### Abbreviations



$P_{GN \text{ real active}}$	Momentary active generator real power on the busbar
$P_{\text{rated active}}$	Momentary active generator rated power on the busbar
$P_{\text{reserve}}$	$P_{\text{rated active}} - P_{GN \text{ real active}}$
$P_{\text{reserve isolated}}$	Parameter 5760; minimum permissible reserve power on busbar in isolated operation
$P_{\text{hysteresis IOP}}$	Parameter 5761; hysteresis in isolated operation
$P_{MN \text{ setpoint}}$	Export / import power control setpoint
$P_{MN \text{ real}}$	Momentary active power at the interchange point
$P_{MOP \text{ minimum}}$	Parameter 5767; minimum requested generator load
$P_{\text{reserve parallel}}$	Parameter 5768; minimum permissible reserve power on busbar in mains parallel operation
$P_{\text{hysteresis MOP}}$	Parameter 5769; hysteresis in mains parallel operation
$P_{\text{max. load isolated}}$	Parameter 5762; maximum permissible generator load in isolated operation
$P_{\text{min. load isolated}}$	Parameter 5763; minimum permissible generator load in isolated operation
$P_{\text{max. load parallel}}$	Parameter 5770; maximum permissible generator load in mains parallel operation
$P_{\text{min. load parallel}}$	Parameter 5771; minimum permissible generator load in mains parallel operation

### LDSS Mode Reserve Power



#### Isolated Operation

##### Changing the Engine Combination to Increase Rated Power

$$P_{GN \text{ real active}} + P_{\text{reserve isolated}} > P_{\text{rated active}}$$

##### Changing the Engine Combination to Reduce Rated Power

$$P_{GN \text{ real active}} + P_{\text{reserve isolated}} + P_{\text{hysteresis IOP}} < P_{\text{rated active}}$$

#### Mains Parallel Operation (Import/Export Control)

##### Starting the First Engine Combination (no engine supplies the busbar)

$$P_{MN \text{ setpoint}} - P_{MN \text{ real}} + P_{GN \text{ real active}} > P_{MOP \text{ minimum}}$$

##### Changing the Engine Combination to Increase Rated Power

$$P_{MN \text{ setpoint}} - P_{MN \text{ real}} + P_{GN \text{ real active}} + P_{\text{reserve parallel}} > P_{\text{rated active}}$$

##### Changing the Engine Combination to Reduce Rated Power

$$P_{MN \text{ setpoint}} - P_{MN \text{ real}} + P_{GN \text{ real active}} + P_{\text{reserve parallel}} + P_{\text{hysteresis MOP}} < P_{\text{rated active}}$$

##### Stopping the Last Engine Combination (load close to minimum load)

$$P_{MN \text{ setpoint}} - P_{MN \text{ real}} + P_{GN \text{ real active}} < P_{MOP \text{ minimum}} - P_{\text{hysteresis MOP}}$$

## LDSS Mode Generator Load



### Isolated Operation

#### Changing the Engine Combination to Increase Rated Power

$$P_{GN \text{ real active}} > P_{\text{max. load isolated}}$$

#### Changing the Engine Combination to Reduce Rated Power (except dynamic set point is not matched)

$$P_{GN \text{ real active}} < P_{\text{min. load isolated}}$$

### Mains Parallel Operation (Import/Export Control)

#### Starting the First Engine Combination (no engine supplies the busbar)

$$P_{MN \text{ setpoint}} - P_{MN \text{ real}} + P_{GN \text{ real active}} > P_{MOP \text{ minimum}}$$

#### Changing the Engine Combination to Increase Rated Power

$$P_{GN \text{ real active}} > P_{\text{max. load parallel}}$$

#### Changing the Engine Combination to Reduce Rated Power (except dynamic set point is not matched)

$$P_{GN \text{ real active}} < P_{\text{min. load parallel}}$$

#### Stopping the Last Engine Combination (load close to minimum load)

$$P_{MN \text{ setpoint}} - P_{MN \text{ real}} + P_{GN \text{ real active}} < P_{MOP \text{ minimum}} - P_{\text{hysteresis MOP}}$$

## LDSS Dynamic



$$\text{Dynamic characteristic} = [(\text{max. generator load} - \text{min. generator load}) * \text{dynamic}] + (\text{min. generator load})$$

$$\text{Dynamic power level} = (\text{dynamic characteristic}) * (\text{generator rated power})$$

#### Constants:

Low dynamic = 25 %

Moderate dynamic = 50 %

High dynamic = 75 %

#### Example for Moderate dynamic:

$$\text{Dynamic characteristic} = [(80 \% - 40 \%) * 50 \%) + (40 \%) = 60 \%$$

$$\text{Dynamic power level} = (60 \%) * (200 \text{ kW}) = 120 \text{ kW}$$

# Appendix H.

## List Of Parameters

Unit number P/N \_\_\_\_\_ Rev \_\_\_\_\_

Version easYgen- \_\_\_\_\_

Project \_\_\_\_\_

Serial number S/N \_\_\_\_\_ Date \_\_\_\_\_

Par. ID.	Parameter	Setting range	Default value	Customer setting	Data type
----------	-----------	---------------	---------------	------------------	-----------

### CONFIGURE LANGUAGE / CLOCK

1700	Language	selectable languages	English		UNSIGNED 16
1710	Hours	0 to 23 h	---		UNSIGNED 8
1709	Minutes	0 to 59 min	---		UNSIGNED 8
1708	Seconds	0 to 59 s	---		UNSIGNED 8
1711	Day	1 to 31	---		UNSIGNED 8
1712	Month	1 to 12	---		UNSIGNED 8
1713	Year	0 to 99	---		UNSIGNED 8

### PASSWORD

10400	Password display	0000 to 9999	---		UNSIGNED 16
10405	Code level display	Info	---		UNSIGNED 16
10402	Password for CAN interface 1	0000 to 9999			UNSIGNED 16
10407	Code level CAN interface 1	Info	---		UNSIGNED 16
10401	Password for serial interface1	0000 to 9999			UNSIGNED 16
10406	Code level serial interface 1	Info	---		UNSIGNED 16
10430	Password for serial interface2	0000 to 9999			UNSIGNED 16
10420	Code level serial interface 2	Info	---		UNSIGNED 16

### SYSTEM MANAGEMENT

1702	Device number	1 to 32	1		UNSIGNED 16
1703	Factory default settings	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
1701	Reset factory default values	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
10500	Start Bootloader	00000 to 99999			UNSIGNED 16
1706	Clear eventlog	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
<b>Password System</b>					
10415	Basic level code	0000 to 9999	---		UNSIGNED 16
10413	Commissioning level code	0000 to 9999	---		UNSIGNED 16
10414	Temp. commissioning code level	0000 to 9999	---		UNSIGNED 16
10412	Temp. supercomm. level code	0000 to 9999	---		UNSIGNED 16
10411	Supercommissioning level code	0000 to 9999	---		UNSIGNED 16

Par. ID.	Parameter	Setting range	Default value	Customer setting		Data type
CONFIGURE MEASUREMENT						
4106	Show mains data	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
1750	System rated frequency	50/60 Hz	50 Hz			UNSIGNED 16
1601	Engine rated speed	500 to 4000 rpm	1500 rpm			UNSIGNED 16
1766	Generator rated voltage	50 to 650000 V	400 V			UNSIGNED 32
1768	Mains rated voltage	50 to 650000 V	400 V			UNSIGNED 32
1781	Busbar 1 rated voltage	50 to 650000 V	400 V			UNSIGNED 32
1752	Gen. rated active power [kW]	0.5 to 99999.9 kW	200.0 kW			UNSIGNED 32
1758	Gen. rated react. power [kvar]	0.5 to 99999.9 kW	200.0 kW			UNSIGNED 32
1754	Generator rated current	5 to 32000 A	300 A			UNSIGNED 16
1748	Mains rated active power [kW]	0.5 to 99999.9 kW	200.0 kW			UNSIGNED 32
1746	Mains rated react. pwr. [kvar]	0.5 to 99999.9 kW	200.0 kW			UNSIGNED 32
1785	Mains rated current	5 to 32000 A	300 A			UNSIGNED 16
1858	1Ph2W voltage measuring	Phase - phase Phase - neutral	Phase - phase	<input type="checkbox"/> Ph - ph <input type="checkbox"/> Ph - n.	<input type="checkbox"/> Ph - ph <input type="checkbox"/> Ph - n.	
1859	1Ph2W phase rotation	CW CCW	CW	<input type="checkbox"/> CW <input type="checkbox"/> CCW	<input type="checkbox"/> CW <input type="checkbox"/> CCW	
1851	Generator voltage measuring	3Ph 4W 3Ph 3W 1Ph 2W 1Ph 3W	3Ph 4W	<input type="checkbox"/> 3Ph4W <input type="checkbox"/> 3Ph3W <input type="checkbox"/> 1Ph2W <input type="checkbox"/> 1Ph3W	<input type="checkbox"/> 3Ph4W <input type="checkbox"/> 3Ph3W <input type="checkbox"/> 1Ph2W <input type="checkbox"/> 1Ph3W	UNSIGNED 16
1850	Generator current measuring	L1 L2 L3 Phase L1 Phase L2 Phase L3	L1 L2 L3	<input type="checkbox"/> L123 <input type="checkbox"/> Ph.L1 <input type="checkbox"/> Ph.L2 <input type="checkbox"/> Ph.L3	<input type="checkbox"/> L123 <input type="checkbox"/> Ph.L1 <input type="checkbox"/> Ph.L2 <input type="checkbox"/> Ph.L3	UNSIGNED 16
1853	Mains voltage measuring	3Ph 4W 3Ph 3W 1Ph 2W 1Ph 3W	3Ph 4W	<input type="checkbox"/> 3Ph4W <input type="checkbox"/> 3Ph3W <input type="checkbox"/> 1Ph2W <input type="checkbox"/> 1Ph3W	<input type="checkbox"/> 3Ph4W <input type="checkbox"/> 3Ph3W <input type="checkbox"/> 1Ph2W <input type="checkbox"/> 1Ph3W	UNSIGNED 16
1854	Mains current input	Off Mains Ground	Mains	<input type="checkbox"/> Off <input type="checkbox"/> Mains <input type="checkbox"/> Ground	<input type="checkbox"/> Off <input type="checkbox"/> Mains <input type="checkbox"/> Ground	UNSIGNED 16
1852	Mains current measuring	Phase L1 Phase L2 Phase L3	Phase L1	<input type="checkbox"/> Ph.L1 <input type="checkbox"/> Ph.L2 <input type="checkbox"/> Ph.L3	<input type="checkbox"/> Ph.L1 <input type="checkbox"/> Ph.L2 <input type="checkbox"/> Ph.L3	UNSIGNED 16
Configure Transformer						
1801	Gen. PT primary rated voltage	50 to 650000 V	400 V			UNSIGNED 32
1800	Gen. PT secondary rated volt.	50 to 480 V	400 V			UNSIGNED 16
1806	Gen. CT primary rated current	1 to 32000/5 A	500/5 A			UNSIGNED 16
1808	Gen. CT primary rated current	1 to 32000/1 A	500/1 A			UNSIGNED 16
1813	Busb1 PT primary rated voltage	50 to 650000 V	400 V			UNSIGNED 32
1812	Busb1 PT secondary rated volt.	50 to 480 V	400 V			UNSIGNED 16
1804	Mains PT primary rated voltage	50 to 650000 V	400 V			UNSIGNED 32
1803	Mains PT secondary rated volt.	50 to 480 V	400 V			UNSIGNED 16
1807	Mains CT primary rated current	1 to 32000/5 A	500/5 A			UNSIGNED 16
1809	Mains CT primary rated current	1 to 32000/1 A	500/1 A			UNSIGNED 16
1810	Gnd. CT primary rated current	1 to 32000/5 A	500/5 A			UNSIGNED 16
1811	Gnd. CT primary rated current	1 to 32000/1 A	500/1 A			UNSIGNED 16

Par. ID.	Parameter	Setting range	Default value	Customer setting	Data type
CONFIGURE MONITORING					
1770	Generator				
	Generator voltage monitoring	Phase - phase Phase - neutral	Phase - phase	<input type="checkbox"/> Ph-ph <input type="checkbox"/> Ph-n	<input type="checkbox"/> Ph-ph <input type="checkbox"/> Ph-n
	UNSIGNED 16				
Generator: Operating voltage / frequency					
5800	Upper voltage limit	100 to 150 %	110 %		UNSIGNED 16
5801	Lower voltage limit	50 to 100 %	90 %		UNSIGNED 16
5802	Upper frequency limit	100.0 to 150.0 %	110 %		UNSIGNED 16
5803	Lower frequency limit	50.0 to 100.0 %	90 %		UNSIGNED 16
Generator: Overfrequency level 1					
1900	Monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0
1904	Limit	50.0 to 130.0 %	110.0 %		UNSIGNED 16
1905	Delay	0.02 to 99.99 s	1.50 s		UNSIGNED 16
1901	Alarm class	A/B/C/D/E/F	B		UNSIGNED 16
1902	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N
1903	Delayed by engine speed	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N
Generator: Overfrequency level 2					
1906	Monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0
1910	Limit	50.0 to 130.0 %	115.0 %		UNSIGNED 16
1911	Delay	0.02 to 99.99 s	0.30 s		UNSIGNED 16
1907	Alarm class	A/B/C/D/E/F	F		UNSIGNED 16
1908	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N
1909	Delayed by engine speed	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N
Generator: Underfrequency level 1					
1950	Monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0
1954	Limit	50.0 to 130.0 %	90.0 %		UNSIGNED 16
1955	Delay	0.02 to 99.99 s	5.00 s		UNSIGNED 16
1951	Alarm class	A/B/C/D/E/F	B		UNSIGNED 16
1952	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N
1953	Delayed by engine speed	No/Yes	Yes	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N
Generator: Underfrequency level 2					
1956	Monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0
1960	Limit	50.0 to 130.0 %	84.0 %		UNSIGNED 16
1961	Delay	0.02 to 99.99 s	0.30 s		UNSIGNED 16
1957	Alarm class	A/B/C/D/E/F	F		UNSIGNED 16
1958	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N
1959	Delayed by engine speed	No/Yes	Yes	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N
Generator: Overvoltage level 1					
2000	Monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0
2004	Limit	50.0 to 125.0 %	108.0 %		UNSIGNED 16
2005	Delay	0.02 to 99.99 s	5.00 s		UNSIGNED 16
2001	Alarm class	A/B/C/D/E/F	B		UNSIGNED 16
2002	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N
2003	Delayed by engine speed	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N
Generator: Overvoltage level 2					
2006	Monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0
2010	Limit	50.0 to 125.0 %	112.0 %		UNSIGNED 16
2011	Delay	0.02 to 99.99 s	0.30 s		UNSIGNED 16
2007	Alarm class	A/B/C/D/E/F	F		UNSIGNED 16
2008	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N
2009	Delayed by engine speed	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N
Generator: Undervoltage level 1					
2050	Monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0
2054	Limit	50.0 to 125.0 %	92.0 %		UNSIGNED 16
2055	Delay	0.02 to 99.99 s	5.00 s		UNSIGNED 16
2051	Alarm class	A/B/C/D/E/F	B		UNSIGNED 16
2052	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N
2053	Delayed by engine speed	No/Yes	Yes	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N

Par. ID.	Parameter	Setting range	Default value	Customer setting		Data type
CONFIGURE MONITORING						
Generator: Undervoltage level 2						
2056	Monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
2060	Limit	50.0 to 125.0 %	88.0 %			UNSIGNED 16
2061	Delay	0.02 to 99.99 s	0.30 s			UNSIGNED 16
2057	Alarm class	A/B/C/D/E/F	F			UNSIGNED 16
2058	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
2059	Delayed by engine speed	No/Yes	Yes	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
Generator: Overcurrent lev. 1						
2200	Monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
2204	Limit	50.0 to 300.0 %	110.0 %			UNSIGNED 16
2205	Delay	0.02 to 99.99 s	30.00 s			UNSIGNED 16
2201	Alarm class	A/B/C/D/E/F	E			UNSIGNED 16
2202	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
Generator: Overcurrent lev. 2						
2206	Monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
2210	Limit	50.0 to 300.0 %	150.0 %			UNSIGNED 16
2211	Delay	0.02 to 99.99 s	1.00 s			UNSIGNED 16
2207	Alarm class	A/B/C/D/E/F	F			UNSIGNED 16
2208	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
Generator: Overcurrent lev. 3						
2212	Monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
2216	Limit	50.0 to 300.0 %	250.0 %			UNSIGNED 16
2217	Delay	0.02 to 99.99 s	0.40 s			UNSIGNED 16
2213	Alarm class	A/B/C/D/E/F	F			UNSIGNED 16
2214	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
Generator: Rev./red. power lev. 1						
2250	Monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
2254	Limit	-99.9 to 99.9 %	-3.0 %			INTEGER 16
2255	Delay	0.02 to 99.99 s	5.00 s			UNSIGNED 16
2251	Alarm class	A/B/C/D/E/F	B			UNSIGNED 16
2252	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
2253	Delayed by engine speed	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
Generator: Rev./red. power lev. 2						
2256	Monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
2260	Limit	-99.9 to 99.9 %	-5.0 %			INTEGER 16
2261	Delay	0.02 to 99.99 s	3.00 s			UNSIGNED 16
2257	Alarm class	A/B/C/D/E/F	E			UNSIGNED 16
2258	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
2259	Delayed by engine speed	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
Generator: Overload IOP level 1						
2300	Monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
2304	Limit	50.0 to 300.0 %	110.0 %			UNSIGNED 16
2305	Delay	0.02 to 99.99 s	11.00 s			UNSIGNED 16
2301	Alarm class	A/B/C/D/E/F	B			UNSIGNED 16
2302	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
Generator: Overload IOP level 2						
2306	Monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
2310	Limit	50.0 to 300.0 %	120.0 %			UNSIGNED 16
2311	Delay	0.02 to 99.99 s	0.10 s			UNSIGNED 16
2307	Alarm class	A/B/C/D/E/F	E			UNSIGNED 16
2308	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
Generator: Overload MOP level 1						
2350	Monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
2354	Limit	50.0 to 300.0 %	110.0 %			UNSIGNED 16
2355	Delay	0.02 to 99.99 s	11.00 s			UNSIGNED 16
2351	Alarm class	A/B/C/D/E/F	B			UNSIGNED 16
2352	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
Generator: Overload MOP level 2						
2356	Monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
2360	Limit	50.0 to 300.0 %	120.0 %			UNSIGNED 16
2361	Delay	0.02 to 99.99 s	0.10 s			UNSIGNED 16
2357	Alarm class	A/B/C/D/E/F	E			UNSIGNED 16
2358	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16



Par. ID.	Parameter	Setting range	Default value	Customer setting		Data type
CONFIGURE MONITORING						
Gen.: Unbalanced load lev. 1						
2400	Monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
2404	Limit	0.0 to 100.0 %	10.0 %			UNSIGNED 16
2405	Delay	0.02 to 99.99 s	10.00 s			UNSIGNED 16
2401	Alarm class	A/B/C/D/E/F	B			UNSIGNED 16
2402	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
2403	Delayed by engine speed	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
Gen.: Unbalanced load lev. 2						
2406	Monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
2410	Limit	0.0 to 100.0 %	15.0 %			UNSIGNED 16
2411	Delay	0.02 to 99.99 s	1.00 s			UNSIGNED 16
2407	Alarm class	A/B/C/D/E/F	E			UNSIGNED 16
2408	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
2409	Delayed by engine speed	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
Generator: Voltage asymmetry						
3900	Monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
3903	Limit	0.5 to 15.0 %	10.0 %			UNSIGNED 16
3904	Delay	0.02 to 99.99 s	5.00 s			UNSIGNED 16
3901	Alarm class	A/B/C/D/E/F	F			UNSIGNED 16
3902	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
3905	Delayed by engine speed	No/Yes	Yes	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
Generator: Ground fault lev. 1						
3250	Monitoring	Off/On	Off	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
3254	Limit	0 to 300 %	10 %			UNSIGNED 16
3255	Delay	0.02 to 99.99 s	0.20 s			UNSIGNED 16
3251	Alarm class	A/B/C/D/E/F	B			UNSIGNED 16
3252	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
3253	Delayed by engine speed	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
Generator: Ground fault lev. 2						
3256	Monitoring	Off/On	Off	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
3260	Limit	0 to 300 %	30 %			UNSIGNED 16
3261	Delay	0.02 to 99.99 s	0.10 s			UNSIGNED 16
3257	Alarm class	A/B/C/D/E/F	F			UNSIGNED 16
3258	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
3258	Delayed by engine speed	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
Generator: Phase rotation						
3950	Monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
3954	Generator phase rotation	CW (+)/CCW (-)	CW	<input type="checkbox"/> + <input type="checkbox"/> -	<input type="checkbox"/> + <input type="checkbox"/> -	UNSIGNED 16
3951	Alarm class	A/B/C/D/E/F	F			UNSIGNED 16
3952	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
3953	Delayed by engine speed	No/Yes	Yes	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
Gen.: Inverse-time overcurrent						
4030	Monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
4034	Inverse time characteristic	Normal/High/Extreme	Normal	<input type="checkbox"/> n <input type="checkbox"/> h <input type="checkbox"/> e	<input type="checkbox"/> n <input type="checkbox"/> h <input type="checkbox"/> e	UNSIGNED 16
4035	Inverse time overcurrent Tp=	0.01 to 1.99 s	0.06 s			UNSIGNED 16
4036	Inverse time overcurrent Ip=	10.0 to 300.0 %	100.0 %			UNSIGNED 16
4037	Inv. time overcurrent I-start=	100.0 to 300.0 %	115.0 %			UNSIGNED 16
4031	Alarm class	A/B/C/D/E/F	F			UNSIGNED 16
4032	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
4033	Delayed by engine speed	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
Generator: Lagging PF level 1						
2325	Monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
2329	Limit	-0.001 to 0.001	+0.900			INTEGER 16
2330	Delay	0.02 to 99.99 s	30.00 s			UNSIGNED 16
2326	Alarm class	A/B/C/D/E/F	B			UNSIGNED 16
2327	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
2328	Delayed by engine speed	No/Yes	Yes	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16

Par. ID.	Parameter	Setting range	Default value	Customer setting		Data type
CONFIGURE MONITORING						
Generator: Lagging PF level 2						
2331	Monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
2335	Limit	-0.001 to 0.001	+0.700			INTEGER 16
2336	Delay	0.02 to 99.99 s	1.00 s			UNSIGNED 16
2332	Alarm class	A/B/C/D/E/F	E			UNSIGNED 16
2333	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
2334	Delayed by engine speed	No/Yes	Yes	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
Generator: Leading PF level 1						
2375	Monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
2379	Limit	-0.001 to 0.001	-0.900			INTEGER 16
2380	Delay	0.02 to 99.99 s	30.00 s			UNSIGNED 16
2376	Alarm class	A/B/C/D/E/F	B			UNSIGNED 16
2377	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
2378	Delayed by engine speed	No/Yes	Yes	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
Generator: Leading PF level 2						
2381	Monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
2385	Limit	-0.001 to 0.001	-0.700			INTEGER 16
2386	Delay	0.02 to 99.99 s	1.00 s			UNSIGNED 16
2382	Alarm class	A/B/C/D/E/F	E			UNSIGNED 16
2383	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
2384	Delayed by engine speed	No/Yes	Yes	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
Mains						
1771	Mains voltage monitoring	Phase - phase Phase - neutral	Phase - phase	<input type="checkbox"/> Ph-ph <input type="checkbox"/> Ph-n	<input type="checkbox"/> Ph-ph <input type="checkbox"/> Ph-n	UNSIGNED 16
Mains: Operating voltage / freq.						
5810	Upper voltage limit	100 to 150 %	110 %			UNSIGNED 16
5814	Hysteresis upper voltage limit	0 to 40 %	2 %			UNSIGNED 16
5811	Lower voltage limit	50 to 100 %	90 %			UNSIGNED 16
5815	Hysteresis lower voltage limit	0 to 40 %	2 %			UNSIGNED 16
5812	Upper frequency limit	100 to 150 %	110 %			UNSIGNED 16
5816	Hyst. upper frequency limit	0 to 40 %	5 %			UNSIGNED 16
5813	Lower frequency limit	50 to 100 %	90 %			UNSIGNED 16
5817	Hyst. lower frequency limit	0 to 40 %	5 %			UNSIGNED 16
Mains: Mains settling time						
2801	Mains settling time	0 to 9,999 s	20 s			UNSIGNED 16
Mains: Mains decoupling						
12922	Ext. mns. decouple.	see descr. in <i>LogicsManager</i> chap. starting page 275; default: (0 & 1) & 1				Logman
3110	Mains decoupling	GCB GCB->MCB MCB MCB->GCB Off	GCB	<input type="checkbox"/> GCB <input type="checkbox"/> G->M <input type="checkbox"/> MCB <input type="checkbox"/> M->G <input type="checkbox"/> Off	<input type="checkbox"/> GCB <input type="checkbox"/> G->M <input type="checkbox"/> MCB <input type="checkbox"/> M->G <input type="checkbox"/> Off	UNSIGNED 16
3113	Mns. decoupling feedback delay	0.10 to 5.00 s	0.40 s			UNSIGNED 16
3111	Alarm class	A/B/C/D/E/F	B			UNSIGNED 16
3112	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
Mains: Overfrequency level 1						
2850	Monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
2854	Limit	50.0 to 130.0 %	100.4 %			INTEGER 16
2855	Delay	0.02 to 99.99 s	1.50 s			UNSIGNED 16
2851	Alarm class	A/B/C/D/E/F	B			UNSIGNED 16
2852	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
2853	Delayed by engine speed	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
Mains: Overfrequency level 2						
2856	Monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
2860	Limit	50.0 to 130.0 %	102.0 %			INTEGER 16
2861	Delay	0.02 to 99.99 s	0.30 s			UNSIGNED 16
2857	Alarm class	A/B/C/D/E/F	F			UNSIGNED 16
2858	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
2859	Delayed by engine speed	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16

Par. ID.	Parameter	Setting range	Default value	Customer setting	Data type
<b>CONFIGURE MONITORING</b>					
<b>Mains: Underfrequency level 1</b>					
2900	Monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
2904	Limit	50.0 to 130.0 %	99.6 %		INTEGER 16
2905	Delay	0.02 to 99.99 s	5.00 s		UNSIGNED 16
2901	Alarm class	A/B/C/D/E/F	B		UNSIGNED 16
2902	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
2903	Delayed by engine speed	No/Yes	Yes	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
<b>Mains: Underfrequency level 2</b>					
2906	Monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
2910	Limit	50.0 to 130.0 %	98.0 %		INTEGER 16
2911	Delay	0.02 to 99.99 s	0.30 s		UNSIGNED 16
2907	Alarm class	A/B/C/D/E/F	F		UNSIGNED 16
2908	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
2909	Delayed by engine speed	No/Yes	Yes	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
<b>Mains: Overvoltage level 1</b>					
2950	Monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
2954	Limit	50.0 to 125.0 %	108.0 %		INTEGER 16
2955	Delay	0.02 to 99.99 s	5.00 s		UNSIGNED 16
2951	Alarm class	A/B/C/D/E/F	B		UNSIGNED 16
2952	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
2953	Delayed by engine speed	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
<b>Mains: Overvoltage level 2</b>					
2956	Monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
2960	Limit	50.0 to 125.0 %	112.0 %		INTEGER 16
2961	Delay	0.02 to 99.99 s	0.30 s		UNSIGNED 16
2957	Alarm class	A/B/C/D/E/F	F		UNSIGNED 16
2958	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
2959	Delayed by engine speed	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
<b>Mains: Undervoltage level 1</b>					
3000	Monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
3004	Limit	50.0 to 125.0 %	92.0 %		INTEGER 16
3005	Delay	0.02 to 99.99 s	5.00 s		UNSIGNED 16
3001	Alarm class	A/B/C/D/E/F	B		UNSIGNED 16
3002	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
3003	Delayed by engine speed	No/Yes	Yes	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
<b>Mains: Undervoltage level 2</b>					
3006	Monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
3010	Limit	50.0 to 125.0 %	88.0 %		INTEGER 16
3011	Delay	0.02 to 99.99 s	0.30 s		UNSIGNED 16
3007	Alarm class	A/B/C/D/E/F	F		UNSIGNED 16
3008	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
3009	Delayed by engine speed	No/Yes	Yes	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
<b>Mains: Phase shift</b>					
3050	Monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
3053	Monitoring	1- and 3 phase / 3 phase	1- and 3 phase	<input type="checkbox"/> 1/3 <input type="checkbox"/> 3	UNSIGNED 16
3054	Limit 1 phase	3 to 30 °	20 °		UNSIGNED 16
3055	Limit 3 phase	3 to 30 °	8 °		UNSIGNED 16
3051	Alarm class	A/B/C/D/E/F	B		UNSIGNED 16
3052	Self acknowledge	No/Yes	Yes	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
3056	Delayed by engine speed	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
<b>Mains: Mains phase rotation</b>					
3970	Monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
3974	Mains phase rotation	CW (+)/CCW (-)	CW	<input type="checkbox"/> + <input type="checkbox"/> -	UNSIGNED 16
3971	Alarm class	A/B/C/D/E/F	B		UNSIGNED 16
3972	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
3973	Delayed by engine speed	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16

Par. ID.	Parameter	Setting range	Default value	Customer setting		Data type
CONFIGURE MONITORING						
Mains: Mains import power lev. 1						
3200	Monitoring	Off/On	Off	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
3204	Limit	0 to 150.00 %	80 %			INTEGER 16
3213	Hysteresis	0 to 99.99 %	0.01 %			UNSIGNED 16
3205	Delay	0.02 to 99.99 s	1.00 s			UNSIGNED 16
3201	Alarm class	A/B/C/D/E/F	A			UNSIGNED 16
3202	Self acknowledge	No/Yes	Yes	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
3203	Delayed by engine speed	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
3215	Monitoring at	Overrun / Underrun	Overrun	<input type="checkbox"/> O <input type="checkbox"/> U	<input type="checkbox"/> O <input type="checkbox"/> U	UNSIGNED 16
Mains: Mains import power lev. 2						
3206	Monitoring	Off/On	Off	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
3210	Limit	0 to 150.00 %	100 %			INTEGER 16
3214	Hysteresis	0 to 99.99 %	0.01 %			UNSIGNED 16
3211	Delay	0.02 to 99.99 s	1.00 s			UNSIGNED 16
3207	Alarm class	A/B/C/D/E/F	B			UNSIGNED 16
3208	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
3209	Delayed by engine speed	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
3216	Monitoring at	Overrun / Underrun	Overrun	<input type="checkbox"/> O <input type="checkbox"/> U	<input type="checkbox"/> O <input type="checkbox"/> U	UNSIGNED 16
Mains: Mains export power lev. 1						
3225	Monitoring	Off/On	Off	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
3229	Limit	0 to 150.00 %	80 %			INTEGER 16
3231	Hysteresis	0 to 99.99 %	0.01 %			UNSIGNED 16
3230	Delay	0.02 to 99.99 s	1.00 s			UNSIGNED 16
3226	Alarm class	A/B/C/D/E/F	A			UNSIGNED 16
3227	Self acknowledge	No/Yes	Yes	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
3228	Delayed by engine speed	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
3232	Monitoring at	Overrun / Underrun	Overrun	<input type="checkbox"/> O <input type="checkbox"/> U	<input type="checkbox"/> O <input type="checkbox"/> U	UNSIGNED 16
Mains: Mains export power lev. 2						
3233	Monitoring	Off/On	Off	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
3237	Limit	0 to 150.00 %	100 %			INTEGER 16
3239	Hysteresis	0 to 99.99 %	0.01 %			UNSIGNED 16
3238	Delay	0.02 to 99.99 s	1.00 s			UNSIGNED 16
3234	Alarm class	A/B/C/D/E/F	B			UNSIGNED 16
3235	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
3236	Delayed by engine speed	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
3240	Monitoring at	Overrun / Underrun	Overrun	<input type="checkbox"/> O <input type="checkbox"/> U	<input type="checkbox"/> O <input type="checkbox"/> U	UNSIGNED 16
Mains: Lagging PF level 1						
2975	Monitoring	Off/On	Off	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
2978	Limit	-0.001 to 0.001	+0.900			INTEGER 16
2989	Hysteresis	0.0 to 0.99	0.02			UNSIGNED 16
2979	Delay	0.02 to 99.99 s	30.00 s			UNSIGNED 16
2987	Alarm class	A/B/C/D/E/F	B			UNSIGNED 16
2976	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
2977	Delayed by engine speed	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
Mains: Lagging PF level 2						
2980	Monitoring	Off/On	Off	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
2983	Limit	-0.001 to 0.001	+0.800			INTEGER 16
2990	Hysteresis	0.0 to 0.99	0.02			UNSIGNED 16
2984	Delay	0.02 to 99.99 s	1.00 s			UNSIGNED 16
2988	Alarm class	A/B/C/D/E/F	B			UNSIGNED 16
2981	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
2982	Delayed by engine speed	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16

Par. ID.	Parameter	Setting range	Default value	Customer setting		Data type
CONFIGURE MONITORING						
Mains: Leading PF level 1						
3025	Monitoring	Off/On	Off	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
3028	Limit	-0.001 to 0.001	-0.900			INTEGER 16
3039	Hysteresis	0.0 to 0.99	0.02			UNSIGNED 16
3029	Delay	0.02 to 99.99 s	10.00 s			UNSIGNED 16
3035	Alarm class	A/B/C/D/E/F	B			UNSIGNED 16
3026	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
3027	Delayed by engine speed	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
Mains: Leading PF level 2						
3030	Monitoring	Off/On	Off	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
3033	Limit	-0.001 to 0.001	-0.800			INTEGER 16
3040	Hysteresis	0.0 to 0.99	0.02			UNSIGNED 16
3034	Delay	0.02 to 99.99 s	1.00 s			UNSIGNED 16
3036	Alarm class	A/B/C/D/E/F	B			UNSIGNED 16
3031	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
3032	Delayed by engine speed	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
Engine						
Engine: Overspeed level 1						
2100	Monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
2104	Limit	0 to 9999 RPM	1850 RPM			UNSIGNED 16
2105	Delay	0.02 to 99.99 s	1.00 s			UNSIGNED 16
2101	Alarm class	A/B/C/D/E/F	B			UNSIGNED 16
2102	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
2103	Delayed by engine speed	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
Engine: Overspeed level 2						
2106	Monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
2110	Limit	0 to 9999 RPM	1900 RPM			UNSIGNED 16
2111	Delay	0.02 to 99.99 s	0.10 s			UNSIGNED 16
2107	Alarm class	A/B/C/D/E/F	F			UNSIGNED 16
2108	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
2109	Delayed by engine speed	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
Engine: Underspeed level 1						
2150	Monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
2154	Limit	0 to 9999 RPM	1300 RPM			UNSIGNED 16
2155	Delay	0.02 to 99.99 s	1.00 s			UNSIGNED 16
2151	Alarm class	A/B/C/D/E/F	B			UNSIGNED 16
2152	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
2153	Delayed by engine speed	No/Yes	Yes	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
Engine: Underspeed level 2						
2156	Monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
2160	Limit	0 to 9999 RPM	1250 RPM			UNSIGNED 16
2161	Delay	0.02 to 99.99 s	0.10 s			UNSIGNED 16
2157	Alarm class	A/B/C/D/E/F	F			UNSIGNED 16
2158	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
2159	Delayed by engine speed	No/Yes	Yes	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
Engine: Speed detection						
2450	Monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
2454	Speed/frequency mismatch limit	1.5 to 8.5 Hz	5.0 Hz			UNSIGNED 16
2455	Delay	0.02 to 99.99 s	2.00 s			UNSIGNED 16
2453	Activation frequency	15 to 85 Hz	20 Hz			UNSIGNED 16
2451	Alarm class	A/B/C/D/E/F	E			UNSIGNED 16
2452	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
Engine: Generator active power mismatch						
2920	Monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
2925	Limit	0.0 to 30.0 %	5.0 %			UNSIGNED 16
2923	Delay	3 to 65000 s	30 s			UNSIGNED 16
2921	Alarm class	A/B/C/D/E/F	B			UNSIGNED 16
2922	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16

Par. ID.	Parameter	Setting range	Default value	Customer setting		Data type
CONFIGURE MONITORING						
	Engine					
	Engine: Mains active power mismatch					
2930	Monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
2935	Limit	1.0 to 99.9 %	5.0 %			UNSIGNED 16
2933	Delay	3 to 65000 s	30 s			UNSIGNED 16
2931	Alarm class	A/B/C/D/E/F	B			UNSIGNED 16
2932	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
	Engine: Generator unloading mismatch					
3125	Unload Limit	0.5 to 99.9 %	3.0 %			UNSIGNED 16
3123	Delay	2 to 9999 s	60 s			UNSIGNED 16
3121	Alarm class	A/B/C/D/E/F	B			UNSIGNED 16
3122	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
	Engine: Start failure					
3303	Monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
3304	Alarm class	A/B/C/D/E/F	F			UNSIGNED 16
3305	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
	Engine: Shutdown malfunction					
2500	Monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
2503	Maximal stop delay	3 to 999 s	30 s			UNSIGNED 16
2501	Alarm class	A/B/C/D/E/F	F			UNSIGNED 16
2502	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
	Engine: Unintended stop					
2650	Monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
2651	Alarm class	A/B/C/D/E/F	F			UNSIGNED 16
2657	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
	Engine: Operating range failure					
2660	Monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
2663	Delay	1 to 999 s	30 s			UNSIGNED 16
2661	Alarm class	A/B/C/D/E/F	B			UNSIGNED 16
2662	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
	Engine: Charge alternator (D+)					
4050	Monitoring	Off/On	Off	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
4055	Delay	2 to 9999 s	10 s			UNSIGNED 16
4051	Alarm class	A/B/C/D/E/F	B			UNSIGNED 16
4052	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
4053	Delayed by engine speed level	No/Yes	Yes	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
	Breakers (GCB, MCB)					
	Breakers: Configure GCB					UNSIGNED 16
2600	GCB monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
2601	GCB alarm class	A/B/C/D/E/F	C			UNSIGNED 16
3418	GCB maximum closing attempts	1 to 10	5			UNSIGNED 16
3420	GCB open monitoring	0.10 to 5.00 s	2.00 s			UNSIGNED 16
	Breakers: Config. Synchr. GCB					
3060	Monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
3063	Timeout	3 to 999 s	60 s			UNSIGNED 16
3061	Alarm class	A/B/C/D/E/F	B			UNSIGNED 16
3062	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
	Breakers: Configure MCB					
2620	MCB monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
2621	MCB alarm class	A/B	B			UNSIGNED 16
3419	MCB maximum closing attempts	1 to 10	5			UNSIGNED 16
3421	MCB open monitoring	0.10 to 5.00 s	2.00 s			UNSIGNED 16
	Breakers: Config. Synchr. MCB					
3070	Monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
3073	Timeout	3 to 999 s	60 s			UNSIGNED 16
3071	Alarm class	A/B/C/D/E/F	B			UNSIGNED 16
3072	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
	Breakers: Gen./Busb./Mns. phase rotation					
2940	Monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
2941	Alarm class	A/B/C/D/E/F	F			UNSIGNED 16
2942	Self acknowledge	No/Yes	Yes	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16

Par. ID.	Parameter	Setting range	Default value	Customer setting	Data type
CONFIGURE MONITORING					
	Flex Limit				
	Configure FlexLimit {x}; [{x} = 1 to 40]				
4208	Description	user-defined	Flex. limit {x}		Text/16
4200	Monitoring	Off/On	Off	<input type="checkbox"/> 1 <input type="checkbox"/> 0 <input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
4206	Monitored data source	refer to Appendix C, Data Sources on page 289 for all available AIs			
4204	Monitoring at	Overrun / Underrun	Overrun	<input type="checkbox"/> 0 <input type="checkbox"/> U <input type="checkbox"/> 0 <input type="checkbox"/> U	UNSIGNED 16
4205	Limit	-32000 to +32000	100		INTEGER 16
4216	Hysteresis	0 to 999	1		UNSIGNED 16
4207	Delay	0.02 to 99.99 s	1.00 s		UNSIGNED 16
4201	Alarm class	A/B/C/D/E/F/Control	B		UNSIGNED 16
4202	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N <input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
4203	Delayed by engine speed	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N <input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
	Miscellaneous				
1756	Time until horn reset	0 to 1,000 s	180 s		UNSIGNED 16
12490	Ext. acknowledge	see descr. in <i>LogicsManager</i> chap. starting page 275; default: (0 & !04.03) + 0			Logman
	Miscellaneous: Comm. Interface				
	CAN interface 1, RPDO 1				
16161	Monitoring	Off/On	Off	<input type="checkbox"/> 1 <input type="checkbox"/> 0 <input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
16160	Maximum receiving break	1 to 65000 s	10 s	<input type="checkbox"/> Y <input type="checkbox"/> N <input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
16162	Alarm class	A/B/C/D/E/F/Control	B		UNSIGNED 16
16163	Delayed by eng. speed	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N <input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
16164	Self acknowledge	No/Yes	Yes	<input type="checkbox"/> Y <input type="checkbox"/> N <input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
	CAN interface 1, RPDO 2				
16166	Monitoring	Off/On	Off	<input type="checkbox"/> 1 <input type="checkbox"/> 0 <input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
16165	Maximum receiving break	1 to 65000 s	10 s	<input type="checkbox"/> Y <input type="checkbox"/> N <input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
16167	Alarm class	A/B/C/D/E/F/Control	B		UNSIGNED 16
16168	Delayed by eng. speed	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N <input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
16169	Self acknowledge	No/Yes	Yes	<input type="checkbox"/> Y <input type="checkbox"/> N <input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
	CAN interface 1, RPDO 3				
16171	Monitoring	Off/On	Off	<input type="checkbox"/> 1 <input type="checkbox"/> 0 <input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
16170	Maximum receiving break	1 to 65000 s	10 s	<input type="checkbox"/> Y <input type="checkbox"/> N <input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
16172	Alarm class	A/B/C/D/E/F/Control	B		UNSIGNED 16
16173	Delayed by eng. speed	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N <input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
16174	Self acknowledge	No/Yes	Yes	<input type="checkbox"/> Y <input type="checkbox"/> N <input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
	CAN interface 2, RPDO 1				
16176	Monitoring	Off/On	Off	<input type="checkbox"/> 1 <input type="checkbox"/> 0 <input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
16175	Maximum receiving break	1 to 65000 s	10 s	<input type="checkbox"/> Y <input type="checkbox"/> N <input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
16177	Alarm class	A/B/C/D/E/F/Control	B		UNSIGNED 16
16178	Delayed by eng. speed	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N <input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
16179	Self acknowledge	No/Yes	Yes	<input type="checkbox"/> Y <input type="checkbox"/> N <input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
	CAN interface 2, RPDO 2				
16181	Monitoring	Off/On	Off	<input type="checkbox"/> 1 <input type="checkbox"/> 0 <input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
16180	Maximum receiving break	1 to 65000 s	10 s	<input type="checkbox"/> Y <input type="checkbox"/> N <input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
16182	Alarm class	A/B/C/D/E/F/Control	B		UNSIGNED 16
16183	Delayed by eng. speed	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N <input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
16184	Self acknowledge	No/Yes	Yes	<input type="checkbox"/> Y <input type="checkbox"/> N <input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
	J1939 Interface				
15110	Monitoring	Off/On	Off	<input type="checkbox"/> 1 <input type="checkbox"/> 0 <input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
15114	Delay	2 to 6500 s	10 s		UNSIGNED 16
15111	Alarm class	A/B/C/D/E/F	B		UNSIGNED 16
15112	Self acknowledge	No/Yes	Yes	<input type="checkbox"/> Y <input type="checkbox"/> N <input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
15113	Delayed by engine speed	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N <input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
	J1939 interface, Amber alarm				
15120	Monitoring	Off/On	Off	<input type="checkbox"/> 1 <input type="checkbox"/> 0 <input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
15124	Timeout	0 to 999 s	2 s		UNSIGNED 16
15121	Alarm class	A/B/C/D/E/F/Control	A		UNSIGNED 16
15122	Self acknowledge	No/Yes	Yes	<input type="checkbox"/> Y <input type="checkbox"/> N <input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
15123	Delayed by engine speed	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N <input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
	J1939 interface, Red alarm				
15115	Monitoring	Off/On	Off	<input type="checkbox"/> 1 <input type="checkbox"/> 0 <input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
15119	Timeout	0 to 999 s	2 s		UNSIGNED 16
15116	Alarm class	A/B/C/D/E/F/Control	A		UNSIGNED 16
15117	Self acknowledge	No/Yes	Yes	<input type="checkbox"/> Y <input type="checkbox"/> N <input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
15118	Delayed by engine speed	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N <input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16

Par. ID.	Parameter	Setting range	Default value	Customer setting		Data type
CONFIGURE MONITORING						
Miscellaneous: Battery voltage						
Battery: Overvoltage level 1						
3450	Monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
3454	Limit	8.0 to 42.0 V	32.0 V			UNSIGNED 16
3455	Delay	0.02 to 99.99 s	5.00 s			UNSIGNED 16
3451	Alarm class	A/B/C/D/E/F/Control	B			UNSIGNED 16
3452	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
3453	Delayed by engine speed	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
Battery: Overvoltage level 2						
3456	Monitoring	Off/On	Off	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
3460	Limit	8.0 to 42.0 V	35.0 V			UNSIGNED 16
3461	Delay	0.02 to 99.99 s	1.00 s			UNSIGNED 16
3457	Alarm class	A/B/C/D/E/F/Control	B			UNSIGNED 16
3458	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
3459	Delayed by engine speed	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
Battery: Undervoltage level 1						
3500	Monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
3504	Limit	8.0 to 42.0 V	24.0 V			UNSIGNED 16
3505	Delay	0.02 to 99.99 s	60.00 s			UNSIGNED 16
3501	Alarm class	A/B/C/D/E/F/Control	B			UNSIGNED 16
3502	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
3503	Delayed by engine speed	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
Battery: Undervoltage level 2						
3506	Monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
3510	Limit	8.0 to 42.0 V	20.0 V			UNSIGNED 16
3511	Delay	0.02 to 99.99 s	10.00 s			UNSIGNED 16
3507	Alarm class	A/B/C/D/E/F/Control	B			UNSIGNED 16
3508	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
3509	Delayed by engine speed	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
Miscellaneous: LDSS						
Load-dependent start/stop						
4070	Multi-unit config. check	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
4071	Alarm class	A/B/C/D/E/F	B			UNSIGNED 16
Miscellaneous: Load share						
Configure load share						
4060	Multi-unit comm. monitoring	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
4063	Number of gens communicating	0 to 64	1			
4061	Alarm class	A/B/C/D/E/F	B			UNSIGNED 16
4062	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16



Par. ID.	Parameter	Setting range	Default value	Customer setting		Data type
CONFIGURE APPLICATION						
Configure Breakers						
3401	Application mode	None {0} GCB open {1o} GCB {1oc} GCB/MCB {2oc}	GCB/MCB {2oc}	<input type="checkbox"/> {0} <input type="checkbox"/> {1o} <input type="checkbox"/> {1oc} <input type="checkbox"/> {2oc}	<input type="checkbox"/> {0} <input type="checkbox"/> {1o} <input type="checkbox"/> {1oc} <input type="checkbox"/> {2oc}	UNSIGNED 16
3411	Breaker transition mode	External Open Transition Closed Transition Interchange Parallel	Parallel	<input type="checkbox"/> Ext. <input type="checkbox"/> O.T. <input type="checkbox"/> C.T. <input type="checkbox"/> Int. <input type="checkbox"/> Par.	<input type="checkbox"/> Ext. <input type="checkbox"/> O.T. <input type="checkbox"/> C.T. <input type="checkbox"/> Int. <input type="checkbox"/> Par.	UNSIGNED 16
3412	Breaker transition mode 1	External Open Transition Closed Transition Interchange Parallel	Parallel	<input type="checkbox"/> Ext. <input type="checkbox"/> O.T. <input type="checkbox"/> C.T. <input type="checkbox"/> Int. <input type="checkbox"/> Par.	<input type="checkbox"/> Ext. <input type="checkbox"/> O.T. <input type="checkbox"/> C.T. <input type="checkbox"/> Int. <input type="checkbox"/> Par.	UNSIGNED 16
12931	Transition mode 1	see descr. in <a href="#">LogicsManager</a> chap. starting page 275; default: (0 & 1) & 1				Logman
3413	Breaker transition mode 2	External Open Transition Closed Transition Interchange Parallel	Parallel	<input type="checkbox"/> Ext. <input type="checkbox"/> O.T. <input type="checkbox"/> C.T. <input type="checkbox"/> Int. <input type="checkbox"/> Par.	<input type="checkbox"/> Ext. <input type="checkbox"/> O.T. <input type="checkbox"/> C.T. <input type="checkbox"/> Int. <input type="checkbox"/> Par.	UNSIGNED 16
12932	Transition mode 2	see descr. in <a href="#">LogicsManager</a> chap. starting page 275; default: (0 & 1) & 1				Logman
3400	Transfer time GCB<->MCB	0.10 to 99.99 s	1.00 s			UNSIGNED 16
Configure Breaker: Configure GCB						
3403	GCB open relay	Not used N.O. N.C.	N.O.	<input type="checkbox"/> Not used <input type="checkbox"/> N.O. <input type="checkbox"/> N.C.	<input type="checkbox"/> Not used <input type="checkbox"/> N.O. <input type="checkbox"/> N.C.	UNSIGNED 16
3414	GCB close command	Constant / Impulse	Constant	<input type="checkbox"/> C <input type="checkbox"/> I	<input type="checkbox"/> C <input type="checkbox"/> I	UNSIGNED 16
3416	GCB time pulse	0.10 to 0.50 s	0.24 s			UNSIGNED 16
5729	Synchronization GCB	Slip frequency Phase matching		<input type="checkbox"/> Slip <input type="checkbox"/> Phase.	<input type="checkbox"/> Slip <input type="checkbox"/> Phase	
5700	Voltage differential GCB	0.50 to 20.00 %	5.00 %			UNSIGNED 16
5701	Pos. freq. differential GCB	0.02 to 0.49 Hz	0.18 Hz			INTEGER 16
5702	Neg. freq. differential GCB	-0.49 to 0.00 Hz	-0.10 Hz			INTEGER 16
5703	Max. positive phase angle GCB	0.0 to 60.0 °	7.0 °			
5704	Max. negative phase angle GCB	-60.0 to 0.0 °	-7.0 °			
5707	Phase matching GCB dwell time	0.0 to 60.0 s	3.0 s			
3432	Dead bus closure GCB	On / Off	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
3415	Generator stable time	0 to 99 s	2 s			UNSIGNED 16
5705	Closing time GCB	40 to 300 ms	80 ms			UNSIGNED 16
12210	Undelay close GCB	see descr. in <a href="#">LogicsManager</a> chap. starting page 275; default: (04.09 & 1) & 1				Logman
Configure Breaker: Configure MCB						
3417	MCB time pulse	0.04 to 1.00 s	0.50 s			UNSIGNED 16
5730	Synchronization MCB	Slip frequency Phase matching		<input type="checkbox"/> Slip <input type="checkbox"/> Phase.	<input type="checkbox"/> Slip <input type="checkbox"/> Phase	
5710	Voltage differential MCB	0.50 to 20.00 %	5.00 %			UNSIGNED 16
5711	Pos. freq. differential MCB	0.02 to 0.49 Hz	0.10 Hz			INTEGER 16
5712	Neg. freq. differential MCB	-0.49 to 0.00 Hz	-0.10 Hz			INTEGER 16
5713	Max. positive phase angle MCB	0.0 to 60.0 °	7.0 °			
5714	Max. negative phase angle MCB	-60.0 to 0.0 °	-7.0 °			
5717	Ph.match.MCB Dwell time	0.0 to 60.0 s	3.0 s			
3431	Dead bus closure MCB	On / Off	Off	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
12923	Enable MCB	see descr. in <a href="#">LogicsManager</a> chap. starting page 275; default: (0 & 1) & 1				Logman
5715	Closing time MCB	40 to 300 ms	80 ms			
Configure Breaker: Configure Synchronization						
5728	Synchronization mode	Off Permissive Check Run Controlled by LM		<input type="checkbox"/> Off <input type="checkbox"/> Permiss. <input type="checkbox"/> Check <input type="checkbox"/> Run <input type="checkbox"/> LM	<input type="checkbox"/> Off <input type="checkbox"/> Permiss. <input type="checkbox"/> Check <input type="checkbox"/> Run <input type="checkbox"/> LM	
12907	Syn. mode PERMIS.	see descr. in <a href="#">LogicsManager</a> chap. starting page 275; default: (0 & 1) & 1				Logman
12906	Syn. mode CHECK	see descr. in <a href="#">LogicsManager</a> chap. starting page 275; default: (0 & 1) & 1				Logman
12908	Syn. mode RUN	see descr. in <a href="#">LogicsManager</a> chap. starting page 275; default: (0 & 1) & 1				Logman
Configure Breaker: Dead bus limit						
5820	Dead Bus Detection max. volt.	0 to 30 %	10 %			UNSIGNED 16

Par. ID.	Parameter	Setting range	Default value	Customer setting	Data type
<b>CONFIGURE APPLICATION</b>					
<b>Configure Inputs / Outputs</b>					
<b>Configure IOs: Analog Inputs</b>					
3631	Display temperature in	°C / °F	°C	<input type="checkbox"/> °C <input type="checkbox"/> °F	UNSIGNED 16
3630	Display pressure in	bar / psi	bar	<input type="checkbox"/> bar <input type="checkbox"/> psi	UNSIGNED 16
<b>Configure AIs: User def. table A</b>					
3560	X-value 1	0 to 100 %	2 %		UNSIGNED 16
3550	Y-value 1	-9999 to 9999	0		INTEGER 16
3561	X-value 2	0 to 100 %	8 %		UNSIGNED 16
3551	Y-value 2	-9999 to 9999	207		INTEGER 16
3562	X-value 3	0 to 100 %	16 %		UNSIGNED 16
3552	Y-value 3	-9999 to 9999	512		INTEGER 16
3563	X-value 4	0 to 100 %	24 %		UNSIGNED 16
3553	Y-value 4	-9999 to 9999	838		INTEGER 16
3564	X-value 5	0 to 100 %	27 %		UNSIGNED 16
3554	Y-value 5	-9999 to 9999	970		INTEGER 16
3565	X-value 6	0 to 100 %	31 %		UNSIGNED 16
3555	Y-value 6	-9999 to 9999	1160		INTEGER 16
3566	X-value 7	0 to 100 %	36 %		UNSIGNED 16
3556	Y-value 7	-9999 to 9999	1409		INTEGER 16
3567	X-value 8	0 to 100 %	37 %		UNSIGNED 16
3557	Y-value 8	-9999 to 9999	1461		INTEGER 16
3568	X-value 9	0 to 100 %	41 %		UNSIGNED 16
3558	Y-value 9	-9999 to 9999	1600		INTEGER 16
<b>Configure AIs: User def. table B</b>					
3610	X-value 1	0 to 100 %	4 %		UNSIGNED 16
3600	Y-value 1	-9999 to 9999	2553		INTEGER 16
3611	X-value 2	0 to 100 %	6 %		UNSIGNED 16
3601	Y-value 2	-9999 to 9999	2288		INTEGER 16
3612	X-value 3	0 to 100 %	8 %		UNSIGNED 16
3602	Y-value 3	-9999 to 9999	2100		INTEGER 16
3613	X-value 4	0 to 100 %	13 %		UNSIGNED 16
3603	Y-value 4	-9999 to 9999	1802		INTEGER 16
3614	X-value 5	0 to 100 %	16 %		UNSIGNED 16
3604	Y-value 5	-9999 to 9999	1685		INTEGER 16
3615	X-value 6	0 to 100 %	23 %		UNSIGNED 16
3605	Y-value 6	-9999 to 9999	1488		INTEGER 16
3616	X-value 7	0 to 100 %	28 %		UNSIGNED 16
3606	Y-value 7	-9999 to 9999	1382		INTEGER 16
3617	X-value 8	0 to 100 %	42 %		UNSIGNED 16
3607	Y-value 8	-9999 to 9999	1188		INTEGER 16
3618	X-value 9	0 to 100 %	58 %		UNSIGNED 16
3608	Y-value 9	-9999 to 9999	1035		INTEGER 16

Par. ID.	Parameter	Setting range	Default value	Customer setting	Data type	
CONFIGURE APPLICATION						
Configure AIs: Analog input 1						
1025	Description	user-defined	Analog inp. 1		Text/16	
1000	Type	Off VDO 5bar VDO 10bar VDO 150°C VDO 120°C Pt100 Linear Table A Table B	Off	<input type="checkbox"/> Off <input type="checkbox"/> 5bar <input type="checkbox"/> 10bar <input type="checkbox"/> 150°C <input type="checkbox"/> 120°C <input type="checkbox"/> Pt100 <input type="checkbox"/> Linear <input type="checkbox"/> Tab.A <input type="checkbox"/> Tab.B	<input type="checkbox"/> Off <input type="checkbox"/> 5bar <input type="checkbox"/> 10bar <input type="checkbox"/> 150°C <input type="checkbox"/> 120°C <input type="checkbox"/> Pt100 <input type="checkbox"/> Linear <input type="checkbox"/> Tab.A <input type="checkbox"/> Tab.B	UNSIGNED 16
1001	User defined min display value	-9999 to +9999	+0000			INTEGER 16
1002	User defined max display value	-9999 to +9999	+1000			INTEGER 16
1039	Sender value at display min.	0.00 to 100.00 %	0.00 %			UNSIGNED 16
1040	Sender value at display max.	0.00 to 100.00 %	0.00 %			UNSIGNED 16
1020	Sender type	0 to 500 Ohm 0 to 20 mA	0 to 500 Ohm	<input type="checkbox"/> 500Ohm <input type="checkbox"/> 0-20mA	<input type="checkbox"/> 500Ohm <input type="checkbox"/> 0-20mA	UNSIGNED 16
1046	Offset	-20.0 to 20.0 Ohm	0.0 Ohm			INTEGER 16
1041	Sender connection type	Two-pole / Single-pole	Two-pole	<input type="checkbox"/> 2 <input type="checkbox"/> 1	<input type="checkbox"/> 2 <input type="checkbox"/> 1	UNSIGNED 16
1003	Monitoring wire break	Off High Low High/Low	Off	<input type="checkbox"/> Off <input type="checkbox"/> High <input type="checkbox"/> Low <input type="checkbox"/> Hi/Lo	<input type="checkbox"/> Off <input type="checkbox"/> High <input type="checkbox"/> Low <input type="checkbox"/> Hi/Lo	UNSIGNED 16
1004	Wire break alarm class	A/B/C/D/E/F/Control	B			UNSIGNED 16
1005	Self acknowledge wire break	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
10113	Filter time constant	Off/1/2/3/4/5	3			UNSIGNED 16
3632	Bargraph minimum	-9999 to +9999	+0000			INTEGER 16
3633	Bargraph maximum	-9999 to +9999	+1000			INTEGER 16
1035	Value format	user defined	00000			Text/8
Configure AIs: Analog input 2						
1075	Description	user-defined	Analog inp. 2			Text/16
1050	Type	Off VDO 5bar VDO 10bar VDO 150°C VDO 120°C Pt100 Linear Table A Table B	Off	<input type="checkbox"/> Off <input type="checkbox"/> 5bar <input type="checkbox"/> 10bar <input type="checkbox"/> 150°C <input type="checkbox"/> 120°C <input type="checkbox"/> Pt100 <input type="checkbox"/> Linear <input type="checkbox"/> Tab.A <input type="checkbox"/> Tab.B	<input type="checkbox"/> Off <input type="checkbox"/> 5bar <input type="checkbox"/> 10bar <input type="checkbox"/> 150°C <input type="checkbox"/> 120°C <input type="checkbox"/> Pt100 <input type="checkbox"/> Linear <input type="checkbox"/> Tab.A <input type="checkbox"/> Tab.B	UNSIGNED 16
1051	User defined min display value	-9999 to +9999	+0000			INTEGER 16
1052	User defined max display value	-9999 to +9999	+1000			INTEGER 16
1089	Sender value at display min.	0.00 to 100.00 %	0.00 %			UNSIGNED 16
1090	Sender value at display max.	0.00 to 100.00 %	0.00 %			UNSIGNED 16
1070	Sender type	0 to 500 Ohm 0 to 20 mA	0 to 500 Ohm	<input type="checkbox"/> 500Ohm <input type="checkbox"/> 0-20mA	<input type="checkbox"/> 500Ohm <input type="checkbox"/> 0-20mA	UNSIGNED 16
1096	Offset	-20.0 to 20.0 Ohm	0.0 Ohm			INTEGER 16
1091	Sender connection type	Two-pole / Single-pole	Two-pole	<input type="checkbox"/> 2 <input type="checkbox"/> 1	<input type="checkbox"/> 2 <input type="checkbox"/> 1	UNSIGNED 16
1053	Monitoring wire break	Off High Low High/Low	Off	<input type="checkbox"/> Off <input type="checkbox"/> High <input type="checkbox"/> Low <input type="checkbox"/> Hi/Lo	<input type="checkbox"/> Off <input type="checkbox"/> High <input type="checkbox"/> Low <input type="checkbox"/> Hi/Lo	UNSIGNED 16
1054	Wire break alarm class	A/B/C/D/E/F/Control	B			UNSIGNED 16
1055	Self acknowledge wire break	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
10114	Filter time constant	Off/1/2/3/4/5	3			UNSIGNED 16
3634	Bargraph minimum	-9999 to +9999	+0000			INTEGER 16
3635	Bargraph maximum	-9999 to +9999	+1000			INTEGER 16
1085	Value format	user defined	00000			Text/8

Par. ID.	Parameter	Setting range	Default value	Customer setting	Data type	
CONFIGURE APPLICATION						
Configure AIs: Analog input 3						
1125	Description	user-defined	Analog inp. 3		Text/16	
1100	Type	Off VDO 5bar VDO 10bar VDO 150°C VDO 120°C Pt100 Linear Table A Table B	Off	<input type="checkbox"/> Off <input type="checkbox"/> 5bar <input type="checkbox"/> 10bar <input type="checkbox"/> 150°C <input type="checkbox"/> 120°C <input type="checkbox"/> Pt100 <input type="checkbox"/> Linear <input type="checkbox"/> Tab.A <input type="checkbox"/> Tab.B	<input type="checkbox"/> Off <input type="checkbox"/> 5bar <input type="checkbox"/> 10bar <input type="checkbox"/> 150°C <input type="checkbox"/> 120°C <input type="checkbox"/> Pt100 <input type="checkbox"/> Linear <input type="checkbox"/> Tab.A <input type="checkbox"/> Tab.B	UNSIGNED 16
1101	User defined min display value	-9999 to +9999	+0000			INTEGER 16
1102	User defined max display value	-9999 to +9999	+1000			INTEGER 16
1139	Sender value at display min.	0.00 to 100.00 %	0.00 %			UNSIGNED 16
1140	Sender value at display max.	0.00 to 100.00 %	0.00 %			UNSIGNED 16
1120	Sender type	0 to 500 Ohm 0 to 20 mA	0 to 500 Ohm	<input type="checkbox"/> 500Ohm <input type="checkbox"/> 0-20mA	<input type="checkbox"/> 500Ohm <input type="checkbox"/> 0-20mA	UNSIGNED 16
1146	Offset	-20.0 to 20.0 Ohm	0.0 Ohm			INTEGER 16
1141	Sender connection type	Two-pole / Single-pole	Two-pole	<input type="checkbox"/> 2 <input type="checkbox"/> 1	<input type="checkbox"/> 2 <input type="checkbox"/> 1	UNSIGNED 16
1103	Monitoring wire break	Off High Low High/Low	Off	<input type="checkbox"/> Off <input type="checkbox"/> High <input type="checkbox"/> Low <input type="checkbox"/> Hi/Lo	<input type="checkbox"/> Off <input type="checkbox"/> High <input type="checkbox"/> Low <input type="checkbox"/> Hi/Lo	UNSIGNED 16
1104	Wire break alarm class	A/B/C/D/E/F/Control	B			UNSIGNED 16
1105	Self acknowledge wire break	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
10116	Filter time constant	Off/1/2/3/4/5	3			UNSIGNED 16
3636	Bargraph minimum	-9999 to +9999	+0000			INTEGER 16
3637	Bargraph maximum	-9999 to +9999	+1000			INTEGER 16
1135	Value format	user defined	00000			Text/8
Configure IOs: Discrete inputs						
Configure discrete input 1						
1400	DI 1 Text	user-defined	Emergency Stop			Text/16
1201	DI 1 Operation	N.O. N.C.	N.C.	<input type="checkbox"/> N.O. <input type="checkbox"/> N.C.	<input type="checkbox"/> N.O. <input type="checkbox"/> N.C.	UNSIGNED 16
1200	DI 1 Delay	0.08 to 650.00 s	0.20 s			UNSIGNED 16
1202	DI 1 Alarm class	A/B/C/D/E/F/Control	F			UNSIGNED 16
1203	DI 1 Delayed by engine speed	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
1204	DI 1 Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
Configure discrete input 2						
1410	DI 2 Text	user-defined	Startreq. in AUTO			Text/16
1221	DI 2 Operation	N.O. N.C.	N.O.	<input type="checkbox"/> N.O. <input type="checkbox"/> N.C.	<input type="checkbox"/> N.O. <input type="checkbox"/> N.C.	UNSIGNED 16
1220	DI 2 Delay	0.08 to 650.00 s	0.50 s			UNSIGNED 16
1222	DI 2 Alarm class	A/B/C/D/E/F/Control	Control			UNSIGNED 16
1223	DI 2 Delayed by engine speed	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
1224	DI 2 Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
Configure discrete input 3						
1420	DI 3 Text	user-defined	Low oil pressure			Text/16
1241	DI 3 Operation	N.O. N.C.	N.O.	<input type="checkbox"/> No <input type="checkbox"/> NC	<input type="checkbox"/> N.O. <input type="checkbox"/> N.C.	UNSIGNED 16
1240	DI 3 Delay	0.08 to 650.00 s	0.50 s			UNSIGNED 16
1242	DI 3 Alarm class	A/B/C/D/E/F/Control	B			UNSIGNED 16
1243	DI 3 Delayed by engine speed	No/Yes	Yes	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
1244	DI 3 Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
Configure discrete input 4						
1430	DI 4 Text	user-defined	Coolant temp.			Text/16
1261	DI 4 Operation	N.O. N.C.	N.O.	<input type="checkbox"/> N.O. <input type="checkbox"/> N.C.	<input type="checkbox"/> N.O. <input type="checkbox"/> N.C.	UNSIGNED 16
1260	DI 4 Delay	0.08 to 650.00 s	0.50 s			UNSIGNED 16
1262	DI 4 Alarm class	A/B/C/D/E/F/Control	B			UNSIGNED 16
1263	DI 4 Delayed by engine speed	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
1264	DI 4 Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16

Par. ID.	Parameter	Setting range	Default value	Customer setting	Data type
----------	-----------	---------------	---------------	------------------	-----------

**CONFIGURE APPLICATION**

<b>Configure discrete input 5</b>					
1440	DI 5 Text	user-defined	External ackn.		Text/16
1281	DI 5 Operation	N.O. N.C.	N.O.	<input type="checkbox"/> N.O. <input type="checkbox"/> N.C.	<input type="checkbox"/> N.O. <input type="checkbox"/> N.C.
1280	DI 5 Delay	0.08 to 650.00 s	0.50 s		UNSIGNED 16
1282	DI 5 Alarm class	A/B/C/D/E/F/Control	Control		UNSIGNED 16
1283	DI 5 Delayed by engine speed	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N
1284	DI 5 Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N
<b>Configure discrete input 6</b>					
1450	DI 6 Text	user-defined	Digital Inp. 6		Text/16
1301	DI 6 Operation	N.O. N.C.	N.O.	<input type="checkbox"/> N.O. <input type="checkbox"/> N.C.	<input type="checkbox"/> N.O. <input type="checkbox"/> N.C.
1300	DI 6 Delay	0.08 to 650.00 s	0.50 s		UNSIGNED 16
1302	DI 6 Alarm class	A/B/C/D/E/F/Control	Control		UNSIGNED 16
1303	DI 6 Delayed by engine speed	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N
1304	DI 6 Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N
<b>Configure discrete input 9</b>					
1480	DI 9 Text	user-defined	Digital Inp. 9		Text/16
1361	DI 9 Operation	N.O. N.C.	N.O.	<input type="checkbox"/> N.O. <input type="checkbox"/> N.C.	<input type="checkbox"/> N.O. <input type="checkbox"/> N.C.
1360	DI 9 Delay	0.08 to 650.00 s	0.20 s		UNSIGNED 16
1362	DI 9 Alarm class	A/B/C/D/E/F/Control	B		UNSIGNED 16
1363	DI 9 Delayed by engine speed	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N
1364	DI 9 Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N
<b>Configure discrete input 10</b>					
1488	DI 10 Text	user-defined	Digital Inp. 10		Text/16
1381	DI 10 Operation	N.O. N.C.	N.O.	<input type="checkbox"/> N.O. <input type="checkbox"/> N.C.	<input type="checkbox"/> N.O. <input type="checkbox"/> N.C.
1380	DI 10 Delay	0.08 to 650.00 s	0.20 s		UNSIGNED 16
1382	DI 10 Alarm class	A/B/C/D/E/F/Control	B		UNSIGNED 16
1383	DI 10 Delayed by engine speed	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N
1384	DI 10 Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N
<b>Configure discrete input 11</b>					
1496	DI 11 Text	user-defined	Digital Inp. 11		Text/16
1206	DI 11 Operation	N.O. N.C.	N.O.	<input type="checkbox"/> N.O. <input type="checkbox"/> N.C.	<input type="checkbox"/> N.O. <input type="checkbox"/> N.C.
1205	DI 11 Delay	0.08 to 650.00 s	0.20 s		UNSIGNED 16
1207	DI 11 Alarm class	A/B/C/D/E/F/Control	B		UNSIGNED 16
1208	DI 11 Delayed by engine speed	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N
1209	DI 11 Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N
<b>Configure discrete input 12</b>					
1504	DI 12 Text	user-defined	Digital Inp. 12		Text/16
1226	DI 12 Operation	N.O. N.C.	N.O.	<input type="checkbox"/> N.O. <input type="checkbox"/> N.C.	<input type="checkbox"/> N.O. <input type="checkbox"/> N.C.
1225	DI 12 Delay	0.08 to 650.00 s	0.20 s		UNSIGNED 16
1227	DI 12 Alarm class	A/B/C/D/E/F/Control	B		UNSIGNED 16
1228	DI 12 Delayed by engine speed	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N
1229	DI 12 Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N

Par. ID.	Parameter	Setting range	Default value	Customer setting	Data type
----------	-----------	---------------	---------------	------------------	-----------

**CONFIGURE APPLICATION**

refer to Table 3-59	Configure IOs: External discrete inputs					
	Ext. discrete input {x}; [{x} = 1 to 16]					
	Operation	N.O. N.C.	N.O.	<input type="checkbox"/> N.O. <input type="checkbox"/> N.C.	<input type="checkbox"/> N.O. <input type="checkbox"/> N.C.	UNSIGNED 16
	Delay	0.05 to 650.00 s	0.20 s			UNSIGNED 16
	Alarm class	A/B/C/D/E/F/Control	Control			UNSIGNED 16
	Delayed by eng. speed	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
	Self acknowledge	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
	Configure IOs: Discrete outputs					
	12580	Ready for op. OFF	see descr. in <a href="#">LogicsManager</a> chap. starting page 284; default: (0 & 0) & 1			Logman
	12110	Relay 2	see descr. in <a href="#">LogicsManager</a> chap. starting page 284; default: (03.05 & 1) & 1			Logman
12310	Relay 3	see descr. in <a href="#">LogicsManager</a> chap. starting page 284; default: (03.02 & 1) & 1			Logman	
12320	Relay 4	see descr. in <a href="#">LogicsManager</a> chap. starting page 284; default: (03.28 & 1) & 1			Logman	
12130	Relay 5	see descr. in <a href="#">LogicsManager</a> chap. starting page 284; default: (03.04 & 1) & 1			Logman	
12140	Relay 6	see descr. in <a href="#">LogicsManager</a> chap. starting page 284; default: (0 & 1) & 1			Logman	
12150	Relay 7	see descr. in <a href="#">LogicsManager</a> chap. starting page 284; default: (07.25 & 1) & 1			Logman	
12160	Relay 8	see descr. in <a href="#">LogicsManager</a> chap. starting page 284; default: (0 & 1) & 1			Logman	
12170	Relay 9	see descr. in <a href="#">LogicsManager</a> chap. starting page 284; default: (07.25 & 1) & 1			Logman	
12180	Relay10	see descr. in <a href="#">LogicsManager</a> chap. starting page 284; default: (03.01 & 1) & 1			Logman	
12560	Relay11	see descr. in <a href="#">LogicsManager</a> chap. starting page 284; default: (01.08 & 1) & 1			Logman	
12590	Relay12	see descr. in <a href="#">LogicsManager</a> chap. starting page 284; default: (01.09 & 1) & 1			Logman	
Configure IOs: External discrete outputs						
12330	Ext. discrete output 1	see descr. in <a href="#">LogicsManager</a> chap. starting page 284; default: (0 & 1) & 1			Logman	
12340	Ext. discrete output 2	see descr. in <a href="#">LogicsManager</a> chap. starting page 284; default: (0 & 1) & 1			Logman	
12350	Ext. discrete output 3	see descr. in <a href="#">LogicsManager</a> chap. starting page 284; default: (0 & 1) & 1			Logman	
12360	Ext. discrete output 4	see descr. in <a href="#">LogicsManager</a> chap. starting page 284; default: (0 & 1) & 1			Logman	
12370	Ext. discrete output 5	see descr. in <a href="#">LogicsManager</a> chap. starting page 284; default: (0 & 1) & 1			Logman	
12380	Ext. discrete output 6	see descr. in <a href="#">LogicsManager</a> chap. starting page 284; default: (0 & 1) & 1			Logman	
12390	Ext. discrete output 7	see descr. in <a href="#">LogicsManager</a> chap. starting page 284; default: (0 & 1) & 1			Logman	
12400	Ext. discrete output 8	see descr. in <a href="#">LogicsManager</a> chap. starting page 284; default: (0 & 1) & 1			Logman	
12410	Ext. discrete output 9	see descr. in <a href="#">LogicsManager</a> chap. starting page 284; default: (0 & 1) & 1			Logman	
12420	Ext. discrete output 10	see descr. in <a href="#">LogicsManager</a> chap. starting page 284; default: (0 & 1) & 1			Logman	
12430	Ext. discrete output 11	see descr. in <a href="#">LogicsManager</a> chap. starting page 284; default: (0 & 1) & 1			Logman	
12440	Ext. discrete output 12	see descr. in <a href="#">LogicsManager</a> chap. starting page 284; default: (0 & 1) & 1			Logman	
12450	Ext. discrete output 13	see descr. in <a href="#">LogicsManager</a> chap. starting page 284; default: (0 & 1) & 1			Logman	
12460	Ext. discrete output 14	see descr. in <a href="#">LogicsManager</a> chap. starting page 284; default: (0 & 1) & 1			Logman	
12470	Ext. discrete output 15	see descr. in <a href="#">LogicsManager</a> chap. starting page 284; default: (0 & 1) & 1			Logman	
12480	Ext. discrete output 16	see descr. in <a href="#">LogicsManager</a> chap. starting page 284; default: (0 & 1) & 1			Logman	

Par. ID.	Parameter	Setting range	Default value	Customer setting	Data type
<b>CONFIGURE APPLICATION</b>					
<b>Configure IOs: Analog outputs</b>					
<b>Configure AOs: Analog output 1</b>					
5200	Data source	refer to Appendix C, Data Sources on page 289 for all available AIs			Analogman
5204	Source value at minimal output	-32000 to 32000	00000		INTEGER 32
5206	Source value at maximal output	-32000 to 32000	10000		INTEGER 32
5203	Filter time constant	Off/1/2/3/4/5	Off		UNSIGNED 16
5201	Selected hardware type	Off user defined 0-10mA / 0-5V 0-20mA / 0-10V 4 - 20mA 0.5 - 4.5V 10-0mA / 5-0V 20-0mA / 10-0V 20 - 4mA 4.5 - 0.5 V 1V 2.5V 3V 10mA / 5V 20mA / 10V	0-20mA / 0-10V		UNSIGNED 16
5208	User defined min. output value	-9999 to 9999			UNSIGNED 16
5209	User defined max. output value	-9999 to 9999			UNSIGNED 16
5202	PWM signal	Off/On	Off	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
5210	PWM output level	0.00 to 10.00 V	10.00 V		UNSIGNED 16
<b>Configure AOs: Analog output 2</b>					
5214	Data source	refer to Appendix C, Data Sources on page 289 for all available AIs			Analogman
5218	Source value at minimal output	-32000 to 32000	00000		INTEGER 32
5220	Source value at maximal output	-32000 to 32000	10000		INTEGER 32
5217	Filter time constant	Off/1/2/3/4/5	Off		UNSIGNED 16
5215	Selected hardware type	Off user defined 0-10mA / 0-5V 0-20mA / 0-10V 4 - 20mA 0.5 - 4.5V 10-0mA / 5-0V 20-0mA / 10-0V 20 - 4mA 4.5 - 0.5 V 1V 2.5V 3V 10mA / 5V 20mA / 10V	0-20mA / 0-10V		UNSIGNED 16
5222	User defined min. output value	-9999 to 9999			UNSIGNED 16
5223	User defined max. output value	-9999 to 9999			UNSIGNED 16
5216	PWM signal	Off/On	Off	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
5224	PWM output level	0.00 to 10.00 V	10.00 V		UNSIGNED 16

Par. ID.	Parameter	Setting range	Default value	Customer setting	Data type
<b>CONFIGURE APPLICATION</b>					
<b>Configure Engine</b>					
<b>Configure Engine: Engine type</b>					
3321	Start/stop mode logic	Diesel Gas External	Diesel	<input type="checkbox"/> Diesel <input type="checkbox"/> Gas <input type="checkbox"/> External	UNSIGNED 16
<b>Configure Engine: Engine type: Diesel</b>					
3308	Preglow time	0 to 300 s	3 s		UNSIGNED 16
3347	Preglow mode	No Always Analog	No	<input type="checkbox"/> No <input type="checkbox"/> Always <input type="checkbox"/> Analog	UNSIGNED 16
3346	Preglow criterium	refer to Appendix C, Data Sources on page 289 for all available AIs			Analogman
3309	Preglow temperature threshold	- 10 to 250 °C	0 °C		
<b>Configure Engine: Engine type: Gas</b>					
3310	Ignition delay	0 to 999 s	3 s		UNSIGNED 16
3311	Gas valve delay	0 to 999 s	3 s		UNSIGNED 16
3312	Minimum speed for ignition	10 to 1800 RPM	100 RPM		UNSIGNED 16
<b>Configure Engine: Configure start/stop</b>					
3302	Start attempts	1 to 20	3		UNSIGNED 16
4102	Start attempts critical mode	1 to 20	10		UNSIGNED 16
3306	Starter time	1 to 99 s	5 s		UNSIGNED 16
3307	Start pause time	1 to 99 s	7 s		UNSIGNED 16
3326	Stop time of engine	0 to 99 s	10 s		UNSIGNED 16
3313	Firing speed	5 to 60 Hz	15 Hz		UNSIGNED 16
3324	LogicsManager for firing speed	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
12500	Firing speed	see descr. in <a href="#">LogicsManager</a> chap. starting page 275; default: (0 & 1) & 1			Logman
3315	Engine monitoring delay time	0 to 99 s	8 s		UNSIGNED 16
3316	Cool down time	1 to 999 s	20 s		UNSIGNED 16
3319	Cool down in STOP mode	Yes / No	Yes	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
3322	Cool down without breaker	Yes / No	Yes	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
3300	Auxiliary services prerun	0 to 999 s	0 s		UNSIGNED 16
3301	Auxiliary services postrun	0 to 999 s	0 s		UNSIGNED 16
<b>Configure Engine: Configure MPU</b>					
1600	MPU input	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
1602	Fly wheel teeth	2 to 260	118		UNSIGNED 16
<b>Configure Engine: Configure idle mode</b>					
12570	Auto idle mode	see descr. in <a href="#">LogicsManager</a> chap. starting page 275; default: (0 & 1) & 1			Logman
12550	Constant idle run	see descr. in <a href="#">LogicsManager</a> chap. starting page 275; default: (0 & 1) & 1			Logman
3328	Automatic idle time	1 to 9999 s	30 s		UNSIGNED 16
3329	During emergency / critical	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
<b>Configure Emergency Run</b>					
2802	Off/On	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	UNSIGNED 16
2800	Mains fail delay time	0.20 to 99.99 s	3.00 s		UNSIGNED 16
3408	Emerg. start with MCB failure	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
12200	Inhibit emerg. run	see descr. in <a href="#">LogicsManager</a> chap. starting page 275; default: (0 & 1) & 1			Logman
4101	Break emerg. in critical mode	0 to 999 s	5 s		UNSIGNED 16
<b>Configure Automatic Run</b>					
12120	Start req. in Auto	see descr. in <a href="#">LogicsManager</a> chap. starting page 275; default: (09.02. + 0) + 0			Logman
12190	Stop req. in Auto	see descr. in <a href="#">LogicsManager</a> chap. starting page 275; default: (0 & 1) & 1			Logman
12930	LD start stop	see descr. in <a href="#">LogicsManager</a> chap. start. page 275; def.: (0 & !04.27) & !00.19			Logman
5752	Start stop mode	Reserve power Generator load	Reserve power	<input type="checkbox"/> Res. p. <input type="checkbox"/> Gen. l.	
5753	Dead busbar start mode	All / LDSS	All	<input type="checkbox"/> A <input type="checkbox"/> L	
5751	Base priority	0 to 31	5		
12926	LDSS Priority 2	see descr. in <a href="#">LogicsManager</a> chap. starting page 275; default: (0 & 1) & 1			Logman
12925	LDSS Priority 3	see descr. in <a href="#">LogicsManager</a> chap. starting page 275; default: (0 & 1) & 1			Logman
12924	LDSS Priority 4	see descr. in <a href="#">LogicsManager</a> chap. starting page 275; default: (0 & 1) & 1			Logman
5754	Fit size of engine	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
5755	Fit service hours	Off / Staggered / Equal			
5756	Changes of engines	Off / All 32h / 64h / 128h			
5759	Minimum running time	0 to 32000 s			



Par. ID.	Parameter	Setting range	Default value	Customer setting	Data type
<b>CONFIGURE APPLICATION</b>					
	<b>Configure Automatic Run</b>				
5760	IOP Reserve power	0 to 999999 kW			
5761	IOP Hysteresis	0 to 65000 kW			
5762	IOP Max. generator load	0 to 100 %			
5763	IOP Min. generator load	0 to 100 %			
5757	IOP Dynamic	Low / Moderate / High			
5764	IOP Add on delay	0 to 32000 s			
5765	IOP Add on delay at rated load	0 to 32000 s			
5766	IOP Add off delay	0 to 32000 s			
5767	MOP Minimum load	0 to 999999 kW			
5769	MOP Hysteresis	0 to 65000 kW			
5768	MOP Reserve power	0 to 999999 kW			
5770	MOP Max. generator load	0 to 100 %			
5771	MOP Min. generator load	0 to 100 %			
5758	MOP Dynamic	Low / Moderate / High			
5772	MOP Add on delay	0 to 32000 s			
5773	MOP Add on delay at rated load	0 to 32000 s			
5774	MOP Add off delay	0 to 32000 s			
12540	Start w/o load	see descr. in <a href="#">LogicsManager</a> chap. starting page 275; default: (0 & 1) & 1			Logman
1795	Startup in mode	STOP AUTO MAN Last	Stop	<input type="checkbox"/> STOP <input type="checkbox"/> AUTO <input type="checkbox"/> MAN <input type="checkbox"/> Last	<input type="checkbox"/> STOP <input type="checkbox"/> AUTO <input type="checkbox"/> MAN <input type="checkbox"/> Last UNSIGNED 16
12510	Operat. mode AUTO	see descr. in <a href="#">LogicsManager</a> chap. starting page 275; default: (0 & 1) & 1			Logman
12520	Operat. mode MAN	see descr. in <a href="#">LogicsManager</a> chap. starting page 275; default: (0 & 1) & 1			Logman
12530	Operat. mode STOP	see descr. in <a href="#">LogicsManager</a> chap. starting page 275; default: (0 & 1) & 1			Logman
12220	Critical mode	see descr. in <a href="#">LogicsManager</a> chap. start. p. 275; default: (0 & !05.08) & !09.01			Logman
4109	Critical mode postrun	0 to 6000 s	600 s		
4100	Close GCB in override	Yes / No	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N UNSIGNED 16
4105	Override alarmcl. also in MAN	Yes / No	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N UNSIGNED 16

Par. ID.	Parameter	Setting range	Default value	Customer setting	Data type
<b>CONFIGURE CONTROLLER</b>					
<b>Configure Controller</b>					
<b>Configure Controller: Frequency control</b>					
5507	Frequency control	Off PID analog 3pos controller	PID analog	<input type="checkbox"/> Off <input type="checkbox"/> PID <input type="checkbox"/> 3pos	UNSIGNED 16
5510	Proportional gain	0.01 to 100.00	10		UNSIGNED 16
5511	Integral gain	0.01 to 100.00	1.00 s		UNSIGNED 16
5512	Derivative ratio	0.01 to 100.00	1.00 s		UNSIGNED 16
5550	Deadband	0.02 to 9.99 Hz	0.08 Hz		UNSIGNED 16
5551	Time pulse minimum	0.01 to 2.00 s	0.05 s		UNSIGNED 16
5552	Gain factor	0.1 to 10.0	5.0		UNSIGNED 16
5553	Expand deadband factor	1.0 to 9.9	2.0		UNSIGNED 16
5554	Delay expand deadband	1.0 to 9.9 s	2.0 s		UNSIGNED 16
5518	Frequency setpoint 1 source	refer to Appendix C, Data Sources on page 289 for all available AIs			Analogman
5500	Int. freq. control setpoint 1	0.00 to 70.00 Hz	50.00 Hz		UNSIGNED 16
5519	Frequency setpoint 2 source	refer to Appendix C, Data Sources on page 289 for all available AIs			Analogman
5501	Int. freq. control setpoint 2	0.00 to 70.00 Hz	50.00 Hz		UNSIGNED 16
12918	Setpoint 2 freq.	see descr. in <a href="#">LogicsManager</a> chap. starting page 275; default: (0 & 1) & 1			Logman
5516	Start frequency control level	0.00 to 70.00 Hz	47.00 Hz		UNSIGNED 16
5517	Start frequency control delay	0 to 999 s	5 s		UNSIGNED 16
5503	Freq. control setpoint ramp	0.10 to 60.00 Hz/s	10.00 Hz/s		UNSIGNED 16
5504	Frequency control droop	0.1 to 20.0 Hz	2.0 Hz		UNSIGNED 16
12904	Freq. droop act.	see descr. in <a href="#">LogicsManager</a> chap. starting page 275; default: (0 & 1) & 1			Logman
5502	Slip frequency setpoint offset	0.00 to 0.50 Hz	0.10 Hz		UNSIGNED 16
5505	Phase matching gain	1 to 99			
5506	Phase matching def-start	0.02. to 0.25 Hz			
5508	Freq. control initial state	0.0 to 100.0 %	50.0 %		UNSIGNED 16
<b>Configure Controller: Load control</b>					
5525	Load control	Off PID analog 3pos controller	PID analog	<input type="checkbox"/> Off <input type="checkbox"/> PID <input type="checkbox"/> 3pos	UNSIGNED 16
5513	Proportional gain	0.01 to 100.00	10		UNSIGNED 16
5514	Integral gain	0.01 to 100.00	1.00 s		UNSIGNED 16
5515	Derivative ratio	0.01 to 100.00	1.00 s		UNSIGNED 16
5560	Deadband	0.10 to 9.99 %	0.50 %		UNSIGNED 16
5561	Time pulse minimum	0.01 to 2.00 s	0.05 s		UNSIGNED 16
5562	Gain factor	0.1 to 10.0	5.0		UNSIGNED 16
5563	Expand deadband factor	1.0 to 9.9	2.0		UNSIGNED 16
5564	Delay expand deadband	1.0 to 9.9 s	2.0 s		UNSIGNED 16
5539	Load setpoint 1 source	refer to Appendix C, Data Sources on page 289 for all available AIs			Analogman
5526	Load setpoint 1	Constant Import Export	Constant	<input type="checkbox"/> Constant <input type="checkbox"/> Import <input type="checkbox"/> Export	UNSIGNED 16
5520	Int. load control setpoint 1	0 to 9,999.9 kW	+100.0 kW		UNSIGNED 32
5540	Load setpoint 1 source	refer to Appendix C, Data Sources on page 289 for all available AIs			Analogman
5527	Load setpoint 2	Import / Export / Constant	Import		UNSIGNED 16
5521	Int. load control setpoint 2	0 to 9,999.9 kW	+200.0 kW		UNSIGNED 32
12919	Setp. 2 load	see descr. in <a href="#">LogicsManager</a> chap. starting page 275; default: (0 & 1) & 1			Logman
5522	Load control setpoint ramp	0.10 to 100.00 %/s	10.00 %/s		UNSIGNED 16
5523	Load control setpoint maximum	0 to 150 %	100 %		UNSIGNED 16
5524	Minimum gen. import/export	0 to 100 %	0 %		UNSIGNED 16
5532	Warm up load limit	0 to 100 %	0 %		UNSIGNED 16
5534	Warm up time	0 to 9,999 s	30 s		UNSIGNED 16
5533	Warm up mode	Analog val contr Time controlled	Analog val contr	<input type="checkbox"/> Analog v. <input type="checkbox"/> Time	
5538	Engine warm up criterium	refer to Appendix C, Data Sources on page 289 for all available AIs			Analogman
5546	Warm up threshold	0 to 1000 °C			

Par. ID.	Parameter	Setting range	Default value	Customer setting	Data type
CONFIGURE CONTROLLER					
Configure Controller					
Configure Controller: Voltage control					
5607	Voltage control	Off PID analog 3pos controller	PID analog	<input type="checkbox"/> Off <input type="checkbox"/> PID <input type="checkbox"/> 3pos	<input type="checkbox"/> Off <input type="checkbox"/> PID <input type="checkbox"/> 3pos UNSIGNED 16
5610	Proportional gain	0.01 to 100.00	10		UNSIGNED 16
5611	Integral gain	0.01 to 100.00	1.00 s		UNSIGNED 16
5612	Derivative ratio	0.01 to 100.00	1.00 s		UNSIGNED 16
5650	Deadband	0.1 to 9.9 %	0.5 %		UNSIGNED 16
5651	Time pulse minimum	0.01 to 2.00 s	0.05 s		UNSIGNED 16
5652	Gain factor	0.1 to 10.0	5.0		UNSIGNED 16
5653	Expand deadband factor	1.0 to 9.9	2.0		UNSIGNED 16
5654	Delay expand deadband	1.0 to 9.9 s	2.0 s		UNSIGNED 16
5618	Voltage setpoint 1 source	refer to Appendix C, Data Sources on page 289 for all available AIs			Analogman
5600	Int.voltage control setpoint 1	50 to 650,000 V	400 V		UNSIGNED 32
5619	Voltage setpoint 1 source	refer to Appendix C, Data Sources on page 289 for all available AIs			Analogman
5601	Int.voltage control setpoint 2	50 to 650,000 V	400 V		UNSIGNED 32
12920	Setp. 2 voltage	see descr. in <a href="#">LogicsManager</a> chap. starting page 275; default: (0 & 1) & 1			Logman
5616	Start value	0 to 100 %	70 %		UNSIGNED 16
5617	Start delay	0 to 999 s	5 s		UNSIGNED 16
5603	Voltage control setpoint ramp	0.10 to 60.00 Hz/s	10.00 Hz/s		UNSIGNED 16
5604	Voltage control droop	0 to 20 %	5 %		UNSIGNED 16
12905	Volt. droop act.	see descr. in <a href="#">LogicsManager</a> chap. starting page 275; default: (0 & 1) & 1			Logman
5608	Voltage control initial state	0.0 to 100.0 %	50.0 %		
Configure Controller: PF control					
5625	Power factor control	Off PID analog 3pos controller	PID analog	<input type="checkbox"/> Off <input type="checkbox"/> PID <input type="checkbox"/> 3pos	<input type="checkbox"/> Off <input type="checkbox"/> PID <input type="checkbox"/> 3pos UNSIGNED 16
5613	Proportional gain	0.01 to 100.00	10		UNSIGNED 16
5614	Integral gain	0.01 to 100.00	1.00 s		UNSIGNED 16
5615	Derivative ratio	0.01 to 100.00	1.00 s		UNSIGNED 16
5660	Deadband	0.5 to 99.9 %	1.0 %		UNSIGNED 16
5661	Time pulse minimum	0.01 to 2.00 s	0.05 s		UNSIGNED 16
5662	Gain factor	0.1 to 10.0	5.0		UNSIGNED 16
5663	Expand deadband factor	1.0 to 9.9	2.0		UNSIGNED 16
5664	Delay expand deadband	1.0 to 9.9 s	2.0 s		UNSIGNED 16
5638	Power Factor setpoint 1 source	refer to Appendix C, Data Sources on page 289 for all available AIs			Analogman
5620	Int.power factor setpoint 1	-0.710 to +0.710	1		UNSIGNED 16
5639	Power Factor setpoint 1 source	refer to Appendix C, Data Sources on page 289 for all available AIs			Analogman
5621	Int.power factor setpoint 2	-0.710 to +0.710	+0.90		UNSIGNED 16
12921	Setp. 2 pwr.factor	see descr. in <a href="#">LogicsManager</a> chap. starting page 275; default: (0 & 1) & 1			Logman
5622	React. pwr. ctrl setpoint ramp	0.10 to 100.00 %/s	1.00 %/s		UNSIGNED 16
Configure Controller: Load share					
5531	Active power load share	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0 UNSIGNED 16
5530	Active power Load share factor	10 to 99 %			
5631	Reactive power load share	Off/On	On	<input type="checkbox"/> 1 <input type="checkbox"/> 0	<input type="checkbox"/> 1 <input type="checkbox"/> 0 UNSIGNED 16
5630	React. power Load share factor	10 to 99 %			
1723	Segment number	1 to 32	1		
12929	Segment no.2 act	see descr. in <a href="#">LogicsManager</a> chap. starting page 275; default: (0 & 1) & 1			Logman
12928	Segment no.3 act	see descr. in <a href="#">LogicsManager</a> chap. starting page 275; default: (0 & 1) & 1			Logman
12927	Segment no.4 act	see descr. in <a href="#">LogicsManager</a> chap. starting page 275; default: (0 & 1) & 1			Logman
Configure Controller: Discrete raise/low function					
12900	Discrete f/P +	see descr. in <a href="#">LogicsManager</a> chap. starting page 275; default: (0 & 1) & 1			Logman
12901	Discrete f/P -	see descr. in <a href="#">LogicsManager</a> chap. starting page 275; default: (0 & 1) & 1			Logman
12902	Discrete V/PF +	see descr. in <a href="#">LogicsManager</a> chap. starting page 275; default: (0 & 1) & 1			Logman
12903	Discrete V/PF -	see descr. in <a href="#">LogicsManager</a> chap. starting page 275; default: (0 & 1) & 1			Logman

Par. ID.	Parameter	Setting range	Default value	Customer setting	Data type
<b>CONFIGURE INTERFACES</b>					
<b>Configure CAN interface</b>					
<b>Set up CAN interface 1</b>					
3156	Baudrate	20/50/100/125/250/500/800/1000 kBd	250 kBd		UNSIGNED 16
8950	Node-ID CAN-Bus 1	1 to 127	1		UNSIGNED 16
8993	CANopen Master	Off On Default Master	Off	<input type="checkbox"/> Off <input type="checkbox"/> On <input type="checkbox"/> Def. M.	UNSIGNED 16
9120	Producer heartbeat time	0 to 65500 ms	2000 ms		UNSIGNED 16
9100	COB-ID SYNC Message	1 to FFFFFFFF	0x80		UNSIGNED 32
8940	Producer SYNC Message time	0 to 65000 ms	20 ms		UNSIGNED 16
<b>CAN interface 1: Additional server SDOs</b>					
33040	2. Node-ID	0 to 127	0		UNSIGNED 8
33041	3. Node-ID	0 to 127	0		UNSIGNED 8
33042	4. Node-ID	0 to 127	0		UNSIGNED 8
33043	5. Node-ID	0 to 127	0		UNSIGNED 8
<b>CAN interface 1: Receive PDO 1</b>					
9300	COB-ID	1 to FFFFFFFH	0x80000000		UNSIGNED 32
9910	Number of Mapped Objects	1 to 4	0		UNSIGNED 8
9911	1. Mapped Object	0 to 65535	0		UNSIGNED 16
9912	2. Mapped Object	0 to 65535	0		UNSIGNED 16
9913	3. Mapped Object	0 to 65535	0		UNSIGNED 16
9914	4. Mapped Object	0 to 65535	0		UNSIGNED 16
<b>CAN interface 1: Receive PDO 2</b>					
9310	COB-ID	1 to FFFFFFFH	0x80000000		UNSIGNED 32
33855	Number of Mapped Objects	1 to 4	0		UNSIGNED 8
33856	1. Mapped Object	0 to 65535	0		UNSIGNED 16
33857	2. Mapped Object	0 to 65535	0		UNSIGNED 16
33858	3. Mapped Object	0 to 65535	0		UNSIGNED 16
33859	4. Mapped Object	0 to 65535	0		UNSIGNED 16
<b>CAN interface 1: Receive PDO 3</b>					
9320	COB-ID	1 to FFFFFFFH	0x80000000		UNSIGNED 32
33860	Number of Mapped Objects	1 to 4	0		UNSIGNED 8
33861	1. Mapped Object	0 to 65535	0		UNSIGNED 16
33862	2. Mapped Object	0 to 65535	0		UNSIGNED 16
33863	3. Mapped Object	0 to 65535	0		UNSIGNED 16
33864	4. Mapped Object	0 to 65535	0		UNSIGNED 16
<b>CAN interface 1: Transmit PDO 1</b>					
9600	COB-ID	1 to FFFFFFFH	0x80000000		UNSIGNED 32
9602	Transmission type	0 to 255	255		UNSIGNED 8
9604	Event-timer	0 to 65500 ms	20		UNSIGNED 16
9609	Number of Mapped Objects	0 to 4	1		UNSIGNED 8
9605	1. Mapped Object	0 to 65535	16382		UNSIGNED 16
9606	2. Mapped Object	0 to 65535	0		UNSIGNED 16
9607	3. Mapped Object	0 to 65535	0		UNSIGNED 16
9608	4. Mapped Object	0 to 65535	0		UNSIGNED 16
<b>CAN interface 1: Transmit PDO 2</b>					
9610	COB-ID	1 to FFFFFFFH	0x80000000		UNSIGNED 32
9612	Transmission type	0 to 255	255		UNSIGNED 8
9614	Event-timer	0 to 65500 ms	20		UNSIGNED 16
9619	Number of Mapped Objects	0 to 4	0		UNSIGNED 8
9615	1. Mapped Object	0 to 65535	0		UNSIGNED 16
9616	2. Mapped Object	0 to 65535	0		UNSIGNED 16
9617	3. Mapped Object	0 to 65535	0		UNSIGNED 16
9618	4. Mapped Object	0 to 65535	0		UNSIGNED 16
<b>CAN interface 1: Transmit PDO 3</b>					
9620	COB-ID	1 to FFFFFFFH	0x80000000		UNSIGNED 32
9622	Transmission type	0 to 255	255		UNSIGNED 8
9624	Event-timer	0 to 65500 ms	20		UNSIGNED 16
9629	Number of Mapped Objects	0 to 4	0		UNSIGNED 8
9625	1. Mapped Object	0 to 65535	0		UNSIGNED 16
9626	2. Mapped Object	0 to 65535	0		UNSIGNED 16
9627	3. Mapped Object	0 to 65535	0		UNSIGNED 16
9628	4. Mapped Object	0 to 65535	0		UNSIGNED 16

Par. ID.	Parameter	Setting range	Default value	Customer setting	Data type
<b>CONFIGURE INTERFACES</b>					
<b>Configure CAN interface</b>					
<b>CAN interface 1: Transmit PDO 4</b>					
9630	COB-ID	1 to FFFFFFFH	0x80000000		UNSIGNED 32
9632	Transmission type	0 to 255	255		UNSIGNED 8
9634	Event-timer	0 to 65500 ms	20		UNSIGNED 16
9639	Number of Mapped Objects	0 to 4	0		UNSIGNED 8
9635	1. Mapped Object	0 to 65535	0		UNSIGNED 16
9636	2. Mapped Object	0 to 65535	0		UNSIGNED 16
9637	3. Mapped Object	0 to 65535	0		UNSIGNED 16
9638	4. Mapped Object	0 to 65535	0		UNSIGNED 16
<b>Set up CAN interface 2</b>					
3157	Baudrate	20/50/100/125/250/500/ 800/1000 kBd	250 kBd		UNSIGNED 16
	Function for RPDO 1	no func. 1st IKD 2nd IKD BK 16DIDO Co 16DIDO	no func.	<input type="checkbox"/> no <input type="checkbox"/> 1st IKD <input type="checkbox"/> 2nd IKD <input type="checkbox"/> BK 16 <input type="checkbox"/> Co 16	<input type="checkbox"/> no <input type="checkbox"/> 1st IKD <input type="checkbox"/> 2nd IKD <input type="checkbox"/> BK 16 <input type="checkbox"/> Co 16
	Function for RPDO 2	no func. 1st IKD 2nd IKD BK 16DIDO Co 16DIDO	no func.	<input type="checkbox"/> no <input type="checkbox"/> 1st IKD <input type="checkbox"/> 2nd IKD <input type="checkbox"/> BK 16 <input type="checkbox"/> Co 16	<input type="checkbox"/> no <input type="checkbox"/> 1st IKD <input type="checkbox"/> 2nd IKD <input type="checkbox"/> BK 16 <input type="checkbox"/> Co 16
<b>CAN interface 2: J1939 interface</b>					
15106	J1939 device address	0 to 255	234		UNSIGNED 16
15107	Engine control address	0 to 255	3		UNSIGNED 16
15108	Reset previous act. DTCs DM3	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
15103	SPN version	Version 1/2/3	Version 1		UNSIGNED 16
15102	Device type	Off Standard S6 Scania EMR2 Deutz EMS2 Volvo ADEC MTU EGS MFR/EDC7 MAN SISU EEM	Standard	<input type="checkbox"/> Off <input type="checkbox"/> Standard <input type="checkbox"/> S6 <input type="checkbox"/> EMR2 <input type="checkbox"/> EMS2 <input type="checkbox"/> ADEC <input type="checkbox"/> EGS <input type="checkbox"/> MAN <input type="checkbox"/> SISU	<input type="checkbox"/> Off <input type="checkbox"/> Standard <input type="checkbox"/> S6 <input type="checkbox"/> EMR2 <input type="checkbox"/> EMS2 <input type="checkbox"/> ADEC <input type="checkbox"/> EGS <input type="checkbox"/> MAN <input type="checkbox"/> SISU
15127	ECU remote controlled	On / Off	Off	<input type="checkbox"/> 0 <input type="checkbox"/> 1	UNSIGNED 16
5537	Speed deviation ECU	0 to 1400	120		UNSIGNED 16
<b>Configure CAN interface: Load share</b>					
9923	Load share interface	Off / CAN #1	CAN #1		
9921	Transfer rate LS fast message	0.10 to 0.30 s	0.10 s		
9920	Load share CAN-ID	2xx / 3xx / 4xx / 5xx Hex	5xx Hex		
<b>Configure RS-232 Interfaces</b>					
<b>Set up serial interface 1</b>					
3163	Baudrate	2400/4800/9600 Bd / 14.4/19.2/38.4/56/115 kBd	19.2 kBd		UNSIGNED 16
3161	Parity	None / even / odd	None		UNSIGNED 16
3162	Stop Bits	one / two	one		UNSIGNED 16
7900	Enable Modbus protocol	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
3185	ModBus Slave ID	0 to 255	1		UNSIGNED 16
3186	Reply delay time	0.00 to 1.00 s	0.00 s		UNSIGNED 16
7901	Enable ServLink protocol	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
<b>Configure RS-485 Interfaces</b>					
<b>Set up serial interface 2</b>					
3170	Baudrate	2400/4800/9600 Bd / 14.4/19.2/38.4/56/115 kBd	19.2 kBd		UNSIGNED 16
3171	Parity	None / even / odd	None		UNSIGNED 16
3172	Stop Bits	one / two	one		UNSIGNED 16
3173	Full-, halfduplex mode	Fullduplex / Halfduplex	Fullduplex	<input type="checkbox"/> F <input type="checkbox"/> H	UNSIGNED 16
7908	Enable Modbus protocol	No/Yes	Yes	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
3188	ModBus Slave ID	0 to 255	1		UNSIGNED 16
3189	Reply delay time	0.00 to 1.00 s	0.00 s		UNSIGNED 16

Par. ID.	Parameter	Setting range	Default value	Customer setting	Data type
----------	-----------	---------------	---------------	------------------	-----------

**CONFIGURE *LogicsManager***

	Configure internal flags					
12230	Flag 1	see descr. in <i>LogicsManager</i> chap. starting page 275; default: (0 & 1) & 1				Logman
12240	Flag 2	see descr. in <i>LogicsManager</i> chap. starting page 275; default: (0 & 1) & 1				Logman
12250	Flag 3	see descr. in <i>LogicsManager</i> chap. starting page 275; default: (0 & 1) & 1				Logman
12260	Flag 4	see descr. in <i>LogicsManager</i> chap. starting page 275; default: (0 & 1) & 1				Logman
12270	Flag 5	see descr. in <i>LogicsManager</i> chap. starting page 275; default: (0 & 1) & 1				Logman
12280	Flag 6	see descr. in <i>LogicsManager</i> chap. starting page 275; default: (0 & 1) & 1				Logman
12290	Flag 7	see descr. in <i>LogicsManager</i> chap. starting page 275; default: (0 & 1) & 1				Logman
12300	Flag 8	see descr. in <i>LogicsManager</i> chap. st. pg. 275; def.: (11.01 & !11.02) & 11.03				Logman
12910	Flag 9	see descr. in <i>LogicsManager</i> chap. starting page 275; default: (0 & 1) & 1				Logman
12911	Flag 10	see descr. in <i>LogicsManager</i> chap. starting page 275; default: (0 & 1) & 1				Logman
12912	Flag 11	see descr. in <i>LogicsManager</i> chap. starting page 275; default: (0 & 1) & 1				Logman
12913	Flag 12	see descr. in <i>LogicsManager</i> chap. starting page 275; default: (0 & 1) & 1				Logman
12914	Flag 13	see descr. in <i>LogicsManager</i> chap. starting page 275; default: (0 & 1) & 1				Logman
12915	Flag 14	see descr. in <i>LogicsManager</i> chap. starting page 275; default: (0 & 1) & 1				Logman
12916	Flag 15	see descr. in <i>LogicsManager</i> chap. starting page 275; default: (0 & 1) & 1				Logman
12917	Flag 16	see descr. in <i>LogicsManager</i> chap. starting page 275; default: (0 & 1) & 1				Logman
Set timer						
1652	Timer 1: Hour	0 to 23 h	8 h			UNSIGNED 8
1651	Timer 1: Minute	0 to 59 min	0 min			UNSIGNED 8
1650	Timer 1: Second	0 to 59 s	0 s			UNSIGNED 8
1657	Timer 2: Hour	0 to 23 h	17 h			UNSIGNED 8
1656	Timer 2: Minute	0 to 59 min	0 min			UNSIGNED 8
1655	Timer 2: Second	0 to 59 s	0 s			UNSIGNED 8
1663	Active day	1 to 31	1			UNSIGNED 8
1662	Active hour	0 to 23 h	12 h			UNSIGNED 8
1661	Active minute	0 to 59 min	0 min			UNSIGNED 8
1660	Active second	0 to 59 s	0 s			UNSIGNED 8
1670	Monday active	No/Yes	Yes	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
1671	Tuesday active	No/Yes	Yes	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
1672	Wednesday active	No/Yes	Yes	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
1673	Thursday active	No/Yes	Yes	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
1674	Friday active	No/Yes	Yes	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
1675	Saturday active	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
1676	Sunday active	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16

**CONFIGURE COUNTERS**

2550	Maintenance hours	0 to 9999 h	300 h		UNSIGNED 16
2562	Reset maintenance period h	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
2551	Maintenance days	0 to 999 days	365 days		UNSIGNED 16
2563	Reset maintenance period days	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
2567	Code level for reset maint.	0 to 3	3		UNSIGNED 16
2515	Counter value preset	0 to 99999999	00000000		UNSIGNED 32
2554	Set operation hours in 000h	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
2510	Gen. active power [0.00MWh]	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
2511	Gen. react. power [0.00Mvarh]	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
2513	Gen. -react. power [0.00Mvarh]	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16
2541	Counter value preset	0 to 65535	00000		UNSIGNED 16
2542	Set number of starts	No/Yes	No	<input type="checkbox"/> Y <input type="checkbox"/> N	UNSIGNED 16

# Appendix I. Service Options

## Product Service Options



The following factory options are available for servicing Woodward equipment, based on the standard Woodward Product and Service Warranty (5-01-1205) that is in effect at the time the product is purchased from Woodward or the service is performed. If you are experiencing problems with installation or unsatisfactory performance of an installed system, the following options are available:

- Consult the troubleshooting guide in the manual.
- Contact Woodward technical assistance (see "How to Contact Woodward" later in this chapter) and discuss your problem. In most cases, your problem can be resolved over the phone. If not, you can select which course of action you wish to pursue based on the available services listed in this section.

## Returning Equipment For Repair



If a control (or any part of an electronic control) is to be returned to Woodward for repair, please contact Woodward in advance to obtain a Return Authorization Number. When shipping the unit(s), attach a tag with the following information:

- name and location where the control is installed;
- name and phone number of contact person;
- complete Woodward part numbers (P/N) and serial number (S/N);
- description of the problem;
- instructions describing the desired type of repair.



### CAUTION

To prevent damage to electronic components caused by improper handling, read and observe the precautions in Woodward manual 82715, *Guide for Handling and Protection of Electronic Controls, Printed Circuit Boards, and Modules*.

## Packing A Control

Use the following materials when returning a complete control:

- protective caps on any connectors;
- antistatic protective bags on all electronic modules;
- packing materials that will not damage the surface of the unit;
- at least 100 mm (4 inches) of tightly packed, industry-approved packing material;
- a packing carton with double walls;
- a strong tape around the outside of the carton for increased strength.

## Return Authorization Number RAN

When returning equipment to Woodward, please telephone and ask for the Customer Service Department in Stuttgart [+49 (0) 711 789 54-0]. They will help expedite the processing of your order through our distributors or local service facility. To expedite the repair process, contact Woodward in advance to obtain a Return Authorization Number, and arrange for issue of a purchase order for the unit(s) to be repaired. No work can be started until a purchase order is received.



### NOTE

**We highly recommend that you make arrangement in advance for return shipments. Contact a Woodward customer service representative at +49 (0) 711 789 54-0 for instructions and for a Return Authorization Number.**

## Replacement Parts



When ordering replacement parts for controls, include the following information:

- the part numbers P/N (XXXX-XXX) that is on the enclosure nameplate;
- the unit serial number S/N, which is also on the nameplate.



# How To Contact Woodward



Please contact following address if you have questions or if you want to send a product for repair:

Woodward GmbH  
Handwerkstrasse 29  
70565 Stuttgart - Germany

Phone: +49 (0) 711 789 54-0 (8.00 - 16.30 German time)  
Fax: +49 (0) 711 789 54-100  
e-mail: stgt-info@woodward.com

For assistance outside Germany, call one of the following international Woodward facilities to obtain the address and phone number of the facility nearest your location where you will be able to get information and service.

Facility	Phone number
USA	+1 (970) 482 5811
India	+91 (129) 409 7100
Brazil	+55 (19) 3708 4800
Japan	+81 (476) 93 4661
The Netherlands	+31 (23) 566 1111

You can also contact the Woodward Customer Service Department or consult our worldwide directory on Woodward’s website (**www.woodward.com**) for the name of your nearest Woodward distributor or service facility. [For worldwide directory information, go to **www.woodward.com/ic/locations**.]

## Engineering Services



Woodward Industrial Controls Engineering Services offers the following after-sales support for Woodward products. For these services, you can contact us by telephone, by e-mail, or through the Woodward website.

- Technical support
- Product training
- Field service during commissioning

**Technical Support** is available through our many worldwide locations, through our authorized distributors, or through GE Global Controls Services, depending on the product. This service can assist you with technical questions or problem solving during normal business hours. Emergency assistance is also available during non-business hours by phoning our toll-free number and stating the urgency of your problem. For technical engineering support, please contact us via our toll-free or local phone numbers, e-mail us, or use our website and reference technical support.

**Product Training** is available on-site from several of our worldwide facilities, at your location, or from GE Global Controls Services, depending on the product. This training, conducted by experienced personnel, will assure that you will be able to maintain system reliability and availability. For information concerning training, please contact us via our toll-free or local phone numbers, e-mail us, or use our website and reference **customer training**.

**Field Service** engineering on-site support is available, depending on the product and location, from our facility in Colorado, or from one of many worldwide Woodward offices or authorized distributors. Field engineers are experienced on both Woodward products as well as on much of the non-Woodward equipment with which our products interface. For field service engineering assistance, please contact us via our toll-free or local phone numbers, e-mail us, or use our website and reference **field service**.

## Technical Assistance



If you need to telephone for technical assistance, you will need to provide the following information. Please write it down here before phoning:

### Contact

Your company \_\_\_\_\_

Your name \_\_\_\_\_

Phone number \_\_\_\_\_

Fax number \_\_\_\_\_

### Control (see name plate)

Unit no. and revision: P/N: \_\_\_\_\_ REV: \_\_\_\_\_

Unit type easYgen- \_\_\_\_\_

Serial number S/N \_\_\_\_\_

### Description of your problem

---

---

---

---

---

---

---

Please be sure you have a list of all parameters available. You can print this using ToolKit. Additionally you can save the complete set of parameters (standard values) and send them to our Service department via e-mail.

We appreciate your comments about the content of our publications.

Please send comments to: [stgt-documentation@woodward.com](mailto:stgt-documentation@woodward.com)

Please include the manual number from the front cover of this publication.



**Woodward GmbH**

Handwerkstrasse 29 - 70565 Stuttgart - Germany  
Phone +49 (0) 711 789 54-0 • Fax +49 (0) 711 789 54-100  
[stgt-info@woodward.com](mailto:stgt-info@woodward.com)

**Homepage**

<http://www.woodward.com/power>

Woodward has company-owned plants, subsidiaries, and branches, as well as authorized distributors and other authorized service and sales facilities throughout the world.

Complete address/phone/fax/e-mail information  
for all locations is available on our website ([www.woodward.com](http://www.woodward.com)).

2009/10/Stuttgart