



easYgen-3000 Series Genset Control



Operation

Software Version: 1.15xx

Part Numbers: 8440-1922 / 8440-1923 / 8440-1924 / 8440-1925

8440-1930 / 8440-1931 / 8440-1932 / 8440-1933



Manual 37470A

**WARNING**

Read this entire manual and all other publications pertaining to the work to be performed before installing, operating, or servicing this equipment. Practice all plant and safety instructions and precautions. Failure to follow instructions can cause personal injury and/or property damage.

The engine, turbine, or other type of prime mover should be equipped with an overspeed (overtemperature, or overpressure, where applicable) shutdown device(s), that operates totally independently of the prime mover control device(s) to protect against runaway or damage to the engine, turbine, or other type of prime mover with possible personal injury or loss of life should the mechanical-hydraulic governor(s) or electric control(s), the actuator(s), fuel control(s), the driving mechanism(s), the linkage(s), or the controlled device(s) fail.

Any unauthorized modifications to or use of this equipment outside its specified mechanical, electrical, or other operating limits may cause personal injury and/or property damage, including damage to the equipment. Any such unauthorized modifications: (i) constitute "misuse" and/or "negligence" within the meaning of the product warranty thereby excluding warranty coverage for any resulting damage, and (ii) invalidate product certifications or listings.

**CAUTION**

To prevent damage to a control system that uses an alternator or battery-charging device, make sure the charging device is turned off before disconnecting the battery from the system.

Electronic controls contain static-sensitive parts. Observe the following precautions to prevent damage to these parts.

- Discharge body static before handling the control (with power to the control turned off, contact a grounded surface and maintain contact while handling the control).
- Avoid all plastic, vinyl, and Styrofoam (except antistatic versions) around printed circuit boards.
- Do not touch the components or conductors on a printed circuit board with your hands or with conductive devices.

**OUT-OF-DATE PUBLICATION**

This publication may have been revised or updated since this copy was produced. To verify that you have the latest revision, be sure to check the Woodward website:

<http://www.woodward.com/pubs/current.pdf>

The revision level is shown at the bottom of the front cover after the publication number. The latest version of most publications is available at:

<http://www.woodward.com/publications>

If your publication is not there, please contact your customer service representative to get the latest copy.

Important definitions**WARNING**

Indicates a potentially hazardous situation that, if not avoided, could result in death or serious injury.

**CAUTION**

Indicates a potentially hazardous situation that, if not avoided, could result in damage to equipment.

**NOTE**

Provides other helpful information that does not fall under the warning or caution categories.

Woodward reserves the right to update any portion of this publication at any time. Information provided by Woodward is believed to be correct and reliable. However, Woodward assumes no responsibility unless otherwise expressly undertaken.

© Woodward
All Rights Reserved.

Revision History

Rev.	Date	Editor	Changes
NEW	10-05-05	TE	Release based on 37416B + update to reflect the new functionality
A	12-01-10	TE	Minor changes

Content

CHAPTER 1. GENERAL INFORMATION	5
Document Overview	5
Short Description	6
CHAPTER 2. EASYGEN-3200 NAVIGATION / OPERATION	7
Navigation	8
Operation	29
Display	31
Mode	32
Operation	33
LogicsManager	34
CHAPTER 3. EASYGEN-3100 LEDs	36
CHAPTER 4. FUNCTIONAL DESCRIPTION	37
Overview	37
Application Modes	38
Application Mode {0} – Start/Stop	38
Application Mode {1o} – Open GCB	38
Application Mode {1oc} – Open/Close GCB	38
Application Mode {2oc} – Open/Close GCB/MCB	38
Operating Modes	39
Operating Mode STOP	39
Operating Mode MANUAL	40
Operating Mode AUTOMATIC	41
CHAPTER 5. EASYGEN-3200 CONFIGURATION	43
Structure of the Parameters	43
Parameters	46
Language	46
Real-Time Clock - Time	46
Real-Time Clock - Date	47
Display Contrast	47
Password	48
Deactivate Horn	48
Factory (Default) Values	48
APPENDIX A. DISPLAY MESSAGES	49
Status Messages	49
Alarm Messages	52
APPENDIX B. RESTORING A LANGUAGE SETTING	59

Figures And Tables



Figures

Figure 2-1: Front panel and display	7
Figure 2-2: Screen - Level overview	29
Figure 3-1: Position of the LEDs	36
Figure 5-1: Configuration screens (overview)	43
Figure 5-2: Front panel and display	59

Tables

Table 1-1: Manual - Overview	5
Table 2-1: Display - Measuring values	31
Table 4-1: Functional description - Overview	37
Table 4-2: Functional description - AMF conditions	41
Table 5-1: Message IDs for analog inputs	58
Table 5-2: Message IDs for external analog inputs	58
Table 5-3: Message IDs for discrete inputs	58
Table 5-4: Message IDs for external discrete inputs	58
Table 5-5: Message IDs for flexible limits	58

Chapter 1.

General Information

Document Overview

Type	English	German
easYgen-3000 Series		
easYgen-3000 Series - Installation	37468	DE37468
easYgen-3000 Series - Configuration	37469	DE37469
easYgen-3000 Series - Operation this manual ⇒	37470	DE37470
easYgen-3000 Series - Application	37471	-
easYgen-3000 Series - Interfaces	37472	-
easYgen-3000 Series - Parameter List	37473	DE37473
easYgen-3200 - Brief Operation Information	37399	GR37399
easYgen-3100 - Brief Operation Information	37474	-
RP-3000 Remote Panel	37413	-

Table 1-1: Manual - Overview

Intended Use The unit must only be operated as described in this manual. The prerequisite for a proper and safe operation of the product is correct transportation, storage, and installation as well as careful operation and maintenance.

What are the differences between the easYgen-3000 Series Package P1 & Package P2?

easYgen-3000 Series	Package P1	Package P2
Freely configurable PID controllers	-	3
External discrete inputs / outputs via CANopen (maximum)	16 / 16	32 / 32
External analog inputs / outputs via CANopen (maximum)	-	16 / 4



NOTE

This manual has been developed for a unit equipped with all available options. Inputs/outputs, functions, configuration screens, and other details described which do not exist on your unit may be ignored.

The present manual has been prepared to enable the installation and commissioning of the unit. Because of the large variety of parameter settings, it is not possible to cover every combination. The manual is therefore only a guide. In case of incorrect entries or a total loss of functions, the default settings may be taken from the list of parameters in the configuration manual 37469 or from ToolKit and the respective *.SID file.

Short Description



The easYgen-3000 Series generator set controllers provide the following functions:

- Genset control
- Engine, mains and generator protection
- Engine data measurement -
 - oil pressure and temperature, coolant temperature, battery voltage, speed, service hours, etc.
- Generator and mains data measurement -
 - voltage, current, power, kvar, kW, kWh, etc.
- Load/var sharing for up to 32 participants
- Load-dependent start/stop
- Automatic, Manual, and Stop operating modes
- Application modes -
 - no CB operation
 - open GCB
 - open/close GCB
 - open/close GCB/MCB
- *LogicsManager* for processing measured values, discrete inputs, and internal states
- Engine starter sequencing
- Alarm display with circuit breaker trip and engine shutdown
- AMF (automatic mains failure) standby genset control, with automatic engine start on a mains failure detection and open transition breaker control
- Critical mode operation
- Synchronizing (phase matching and slip frequency) and mains parallel operation
- External frequency, voltage, power, and power factor set point control via analog input or interface
- FIFO event history with 300 entries
- Multilingual user interface (English, German, French, Spanish, Italian, Portuguese, Turkish, Russian, Chinese, Japanese)
- ECU data visualization via J1939
- CAN bus communication to engine controllers, plant management systems, expansion boards, and ToolKit configuration and visualization software
- RS-485 Modbus communication with plant management systems
- RS-232 Modbus communication with plant management systems and ToolKit configuration and visualization software

Type designation is as follows:

easYgen	-xxxx-	5
CTs, current transformers, secondary		
[1] = ../1 A		
[5] = ../5 A		
Model		
[-3100] = Model '3100' for switch cabinet back mounting		
[-3200] = Model '3200' for front-panel flush-mounting		
Type		

Examples:

EASYGEN-3200-5 (easYgen-3200, 100 & 400 Vac inputs, ../5 A measuring inputs, front panel flush-mounting)

EASYGEN-3100-1 (easYgen-3100, 100 & 400 Vac inputs, ../1 A measuring inputs, cabinet back mounting)

Chapter 2.

easYgen-3200 Navigation / Operation

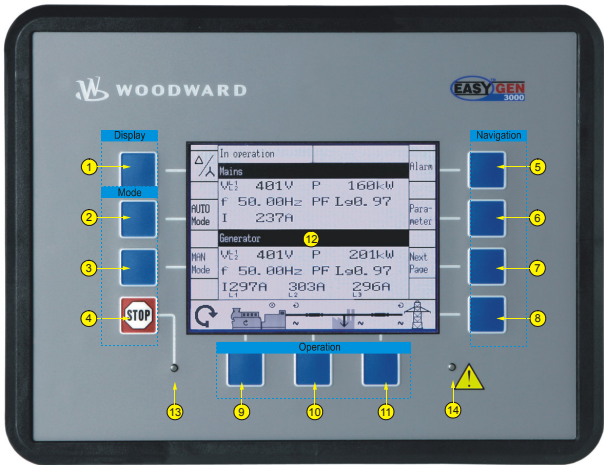


Figure 2-1: Front panel and display

Figure 2-1 illustrates the front panel/display of the easYgen-3200 with push buttons, LEDs and Liquid Crystal display (LC display). A short description of the front panel is given below.

**NOTE**



This push button is always active and will stop the engine when pressed, except the operating modes are selected externally. In this case, the AUTO and MAN Mode push buttons are also disabled.

Fct.-block

Function blocks

Buttons that have the same function within one screen are grouped into function blocks. The function blocks are defined as:

- Display**..... Change the method of voltage and power calculations displayed (page 29).
- Mode**..... Change the mode of operation (page 32).
- Operation**.... Used to perform manual operation of the genset and the breakers (page 33).
- Navigation**... Navigation between system and configuration screens, and alarm list (page 33).

- 1 2 3 5
- 6 7 8 9
- 10 11

Push buttons

The push buttons on the front panel are assigned to softkeys on the display. Each softkey is assigned to a function depending on the mode of operation.

12

Liquid Crystal Display (LC display)

The display contains softkey characters, measuring values, modes of operation, and alarms. The functionality of the display screens as well as the description of the functions is detailed in the "Navigation" section (page 8).

13 14

LED

The left LED 13 indicates that the unit is in STOP mode. The right LED 14 indicates that alarm messages are active / present in the control unit.

Navigation




Individual display screens are listed in the following text. All softkeys, which are available in the individual screens are described with their function.

Screen "Operating values - overview" / "Starting screen"

[all application modes]


STOP operating mode:

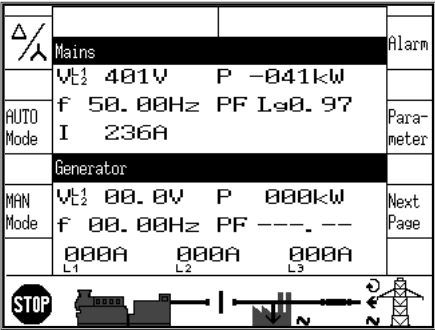

This screen appears upon startup of the unit.


- Toggle between delta/wye voltage display. The index of the "V" symbol indicates whether delta or wye voltage is displayed and which phases are displayed.
- Change into AUTOMATIC operating mode.
- Change into MANUAL operating mode.
- Change into STOP operating mode.

AUTOMATIC operating mode:

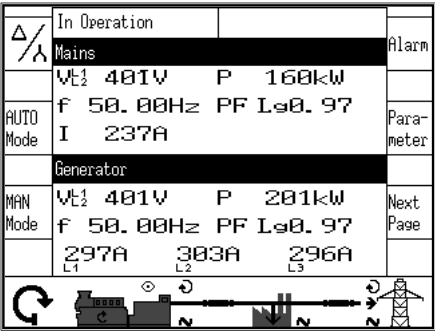

- Display the alarm list (unacknowledged alarms).
- Display the configuration menu screen.
- Display the indication menu screen.
- This softkey is only displayed in front of the mains symbol if the Alarm LED is flashing (An alarm is present, which has not yet been acknowledged as 'Seen'). This softkey resets the horn and acknowledges the alarm as 'Seen'.

MANUAL operating mode:

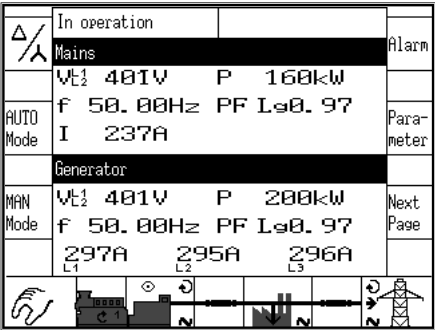

- Operating mode MANUAL: start/stop engine.
- Operating mode MANUAL: open GCB/MCB.
- Operating mode MANUAL: close GCB/MCB.



NOTE


If the mains data display is disabled (refer to Configuration Manual 37469), above screens will only show generator data with bigger digits.


Screen "Alarm list"


[all application modes]


Alarm list		System Overview					
		A!	B!	C!	D	E!	F!
Release MCB	07-Jun-05 08:20:15.13	ⓘ					
Mains undervoltage 1	07-Jun-05 07:22:06.53	ⓘ					
Mains underfreq. 1	07-Jun-05 07:22:06.53	ⓘ					
Mains undervoltage 2	07-Jun-05 07:22:05.09	ⓘ					
Mains underfreq. 2	07-Jun-05 07:22:05.09	ⓘ					
STOP		✓					

This screen appears after pressing the "Alarm" softkey in the starting screen. All alarm messages, which have not been acknowledged and cleared, are displayed. Each alarm is displayed with the alarm message and the date and time of the alarm occurred in the format yy-mon-dd hh:mm:ss.ss. Please note, that self-acknowledging alarm messages get a new timestamp when initializing the unit (switching on). The ⓘ symbol indicates that this alarm condition is still present. A maximum of 16 alarm messages can be displayed. If 16 alarm messages are already displayed and further alarm messages occur, these will not be displayed before displayed alarm messages are acknowledged and thus deleted from the list. The "!" following the letter symbols A through E indicate whether an alarm class is present A! or not D.

 Return to the starting screen.

 Scroll up to next alarm message.

 Scroll down to next alarm message.


 The selected alarm message (displayed inverted) will be acknowledged. This is only possible, if the alarm condition is no longer present. If the Alarm LED is still flashing (an alarm is present, which has not yet been acknowledged as 'Seen'), this softkey resets the horn and acknowledges the alarm as 'Seen'.

Screen "Next Page"

[all application modes]

Setpoints		System Overview	
			⬆
Synchroscope		Counters and service	
Sequencing		Measured values	
STOP	Next Page	Diagnostic	

This screen appears after pressing the "Next Page" softkey.

 Return to the starting screen.

- Setpoints**
Display the setpoints screen.
- Synchroscope**
Display the synchroscope screen.
- Sequencing**
Display the sequencing screen.
- Counters and service**
Display the counters and service screen.
- Measured values**
Display the measured values screen.
- Diagnostic**
Display the diagnostic screen.

Screen "Setpoints"

[all application modes]

MANUAL operating mode:

AUTO Mode	In operation		
	Setpoint:	Actual value:	↑
	P 00098.6kW	Ⓜ 099kW	
	Constant	Ⓜ 099kW	
+	PF 1.00	1.00	↑
	V 000400V	399V	
-	f 50.00Hz	49.99Hz	↓

AUTOMATIC operating mode:

MAN Mode	In operation		
	Setpoint:	Actual value:	↑
	P 00100.0kW	Ⓜ 098kW	
	Constant	Ⓜ 098kW	
	05.04 Internal pwr. setp.1		
+	PF 1.00	1.00	↑
	05.10 Internal PF setp.1		
	V 000400V	398V	
	05.07 Internal volt. setp.1		
-	f 50.00Hz	50.00Hz	↓
	05.01 Internal freq. setp.1		

This screen appears after pressing the "Setpoints" softkey in the "Next page" screen. The set point is displayed on the left and the actual value is displayed on the right half of the screen. The symbol Ⓜ indicates the mains power and Ⓜ indicates the generator power. The figures 1 or 2 indicate whether set point 1 or set point 2 is used in AUTOMATIC operation. The source, which is used for set point 1 or set point 2, is displayed with the respective *LogicsManager* function number.

The set points may only be adjusted if the respective controller is enabled. Frequency and voltage may be adjusted within the configured operating limits. Active power may be adjusted between 0 and the configured load control setpoint maximum. The power factor may be adjusted between 0.71 leading and 0.71 lagging.



Return to "Next page" screen.



Change into AUTOMATIC operating mode.



Change into MANUAL operating mode.



Scroll up one set point.



Scroll down one set point.



Raise the selected set point.



Lower the selected set point.

P Real power

Constant = fixed generator load control

Import = fixed import power control

Export = fixed export power control


PF Power factor

V Voltage

f Frequency

Screen "Synchroscope"

[all application modes]

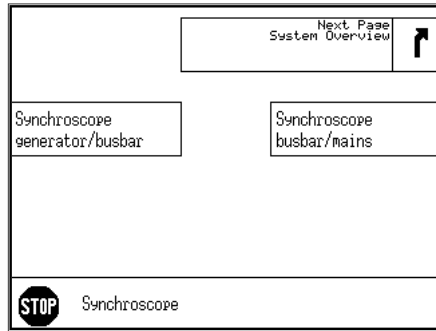

This screen appears after pressing the "Synchroscope" softkey in the "Next page" screen.



Return to "Next page" screen.

Synchroscope generator/busbar


Display the generator / busbar synchroscope screen.

Synchroscope busbar/mains

Display the busbar / mains synchroscope screen.

Screen "Synchroscope generator / busbar"

[all application modes]

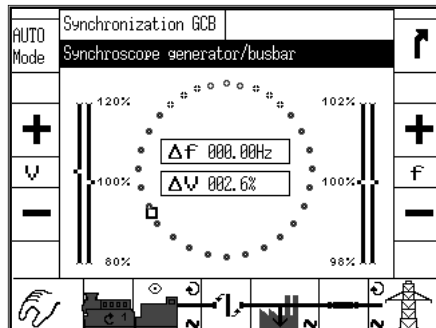

This screen appears after pressing the "Synchroscope Gen. / Busbar" softkey in the "Synchroscope" screen. The square symbol \blacksquare indicates the actual phase angle between busbar and generator. The 12 o'clock position on the top means 0° and the 6 o'clock position on the bottom means 180° . The frequency and voltage differences are indicated in the center of the circle.



Return to "Synchroscope" screen.



Change into AUTOMATIC operating mode.



Change into MANUAL operating mode.



Change into STOP operating mode.



Operating mode MANUAL: Raise voltage/frequency.



Operating mode MANUAL: Lower voltage/frequency.



Operating mode MANUAL: start/stop engine.




Operating mode MANUAL: open GCB/MCB.




Operating mode MANUAL: close GCB/MCB.

Display detail:

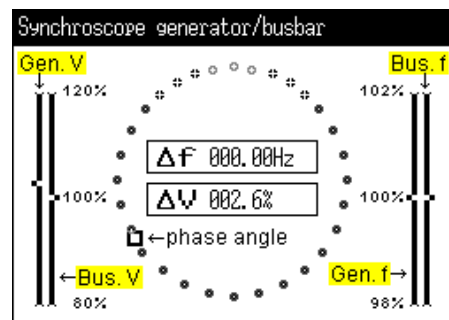


Screen "Synchroscope busbar / mains"

[all application modes]

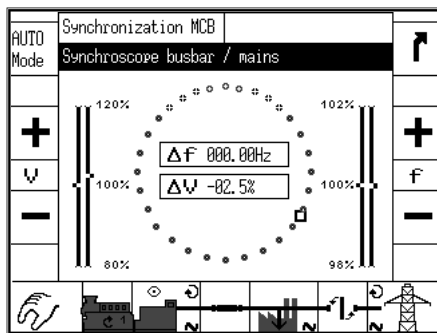

Display detail:

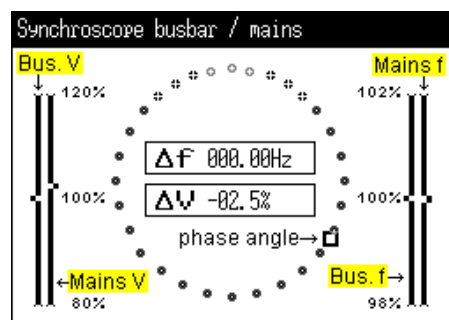

This screen appears after pressing the "Synchroscope Busbar / Mains" softkey in the "Synchroscope" screen. The square symbol \square indicates the actual phase angle between busbar and mains. The 12 o'clock position on the top means 0° and the 6 o'clock position on the bottom means 180° . The frequency and voltage differences are indicated in the center of the circle.



Return to "Synchroscope" screen.



Change into AUTOMATIC operating mode.



Change into MANUAL operating mode.



Change into STOP operating mode.



Operating mode MANUAL: Raise voltage/frequency.



Operating mode MANUAL: Lower voltage/frequency.



Operating mode MANUAL: start/stop engine.




Operating mode MANUAL: open GCB/MCB.








Operating mode MANUAL: close GCB/MCB.

Screen "Sequencing"

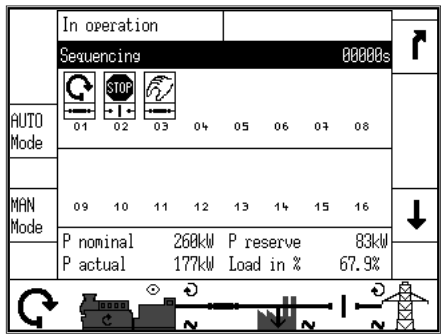[all application modes]



This screen appears after pressing the "Sequencing" softkey in the "Next page" screen. The sequencing screen shows all gensets participating in load sharing. The operation mode of each genset as well as the state of its GCB is shown on this screen. The symbol  above the generator number indicates AUTOMATIC operating mode,  indicates MANUAL, and  indicates STOP. The field below shows whether the respective GCB is closed () or open () . The bottom field displays the actual load sharing values. If this device is not participating in load sharing, "LD start stop Off" is displayed here.



Return to "Next page" screen.



Scroll down to genset 17 through 32 display.



Scroll up to genset 1 through 16 display.



Change into AUTOMATIC operating mode.



Change into MANUAL operating mode.



Change into STOP operating mode.

Screen "Counters and service"

[all application modes]

	In operation		
	Counters and service		↗
	Hours of operation	182.92h	
AUTO Mode	Number of starts	496	
	Hours until maintenance	198h	
MAN Mode	Days until maintenance	338d	↘

	In operation		
	Counters and service		↗
	Gen. pos. act. energy	684.25MWh	
AUTO Mode	Gen. pos. react. energy	3.39Mvarh	↗
	Gen. neg. react. energy	43.74Mvarh	
MAN Mode			

This screen appears after pressing the "Counters and service" softkey in the "Next page" screen.



Return to "Next page" screen.



Scroll down to the energy counter display screen.



Scroll up to the operating hours counter display screen.



Change into AUTOMATIC operating mode.



Change into MANUAL operating mode.



Change into STOP operating mode.



Operating mode MANUAL: start/stop engine.



Operating mode MANUAL: open GCB/MCB.



Operating mode MANUAL: close GCB/MCB.

Hours of operation 0.00h - Operating hours counter

0.00h = Total operating hours (hours in operation, the decimals are hundredths of an hour)

Number of starts 00 - Start counter

00 = Total number of starts

Hours until maintenance 000h - Maintenance counter

000h = Hours until next maintenance

Days until maintenance 000h - Maintenance counter

000h = Days until next maintenance

Gen. positive active energy 0.00 MWh - Generator positive active energy

0.00MWh = Total generator positive active energy

Gen. positive reactive energy 0.00 Mvarh - Generator positive reactive energy

0.00Mvarh = Total generator positive reactive energy

Gen. negative reactive energy 0.00 Mvarh - Generator negative reactive energy

0.00Mvarh = Total generator negative reactive energy

**NOTE**

Further information about resetting or setting the counters may be found in the Configuration Manual 37469.

Screen "Measured values"

[all application modes]

Engine (J1939)	Next Page System Overview	↗
Analog inputs/outputs	Generator	
Discrete inputs/outputs	Busbar/System	
STOP Measured values	Mains	

This screen appears after pressing the "Measured values" softkey in the "Next page" screen.



Return to the "Next page" screen.

Engine (J1939)

Display the Engine (J1939) interface screen.

Analog inputs/outputs

Display the analog inputs and outputs indication screen.

Discrete inputs/outputs

Display the discrete inputs and outputs indication screen.

Generator

Display the generator indication screen.

Busbar

Display the busbar indication screen.

Mains

Display the mains indication screen.

Screen "Engine (J1939)"

[all application modes]

J1939 Special	Measured values Next Page System Overview	↗
J1939 Analog values 1	J1939 Analog values 3	
J1939 Analog values 2	J1939 Analog values 4	
STOP Engine (J1939)	J1939 Status	

This screen appears after pressing the "Engine (J1939)" softkey in the "Measured values" screen.



Return to "Measured values" screen.

J1939 Special

Display the J1939 Special interface screen.

J1939 Analog values 1

Display the J1939 Analog values 1 screen.

Displayed SPN Values: 190, 100, 110, 247, 183, 92, 98, 111, 102, 108, 105, 172, 173, 174, 175, 91, 513

J1939 Analog values 2

Display the J1939 Analog values 2 screen.

Displayed SPN Values: 52, 94, 95, 101, 106, 107, 109, 127, 157, 171, 176, 177, 441, 442, 513, 1122, 1123, 1124-1126, 1131-1133, 1134, 1135, 1136

J1939 Analog values 3

Display the J1939 Analog values 3 screen.

Displayed SPN Values: 1137-1156, 1157-1167

J1939 Analog values 4

Display the J1939 Analog values 4 screen.


Displayed SPN Values: 1172-1175, 1176, 1177, 1178, 1179, 1180, 1181, 1182, 1183, 1184, 1185, 1186, 1187, 1203, 1208, 1212, 1382, 1800, 1801, 1802, 1803, 2433, 2434

J1939 Status

Display the J1939 Status interface screen.

Screen "J1939 Special"

[all application modes]

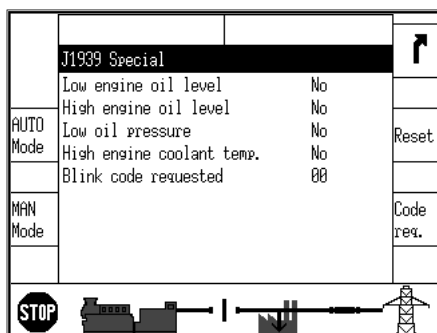

This screen appears after pressing the "J1939 Special" softkey in the "Engine (J1939)" screen. The status of the J1939 Scania S6 error messages is displayed here if the unit is configured accordingly.



Return to "Engine (J1939)" screen.



Reset the blink code. To do this, disable the ignition (terminal U15), press this softkey, and enable the ignition again within 2 seconds. *¹




Request a blink code for one error message from the ECU. Repeated pressing of this softkey displays all stored error messages. *¹

*¹ (only visible if parameter ID 15127 is configured to "ON")

Screen "J1939 Status"

[all application modes]

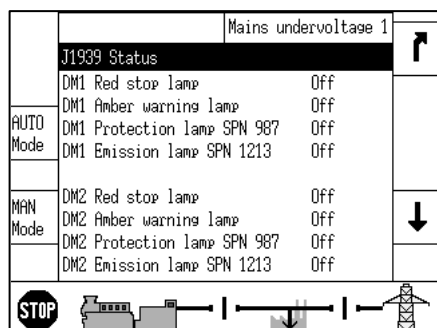


This screen appears after pressing the "J1939 Status" softkey in the "Engine (J1939)" screen. The status of the J1939 interface is displayed here.



Return to "Engine (J1939)" screen.



Scroll down to the "J1939 Act. Diag. Trouble codes" screen.

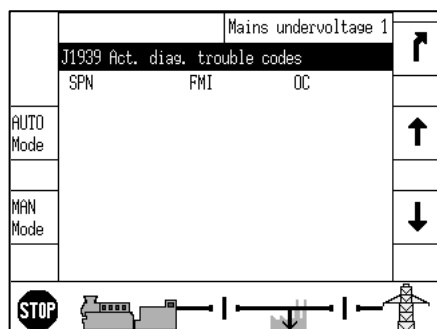

The active J1939 diagnosis trouble codes are displayed here.

SPN = Suspect Parameter Number

FMI = Failure Mode Indicator


OC = Occurrence Count



Scroll up to the "J1939 Status" screen.



Scroll down to the "J1939 Prev. Diag. Trouble codes" screen.

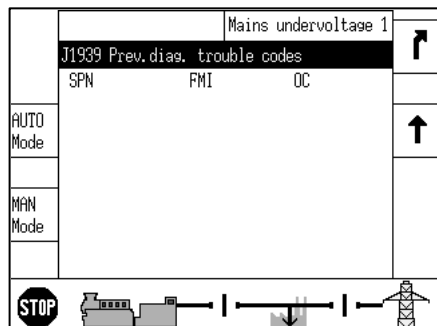

The previously active J1939 diagnosis trouble codes are displayed here.

SPN = Suspect Parameter Number

FMI = Failure Mode Indicator

OC = Occurrence Count




Scroll up to the "J1939 Act. Diag. Trouble codes" screen

Screen "Analog inputs/outputs"

[all application modes]

"Analog inputs" screen:

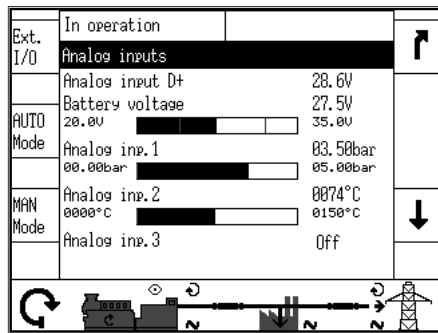

These screens appear after pressing the "Analog inputs/outputs" softkey in the "Measured values" screen. The analog inputs and outputs are displayed. The analog outputs are displayed as a percentage of the selected hardware range, i.e. 50 % of a 0 to 20 mA output refer to 10 mA.



Return to "Measured Values" screen.




Scroll up display screen.



Scroll down display screen.

"Analog outputs" screen:

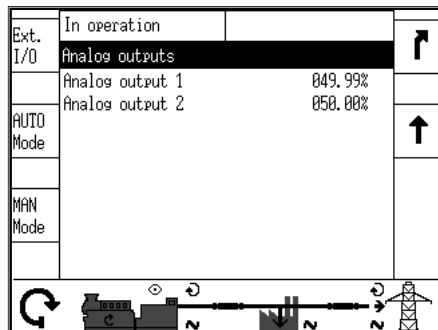

Change to the external analog IO screens.



Change to the internal analog IO screens.



Change into AUTOMATIC operating mode.




Change into MANUAL operating mode.



Change into STOP operating mode.

"External analog inputs" screen:

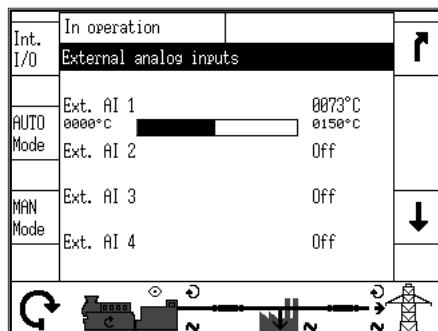

Operating mode MANUAL: start/stop engine.




Operating mode MANUAL: open GCB/MCB.




Operating mode MANUAL: close GCB/MCB.

" External analog outputs" screen:

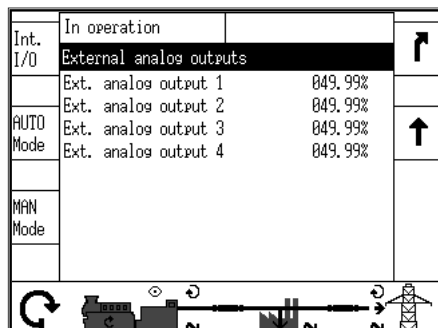

Screen "Discrete inputs/outputs"

[all application modes]

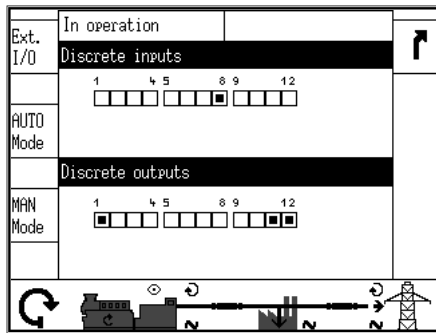

This screen appears after pressing the "Discrete inputs/outputs" softkey in the "Measured values" screen. Discrete input and discrete output status are displayed.



Return to "Measured Values" screen.



Change display screen to external discrete IOs.



Change display screen to internal discrete IOs.



Change into AUTOMATIC operating mode.



Change into MANUAL operating mode.



Change into STOP operating mode.



Operating mode MANUAL: start/stop engine.



Operating mode MANUAL: open GCB/MCB.



Operating mode MANUAL: close GCB/MCB.

- ☐ ☒ Status display of the discrete inputs and discrete outputs.
 (Note: The configured logic for the discrete input "N.O./N.C." will determine how the easYgen reacts to the state ☒ of the discrete input. If the respective DI is configured to N.O., the unit reacts on the energized state (☒); if it is configured to N.C., it reacts on the de-energized state ☐.)
- Discrete input: ☒ energized
☐ de-energized
- Discrete output: ☒ relay activated
☐ relay de-activated

Screen "Generator"

[all application modes]

	In operation		
	Generator		↑
	Gen. aver. ph-ph volt	400V	
	Gen. aver. ph-n volt	231V	
AUTO	Gen. current average	120A	
Mode	Gen. frequency	50.00Hz	
	Gen. total power	002kW	
MAN	Gen. total react. pwr	-06.1kvar	
Mode	Gen. total appar. pwr	82.1kVA	
	Gen. power factor	Ld0.99	↓

	In operation		
	Generator		↑
	V E ₁ 402V E ₂ 402V E ₃ 403V		
	V N ₁ 233V N ₂ 231V N ₃ 233V		
AUTO	I L ₁ 299A L ₂ 299A L ₃ 298A		↑
Mode	I Max 302A Max 300A Max 299A		
	Calc. ground current	00.0A	
MAN	P ₁ 068kW 2 067kW 3 067kW		
Mode	Q ₁ 15.6kvar 2 16.1kvar 3 16.9kvar		
	S ₁ 070kVA 2 069kVA 3 069kVA		
	PF ₁ Ld0.97 2 Ld0.97 3 Ld0.96		

This screen appears after pressing the "Generator" softkey in the "Measured values" screen. All measured generator values are displayed in this screen.



Return to "Measured values" screen.



Scroll down display screen to additional generator values.



Scroll up display screen to main generator values.



Reset the maximum value display.



Change into AUTOMATIC operating mode.



Change into MANUAL operating mode.



Change into STOP operating mode.



Operating mode MANUAL: start/stop engine.



Operating mode MANUAL: open GCB/MCB.



Operating mode MANUAL: close GCB/MCB.

V Voltage

I Current

P Real power

Q Reactive power

S Apparent power


PF Power factor

**NOTE**








Which values are shown in the display and whether they are correct depends on the measurement type.

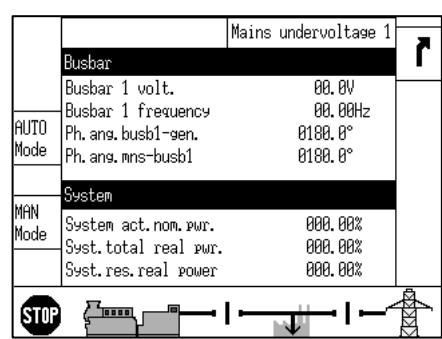Screen "Busbar/System"

[all application modes]



This screen appears after pressing the "Busbar/System" softkey in the "Measured values" screen. All measured busbar values are displayed in this screen.

-  Return to "Measured values" screen.
-  Change into AUTOMATIC operating mode.
-  Change into MANUAL operating mode.
-  Change into STOP operating mode.
-  Operating mode MANUAL: start/stop engine.
-  Operating mode MANUAL: open GCB/MCB.
-  Operating mode MANUAL: close GCB/MCB.

Screen "Mains"

[all application modes]

	Mains		↑
	Mns aver. ph-ph volt	402V	
	Mns aver. ph-n volt.	232V	
AUTO Mode	Average mains curr.	236A	
	Mains frequency	50.00Hz	
	Mains total power	161kW	
MAN Mode	Mains tot. react. pwr	33.5kvar	
	Mains tot. appar. pwr	164kVA	
	Mains power factor	198.97	↓

	Mains		↑
	V L1 402V	L2 401V	L3 403V
	V N1 233V	N2 231V	N3 233V
AUTO Mode	I L1 237A		
	I L1 Max 239A		↑
MAN Mode	P 099kW		
	Q 00.1kvar		
	S 099kVA		
	PF 1.00		

This screen appears after pressing the "Mains" softkey in the "Measured values" screen. All measured generator values are displayed in this screen.



Return to "Measured values" screen.



Scroll down display screen to additional mains values.



Scroll up display screen to main mains values.



Reset the maximum value display.



Change into AUTOMATIC operating mode.



Change into MANUAL operating mode.



Change into STOP operating mode.



Operating mode MANUAL: start/stop engine.



Operating mode MANUAL: open GCB/MCB.



Operating mode MANUAL: close GCB/MCB.

V Voltage

I Current

P Real power

Q Reactive power

S Apparent power


PF Power factor

**NOTE**


Which values are shown in the display and whether they are correct depends on the measurement type.

Screen "Diagnostic"

[all application modes]

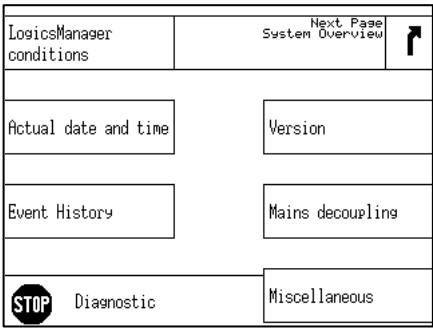


This screen appears after pressing the "Diagnostic" softkey in the "Next page" screen.

 Return to the "Next page" screen.

- LogicsManager conditions**
Display the LogicsManager conditions screen.
- Actual date and time**
Display the actual date and time screen.
- Event History**
Display the event history screen.
- Version**
Display the version screen.
- Mains decoupling**
Display the mains decoupling screen.
- Miscellaneous**
Display the miscellaneous screen.

Screen "LogicsManager conditions"

[all application modes]

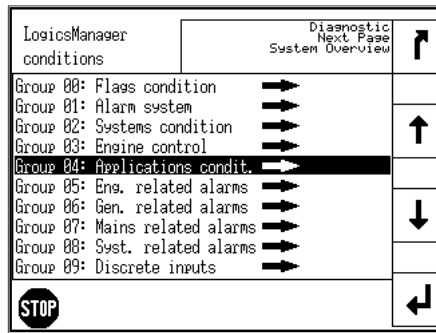

This screen appears after pressing the "LogicsManager conditions" softkey in the "Diagnostic" screen. You are able to display the conditions of all *LogicsManager* command variables, which are located in their respective groups.



Return to "Diagnostic" screen.



Scroll up one group / command variable.



Scroll down one group / command variable.



Select the highlighted command variable group and display the state of the command variables in this group.




Status display of the command variables:

☒ The command variables is TRUE


☐ The command variables is FALSE

Command variables of group 4 (ex.):

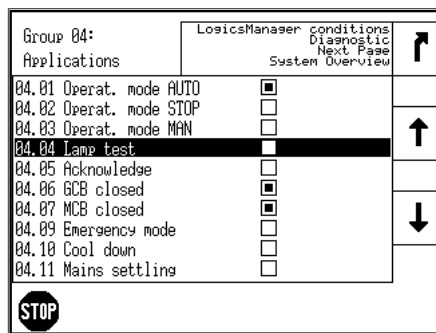

Screen "Actual date and time"

[all application modes]

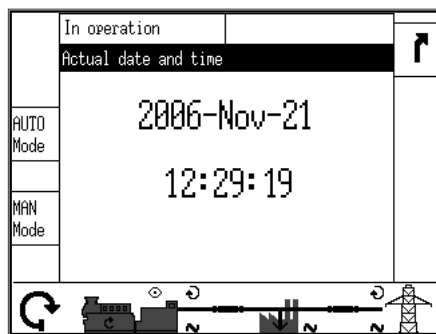

This screen appears after pressing the "Actual date and time" softkey in the "Diagnostic" screen. This screen displays the actual date and time.



Return to "Diagnostic" screen.



Change into AUTOMATIC operating mode.



Change into MANUAL operating mode.



Change into STOP operating mode.



Operating mode MANUAL: start/stop engine.



Operating mode MANUAL: open GCB/MCB.



Operating mode MANUAL: close GCB/MCB.

xxxx-yy-zz - Date

xxxx = Year

yy = Month

zz = Day

xx:yy:zz - Time

xx = Hour

yy = Minute

zz = Second

Screen "Event History"

[all application modes]

Event History

Next Page
System Overview

Mains undervoltage 1	06-Nov-06 16:04:35.53	+
Mains underfreq. 1	06-Nov-06 16:04:35.53	+
Mains undervoltage 2	06-Nov-06 16:04:34.65	+
Mains underfreq. 2	06-Nov-06 16:04:34.65	+
GCB fail to open	06-Nov-06 16:04:34.05	+
Mains decoupling	06-Nov-06 16:04:34.05	+
Emergency Stop	06-Nov-06 16:04:34.05	+
Bat. overvoltage 1	06-Nov-06 16:04:34.04	-
MCB close	06-Nov-06 16:04:34.04	+
GCB close	06-Nov-06 16:04:34.04	+

STOP

Return to "Diagnostic" screen.

Scroll up one event.

Scroll down one event.

The selected (highlighted) entry may be deleted with this softkey if the password for code level CL2 or higher is entered.

This screen appears after pressing the "Event History" softkey in the "Diagnostic" screen. A date/time stamp is added to each entry. Additional characters (+ and -) indicate the state of the event. The "+" character indicates an condition that is still active. If the condition is no longer present anymore, it will be displayed again, but with a "-" indication.

Screen "Version"

[all application modes]

In operation

Version

S/N: 66600021

Rev.: Version

Boot: 1 5418-2675 NEW 1.0006

2 5418-2675 NEW 1.0006

Prog: 1 5418-2753 NEW 1.1004

2 5418-2752 NEW 1.1004

GAP 5418-2752 NEW

AUTO Mode

MAN Mode

STOP

Operating mode MANUAL: start/stop engine.


Operating mode MANUAL: open GCB/MCB.

Operating mode MANUAL: close GCB/MCB.


This screen appears after pressing the "Version" softkey in the "Diagnostic" screen. This screen displays the serial number of the unit and the firm- and software P/N, version, and revision.


Screen "Mains decoupling"


[all application modes]

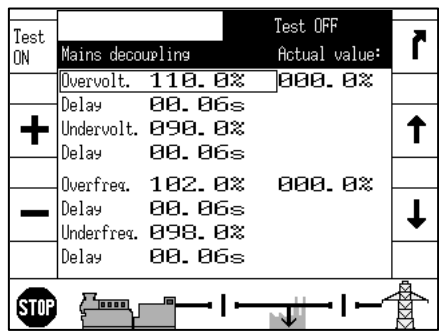



This screen appears after pressing the "Mains decoupling" softkey in the "Diagnostic" screen. The "Test"-Button starts a test mode which allows a comfortable mains decoupling configuration.


 Return to "Diagnostic" screen.


 Scroll up the selection.

 Scroll down the selection.

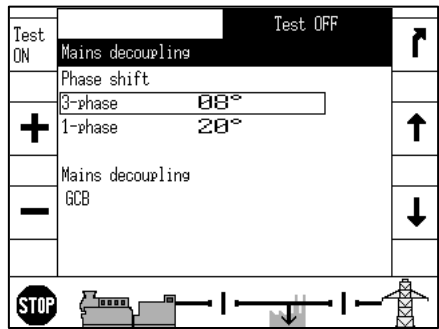


 Switch the mains decoupling "Test" ON or OFF.

 Raise the selected value.


 Lower the selected value.


Screen "Miscellaneous"


[all application modes]

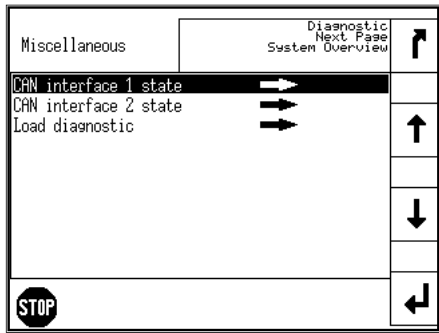


This screen appears after pressing the "Miscellaneous" softkey in the "Diagnostic" screen.

 Return to "Diagnostic" screen.

 Scroll up the selection.


 Scroll down the selection.

 Open the selected option.


Screen "CAN interface 1/2 state"

[all application modes]

CAN interface 1 state:

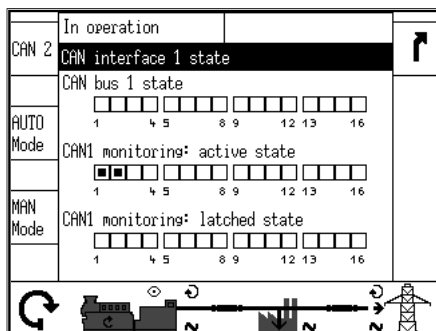

CAN interface 2 state:

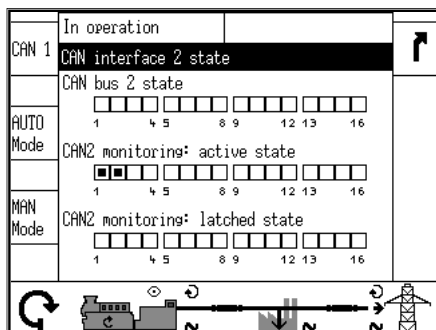

This screen appears after selecting "CAN interface 1/2 state" in the "Miscellaneous" screen.



Return to "Miscellaneous" screen.



Change to "CAN interface 1 state" screen.



Change to "CAN interface 2 state" screen.



Change into AUTOMATIC operating mode.



Change into MANUAL operating mode.



Change into STOP operating mode.



Status display of the respective bits:

- ☒ The respective bit is enabled
- ☐ The respective bit is disabled

Can bus 1 state:

- Bit 1 a TPDO has incorrect mapping parameters
- Bit 2 an RPDO has incorrect mapping parameters
- Bit 3 a TPDO has more than 8 bytes
- Bit 4 an RPDO has more than 8 bytes

CAN 1 monitoring (active state):

- Bit {x} RPDO {x} is not received at the moment

CAN 1 monitoring (latched state):

- Bit {x} RPDO {x} has not been received

Can bus 2 state:

- Bit 13 one Node ID is assigned to more than 1 device

CAN 2 monitoring (active state):


- Bit {x} CAN Node ID {x} is not received at the moment

CAN 2 monitoring (latched state):

- Bit {x} CAN Node ID {x} has not been received

Screen "Load diagnostic"

[all application modes]

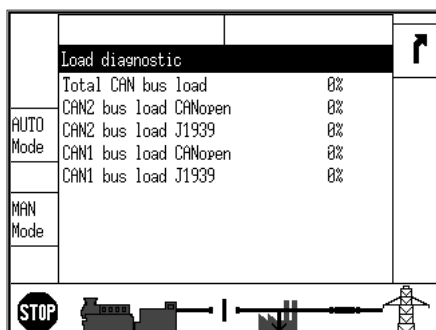

This screen appears after selecting "Load diagnostic" in the "Miscellaneous" screen and displays the total CAN bus load as well as the load on the individual CAN busses.



Return to "Miscellaneous" screen.



Change into AUTOMATIC operating mode.




Change into MANUAL operating mode.



Change into STOP operating mode.

Screen "Parameter"

[all application modes]

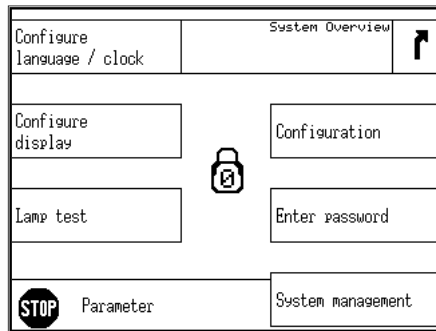

This screen appears after pressing the "Parameter" softkey.



Return to the starting screen.

Configure language / clock

Display the language and clock configuration screen.

Configure display

Display the display configuration screen.

Lamp test

This softkey illuminates all LEDs to check their function.

Configuration

Display the configuration menu screen.

Enter password


Display the password entry screen.

System management

Display the system management configuration screen.

Screen "Configure language / clock"

[all application modes]

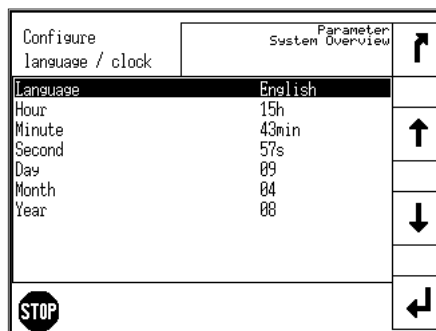

This screen appears after pressing the "Configure language / clock" softkey in the "Parameter" screen.



Return to the "Parameter" screen.






Scroll up one parameter.





Scroll down one parameter.




Select the parameter to be configured with this softkey.

Change the parameter using the , , and  softkeys.

Confirm the change with the  softkey or exit parameter configuration without any changes using the  softkey.

Screen "Configure display"

[all application modes]

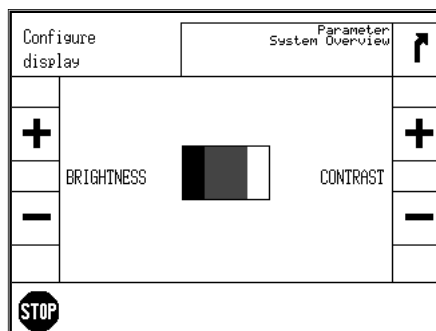

This screen appears after pressing the "Configure display" softkey in the "Parameter" screen. The contrast and brightness of the display may be configured here.



Return to the "Parameter" screen.



Increase contrast/brightness.




Decrease contrast/brightness.



Pressing and holding the STOP button for at least 10 seconds restores the default settings for contrast and brightness in case the settings have been adjusted in a way that the display can't be read anymore.

Screen "Configuration"

[all application modes]

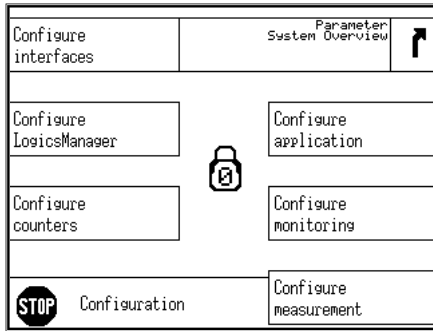

This screen appears after pressing the "Configuration" softkey in the "Parameter" screen.



Return to the "Parameter" screen.

Configure interfaces

Display the interface configuration screen.

Configure LogicsManager

Display the *LogicsManager* configuration screen.

Configure counters

Display the counter configuration screen.

Configure application

Display the application configuration screen.

Configure monitoring


Display the monitoring configuration screen.

Configure measurement

Display the measurement configuration screen.

Screen "Enter password"

[all application modes]

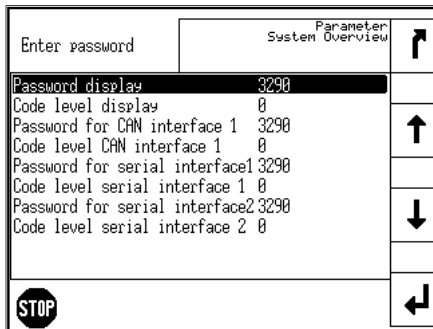

This screen appears after pressing the "Enter password" softkey in the "Parameter" screen. Only the password may be entered using this screen. The code levels are only displayed depending on the entered password.



Return to the "Parameter" screen.



Scroll up one parameter.



Scroll down one parameter.




Select the parameter to be configured with this button.

Change the parameter using the **+**, **-**, and **→** softkeys.

Confirm the change with the **↵** softkey or exit parameter configuration without any changes using the **↵** softkey.

Screen "System management"

[all application modes]

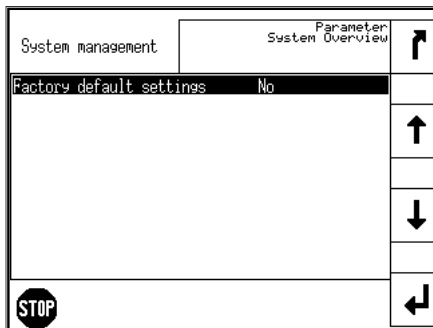

This screen appears after pressing the "System management" softkey in the "Parameter" screen.

You may find a detailed structure of the configuration screens in the easYgen-3200 Configuration section starting on page 43.



Return to the "Parameter" screen.



Scroll up one parameter.



Scroll down one parameter.



Select the parameter to be configured with this button.

Change the parameter using the **+**, **-**, and **→** softkeys.

Confirm the change with the **↵** softkey or exit parameter configuration without any changes using the **↵** softkey.

Operation



The display is partitioned into different areas to give an overview of the displayed data.


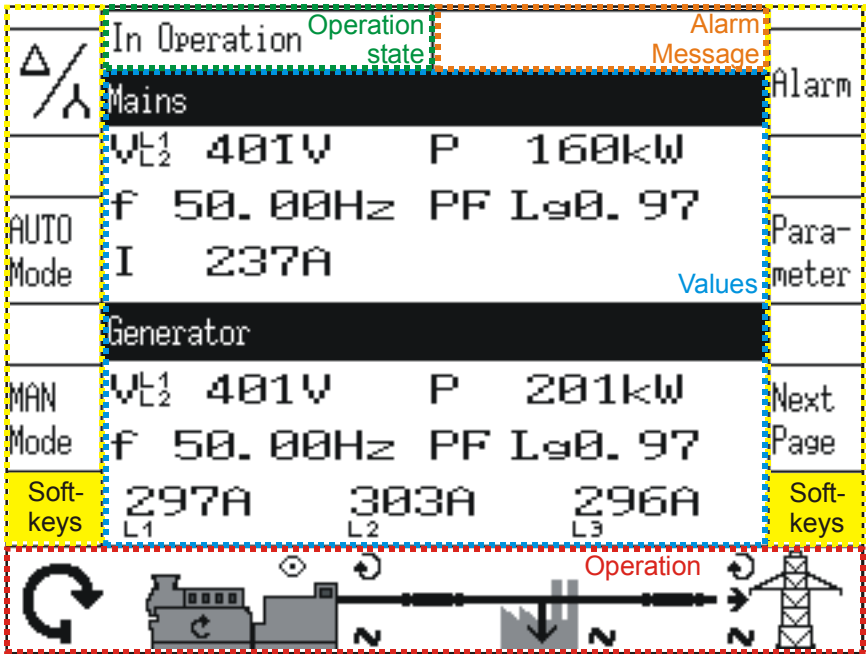



Figure 2-2: Screen - Level overview

"Values"

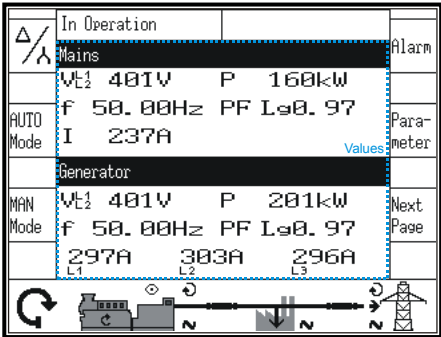


The "values" section of the screen illustrates all measured power related information including voltages, currents, frequencies, power, and power factor values.

"Operation state"

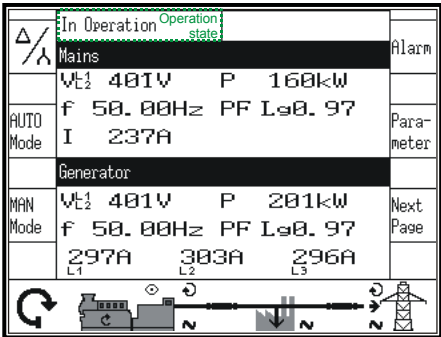


The "operation state" section of the screen shows the actual operating information. Refer to Appendix A: Status Messages on page 49 for a list of all operation states.

"Alarm Message"

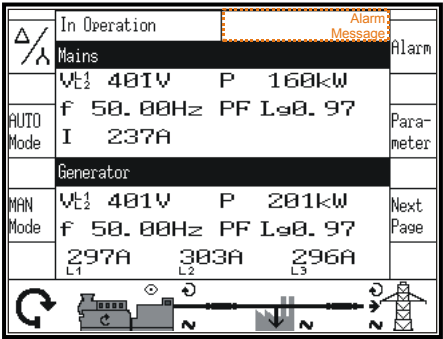


The "alarm message" section of the screen shows the last alarm message that is occurred and not yet acknowledged. Refer to Appendix A: Alarm Messages on page 52 for a list of all alarm messages.

"Operation"

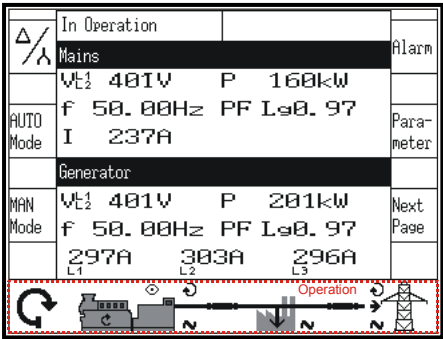


The "operation" section of the screen has a single-line diagram of the system application showing current status of the engine and power circuit breakers. This level is also used for manual operation of the genset.

"Softkeys"

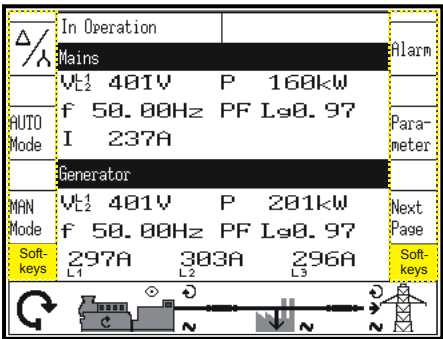


The softkey characters permit navigation between screens, levels and functions as well as configuration and operation.

Display



Softkey "Voltage display"

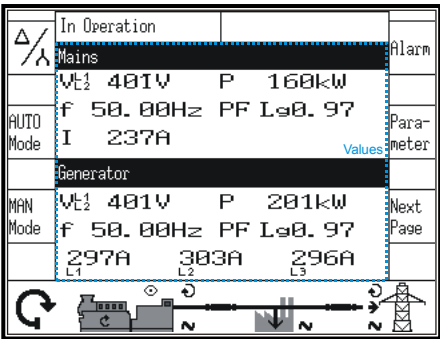


The voltage display softkey changes the type of voltage display. The amount of information available from the system depends on how the measuring is configured in the control. Table 2-1 illustrates what values are available depending on the configured measurement type.

Measuring point	Scroll display		Symbol of the displayed voltage	Displayed at parameter setting					
	Soft key	Press		3Ph 3W	3Ph 3W	1Ph 2W	1Ph 3W		
Generator			0× (6×)	V_{L2}^1 Delta	L1-L2	yes	yes	---	---
			1×	V_{L3}^2 Delta	L2-L3	yes	yes	---	---
			2×	V_{L1}^3 Delta	L3-L1	yes	yes	---	yes
			3×	V_{N1}^1 Wye	L1-N	yes	---	yes	yes
			4×	V_{N2}^2 Wye	L2-N	yes	---	---	---
			5×	V_{N3}^3 Wye	L3-N	yes	---	---	yes
Mains			0× (6×)	V_{L2}^1 Delta	L1-L2	yes	yes	---	---
			1×	V_{L3}^2 Delta	L2-L3	yes	yes	---	---
			2×	V_{L1}^3 Delta	L3-L1	yes	yes	---	yes
			3×	V_{N1}^1 Wye	L1-N	yes	---	yes	yes
			4×	V_{N2}^2 Wye	L2-N	yes	---	---	---
			5×	V_{N3}^3 Wye	L3-N	yes	---	---	yes

Table 2-1: Display - Measuring values

Mode



Softkeys "Mode"


AUTO Mode	In Operation		Alarm
	Mains		
	Vt1 481V P 160kW		
	f 50.00Hz PF 0.97		Parameter
MAN Mode	I 237A		
	Generator		
	Vt1 481V P 201kW		Next Page
	f 50.00Hz PF 0.97		
STOP	Soft-keys	297A L1 303A L2 296A L3	

By pressing the softkeys "AUTO Mode", "MAN Mode" or "STOP", the operating mode is selected. Depending on the application mode selected, different softkeys are enabled or disabled in the display. The active operation mode is displayed left of the engine symbol. If the operation mode STOP is selected, the LED next to the push button is illuminated in addition to the mode being displayed left of the engine symbol.

Note: If the control unit has been configured for external operating mode selection, the AUTO and MAN Mode softkeys are not displayed and the STOP push button is disabled. The operating mode cannot be changed.




STOP Operating mode

When STOP is selected, the engine is stopped. The STOP mode is indicated in the lower left corner of the display by the  symbol.




AUTOMATIC Operating mode

When AUTOMATIC is selected, the control unit manages all engine start/stop and breaker control functions. These functions are performed in accordance with how the control is configured. The AUTOMATIC mode is indicated in the lower left corner of the display by the  symbol.




MANUAL Operating mode


When MANUAL is selected, all engine and breaker control is performed manually via the softkeys along the bottom of the display. The MANUAL mode is indicated in the lower left corner of the display by the  symbol.



Operation



Softkeys "Manual Mode"



Δ/Λ	In operation		Alarm
	Mains		
AUTO Mode	Vt1 401V P 160kw		Parameter
	f 50.00Hz PF 1.00.97		
	I 237A		
MAN Mode	Generator		Next Page
	Vt1 401V P 200kw		
	f 50.00Hz PF 1.00.97		
	297A 295A 296A L1 L2 L3		

If the unit is in the MANUAL operating mode (the symbol is displayed in the lower left corner), the softkeys are enabled for manual operation of the engine and the power circuit breakers. The symbols "0" and "1" indicate if a start/stop command is being processed at the moment. The arrows on the breaker symbol indicate if an open/close command is being processed at the moment. The symbol indicates that the engine delayed monitoring has expired and the monitoring functions are enabled. The symbol indicates that power is detected at the respective measuring point (generator, busbar, or mains). The direction of the circular arrow indicates, if the generator or mains rotating field is clockwise (CW) or counter-clockwise (CCW). The arrow symbol at the mains interchange point indicates whether power is exported (➔) or imported (➞).

Engine Start/Stop



Starting process: By pressing this softkey the engine is started.

- Successful: If the starting process was successful, the circular arrow indicates that speed is detected and the engine is running. The eye symbol indicates that the engine delayed monitoring has expired and the monitoring functions are enabled.
- Unsuccessful: No change in the display until the start failure message appears.



Stop process: Pressing the softkey again will stop the engine.

- Successful: If the stop process was successful, the circular arrow and the eye symbol disappear.
- Unsuccessful: No change in the display until the stop failure message appears.

Power circuit breaker open/close (GCB/MCB)



Close: By pressing the softkey under the desired circuit breaker, it is closed.

- Successful: If the closing process was successful, the breaker symbol turns horizontal.
- Unsuccessful: If the closing process was not successful, the breaker symbol remains vertical.



Open: To open this breaker this softkey is pressed while the breaker symbol is horizontal. The arrows and the "Open GCB/MCB" messages indicate the open command.

- Successful: If the opening process was successful, the breaker symbol turns vertical.
- Unsuccessful: If the opening process was not successful, the breaker symbol remains horizontal and the arrows will remain within the softkey character until the control is able to open the breaker.



CAUTION


The breakers will open immediately without power reduction. If you want to open the breaker in a no-load condition, you must reduce the load manually in the set point screen.

LogicsManager

Some parameters of the easYgen are configured via the *LogicsManager* (refer to Configuration Manual 37469). A typical *LogicsManager* screen is shown in the following. You may configure a logical operation using various command variables, signs, logical operators, and delay times to achieve the desired logical output.



LogicsManager Screen

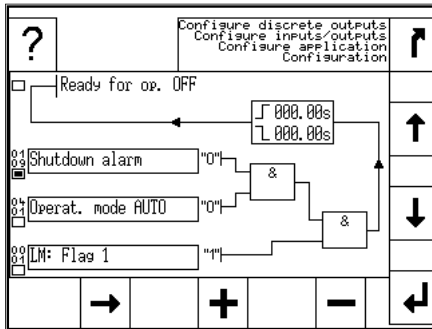

For configuration of the *LogicsManager* the softkeys displayed in the right and bottom section are used. The softkey on the upper left opens a help screen. The softkeys are assigned with different functions.

Two delays may also be configured for the output:

┐ (Delay ON): delay before output becomes TRUE

└ (Delay OFF): delay before output becomes FALSE

The squares below each command variable number indicate the actual state of this command variable:

■ : the command variable is TRUE

□ : the command variable is FALSE

The actual state of the *LogicsManager* output is indicated by the square in the upper left corner.



Leave current screen ("Escape" / "ESC")

By pressing this softkey character you exit and go to the previous screen. If the Escape key is used to leave a *LogicsManager* configuration screen, any unconfirmed changes made will not be stored.



Select parameter

By pressing these softkey characters you may select the *LogicsManager* parameter to be configured upwards or downwards.



Confirm selection

By pressing this softkey character you confirm the configured option of the selected *LogicsManager* parameter.



Change option

By pressing these softkey characters you may change the option of the selected *LogicsManager* parameter upwards or downwards.



Change variable group/cursor position

Command variable selection field:


By pressing this softkey character you may change the command variable group. The command variables within a group may be changed using the **+** and **-** softkeys.

Time delay configuration field:

By pressing this softkey character you may change the cursor position. The selected digit may be changed using the **+** and **-** softkeys.



Help button

By pressing this softkey character you get to a help screen, which displays the logical operators of the *LogicsManager*. You may return to the *LogicsManager* with the Escape softkey .

Chapter 3.

easYgen-3100 LEDs

The easYgen-3100 unit with metal housing and without display and buttons features two LEDs on the front plate. The two LEDs have the following functionality:

- **COMMS LED**
 - NOT illuminated: no data is received by any interface
 - Blinking **green**: data is received by any interface, the blinking rate increases with the load on the interfaces until it is:
 - Illuminated **green**: increased data traffic is received by any interface
 - Illuminated **red**: the number of participants on the load share bus does not match with the configuration
 - Illuminated **red/green** (appears as **orange**): the number of participants on the load share bus does not match with the configuration and data is received by any interface
- **RUN LED**
 - NOT illuminated: the unit is not ready for operation
 - Illuminated **green**: the unit is ready for operation and no alarm is present
 - Blinking **green/red**: the unit is ready for operation, but a warning alarm (alarm class A or B) is present
 - Illuminated **red**: the unit is ready for operation, but a shutdown alarm (alarm class C, D, E or F) is present
 - Blinking **red**: the unit is ready for operation, but a shutdown and a warning alarm is present



NOTE

Definition: An alarm is "present" means that the alarm is active or latched (triggered).

Figure 3-1 indicates the position of the LEDs on the front plate of the easYgen-3100 unit.

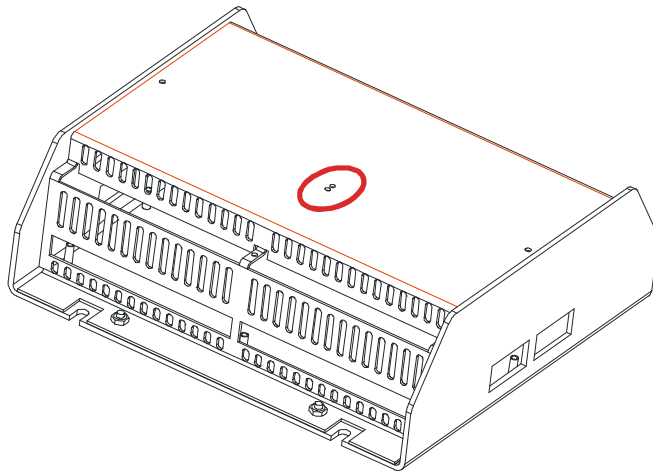


Figure 3-1: Position of the LEDs

Chapter 4.

Functional Description



NOTE

This functional description of the easYgen refers to both versions, the easYgen-3100 and the easYgen-3200. However, every information concerning display, push buttons (softkeys), and MANUAL operation mode refers to the easYgen-3200 only.

Overview



Operation Mode	Application Mode							
	{0}		{1o}		{1oc}		{2oc}	
	MAN	AUTO	MAN	AUTO	MAN	AUTO	MAN	AUTO
Operate the engine								
• Start engine by:								
the engine push button (Softkey)	YES	---	YES	---	YES	---	YES	---
the discrete inputs	---	YES	---	YES	---	YES	---	YES
emergency power (AMF)	---	---	---	---	---	---	---	YES
the interface	---	YES	---	YES	---	YES	---	YES
• Stop engine by:								
the STOP push button	YES	YES	YES	YES	YES	YES	YES	YES
the engine push button (Softkey)	YES	---	YES	---	YES	---	YES	---
emergency power (AMF)	---	---	---	---	---	---	---	YES
the <i>LogicsManager</i>	---	YES	---	YES	---	YES	---	YES
an alarm (i.e. overspeed lvl 2)	YES	YES	YES	YES	YES	YES	YES	YES
Operate GCB								
• close GCB								
the GCB push button (Softkey)	---	---	---	---	YES	---	YES	---
emergency power (AMF)	---	---	---	---	---	---	---	YES
the <i>LogicsManager</i>	---	---	---	---	---	YES	---	YES
• open GCB								
the STOP push button	YES	YES	YES	YES	YES	YES	YES	YES
the GCB push button (Softkey)	---	---	YES	---	YES	---	YES	---
the <i>LogicsManager</i>	---	---	---	YES	---	YES	---	YES
an alarm (i.e. overvoltage)	---	---	YES	YES	YES	YES	YES	YES
Operate MCB								
• open MCB								
the MCB push button (Softkey)	---	---	---	---	---	---	YES	---
emergency power (AMF)	---	---	---	---	---	---	---	YES
the <i>LogicsManager</i>	---	---	---	---	---	---	---	YES
• close MCB								
the MCB push button (Softkey)	---	---	---	---	---	---	YES	---
the <i>LogicsManager</i>	---	---	---	---	---	---	---	YES

Table 4-1: Functional description - Overview


- **Application Mode** (page 38): depends on the application; defines the number/function of the breakers ({0}, {1o}, {1oc}, {2oc}).
- **Operating Mode** (page 39): depends on the application; separates between STOP, MANUAL and AUTOMATIC.

Application Modes




The application mode may be changed only during configuration with the code level CL2 or higher password. The most important features of the four application modes are illustrated in the following section. A description of the functions that are possible during each application mode can be found in the Configuration Manual (parameter 3401, manual 37469). Table 4-1: Functional description - Overview describes which function is available in each application mode.

Application Mode {0} – Start/Stop




This application mode provides the following functions:

- Measuring of engine/generator parameters (i.e. voltage, frequency, current, power, coolant temperature, oil pressure, etc.)
- Engine start/stop




Application Mode {1o} – Open GCB




This application mode provides the following functions:

- Measuring of engine/generator parameters (i.e. voltage, frequency, current, power, coolant temperature, oil pressure, etc.)
- Engine start/stop
- Engine/generator protection (relay output to open GCB)
- Mains failure detection




Application Mode {1oc} – Open/Close GCB




This application mode provides the following functions:

- Measuring of engine/generator parameters (i.e. voltage, frequency, current, power, coolant temperature, oil pressure, etc.)
- Engine start/stop
- Engine/generator protection (relay output to open GCB)
- GCB operation (relay output to close GCB)
- Mains failure detection



Application Mode {2oc} – Open/Close GCB/MCB



This application mode provides the following functions:

- Measuring of engine/generator parameters (i.e. voltage, frequency, current, power, coolant temperature, oil pressure, etc.)
- Engine start/stop
- Engine/generator protection (relay output to open GCB)
- GCB operation (relay output to close GCB)
- MCB operation (relay output to open and close the MCB)
- Mains failure detection (AMF auto mains failure operation) and automatic engine start/stop



Operating Modes



Operating Mode STOP



NOTE

Selecting the operating mode STOP is not the same as an EMERGENCY STOP. In some cases the easYgen will perform additional logic functions, such as an engine cool down period, before the engine is stopped. It is recommended that an EMERGENCY STOP discrete input be utilized and programmed as an F class alarm.



In the STOP operating mode neither the engine nor the GCB can be operated. Dependent on the application mode the power circuit breakers cannot be operated. If the operating mode STOP has been selected while

the engine was already stopped

- The GCB will not be closed
- The fuel solenoid relay will not be enabled
- The discrete inputs and CAN bus commands are ignored
- The start push buttons (softkeys) are disabled (depending on the previous operating mode)
- The engine/generator monitoring remains de-activated (exception: all monitoring that is not delayed by the engine speed monitoring)

the engine was running

- The GCB is opened
 - Requirements:
 - The easYgen is at least in application mode {1o} and
 - the GCB is closed
- The MCB will be closed
 - Requirements:
 - The easYgen is at least in application mode {2oc}
 - the GCB is open
 - the MCB is enabled
- An engine cool down will be performed (the STOP LED is flashing)
- The fuel solenoid relay will be disabled
- The engine/generator monitoring will be de-activated (exception: all monitoring that is delayed by the engine speed monitoring)
- The control unit screen will display the operations as they are performed

the engine performs a cool down

- Pressing the STOP button again causes an immediate stop of the cool down and stops the engine



NOTE


If the conditions of the [LogicsManager](#) function "Enable MCB" (parameter 12923) are TRUE, the MCB will be closed again if it is open in STOP operating mode.

Operating Mode MANUAL



In the MANUAL operating mode (softkey "Mode MAN") the engine and the power circuit breakers are operated via the push buttons along the bottom of the display (softkeys). All elements that may be operated via the softkeys have a black frame. All other elements cannot be operated. The single line diagram in the lowest line will change according to the application mode.

The single line diagrams are displayed as follows:





Single line diagram for application mode {0}.

When MANUAL operating mode is selected a black frame softkey character will appear around the engine to indicate that the push buttons below this softkey character may be used to start and stop the engine. This is shown below highlighted for the following functions.

- Start the engine
- Stop the engine

Examples for the single line diagrams


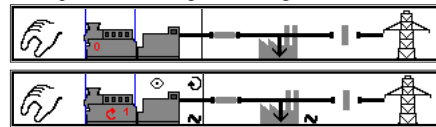


Single line diagram for application mode {1o}.

For a {1o} application both the engine and the GCB softkey characters appear with the following functions. The "X" symbol indicates that a breaker open command is issued or a closure of the breaker is blocked. The dotted breaker line indicates no defined breaker state.

- Start the engine
- Stop the engine
- Open the GCB

Examples for the single line diagrams


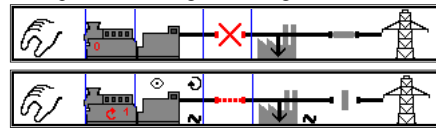


Single line diagram for application mode {1oc}.

For a {1oc} application both the engine and the GCB softkey characters appear with the following functions.

- Start the engine
- Stop the engine
- Open the GCB
- Close the GCB

Examples for the single line diagrams

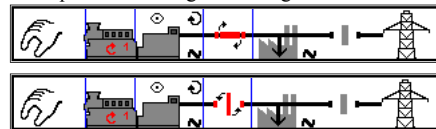


Single line diagram for application mode {2oc}.

For a {2oc} application both the engine, the GCB and the MCB softkey characters appear with the following functions.

- Start the engine
- Stop the engine
- Open the GCB
- Close the GCB
- Open the MCB
- Close the MCB

Examples for the single line diagrams

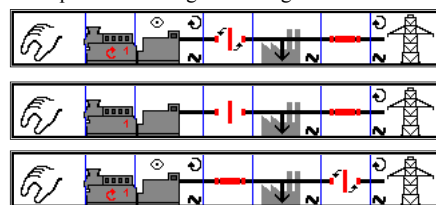

Operating Mode AUTOMATIC



In the AUTOMATIC operating mode, all engine, GCB, and/or MCB functions are operated via an interface, or automatically by the control unit (i.e. a mains failure). The function of the easYgen depends on the configuration of the unit and how the external signals are used. The start /stop sequence of the engine is described in more detail in manual 37469.

In the following text the main functions are briefly described.

Start engine

Remote start

The engine is started via a remote start signal.

A Start in Auto requires.

- The AUTOMATIC operating mode is enabled.
- The function "Start req. in AUTO" is assigned via the *LogicsManager* to a discrete input and the conditions are fulfilled (TRUE).
- This discrete input or a start via interface is energized (logically HIGH signal) or the necessary command of the interface protocol is set (for explanation of the interface protocol refer to the interface manual 37472).
- A class C alarm or higher is not present (for explanation of the alarm classes refer to manual 37469).
- The engine is ready for operation.
- The GCB is open.

Mains fault

AMF / Auto mains failure operation (only in application mode {2oc})

If the AUTOMATIC operating mode is enabled and the application mode is configured to {2oc} (2-breaker logic) and the mains fail, the engine and the power circuit breakers will be operated according to the conditions in the following table.

An AMF start requires.

- The AUTOMATIC operating mode is enabled.
- The application mode is configured as {2oc}.
- The parameter "Emergency power" is configured as ON.
- The configured mains failure limits are reached.
- The configured delay times have expired.
- A class C alarm or higher is not present (for explanation of the alarm classes refer to 37469).
- The engine is ready for operation.

Status (prior to mains failure)			Action (order)		
Engine	GCB	MCB	Engine	GCB	MCB
0 (stopped)	0 (open)	0 (open)	1 (start)	2 (close)	---
	0 (open)	1 (closed)	1 (start)	3 (close)	2 (open)
1 (running)	0 (open)	0 (open)	---	1 (close)	---
	0 (open)	1 (closed)	---	2 (close)	1 (open)
	1 (closed)	0 (open)	---	---	---
	1 (closed)	1 (closed)	---	1 (open) 3 (close)	2 (close)
	1 (closed)	1 (closed)	---	(remains closed)	1 (open)

Mains decoupling GCB:

Mains decoupling MCB:

Table 4-2: Functional description - AMF conditions

Functional description of AMF conditions:

- If the engine is not running prior to a mains failure and both, the GCB and MCB are open, the following actions occur:
 1. The engine starts
 2. The GCB closes
 3. The load is supplied by the generator set
- If the engine is not running prior to a mains failure, the GCB is open, and the MCB is closed the following actions occur:
 1. The engine starts
 2. The MCB opens
 3. The GCB closes
 4. The load is supplied by the generator set
- If the engine is running prior to a mains failure, the GCB is open, and the MCB is open the following actions occur:
 1. The GCB closes
 2. The load is supplied by the generator set
- If the engine is running prior to a mains failure, the GCB is open, and the MCB is closed the following actions occur:
 1. The MCB opens
 2. The GCB closes
 3. The load is supplied by the generator set
- If the engine is running prior to a mains failure, the GCB is closed, and the MCB is open the following actions occur:
 1. The generator set continues to supply the load
- If the genset is operating in parallel with the mains prior to a mains failure, both breakers are closed, the following actions occur:
 1. A mains decoupling will be performed and the GCB or MCB will be opened depending on the configuration of the mains decoupling function:
 - Mains decoupling configured to MCB or MCB->GCB:
 - a. The MCB opens
 - b. The GCB remains closed
 - c. The engine keeps running
 - Mains decoupling configured to GCB or GCB->MCB:
 - a. The GCB opens
 - b. The MCB opens after the delay time
 - c. The GCB closes
 - d. The engine keeps running
 2. The load is supplied by the generator set

Chapter 5.

easYgen-3200 Configuration

This chapter provides information "how to configure the unit via the LC display" as well as the description of all parameters that may be changed without a password. If you have the correct codes to configure the unit (this is verified via passwords), refer to manual 37469 for a description of all parameters, their setting range, and their influence to the operation of the unit.

Structure of the Parameters

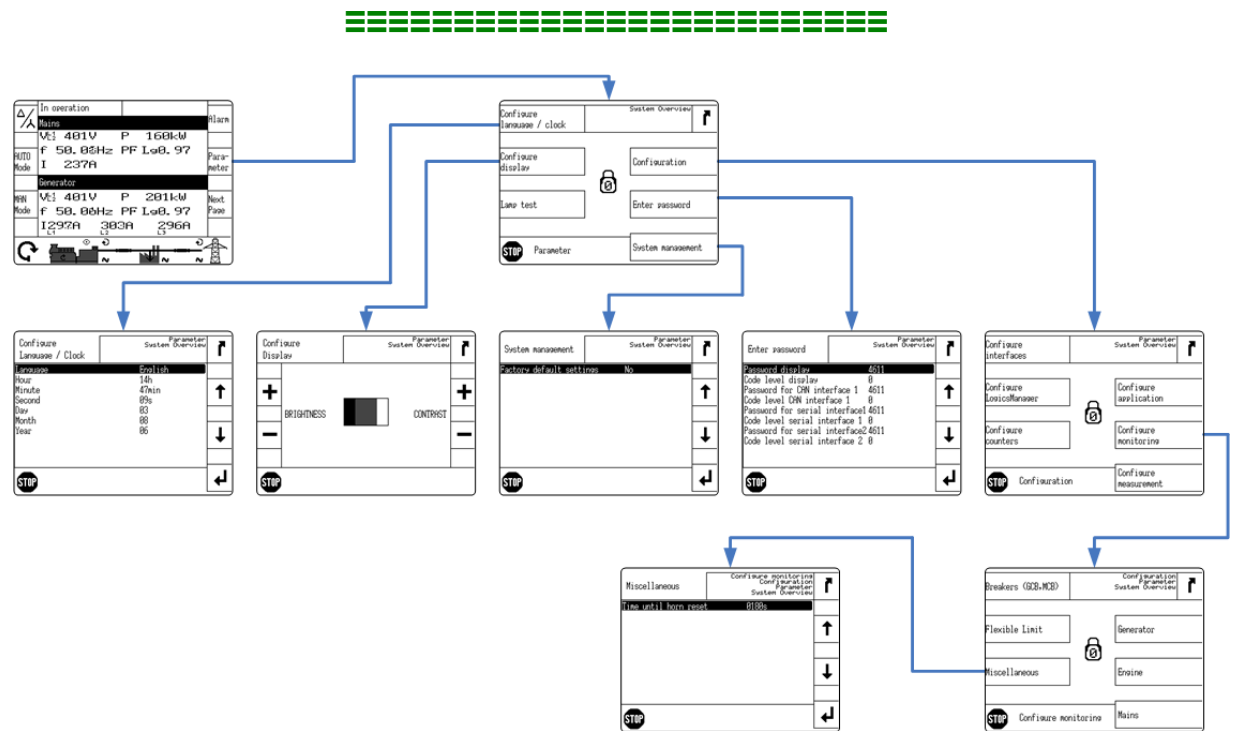



Figure 5-1: Configuration screens (overview)

Para-
meter

Access configuration menus

AUTO Mode	In operation		Alarm
	Mains		
MAN Mode	VL1 481V P 168kW		Parameter
	f 50.00Hz PF L98.97		
	I 237A		
	Generator		
	VL1 481V P 200kW		Next Page
	f 50.00Hz PF L98.97		
	297A 295A 296A		
	L1 L2 L3		

By pressing the  softkey, the Parameter menu will be displayed to permit configuration of the control unit.

The different configuration screens may be displayed by selecting the respective softkey. Refer to Figure 5-1 for a structure of the configuration screens.



Softkeys "Configuration - Enter password"

Enter password	Parameter System Overview
Password display	3290
Code level display	0
Password for CAN interface 1	3290
Code level CAN interface 1	0
Password for serial interface1	3290
Code level serial interface 1	0
Password for serial interface2	3290
Code level serial interface 2	0

Navigation through the parameters is carried out using the softkeys and . To edit the selected parameter press . To save the edited parameter press . To exit the parameter without saving any changes press .



Return to the previous screen/exit parameter without saving changes ("Escape")

Navigate..... Pressing the softkey will return the operator to the previous display screen.
Edit If it is desired to exit a parameter without saving changes made there, press the softkey and the user will be returned to the previous screen.



Next parameter

This softkey permits the user to navigate down through the parameters. Only the parameters assigned by the active password will be displayed. The parameters that may only be accessed after entering a password are described in the Configuration Manual 37469. If an Asian language is configured, some parameter screens may be displayed with an empty space at the bottom of the parameter list, which may be interpreted as an end of the list, although more parameters exist and are displayed when scrolling down.



Previous parameter

This softkey permits the user to navigate upwards through the parameters.



Decrease/change function

If the desired parameter has been selected by pressing the softkey, and the cursor has been moved to the appropriate position via the softkey, the value of the digit may be decreased by one using the softkey.



Increase/change function

If the desired parameter has been selected by pressing the softkey, and the cursor has been moved to the appropriate position via the softkey, the value of the digit may be increased by one using the softkey.






Select parameter/input confirmation ("Enter")

Navigate..... A highlighted parameter may be entered for configuration by pressing the softkey. This permits the changing of the configured value within the parameter.

Edit Any value that has been changed within a parameter is changed and stored in the unit memory by pressing the softkey.



Next digit of the selected parameter

If the parameter has a numeric value (i.e. the password) that is to be changed, the digits must be changed individually. The  softkey permits navigation to each cursor position of the number to be changed. See the softkey symbols  and  for an explanation of how to change the digit.

Parameters



**NOTE**

A description of all parameters, which may be edited/configured via the display, are described in the Configuration Manual 37469.

Language

DE EN	Language	Change language	{Language}
	Language	{Language} . The selection of a language will affect the following text in the control unit: <ul style="list-style-type: none">• Text in the operating field which are not defined by an input (i.e. discrete inputs may be a user-defined text)• The alarm list and event history texts• All parameters which may be changed via the unit panel	

**NOTE**

Refer to Appendix B: Restoring a Language Setting on page 59 if your unit is configured to a language you are not able to read or understand.


Real-Time Clock - Time

DE EN	Hour	Adjust clock time: hour	0 to 23
	Stunden	The hour of the current time is set here. Example: 0 0 th hour of the day. 23 23 rd hour of the day.	
DE EN	Minute	Adjust clock time: minute	0 to 59
	Minuten	The minute of the current time is set here. Example: 0 0 th minute of the hour. 59 59 th minute of the hour.	
DE EN	Second	Adjust clock time: second	0 to 59
	Sekunden	The second of the current time is set here. Example: 0 0 th second of the minute. 59 59 th second of the minute.	

Real-Time Clock - Date

DE	EN		Day	Adjust date: day	1 to 31
			Tag		
The day of the current date is set here. Example: 1 1 st day of the month. 31 31 st day of the month.					
DE	EN		Month	Adjust date: month	1 to 12
			Monat		
The month of the current date is set here. Example: 1 1 st month of the year. 12 12 th month of the year.					
DE	EN		Year	Adjust date: year	0 to 99
			Jahr		
The year of the current date is set here. Example: 0 Year 2000. 99 Year 2099.					

Display Contrast

DE	EN	Configure display	Configure display	+ / -			
		Display konfigur.					
In the "Configure display" screen, the display contrast and brightness may be increased or decrease using these softkey characters.							
<div><div>+</div>Increase the display contrast/brightness.</div> <div><div>-</div>Decrease the display contrast/brightness.</div>							
<div><div></div>If the display contrast and/or brightness has been decreased to the point that it is no longer visible, press and hold the STOP button for at least 5 seconds. This will restore the contrast and brightness to the factory default setting.</div>							

Password

DE EN	Password display	Password for access via the unit panel	0000 to 9999
	Passwort Display	A password must be entered to permit configuration of the unit via the unit panel. If a password is not entered only the displayed parameters may be edited.	
DE EN	Code level display	Code level via display	Info
	Codeebene Display	This value displays the code level that is currently active for access via the front panel.	
DE EN	Password for CAN interface {x}	Password for access via CAN interface {x}	0000 to 9999
	Passwort CAN Schnittstelle {x}	A password must be entered to permit configuration of the unit via CAN interface {x}. If a password is not entered, the displayed parameters may not be edited.	
DE EN	Code level CAN interface {x}	Code level CAN-Bus {x}	Info
	Codeebene CAN Schnittstelle {x}	This value displays the code level that is currently active for access via the CAN bus.	
DE EN	Password for serial interface{x}	Password for access via serial interface {x}	0000 to 9999
	Passwort serielle Schnittst. {x}	A password must be entered to permit configuration of the unit via serial interface {x}. If a password is not entered, the displayed parameters may not be edited.	
DE EN	Code level serial interface {x}	Code level serial port {x}	Info
	Codeebene serielle Schnittst. {x}	This value displays the code level that is currently active for access via the serial interface {x}.	

Deactivate Horn

DE EN	Time until horn reset	Self acknowledgement of the horn signal	0 to 1.000 s
	Zeit Hupenreset	A horn signal is issued and the alarm LED flashes when a fault condition occurs. This signal will be disabled when the configured time expires. This is the maximum time, for which a horn signal is active (it will also be deactivated if it is acknowledged before).	

Factory (Default) Values

DE EN	Factory settings	Factory setting	YES/NO
	Werkseinstellung	The factory settings (default values) may be loaded. Select YES to enable the following parameter to be displayed. It is possible to load the factory settings (default values) for all parameters, which are accessible in the currently active code level.	
DE EN	Set default values	Set default values	YES/NO
	Standardwerte wiederherstellen	Entering YES overwrites the current configured values with the default values. Only those parameters will be reset, which are permitted to change in the selected code level.	

Appendix A. Display Messages

Status Messages



Message text and ID	Meaning
AUTO mode ready ID 13253	Automatic mode ready for start The unit is waiting for a start signal in Automatic operating mode and no alarm of class C, D, E, or F is present.
Aux. serv. postrun ID 13201	Postrun of the auxiliary operation is active After the engine has stopped, auxiliary operations are enabled. These operations ensure that required equipment which is necessary for the operation of the engine continues to run (i.e. electric cooling fan).
Aux. services prerun ID 13200	Prerun of the auxiliary operation is active Before the engine is started the signal "aux. services prerun" is enabled, so that all required equipment which is necessary for the operation of the engine can be initialized, started or switched.
Cool down ID 13204	Coasting of the engine is active The no load operation is performed prior to the stopping of the engine. The no load operation is utilized to cool the engine.
Crank protect ID 13214	Starter protection To prevent the starter from being damaged by an engine that is rotating, a crank protection delay is active to ensure that the engine has time to stop rotating.
Critical mode ID 13202	Critical mode (Sprinkler operation) is active The sprinkler operation is activated. The exact description of the conditions and effects of the sprinkler operation are described in the configuration manual 37469.
Emergency/Critical ID 13215	Emergency operation during active critical operation {2oc} Critical operation is activated.
Emergency run ID 13211	Emergency power operation {2oc} After the control unit detects that a mains fault has occurred, the engine is started after the emergency delay timer expires. The MCB is opened, the GCB is closed, and the generator set assumes the load. If the generator set is already running, operations continue until the emergency power operation conditions no longer exist. If the mains return, the mains settling timer becomes active first (see below).
GCB dead bus close ID 13209	Dead bus closing of the GCB {1oc}, {2oc} The GCB is closed onto the de-energized busbar. The measured busbar voltage is below the configured dead bus detection limit.
GCB -> MCB Delay ID 13261	GCB – MCB delay time is active {2oc} If the breaker logic is configured to Open Transition and a transfer from generator to mains supply is initiated, the transfer time delay will start after the replay "GCB is open" is received. The MCB close command will be issued after the transfer time has expired.
GCB open ID 13255	The GCB is being opened {1oc}, {2oc} A GCB open command has been issued.
Gen. stable time ID 13250	Generator stable time is active If the engine monitoring delay timer has expired, the generator settling time starts. This permits for an additional delay time before the breaker is closed in order to ensure that none of the engine delayed watchdogs trips.
Idle run active ID 13216	The control is in idle mode No undervoltage, underfrequency, and underspeed monitoring is performed in idle mode. The flexible limits 33 through 40 are not monitored.

Message text and ID	Meaning
Ignition ID 13213	Enable the ignition {Gas engine} After the purging operation and before the fuel solenoid is opened.
In operation ID 13251	The genset is in regular operation The genset is in regular operation and is ready for supplying load.
Loading Generator ID 13258	The generator power will be increased to the set point The generator power will be increased to the configured set point with a rate defined by the power control set point ramp.
Mains settling ID 13205	Mains settling time is active {2oc} When the control unit detects that the mains fault is no longer present and power has been restored, the mains settling timer begins counting down. If the mains are stable after the expiration of the timer (the mains voltage has not fallen below or risen over the configured monitoring limits), the load is transferred from the generator supply to the mains supply.
MCB dead bus close ID 13210	Dead bus closing of the MCB {2oc} The MCB is closed onto the de-energized busbar. The measured busbar voltage is below the configured dead bus detection limit.
MCB -> GCB Delay ID 13262	MCB – GCB delay time is active {2oc} If the breaker logic is configured to Open Transition and a transfer from mains to generator supply is initiated, the transfer time delay will start after the reply "MCB is open" is received. The GCB close command will be issued after the transfer time has expired.
MCB open ID 13257	The MCB is being opened {2oc} An MCB open command has been issued.
Power limited prerun ID 13252	Active power limited prerun is active The real power set point is limited to the warm up power limit for the configured warm up time.
Preglow ID 13208	Preglow of the engine is active {Diesel engine} The diesel engine is preheated prior to starting.
Ramp to rated ID 13254	Engine is accelerating to rated speed After firing speed has been exceeded, the engine monitoring delay timer starts. This message is displayed during this period.
Start ID 13206	Start engine is active After the "Prerun auxiliary operation" expires, the engine is started according to the configured start logic (Diesel or gas engine). When the start sequence is active, various relays are enabled and representative signals are passed via the CAN bus to a secondary engine control.
Start - Pause ID 13207	Start pause while starting the engine is active If the engine could not be started, the controller will pause for the configured time prior to attempting to issuing a start command again.
Start w/o Load ID 13263	Start without load is active A regular engine start is performed. The GCB operation is blocked to prevent a change from mains to generator supply.
Stop engine ID 13203	Engine will be stopped The engine will be stopped. The engine stop delay will be started when ignition speed has been fallen below. A restart is only possible if the engine stop delay has been expired.
Synchronization GCB ID 13259	The GCB will be synchronized The control tries to synchronize the GCB.
Synchronization MCB ID 13260	The MCB will be synchronized The control tries to synchronize the MCB.
Turning ID 13212	Purging operation is active {Gas engine} Before the fuel solenoid opens and the ignition of the gas engine is energized the remaining fuel, that may be present in the combustion chamber, will be removed by a purging operation. The starter turns the engine without enabling the ignition for a specified time to complete the purging operation. After the purging process, the ignition is energized.
Unloading Generator ID 13256	The generator power will be decreased The generator power will be decreased after a stop command has been issued with a rate defined by the power control set point ramp before the GCB will be opened.
Unloading mains ID 13264	The mains power will be decreased The real power set point is increased with the configured rate after synchronizing the generator in interchange transition mode. After the mains have been unloaded, the MCB will be opened.
Synch. PERMISSIVE ID 13265	Synchronization mode PERMISSIVE If the synchronization mode is set to "PERMISSIVE" [Parameter ID 5728] the screen message "Synch. PERMISSIVE" is blinking on the main screen.
Synch. CHECK ID 13266	Synchronization mode CHECK If the synchronization mode is set to "CHECK" [Parameter ID 5728] the screen message "Synch. CHECK" is blinking on the main screen.
Synch. OFF ID 13267	Synchronization mode OFF If the synchronization mode is set to "OFF" [Parameter ID 5728] the screen message "Synch. OFF" is blinking on the main screen.
Add-on delay ID 13274	Load dependent start/stop (LDSS) add-on delay time Shows the current state of LDSS in the sequencing screen. A countdown of the configured add-on delay

	time will be displayed.
Add-off delay ID 13275	Load dependent start/stop (LDSS) add-off delay time Shows the current state of LDSS in the sequencing screen. A countdown of the configured add-off delay time will be displayed.
Minimum run time ID 13276	Load dependent start/stop (LDSS) minimum run time Shows the current state of LDSS in the sequencing screen. A countdown of the configured minimum run time will be displayed.

Alarm Messages



NOTE

Refer to the Configure Monitoring section of the Parameters chapter in the Configuration Manual 37469 for a detailed description of the monitoring functions, which trigger the alarm messages.

Message text and ID	Meaning
Amber warning lamp ID 15126	Amber warning lamp, J1939 interface This watchdogs monitors, whether a specific alarm bit is received from the CAN J1939 interface. This enables to configure the control in a way that a reaction is caused by this bit (e.g. warning, shutdown). No alarm can be indicated if the CAN communication fails.
Bat. overvoltage 1 ID 10007	Battery overvoltage, limit value 1 The battery voltage has exceeded the limit value 1 for battery overvoltage for at least the configured time and did not fall below the value of the hysteresis.
Bat. overvoltage 2 ID 10008	Battery overvoltage, limit value 2 The battery voltage has exceeded the limit value 2 for battery overvoltage for at least the configured time and did not fall below the value of the hysteresis.
Bat. undervoltage 1 ID 10005	Battery undervoltage, limit value 1 The battery voltage has fallen below the limit value 1 for battery undervoltage for at least the configured time and has not exceeded the value of the hysteresis.
Bat. undervoltage 2 ID 10006	Battery undervoltage, limit value 2 The battery voltage has fallen below the limit value 2 for battery undervoltage for at least the configured time and has not exceeded the value of the hysteresis.
CAN bus overload ID 10089	CAN bus overload alarm The sum of CAN bus messages on all can buses together exceeds 32 messages per 20 ms.
CAN fault J1939 ID 10017	Interface alarm J1939 The communication with the ECU via the CAN bus interface has been interrupted and no data can be transmitted or received over the bus within the configured time.
CANopen Interface 1 ID 10087	Interface alarm CANopen on CAN bus 1 No Receive Process Data Object (RPDO) is received within the configured time.
CANopen Interface 2 ID 10088	Interface alarm CANopen on CAN bus 2 No message is received from the external expansion board (Node ID) within the configured time.
Charge alt. low volt ID 4056	Charging alternator voltage low The charging alternator voltage has fallen below the critical limit for at least the configured time and has not exceeded the value of the hysteresis (the critical limit is 9 V for 12 V systems and 20 V for 24 V systems).
Eng. stop malfunc. ID 2504	Stop alarm of the engine The engine failed to stop when given the stop command. When a stop command is issued a timer starts a countdown. If speed is still detected when this timer expires the controller recognizes an unsuccessful stop of the engine. An unsuccessful stop of the engine is determined if speed (measured by the generator frequency, the MPU, or the <i>LogicsManager</i> "ignition speed") is detected within the configured time after the stop signal has been issued.
EEPROM failure ID 1714	The EEPROM checksum is corrupted The EEPROM check at startup has resulted a defective EEPROM.
GCB fail to close ID 2603	GCB failed to close The easYgen has attempted to close the GCB the configured maximum number of attempts and failed. Depending on the configuration, the easYgen will continue to attempt to close the GCB as long as the conditions for closing the GCB are fulfilled.
GCB fail to open ID 2604	GCB failed to open The easYgen is still receiving the reply "GCB closed" after the GCB open monitoring timer has expired.
GCB syn. timeout ID 3064	GCB synchronization time exceeded The easYgen has failed to synchronize the GCB within the configured synchronization time.

Message text and ID	Meaning
Gen act.pwr mismatch ID 2924	Generator active power mismatch The deviation between the generator power and the active power set point has exceeded the limit for at least the configured time.
Gen. PF lagging 1 ID 2337	Generator overexcited, limit value 1 The power factor limit 1 has been exceeded at the generator towards inductive (i.e. the current is lagging) for at least the configured time and did not fall below the value of the hysteresis.
Gen. PF lagging 2 ID 2338	Generator overexcited, limit value 2 The power factor limit 2 has been exceeded at the generator towards inductive (i.e. the current is lagging) for at least the configured time and did not fall below the value of the hysteresis.
Gen. PF leading 1 ID 2387	Generator underexcited, limit value 1 The power factor limit 1 has fallen below at the generator towards capacitive (i.e. the current is leading) for at least the configured time and did not exceed the value of the hysteresis.
Gen. PF leading 2 ID 2388	Generator underexcited, limit value 2 The power factor limit 2 has fallen below at the generator towards capacitive (i.e. the current is leading) for at least the configured time and did not exceed the value of the hysteresis.
Gen. overcurrent 1 ID 2218	Generator overcurrent, limit value 1 The generator current has exceeded the limit value 1 for the generator overcurrent for at least the configured time and did not fall below the value of the hysteresis.
Gen. overcurrent 2 ID 2219	Generator overcurrent, limit value 2 The generator current has exceeded the limit value 2 for the generator overcurrent for at least the configured time and did not fall below the value of the hysteresis.
Gen. overcurrent 3 ID 2220	Generator overcurrent, limit value 3 The generator current has exceeded the limit value 3 for the generator overcurrent for at least the configured time and did not fall below the value of the hysteresis.
Gen. overfrequency 1 ID 1912	Generator overfrequency, limit value 1 The generator frequency has exceeded the limit value 1 for generator overfrequency for at least the configured time and did not fall below the value of the hysteresis.
Gen. overfrequency 2 ID 1913	Generator overfrequency, limit value 2 The generator frequency has exceeded the limit value 2 for generator overfrequency for at least the configured time and did not fall below the value of the hysteresis.
Gen. overload IOP 1 ID 2314	Generator overload IOP, limit value 1 The generator power has exceeded the limit value 1 for generator overload in isolated operation (MCB is open) for at least the configured time and did not fall below the value of the hysteresis.
Gen. overload IOP 2 ID 2315	Generator overload IOP, limit value 2 The generator power has exceeded the limit value 2 for generator overload in isolated operation (MCB is open) for at least the configured time and did not fall below the value of the hysteresis.
Gen. overload MOP 1 ID 2362	Generator overload MOP, limit value 1 The generator power has exceeded the limit value 1 for generator overload in mains parallel operation (GCB and MCB are closed) for at least the configured time and did not fall below the value of the hysteresis.
Gen. overload MOP 2 ID 2363	Generator overload MOP, limit value 2 The generator power has exceeded the limit value 2 for generator overload in mains parallel operation (GCB and MCB are closed) for at least the configured time and did not fall below the value of the hysteresis.
Gen. overvoltage 1 ID 2012	Generator overvoltage, limit value 1 The generator voltage has exceeded the limit value 1 for generator overvoltage for at least the configured time and did not fall below the value of the hysteresis.
Gen. overvoltage 2 ID 2013	Generator overvoltage, limit value 2 The generator voltage has exceeded the limit value 2 for generator overvoltage for at least the configured time and did not fall below the value of the hysteresis.
Gen. rev/red. pwr.1 ID 2262	Generator reverse power, limit value 1 / Generator reduced power, limit value 1 The generator power has exceeded the limit value 1 for generator reverse power / generator reduced power for at least the configured time and did not fall below the value of the hysteresis.
Gen. rev/red. pwr.2 ID 2263	Generator reverse power, limit value 2 / Generator reduced power, limit value 2 The generator power has exceeded the limit value 2 for generator reverse power / generator reduced power for at least the configured time and did not fall below the value of the hysteresis.
Gen.ph.rot. mismatch ID 3955	Generator rotating field mismatch The generator rotating field does not correspond with the configured direction.

Message text and ID	Meaning
Gen. underfrequency 1 ID 1962	Generator underfrequency, limit value 1 The generator frequency has fallen below the limit value 1 for generator underfrequency for at least the configured time and has not exceeded the value of the hysteresis. Additionally, the alarm has not been acknowledged (unless the "Self acknowledgement" is configured YES).
Gen. underfrequency 2 ID 1963	Generator underfrequency, limit value 2 The generator frequency has fallen below the limit value 2 for generator underfrequency for at least the configured time and has not exceeded the value of the hysteresis.
Gen. undervoltage 1 ID 2062	Generator undervoltage, limit value 1 The generator voltage has fallen below the limit value 1 for generator undervoltage for at least the configured time and has not exceeded the value of the hysteresis.
Gen. undervoltage 2 ID 2063	Generator undervoltage, limit value 2 The generator voltage has fallen below the limit value 2 for generator undervoltage for at least the configured time and has not exceeded the value of the hysteresis.
Gen unloading fault ID 3124	Generator unloading mismatch The easYgen failed to reduce the generator power below the configured unload limit within the configured time.
Gen. volt. asymmetry ID 3907	Voltage asymmetry The generator phase-to-phase voltages have higher differences between each other than the configured limit value.
Ground fault 1 ID 3263	Generator ground current, limit value 1 The measured or calculated ground current has exceeded the limit value 1 for the generator ground current for at least the configured time and did not fall below the value of the hysteresis.
Ground fault 2 ID 3264	Generator ground current, limit value 2 The measured or calculated ground current has exceeded the limit value 2 for the generator ground current for at least the configured time and did not fall below the value of the hysteresis.
Inv. time overcurr. ID 4038	Generator inverse time-overcurrent Current monitoring with tripping time depending on the measured current. The higher the current is the faster the tripping time according to a defined curve. According to IEC 255 three different characteristics are available: normal, highly, and extremely inverse.
Mains decoupling ID 3114	Mains decoupling is initiated One or more monitoring function(s) considered for the mains decoupling functionality has triggered.
Mains export power 1 ID 3241	Mains export power, limit value 1 The mains export power has exceeded or fallen below the limit value 1 for mains export power for at least the configured time and did not fall below or exceed the value of the hysteresis.
Mains export power 2 ID 3242	Mains export power, limit value 2 The mains export power has exceeded or fallen below the limit value 2 for mains export power for at least the configured time and did not fall below or exceed the value of the hysteresis.
Mains import power 1 ID 3217	Mains import power, limit value 1 The mains import power has exceeded or fallen below the limit value 1 for mains import power for at least the configured time and did not fall below or exceed the value of the hysteresis.
Mains import power 2 ID 3218	Mains import power, limit value 2 The mains import power has exceeded or fallen below the limit value 2 for mains import power for at least the configured time and did not fall below or exceed the value of the hysteresis.
Mains overfreq. 1 ID 2862	Mains overfrequency, limit value 1 The mains frequency has exceeded the limit value 1 for mains overfrequency for at least the configured time and did not fall below the value of the hysteresis.
Mains overfreq. 2 ID 2863	Mains overfrequency, limit value 2 The mains frequency has exceeded the limit value 2 for mains overfrequency for at least the configured time and did not fall below the value of the hysteresis. Triggering this monitoring function causes the mains decoupling function to trigger.
Mains overvoltage 1 ID 2962	Mains overvoltage, limit value 1 The mains voltage has exceeded the limit value 1 for mains overvoltage for at least the configured time and did not fall below the value of the hysteresis.
Mains overvoltage 2 ID 2963	Mains overvoltage, limit value 2 The mains voltage has exceeded the limit value 2 for mains overvoltage for at least the configured time and did not fall below the value of the hysteresis. Triggering this monitoring function causes the mains decoupling function to trigger.

Message text and ID	Meaning
Mains PF lagging 1 ID 2985	Mains overexcited, limit value 1 The power factor limit 1 has been exceeded at the mains interchange point towards inductive (i.e. the current is lagging) for at least the configured time and did not fall below the value of the hysteresis.
Mains PF lagging 2 ID 2986	Mains overexcited, limit value 2 The power factor limit 2 has been exceeded at the mains interchange point towards inductive (i.e. the current is lagging) for at least the configured time and did not fall below the value of the hysteresis.
Mains PF leading 1 ID 3035	Mains underexcited, limit value 1 The power factor limit 1 has fallen below at the mains interchange point towards capacitive (i.e. the current is leading) for at least the configured time and did not exceed the value of the hysteresis.
Mains PF leading 2 ID 3036	Mains underexcited, limit value 2 The power factor limit 1 has fallen below at the mains interchange point towards capacitive (i.e. the current is leading) for at least the configured time and did not exceed the value of the hysteresis.
Mains phase shift ID 3057	Mains phase shift A mains phase shift, which has exceeded the configured limit, has occurred. Triggering this monitoring function causes the mains decoupling function to trigger.
Mains df/dt ID 3106	Mains df/dt (ROCOF) A mains df/dt, which has exceeded the configured limit, has occurred. Triggering this monitoring function causes the mains decoupling function to trigger.
Mains underfreq. 1 ID 2912	Mains underfrequency, limit value 1 The mains frequency has fallen below the limit value 1 for mains underfrequency for at least the configured time and has not exceeded the value of the hysteresis.
Mains underfreq. 2 ID 2913	Mains underfrequency, limit value 2 The mains frequency has fallen below the limit value 2 for mains underfrequency for at least the configured time and has not exceeded the value of the hysteresis. Triggering this monitoring function causes the mains decoupling function to trigger.
Mains undervoltage 1 ID 3012	Mains undervoltage, limit value 1 The mains voltage has fallen below the limit value 1 for mains undervoltage for at least the configured time and has not exceeded the value of the hysteresis.
Mains undervoltage 2 ID 3013	Mains undervoltage, limit value 2 The mains voltage has fallen below the limit value 2 for mains undervoltage for at least the configured time and has not exceeded the value of the hysteresis. Triggering this monitoring function causes the mains decoupling function to trigger.
Maint. days exceeded ID 2560	Maintenance days exceeded The generator run time has exceeded the configured number of days since the last maintenance period. Additionally, the alarm has not been acknowledged.
Maint. hrs exceeded ID 2561	Maintenance hours exceeded The generator run time has exceeded the configured number of operating hours since the last maintenance period. Additionally, the alarm has not been acknowledged.
MCB fail to close ID 2623	MCB failed to close The easYgen has attempted to close the MCB the configured maximum number of attempts and failed. Depending on the configuration, the easYgen will continue to attempt to close the GCB as long as the conditions for closing the MCB are fulfilled.
MCB fail to open ID 2624	Failed MCB open The easYgen is still receiving the reply "MCB closed" after the MCB open monitoring timer has expired.
MCB syn. timeout ID 3074	MCB synchronization time exceeded The easYgen has failed to synchronize the MCB within the configured synchronization time.
Missing members ID 4064	Missing load share members detected The easYgen has detected that the number of available units for load sharing does not correspond with the configured number of members.
Mns act.pwr mismatch ID 2934	Mains active power mismatch The deviation between the import/export power and the active import/export power set point has exceeded the limit for at least the configured time.
Mns.ph.rot. mismatch ID 3975	Mains rotating field mismatch The mains rotating field does not correspond with the configured direction.
Operat. range failed ID 2664	Measured values not within operating range An alarm will be issued if ignition speed is exceeded and the measured values for generator and/or mains are not within the configured operating range. No alarm will be issued in idle mode. The exact tripping conditions for this monitoring functions are described in the configuration manual 37469 in the section "Configure Monitoring: Engine, Operating Range Failure".
Overspeed 1 ID 2112	Engine overspeed, limit value 1 The engine speed has exceeded the limit value 1 for engine overspeed for at least the configured time and did not fall below the value of the hysteresis.
Overspeed 2 ID 2113	Engine overspeed, limit value 2 The engine speed has exceeded the limit value 2 for engine overspeed for at least the configured time and did not fall below the value of the hysteresis.

Message text and ID	Meaning
Parameter alignment ID 4073	LDSS parameter mismatch detected The easYgen has detected that not all LDSS parameters are configured identically at all participating units. Refer to the "Multi-unit configuration check" section in the "Parameters" chapter of the Configuration Manual 37469 for a list of all monitored parameters.
Ph.rotation mismatch ID 2944	Generator/busbar/mains phase rotation different Generator, busbar (easYgen-3400/3500 only), and mains have different rotating fields. A CB closure is blocked. The phase rotation monitoring is always enabled and cannot be disabled.
Red stop lamp ID 15125	Red stop lamp, J1939 interface This watchdog monitors, whether a specific alarm bit is received from the CAN J1939 interface. This enables to configure the control in a way that a reaction is caused by this bit (e.g. warning, shutdown). No alarm can be indicated if the CAN communication fails.
Speed/freq. mismatch ID 2457	Difference in frequency/speed measurement alarm The speed differential between the generator frequency (ascertained by the generator voltage measurement) and the engine speed (measured by the MPU) has exceeded the configured limit value / differential frequency for at least the configured time and has not fallen below the value of the hysteresis. The alarm may also be triggered if the LogicsManager "ignition speed" is enabled and no electrical frequency is detected as well as the other way round.
Start fail ID 3325	Failure of engine to start alarm The generator set has failed to start after the configured number of attempts. Depending on the configuration, no more start attempt will be carried out until the alarm is acknowledged.
Unbalanced load 1 ID 2412	Generator unbalanced load, limit value 1 The generator current has exceeded the limit value 1 for generator unbalanced load for at least the configured time and did not fall below the value of the hysteresis.
Unbalanced load 2 ID 2413	Generator unbalanced load, limit value 2 The generator current has exceeded the limit value 2 for generator unbalanced load for at least the configured time and did not fall below the value of the hysteresis.
Underspeed 1 ID 2162	Engine underspeed, limit value 1 The engine speed has fallen below the limit value 1 for engine underspeed and has not exceeded the value of the hysteresis.
Underspeed 2 ID 2163	Engine underspeed, limit value 2 The engine speed has fallen below the limit value 2 for engine underspeed and has not exceeded the value of the hysteresis.
Unintended stop ID 2652	Unintended Stop The easYgen expects the generator to be running but a sudden underrun of the ignition speed has been detected.
Wb:<!--Analog input x--> refer to: Table 5-1 and Table 5-2 on page 58	Analog input {x}, wire break During measurement of the analog input a wire break was detected. This text may be assigned customer defined. The text in angular brackets is the default text.
<!--Discrete input x--> refer to: Table 5-3 on page 58	Discrete input {x}, energized / de-energized The actual state of the monitored discrete input is energized / de-energized (depending on the configuration) for at least the configured time. This text may be assigned customer defined. The text in angular brackets is the default text.
<!--Ext. Discrete input x--> refer to: Table 5-4 on page 58	External discrete input {x}, energized / de-energized The actual state of the monitored external discrete input is energized / de-energized (depending on the configuration) for at least the configured time. This text may be assigned customer defined. The text in angular brackets is the default text.
<!--Flexible limit x--> refer to: Table 5-4 on page 58	Flexible threshold {x}, overrun / underrun The actual value of the monitored analog value has exceeded / fallen below the threshold (depending on the configuration) for at least the configured time and did not fall below / exceed the value of the hysteresis. This text may be assigned customer defined. The text in angular brackets is the default text.

Analog input #	1	2	3
Message ID	10014	10015	10060

Table 5-1: Message IDs for analog inputs

External analog input #	1	2	3	4	5	6	7	8
Message ID	10221	10222	10223	10224	10225	10226	10227	10228
External analog input #	9	10	11	12	13	14	15	16
Message ID	10229	10230	10231	10232	10233	10234	10235	10236

Table 5-2: Message IDs for external analog inputs

Discrete input #	1	2	3	4	5	6	7	8	9	10	11	12
Message ID	10600	10601	10602	10603	10604	10605	10607	10608	10609	10610	10611	10612

Table 5-3: Message IDs for discrete inputs

External discrete input #	1	2	3	4	5	6	7	8
Message ID	16360	16361	16362	16364	16365	16366	16367	16368
External discrete input #	9	10	11	12	13	14	15	16
Message ID	16369	16370	16371	16372	16373	16374	16375	16376
External discrete input #	17	18	19	20	21	22	23	24
Message ID	16202	16212	16222	16232	16242	16252	16262	16272
External discrete input #	25	26	27	28	29	30	31	32
Message ID	16282	16292	16302	16312	16322	16332	16342	16352

Table 5-4: Message IDs for external discrete inputs

Flexible limit #	1	2	3	4	5	6	7	8	9	10
Message ID	10018	10019	10020	10021	10022	10023	10024	10025	10026	10027
Flexible limit #	11	12	13	14	15	16	17	18	19	20
Message ID	10028	10029	10030	10031	10032	10033	10034	10035	10036	10037
Flexible limit #	21	22	23	24	25	26	27	28	29	30
Message ID	10038	10039	10040	10041	10042	10043	10044	10045	10046	10047
Flexible limit #	31	32	33	34	35	36	37	38	39	40
Message ID	10048	10049	10050	10051	10052	10053	10054	10055	10056	10057

Table 5-5: Message IDs for flexible limits

Appendix B.

Restoring a Language Setting

Due to the multilingual capability of the unit, it may happen that the display language of the easYgen-3200 is set to a language, the operator is unable to read or understand, by mistake. In this case, the following proceeding helps to restore the desired language. The default setting is English.



Figure 5-2: Front panel and display

Figure 5-2 refers to the different softkeys, which appear in the configured language. In order to change the language setting, press the softkeys in the following order:

1. Press softkey ⑤ until you return to the starting screen (as indicated above)
2. Press softkey ⑥ once to access the "Parameter" screen
3. Press softkey ① once to access the "Configure language / clock" screen
4. Press softkey ⑧ once to edit the language setting
5. Press softkeys ⑩ or ⑪ to select the desired language
6. Press softkey ⑨ once to commit the language setting

Now, the display language is restored to the desired language again.

We appreciate your comments about the content of our publications.

Please send comments to: stgt-documentation@woodward.com

Please include the manual number from the front cover of this publication.



Woodward GmbH

Handwerkstrasse 29 - 70565 Stuttgart - Germany
Phone +49 (0) 711 789 54-0 • Fax +49 (0) 711 789 54-100
stgt-info@woodward.com

Homepage

<http://www.woodward.com/power>

Woodward has company-owned plants, subsidiaries, and branches, as well as authorized distributors and other authorized service and sales facilities throughout the world.

Complete address/phone/fax/e-mail information
for all locations is available on our website (www.woodward.com).

2012/01/Stuttgart