

Product Manual 26680 (Revision NEW) Original Instructions

Oil Metering Valve

9908-002, 9908-300, and similar

Installation and Operation Manual



Read this entire manual and all other publications pertaining to the work to be performed before installing, operating, or servicing this equipment.

Practice all plant and safety instructions and precautions.

Failure to follow instructions can cause personal injury and/or property damage.



Revisions

This publication may have been revised or updated since this copy was produced. To verify that you have the latest revision, check manual 26311, *Revision Status & Distribution Restrictions of Woodward Technical Publications*, on the *publications page* of the Woodward website:

www.woodward.com/publications

The latest version of most publications is available on the *publications page*. If your publication is not there, please contact your customer service representative to get the latest copy.



Any unauthorized modifications to or use of this equipment outside its specified mechanical, electrical, or other operating limits may cause personal injury and/or property damage, including damage to the equipment. Any such unauthorized modifications: (i) constitute "misuse" and/or "negligence" within the meaning of the product warranty thereby excluding warranty coverage for any resulting damage, and (ii) invalidate product certifications or listings.



If the cover of this publication states "Translation of the Original Instructions" please note:

Translated Publications

The original source of this publication may have been updated since this translation was made. Be sure to check manual 26311, Revision Status &
 S Distribution Restrictions of Woodward Technical Publications, to verify whether this translation is up to date. Out-of-date translations are marked with A. Always compare with the original for technical specifications and for proper and safe installation and operation procedures.

Revisions—Changes in this publication since the last revision are indicated by a black line alongside the text.

Woodward reserves the right to update any portion of this publication at any time. Information provided by Woodward is believed to be correct and reliable. However, no responsibility is assumed by Woodward unless otherwise expressly undertaken.

Contents

WARNINGS AND NOTICES II
ELECTROSTATIC DISCHARGE AWARENESSIII
REGULATORY COMPLIANCE IV
CHAPTER 1. GENERAL INFORMATION
CHAPTER 2. INSTALLATION
CHAPTER 3. DETAILED SPECIFICATION
CHAPTER 4. MAINTENANCE 11
CHAPTER 5. TROUBLESHOOTING 12 Valve Problems 12
CHAPTER 6. SERVICE OPTIONS14Product Service Options14Woodward Factory Servicing Options15Returning Equipment for Repair15Replacement Parts16Engineering Services16How to Contact Woodward17Technical Assistance17
DECLARATIONS

Illustrations and Tables

Figure 1-1. Oil Metering Flow vs Demand	2
Figure 2-1. WAGO 264 Series Terminal Block	
Figure 2-2. Oil Metering Valve Outline Drawing	
Figure 2-3. Oil Metering Valve Wiring (Internal)	
Figure 2-4. Wiring Diagram for Oil Metering Valve to GS3/LQ Analog Driver	8
Figure 5-1. Troubleshooting Flowchart	.13

Warnings and Notices

Important Definitions



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

- **DANGER**—Indicates a hazardous situation which, if not avoided, will result in death or serious injury.
- **WARNING**—Indicates a hazardous situation which, if not avoided, could result in death or serious injury.
- **CAUTION**—Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.
- **NOTICE**—Indicates a hazard that could result in property damage only (including damage to the control).
- **IMPORTANT**—Designates an operating tip or maintenance suggestion.

WARNING Overspeed / Overtemperature / Overpressure	The engine, turbine, or other type of prime mover should be equipped with an overspeed shutdown device to protect against runaway or damage to the prime mover with possible personal injury, loss of life, or property damage. The overspeed shutdown device must be totally independent of the prime mover control system. An overtemperature or overpressure shutdown device may also be needed for safety, as appropriate.
WARNING Personal Protective	The products described in this publication may present risks that could lead to personal injury, loss of life, or property damage. Always wear the appropriate personal protective equipment (PPE) for the job at hand. Equipment that should be considered includes but is not

Personal Protective Equipment

- Eye Protection
- Hearing Protection
- Hard Hat
- Gloves

limited to:

- Safety Boots
- Respirator

Always read the proper Material Safety Data Sheet (MSDS) for any working fluid(s) and comply with recommended safety equipment.

WARNING Start-up

Be prepared to make an emergency shutdown when starting the engine, turbine, or other type of prime mover, to protect against runaway or overspeed with possible personal injury, loss of life, or property damage.



Applications

On- and off-highway Mobile Applications: Unless Woodward's control functions as the supervisory control, customer should install a system totally independent of the prime mover control system that monitors for supervisory control of engine (and takes appropriate action if supervisory control is lost) to protect against loss of engine control with possible personal injury, loss of life, or property damage.

NOTICE

To prevent damage to a control system that uses an alternator or battery-charging device, make sure the charging device is turned off before disconnecting the battery from the system.

Battery Charging Device

Electrostatic Discharge Awareness

1	
NOTICE	Electronic controls contain static-sensitive parts. Observe the following precautions to prevent damage to these parts:
Electrostatic Precautions	 Discharge body static before handling the control (with power to the control turned off, contact a grounded surface and maintain contact while handling the control). Avoid all plastic, vinyl, and Styrofoam (except antistatic versions) around printed circuit boards. Do not touch the components or conductors on a printed circuit board with your hands or with conductive devices. To prevent damage to electronic components caused by improper handling, read and observe the precautions in Woodward manual 82715, Guide for Handling and Protection of Electronic Controls, Printed Circuit Boards, and Modules.

Follow these precautions when working with or near the control.

- 1. Avoid the build-up of static electricity on your body by not wearing clothing made of synthetic materials. Wear cotton or cotton-blend materials as much as possible because these do not store static electric charges as much as synthetics.
- 2. Do not remove the printed circuit board (PCB) from the control cabinet unless absolutely necessary. If you must remove the PCB from the control cabinet, follow these precautions:
 - Do not touch any part of the PCB except the edges.
 - Do not touch the electrical conductors, the connectors, or the components with conductive devices or with your hands.
 - When replacing a PCB, keep the new PCB in the plastic antistatic protective bag it comes in until you are ready to install it. Immediately after removing the old PCB from the control cabinet, place it in the antistatic protective bag.

Regulatory Compliance

European Compliance for CE Marking:

These listings are limited only to those units bearing the CE Marking.

ATEX – Potentially	Declared to 94/9/EC COUNCIL DIRECTIVE of 23
Explosive	March 1994 on the approximation of the laws of the
Atmospheres	Member States concerning equipment and
Directive:	protective systems intended for use in potentially
	explosive atmospheres.
	LCIE 03 ATEX 6375 X
	Zone 1, Category 2, Group II G, EEx d IIB T3

Other European and International Compliance:

Compliance with the following European Directives or standards does not qualify this product for application of the CE Marking:

EMC Directive:	Not applicable to this product. Electromagnetically passive devices are excluded from the scope of the 89/336/EEC Directive.
Machinery Directive:	Compliant as a component with 98/37/EC COUNCIL DIRECTIVE of 23 July 1998 on the approximation of the laws of the Member States relating to machinery.
Pressure Equipment Directive:	Compliant as "SEP" per Article 3.3 to Pressure Equipment Directive 97/23/EC of 29 May 1997 on the approximation of the laws of the Member States concerning pressure equipment.

North American Compliance:

These listings are limited only to those units bearing the CSA identification.

CSA: CSA Certified for Class I, Division 1, Groups C & D, and Division 2, Groups A, B, C, D, T3C at 103 °C ambient. For use in Canada and the United States per Certificate 160584-1136436.

Wiring must be in accordance with North American Class I, Division 1 or 2, or European Zone 1, Category 2 wiring methods as applicable, and in accordance with the authority having jurisdiction.

Special Conditions for Safe Use:

- Use supply wire suitable for at least 90 °C and 10 °C above maximum fluid and ambient temperature.
- Ambient operating temperature: -28 to +103 °C

For Zone 1 / Division 1 products applied in a Zone 2 / Division 2 atmosphere:

The Oil Metering Valve Actuator is certified to a Zone 1-Category 2 method of protection. Wiring methods must comply with the Zone 1-Category 2 method of protection when installed in a Zone 2 classified atmosphere.

EXPLOSION HAZARD—Do not remove covers or connect/disconnect electrical connectors unless power has been switched off or the area is known to be non-hazardous.

Substitution of components may impair suitability for Class I, Division 1 or Zone 1.

RISQUE D'EXPLOSION—Ne pas enlever les couvercles, ni raccorder / débrancher les prises électriques, sans vous en assurez auparavant que le système a bien été mis hors tension; ou que vous vous situez bien dans une zone non explosive.
Le remplacement de composants peut rendre ce matériel inacceptable pour des applications de Classe I, Division 1 ou Zone 1.

Chapter 1. General Information

Introduction

The Oil Metering Valve assembly used with the GS3/LQ Valve Driver is an integrated hydraulic oil metering system that features valve position control, electric actuation, oil flow control and fault indication for industrial and aeroderivative gas turbines. The Oil Metering Valve was designed in conjunction with Rolls-Royce to their TS 2/178 Technical Specification. The following Rolls-Royce part numbers have been assigned: 2-05V-589-001 and RRE002941.

The Oil Metering Valve actuator uses a brushless dc limited-angle torquer which positions a metering port for oil flow control. The actuator is directly coupled to both the metering port and a position feedback resolver. There are no intervening gears, linkages, or flex couplings. The high torque actuator and shearing action of the shoe on the rotor valve provide a high degree of contamination resistance.



The controlling device, not the driver(s) or valve(s), sets turbine stability and response. Follow the instructions for the controlling device while setting up the turbine control system. Failure to follow instructions can cause personal injury and/or property damage.

Turbine manufacturer's requirements for oil flow can vary considerably depending on oil pressures, oil types, oil and ambient temperatures, turbine size, etc. Information on predicting oil flow through the Oil Metering Valve as a function of command input signal can be obtained from the flow calibration data supplied with each valve and, for nominal flow data, from information given in the following sections. This oil flow information may be critical to the proper operation of your gas turbine and may be required information for the electronic control system to operate the turbine properly.



For complete information on the GS3/LQ Analog Driver, see Woodward product manual 40146.

Oil Metering Valve Flow Accuracy

The metering flow accuracy of the Oil Metering Valve is $\pm 5\%$ of nominal flow point above 0.4 gallons per minute (gpm).

During calibration, each Oil Metering Valve is set up at a nominal "rig flow point" which corresponds to a specific milliamp demand signal. Each valve is then flow tested to ensure compliance with the above mentioned flow tolerance bands. This procedure ensures excellent valve to valve flow repeatability.

Oil Metering Valve

See Figure 1-1 to predict the nominal metered oil flow through the Oil Metering Valve as a function of Demand Input. Note: This curve represents the "nominal" flow based on statistical data. Flow variation from valve to valve will occur within the stated accuracy limits of the product and should be considered in the control application. To determine the exact flow curve of a particular valve, reference the flow test data sheet that accompanies each valve. This data can also be requested through Woodward by providing the valve serial number and part number.

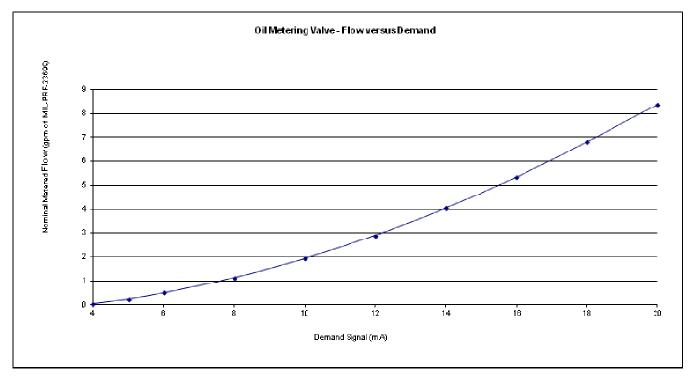


Figure 1-1. Oil Metering Flow vs Demand

Demand Signal (mA)	Nominal Flow GPM (Mil-PRF-23699) @ 140 ± 10 °F
4	0.04
5	0.23
6	0.49
8	1.13
10	1.93
12	2.90
14	4.03
16	5.33
18	6.80
20	8.37

Oil Metering Fuel Metering Valve

The Oil Metering Liquid Fuel Valve has all electric actuation. The actuation, metering, and feedback are integrated on the motor rotor. Feedback is given by one single-speed resolver. Regulation is achieved through an integral, single-stage, spring-loaded piston and diaphragm-type pressure regulator. This maintains the differential pressure across the metering port at approximately constant, and the only factor affecting the output flow is the port area. The nominal set point for the Oil Metering Valve differential pressure is 276 kPa (40 psid). The actual regulated differential pressure will vary somewhat with varying inlet and outlet flows and with varying outlet pressures.

The Oil Metering Valve uses a throttling type differential pressure control valve.

Operation of the Oil Metering Valve

The Oil Metering Valve meters hydraulic oil as a function of the angular position of its ported metering sleeve/shaft. The metering sleeve/shaft is positioned by the integrated, brushless, dc, limited-angle torquer motor (LAT). A resolver mounted directly on the shaft of the valve provides valve position feedback.

To accurately meter oil flow the valve maintains a constant pressure drop across the metering port in the metering sleeve/shaft. Given the constant pressure differential across the metering port the oil flow is proportional to the area of the port opening. Oil flow through the valve is described by the following equation:

 $MassFuelFlow = k \times Area \times \sqrt{\Delta P} \times SG$

Under operating conditions, oil at the pump discharge pressure (P1) flows to the metering sleeve/shaft and to one side of the regulator piston. Metered oil at P2 pressure is directed to the turbine and to the other side of the regulator piston.

Chapter 2. Installation

Terminal Blocks

Terminal blocks are used on the Oil Metering Valve. These terminal blocks are top load, cage clamp style, and are actuated by inserting a DIN 5264 screwdriver into the opening behind the wire slot. Once the cage clamp has been opened, the wire can be inserted and the screwdriver removed. Please see the illustration and instructions below:

- The screwdriver is inserted into the operating slot up to the stop.
- The screwdriver blade holds the clamping spring open automatically so that the conductor can be introduced into the clamping unit.
- The screwdriver is withdrawn. The conductor is automatically clamped.

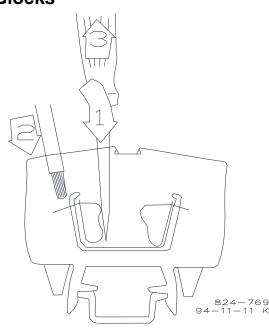


Figure 2-1. WAGO 264 Series Terminal Block

Oil Metering Valve Unpacking

Use care when unpacking the Oil Metering Valve. Abuse can damage seals, installation surfaces, and factory adjustments. Notify the shipper and Woodward if damage is found.



The Oil Metering Valve Actuator assembly weighs 23 kg (55 lb). Lift carefully using proper lifting techniques.

Oil Metering Valve Mounting

The valve should be mounted as close to the turbine as practical in order to minimize the volume of oil between the valve and the turbine. Ensure that the valve is not mounted in an area that would exceed the temperature limits specified in Chapter 3: Detailed Specification. The Oil Metering Valve should be mounted to a thermally conductive surface to conduct heat away from the actuator to maintain proper coil temperature.

See Figure 2-2 for dimensions of the Oil Metering Valve mounting hole pattern. The valve should be securely attached to a rigid surface that will not exceed the vibration limits specified in Chapter 3: Detailed Specification. Connect inlet and outlet lines to the valve. The inlet port receives pressurized oil from the pump. The outlet line should be attached to the oil line going to the turbine. The overboard vent drain depicted in Figure 2-2 is a vent between redundant shaft seals. Leakage in excess of 5 cc/min indicates internal seal wear or damage.

	Do not plug the overboard drain as this may cause oil to enter the Oil Metering Valve actuator, resulting in a hazardous condition with the potential to cause personal injury and/or damage to the actuator.
	External fire protection is not provided in the scope of this product. It is the responsibility of the user to satisfy any applicable requirements for their system.
	Due to typical noise levels in turbine environments, hearing protection should be worn when working on or around the Oil Metering Valve Actuator Assembly.
	The surface of this product can become hot enough or cold enough to be a hazard. Use protective gear for product handling in these circumstances. Temperature ratings are included in the specification section of this manual.
IMPORTANT	Leakage exceeding 5 cm ³ /min from the overboard vent drain indicates a worn or damaged shaft seal in the Oil Metering Valve and should be investigated. Special tooling is required to replace the shaft seal. Contact Woodward for service.

Fuel Connections

Inlet 1.312 -12 UN Straight Thread Port (-16) Outlet 1.312 -12 UN Straight Thread Port (-16)

Cable Connections

Wiring for the driver power output to the actuator must be suitable for at least 90 °C, and 10 °C above maximum fluid and ambient temperature.

Actuator	0.500-14 NPT (Four 4 mm ² /12 AWG wires, 2 for positive and 2 for negative. Additional ground wire provided)
Feedback	0.500-14 NPT (three shielded twisted pairs or one shielded twisted six-conductor cable)
External Grounding Stud	Suitable for wire size 10 mm to 4 mm (8 to 12 AWG)



Take care not to damage the cover seal, the cover surface, or the actuator surface while removing or replacing the cover.

		The Oil Metering Valve Actuator is certified to a Zone 1-Category 2 method of protection. Wiring methods must comply with the Zone 1-Category 2 method of protection when installed in a Zone 2 classified atmosphere.
--	--	--

For Zone 1 / Division 1 products: Proper torque is very important to ensure that the unit is sealed properly. The fasteners for the electrical cover should be torqued to 9.5 ± 0.5 N·m (84 ±4 lb-in).

Due to the hazardous location listings associated with this product, proper wire type and wiring practices are critical to operation.



EXPLOSION HAZARD—Do not connect or disconnect while circuit is live unless area is known to be non-hazardous.



RISQUE D'EXPLOSION—Ne pas raccorder ni débrancher tant que l'installation est sous tension, sauf en cas l'ambiance est décidément non dangereuse.

NOTICE

Do not connect any cable grounds to "instrument ground", "control ground", or any non-earth ground system. Make all required electrical connections based on the wiring diagrams (Figures 2-3 and 2-4).

Oil Metering Valve Wiring

The driver must be mounted close enough to the Oil Metering Valve and the driver power supply to meet wire length requirements specified in the driver manual.

Make electrical connections between the valve and driver according to the GS3/LQ Driver manual and Figure 2-4. Figure 2-3 shows the Oil Metering Valve wiring to its internal terminal blocks.


Connect the ground terminal of the actuator to earth ground. This must be the same grounding system as the driver's earth ground.


All shielded cable must be twisted conductor pairs with either a foil or a braided shield. All signal lines should be shielded to prevent picking up stray signals from nearby equipment. Connect the shields as shown in the Control Wiring Diagram (Figure 2-4). Wire exposed beyond the shield must be as short as possible.




Connect cable shields to earth ground. Do not connect any cable shields to "instrument ground", "control ground", or any non-earth ground system.

For best noise immunity, run power wires and shielded signal wires in separate conduits or cable trays. See Woodward Manual 50532, *EMI Control in Electronic Governing Systems*, for more information.

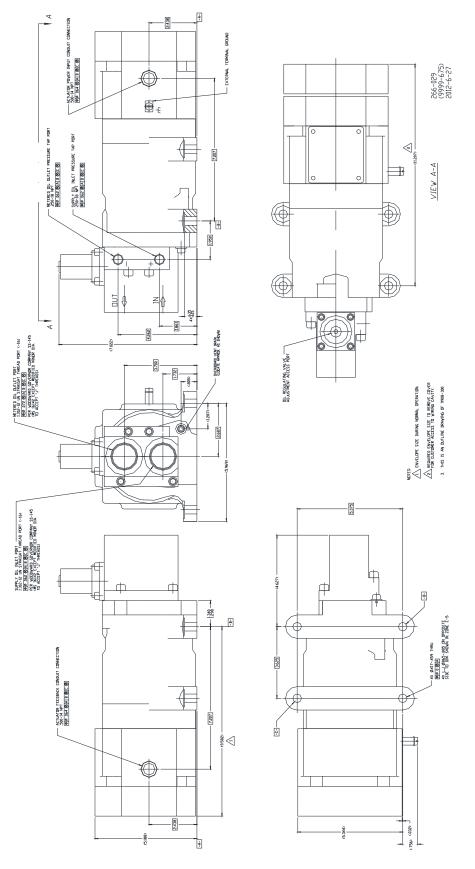

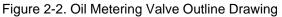



Manual 26680

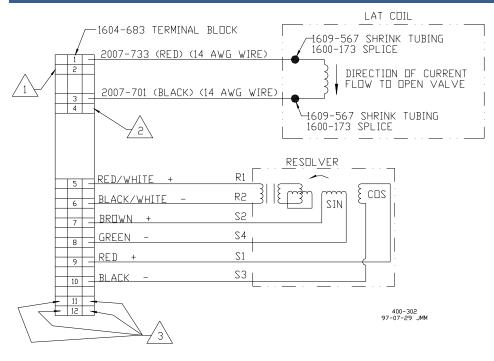

NOTES:

- 1. Position 1/2 are connected together with an internal jumper.
- 2. Position 3/4 are connected together with an internal jumper.
- 3. Position 11/12 must be used for customer ground connection and also used as extra termination ends.

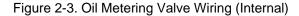

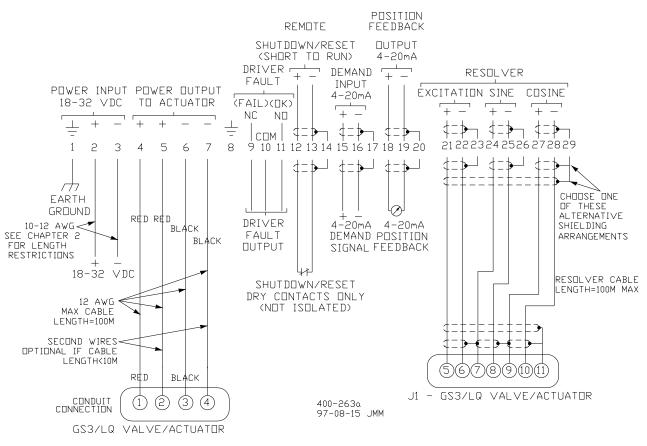



Chapter 3. Detailed Specification

Oil Metering Valve Specifications

Environmental Specifications		
Operating Temperature	–28 to +103 °C (–18 to +217 °F)	
Storage Temperature	-40 to +103 °C (-40 to +217 °F)	
Vibration	US MIL-STD-810C, Procedure 1, Table 514.2-ii,	
	Figure 514.2-2, Curve J 20-2000 Hz (5g)	
	Tested to a random vibration profile per MS202F,	
	Method 214A Test Condition D	
Shock	US MIL-STD-810C, Method 516.2, Procedure 1, 20 g,	
	11 ms, sawtooth wave form	
Valve Weight	23 kg (55 lbs)	
Air Born Noise	Ear protection must be worn while Valve is operating	

Electrical Characteristic	s	
Dielectric Withstand	500 Vac to PE ground for 1 minute	
Coil—		
Coil Resistance	0.525–0.900 Ω	
Coil Inductance	20 mH at 60 Hz	
Insulation Resistance	>50 M Ω after dielectric test	
Actuator Voltage	18–32 Vdc	
Actuator Current	3 A steady state, 8 A max.	
	Expected transient current may be up to 20 A with a maximum of	
	20% duty cycle	
Feedback Device—		
	Frameless resolver	
Excitation	4 Vac at 5000 Hz, resistance 28–34 Ω at 20 °C	
Return	4 Vac at 5000 Hz, for sine and cosine, each 131–159 Ω at 20 $^\circ\text{C}$	
Steady State Performance Characteristics		
Maximum Metered Flow	8.83 gpm at 100% (MIL-PRF-23699 at 140+/- 10 F)	
Minimum Metered Flow	0.09 gpm at 0% (MIL-PRF-23699 at 140+/- 10 F)	
Oil Supply Pressure		
Range-		
Normal Operation	1310 to 2413 kPa (190 to 350 psig), 750 psig maximum	
Proof Pressure	10.3 MPa (1500 psig)	
Burst Pressure	41 MPa (6000 psig)	
Max Metering Valve	265 ml/min	
Leakage		

Oil Pressure Differentials			
Nominal Regulated	276 kPa (2.76 bar/40 psid)		
Metering Valve ∆P			
Chip Shearing Force Capability	133 N (30 lb force) minimum at the metering port edge		
Flow Metering Accuracy	±5% of nominal point above 0.4 gpm		
Valve Position Stability	Oscillations <±0.05% of full stroke		
Metered Flow Dynamic	Bandwidth = 40 rad/s , damping factor = 1 dP		
Response	Bandwidth = 30 to 50 rad/s, damping factor = 0.4 to 0.8		
Max Slew Time	0.200 s		
Hysteresis	Less than 0.5% of full stroke		
Position Loop	35 rad/s with a damping factor of 1		
Bandwidth			
Liquid Fuel Types and Test Fluids			
Operating Fluid Types	The valve is compatible with most types of industrial and turbine hydraulic oils such as MIL-PRF-23699 or MIL-7808. The valve could also control flow of diesel fuels, kerosenes, gasolines, heavy and light distillates including naphtha, gas turbine fuels and fuel oils, and other liquid fuels such as biodiesel that are compatible with fluorocarbon (FKM) type elastomers and conform to international standards for utility, marine, and aviation gas turbine service.		
Oil Temperature Range	-15 to 80 °C (5 to 176 °F) extreme range +15 to 60 °C (59 to 140 °F) normal range		
Oil Viscosity Range	13.5 to 70 centistokes normal range		
Oil Filtration Level	Nominal rating of 10 micron with Beta ratio of 200 recommended		

Chapter 4. Maintenance

The valve assembly is designed to avoid the accumulation of air and oil vapor in service, and does not require any action by the user to purge air or vapor from the assembly following installation or use on the turbine system.

The valve is also designed such that during normal operation or storage, oil or condensed water vapor does not accumulate within any part of the assembly in such a way as to cause damage or deterioration.

When removed from the turbine system, it is possible to drain all oil, condensed water vapor, or other contaminants from the valve assembly without further disassembly.

There are no field-replaceable parts on the Oil Metering Valve.

Chapter 5. Troubleshooting

The valve may not fail shut in every situation. If the driver is unable to shut the valve in a fault situation, the valve will stay open. For safe turbine operation in fault situations, the valve may be used in conjunction with an additional shutoff valve. Also, the driver fault relay should be tied into the turbine protection system.

Before attempting any troubleshooting action, verify that the prime mover is shut down and that oil pressure is not present to valves that may open due to actuator motion.

Valve Problems


This troubleshooting section does not give the certain cause of any problem. Nor does it cover all possible problems or all possible causes of any problem. This section will not enable a technician to locate a faulty component in the valve.

If trouble occurs, use Figure 5-1, the Troubleshooting Flowchart, as a guide to locate and repair the problem. Follow the flow chart down from the title block to the next block. Rectangular boxes contain suggestions on where to look for a problem. Diamond-shaped boxes ask you questions based on the information you have gathered. The answer to that question will guide you to the next step in the troubleshooting procedure. By following the flowchart, you should be able to identify and correct most problems that may occur with the valve. If after following these troubleshooting procedures you are unable to find the cause of a problem and repair it, contact Woodward for assistance.

If the results of these procedures indicate that the valve may be faulty, replace the suspected unit with a valve known to be good to verify that the cause of the problem is in the valve.

To verify electrical connections within the valve, disconnect the electrical cables at the driver and measure resistances between driver connector terminals. Note that the following resistances are approximate and do not include tolerances. This test is to check for open or short circuits, and to test the wiring from the driver to the valve.

Use resistances called out on Figure 5-1.

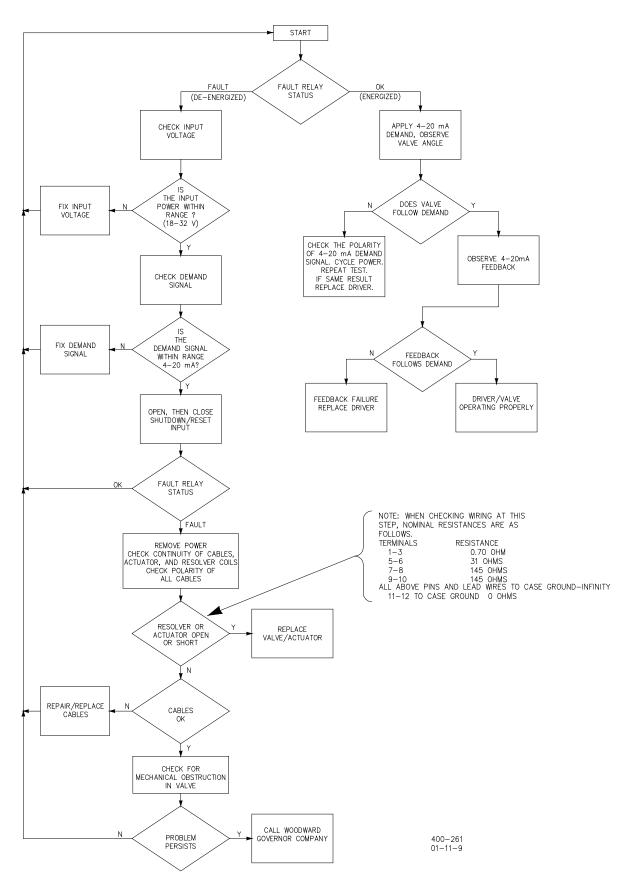



Chapter 6. Service Options

Product Service Options

If you are experiencing problems with the installation, or unsatisfactory performance of a Woodward product, the following options are available:

- Consult the troubleshooting guide in the manual.
- Contact the manufacturer or packager of your system.
- Contact the Woodward Full Service Distributor serving your area.
- Contact Woodward technical assistance (see "How to Contact Woodward" later in this chapter) and discuss your problem. In many cases, your problem can be resolved over the phone. If not, you can select which course of action to pursue based on the available services listed in this chapter.

OEM and Packager Support: Many Woodward controls and control devices are installed into the equipment system and programmed by an Original Equipment Manufacturer (OEM) or Equipment Packager at their factory. In some cases, the programming is password-protected by the OEM or packager, and they are the best source for product service and support. Warranty service for Woodward products shipped with an equipment system should also be handled through the OEM or Packager. Please review your equipment system documentation for details.

Woodward Business Partner Support: Woodward works with and supports a global network of independent business partners whose mission is to serve the users of Woodward controls, as described here:

- A **Full Service Distributor** has the primary responsibility for sales, service, system integration solutions, technical desk support, and aftermarket marketing of standard Woodward products within a specific geographic area and market segment.
- An Authorized Independent Service Facility (AISF) provides authorized service that includes repairs, repair parts, and warranty service on Woodward's behalf. Service (not new unit sales) is an AISF's primary mission.
- A **Recognized Engine Retrofitter (RER)** is an independent company that does retrofits and upgrades on reciprocating gas engines and dual-fuel conversions, and can provide the full line of Woodward systems and components for the retrofits and overhauls, emission compliance upgrades, long term service contracts, emergency repairs, etc.
- A **Recognized Turbine Retrofitter (RTR)** is an independent company that does both steam and gas turbine control retrofits and upgrades globally, and can provide the full line of Woodward systems and components for the retrofits and overhauls, long term service contracts, emergency repairs, etc.

You can locate your nearest Woodward distributor, AISF, RER, or RTR on our website at:

www.woodward.com/directory

Woodward Factory Servicing Options

The following factory options for servicing Woodward products are available through your local Full-Service Distributor or the OEM or Packager of the equipment system, based on the standard Woodward Product and Service Warranty (5-01-1205) that is in effect at the time the product is originally shipped from Woodward or a service is performed:

- Replacement/Exchange (24-hour service)
- Flat Rate Repair
- Flat Rate Remanufacture

Replacement/Exchange: Replacement/Exchange is a premium program designed for the user who is in need of immediate service. It allows you to request and receive a like-new replacement unit in minimum time (usually within 24 hours of the request), providing a suitable unit is available at the time of the request, thereby minimizing costly downtime. This is a flat-rate program and includes the full standard Woodward product warranty (Woodward Product and Service Warranty 5-01-1205).

This option allows you to call your Full-Service Distributor in the event of an unexpected outage, or in advance of a scheduled outage, to request a replacement control unit. If the unit is available at the time of the call, it can usually be shipped out within 24 hours. You replace your field control unit with the like-new replacement and return the field unit to the Full-Service Distributor.

Charges for the Replacement/Exchange service are based on a flat rate plus shipping expenses. You are invoiced the flat rate replacement/exchange charge plus a core charge at the time the replacement unit is shipped. If the core (field unit) is returned within 60 days, a credit for the core charge will be issued.

Flat Rate Repair: Flat Rate Repair is available for the majority of standard products in the field. This program offers you repair service for your products with the advantage of knowing in advance what the cost will be. All repair work carries the standard Woodward service warranty (Woodward Product and Service Warranty 5-01-1205) on replaced parts and labor.

Flat Rate Remanufacture: Flat Rate Remanufacture is very similar to the Flat Rate Repair option with the exception that the unit will be returned to you in "like-new" condition and carry with it the full standard Woodward product warranty (Woodward Product and Service Warranty 5-01-1205). This option is applicable to mechanical products only.

Returning Equipment for Repair

If a control (or any part of an electronic control) is to be returned for repair, please contact your Full-Service Distributor in advance to obtain Return Authorization and shipping instructions.

When shipping the item(s), attach a tag with the following information:

- return authorization number;
- name and location where the control is installed;
- name and phone number of contact person;
- complete Woodward part number(s) and serial number(s);
- description of the problem;
- instructions describing the desired type of repair.

Packing a Control

Use the following materials when returning a complete control:

- protective caps on any connectors;
- antistatic protective bags on all electronic modules;
- packing materials that will not damage the surface of the unit;
- at least 100 mm (4 inches) of tightly packed, industry-approved packing material;
- a packing carton with double walls;
- a strong tape around the outside of the carton for increased strength.

NOTICE

To prevent damage to electronic components caused by improper handling, read and observe the precautions in Woodward manual 82715, *Guide for Handling and Protection of Electronic Controls, Printed Circuit Boards, and Modules.*

Replacement Parts

When ordering replacement parts for controls, include the following information:

- the part number(s) (XXXX-XXXX) that is on the enclosure nameplate;
- the unit serial number, which is also on the nameplate.

Engineering Services

Woodward offers various Engineering Services for our products. For these services, you can contact us by telephone, by email, or through the Woodward website.

- Technical Support
- Product Training
- Field Service

Technical Support is available from your equipment system supplier, your local Full-Service Distributor, or from many of Woodward's worldwide locations, depending upon the product and application. This service can assist you with technical questions or problem solving during the normal business hours of the Woodward location you contact. Emergency assistance is also available during non-business hours by phoning Woodward and stating the urgency of your problem.

Product Training is available as standard classes at many of our worldwide locations. We also offer customized classes, which can be tailored to your needs and can be held at one of our locations or at your site. This training, conducted by experienced personnel, will assure that you will be able to maintain system reliability and availability.

Field Service engineering on-site support is available, depending on the product and location, from many of our worldwide locations or from one of our Full-Service Distributors. The field engineers are experienced both on Woodward products as well as on much of the non-Woodward equipment with which our products interface.

For information on these services, please contact us via telephone, email us, or use our website: <u>www.woodward.com</u>.

How to Contact Woodward

For assistance, call one of the following Woodward facilities to obtain the address and phone number of the facility nearest your location where you will be able to get information and service.

Electrical Power Systems	• •	Turbine Systems
<u>Facility</u> <u>Phone Number</u>	<u>Facility</u> <u>Phone Number</u>	<u>Facility</u> <u>Phone Number</u>
Brazil+55 (19) 3708 4800	Brazil+55 (19) 3708 4800	Brazil+55 (19) 3708 4800
China +86 (512) 6762 6727	China +86 (512) 6762 6727	China +86 (512) 6762 6727
Germany+49 (0) 21 52 14 51	Germany +49 (711) 78954-510	India+91 (129) 4097100
India+91 (129) 4097100	India+91 (129) 4097100	Japan +81 (43) 213-2191
Japan +81 (43) 213-2191	Japan +81 (43) 213-2191	Korea +82 (51) 636-7080
Korea +82 (51) 636-7080	Korea +82 (51) 636-7080	The Netherlands- +31 (23) 5661111
Poland+48 12 295 13 00	The Netherlands- +31 (23) 5661111	Poland+48 12 295 13 00
United States +1 (970) 482-5811	United States +1 (970) 482-5811	United States +1 (970) 482-5811

You can also locate your nearest Woodward distributor or service facility on our website at:

www.woodward.com/directory

Technical Assistance

If you need to telephone for technical assistance, you will need to provide the following information. Please write it down here before phoning:

Your Name	
Site Location	
Phone Number	
Fax Number	
Engine/Turbine Model Number	
Manufacturer	
Number of Cylinders (if applicable)	
Type of Fuel (gas, gaseous, steam, etc)	
Rating	
Application	
Control/Governor #1	
Woodward Part Number & Rev. Letter	
Control Description or Governor Type	
Serial Number	
Control/Governor #2	
Woodward Part Number & Rev. Letter	
Control Description or Governor Type	
Serial Number	
Control/Governor #3	
Woodward Part Number & Rev. Letter	
Control Description or Governor Type	
Serial Number	

If you have an electronic or programmable control, please have the adjustment setting positions or the menu settings written down and with you at the time of the call.

Declarations

DECLARATION OF CONFORMITY		
Manufacturer's Name:	WOODWARD INC	
Manufacturer's Address:	1000 E. Drake Rd. Fort Collins, CO, USA, 80525	
Model Name(s)/Number(s):	LQ3 Valves 9908-275, 9908-276 and similar Oil Metering Valve 9908-300 and similar	
Conformance to Directive(s):	94/9/EC COUNCIL DIRECTIVE of 23 March 1994 on the approximation of the laws of the Member States concerning equipment and protective systems intended for use in potentially explosive atmospheres	
Marking(s):	Category 2, Group II G, EEx d IIB T3	
Applicable Standards:	EN 50014 (1997) + amendments 1 and 2: Electrical apparatus for potentially explosive atmospheres - General Requirements	
	EN 50018 (2000) + amendment 1: Electrical apparatus for potentially explosive atmospheres - Flameproof enclosure 'd'	
Third Party Certification:	LCIE 03 ATEX 6375 X	
Conformity Assessment:	ATEX Production Quality Assessment, Certificate 01 220 113542	
Notified Body For ATEX:	TUV Rheinland Industrie Service GmbH (0035) Am Grauen Stein, D-51105 Köln	

We, the undersigned, hereby declare that the equipment specified above conforms to the above Directive(s).

MANUFACTURER

Signatu	Sukart Holey
Signatt	
	Suhail Horan
Full N	lame
	Quality Manager
Positie	DD
	Woodward, Inc., Fort Collins, CO, USA
Place	
	02-Dec- 2011
Date	

Declaration of Incorporation

Woodward Governor Company 1000 E. Drake Road Fort Collins, Colorado 80525 United States of America

Products and Part Numbers:

GS3 Valves 9908-250 and similar LQ3 Valves 9908-275 and similar LQ25T Valves 9907-504, 9908-200 and similar LQ Bypass Valve 9908-201 and similar Oil Metering Valve 9908-300 and similar

The undersigned hereby declares, on behalf of Woodward Governor Company of Loveland and Fort Collins, Colorado, that the above-referenced product is in conformity with the following EU Directives as they apply to a component:

98/37/EC (Machinery)

This product is intended to be put into service only upon incorporation into an apparatus/system that itself will meet the requirements of the above Directives and bears the CE mark.

MANUFACTURER	
Aa La	
Signature	
Full Name Engineering Manager Position WGC, Fort Collins, CO, U	
Engineering Manager	
Position	
WGC, Fort Collins, CO, I	JSA
Place	
1/10/06	
Date	

5-09-1182 (REV. 5)

00122-04-CE-02-04.doc

We appreciate your comments about the content of our publications.

Send comments to: icinfo@woodward.com

Please reference publication **26680**.





PO Box 1519, Fort Collins CO 80522-1519, USA 1000 East Drake Road, Fort Collins CO 80525, USA Phone +1 (970) 482-5811 • Fax +1 (970) 498-3058

Email and Website—www.woodward.com

Woodward has company-owned plants, subsidiaries, and branches, as well as authorized distributors and other authorized service and sales facilities throughout the world.

Complete address / phone / fax / email information for all locations is available on our website.